


Mazda5 Workshop Manual - Body and Accessories

MZ5 SIDE WALL REMOVAL/INSTALLATION

1. Detach clips A and tab B in the order of top to bottom.

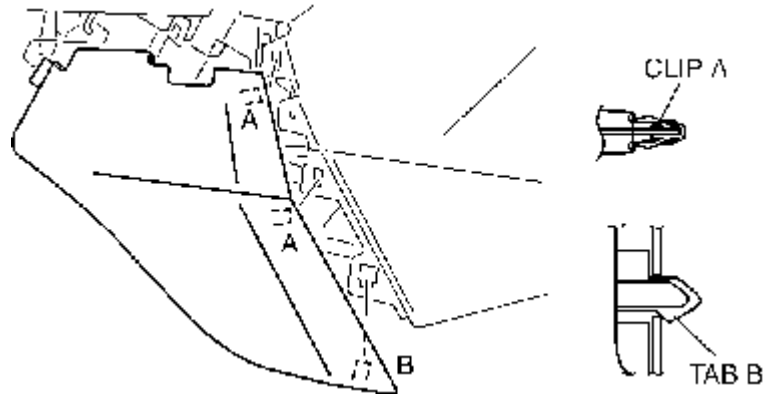

2. Remove the side wall by pulling it outward.
 3. Install in the reverse order of removal.
-