

27.A/C Filter

A: REPLACEMENT

Refer to “AC” section for A/C filter replacement.

<Ref. to AC-83, REPLACEMENT, A/C Filter.>

ENGINE 1 SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS)**FU(H4SO)****EMISSION CONTROL
(AUX. EMISSION CONTROL DEVICES)****EC(H4SO)****INTAKE (INDUCTION)****IN(H4SO)****MECHANICAL****ME(H4SO)****EXHAUST****EX(H4SO)****COOLING****CO(H4SO)****LUBRICATION****LU(H4SO)****SPEED CONTROL SYSTEMS****SP(H4SO)****IGNITION****IG(H4SO)****STARTING/CHARGING SYSTEMS****SC(H4SO)****ENGINE (DIAGNOSTICS)****EN(H4SO)(diag)****GENERAL DESCRIPTION****GD(H4SO)**

FUEL INJECTION (FUEL SYSTEMS)

FU(H4SO)

	Page
1. General Description	2
2. Throttle Body	15
3. Intake Manifold	16
4. Engine Coolant Temperature Sensor	23
5. Crankshaft Position Sensor	24
6. Camshaft Position Sensor	26
7. Knock Sensor	28
8. Throttle Position Sensor	30
9. Mass Air Flow and Intake Air Temperature Sensor	31
10. Manifold Absolute Pressure Sensor	32
11. EGR Valve	33
12. Fuel Injector	34
13. Variable Valve Lift Diagnosis Oil Pressure Switch	35
14. Oil Temperature Sensor	36
15. Front Oxygen (A/F) Sensor	37
16. Rear Oxygen Sensor	39
17. Engine Control Module (ECM)	41
18. Main Relay	42
19. Fuel Pump Relay	44
20. Electronic Throttle Control Relay	46
21. Fuel	48
22. Fuel Tank	50
23. Fuel Filler Pipe	57
24. Fuel Pump	60
25. Fuel Level Sensor	62
26. Fuel Sub Level Sensor	64
27. Fuel Filter	66
28. Fuel Delivery and Evaporation Lines	68
29. Fuel System Trouble in General	74