

9. Fuel Filter

A: REPLACEMENT

Refer to “FU” section for fuel filter replacement.
<Ref. to FU(H4SO)-66, Fuel Filter.> <Ref. to
FU(H4DOTC)-85, Fuel Filter.> <Ref. to FU(H6DO)-
75, Fuel Filter.>

B: INSPECTION

Replace if the filter is clogged, or time for replacement has come.