

Vauxhall Tigra 2009 fuse box diagram

Location fuse boxes:

There are three fuse boxes in the vehicle:

- in the front left of the engine compartment,
- In left-hand drive vehicles, in the interior behind the storage compartment, or, in right-hand drive vehicles, behind the glovebox,
- behind a cover on the left side of the load compartment

Engine compartment fuse box

The fuse box is in the front left of the engine compartment. Disengage the cover, lift it upwards and remove. After having changed defective fuses close the fuse box cover and press until it engages.




Opel Tigra Twin Top (2009) – fuse box – engine compartment

Number	Circuit
1	Starter
2	—

3	Fuel filter, cooling
4	Horn
5	Terminal 30
6	Engine control module, transmission control unit
7	Fog light
8	Engine cooling
9	Engine cooling
10	Vacuum pump
11	Ignition, preheating
12	Headlamp levelling
13	Air conditioning system, terminal 15
14	Transmission control unit
15	High beam right
16	High beam left
17	Engine control module

18	Engine control module, terminal 15
19	Airbag
20	Engine control module
21	Engine control module, terminal 87

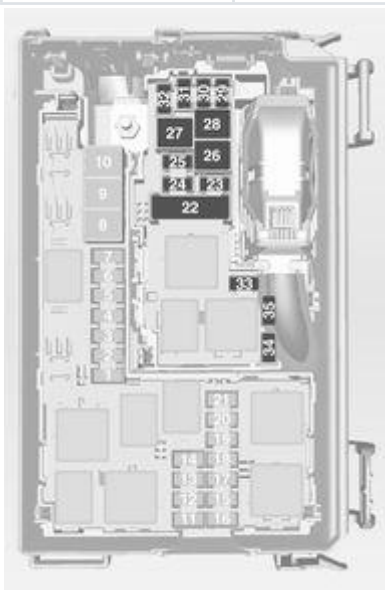

Opel Tигра Twin Top (2009) – fuse box – engine

compartment

Number	Circuit
22	Electrical parking brake
23	Tyoe reoair kit
24	Fuel pump
25	ABS
26	Heated rear window

27	ABS
28	Interior fan
29	Cigarette lighter
30	Air conditioning system
31	Front power window, left
32	Front power window, right
33	Mirror heating
34	ABS
35	Airbag

Instrument panel fuse box

In left-hand drive vehicles, the fuse box is behind the storage compartment in the instrument panel. Open compartment, compress the locking tabs, fold compartment down and remove.



Opel Tigua Twin Top (2009) – fuse box – instrument panel

Number	Circuit

1	Rear left door unlocking
2	Display, instrument, telephone
3	Radio
4	Ignition switch, immobiliser
5	Windscreen washer, rear screen washer
6	Central locking system, tailgate
7	Central locking system
8	Rear right door unlocking
9	Courtesy light
10	Heated steering wheel
11	—
12	—
13	Rain sensor, interior mirror, outside mirrors
14	—

Load compartment fuse box

The fuse box is on the left side of the load compartment behind a cover. Remove the cover. Disengage the four retaining lugs and remove the cover.



Opel Tigris Twin Top (2009) – fuse – load compartment

Number	Circuit
1	Adaptive forward lighting
2	—
3	—
4	—
5	—
6	Rear power window, right
7	Adaptive forward lighting
8	Trailer module, Trailer socket
9	Seat, lumbar support, left

10	Rear power window, left
11	Park assist
12	Electrical sunblind
13	—
14	Heated front seats
15	Trailer module
16	Seat, lumbar support, right
17	—