


10.Side Airbag Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the front outer seat belt. <Ref. to SB-17, OUTER SEAT BELT ASSEMBLY, REMOVAL, Front Seat Belt.>
- 4) Remove the nuts to remove the side airbag sensor.

CAUTION:

- Do not separate the side airbag sensor and bracket. It causes the airbag system malfunction.
- If the sensor is removed from the bracket, replace them with new parts.

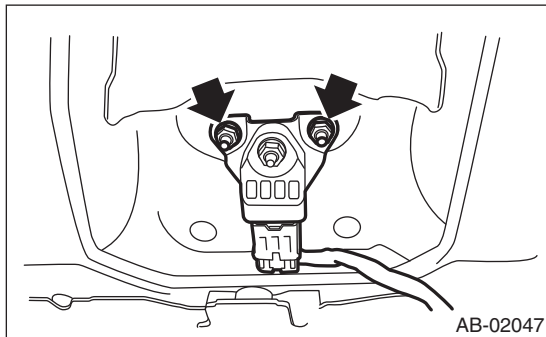

- 5) Disconnect the airbag connector.

B: INSTALLATION

CAUTION:

Do not reuse the bolt and nut.

Always use new bolts and nuts for them.

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- The bracket or connector of side airbag sensor is damaged.
- Side airbag is deployed.