


12.Satellite Safing Sensor

A: REMOVAL


- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the rear seat cushion. <Ref. to SE-15, REMOVAL, Rear Seat.>
- 4) Remove the satellite safing sensor cover. (model without rear seat center table)

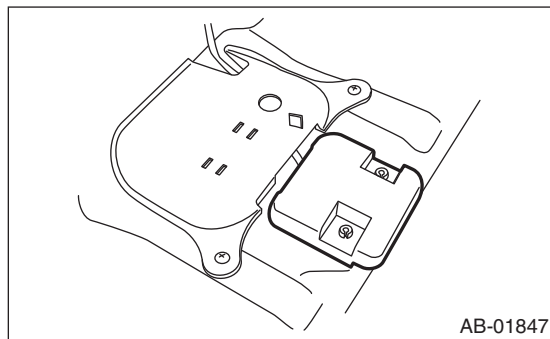

- 5) Remove the nuts to remove the satellite safing sensor.

CAUTION:

- Do not separate the satellite safing sensor and bracket. It causes the airbag system malfunction.
- If the sensor is removed from the bracket, replace them with new parts.

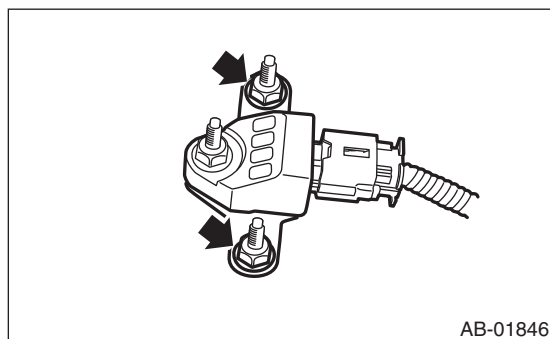

- 6) Disconnect the airbag connector.

B: INSTALLATION

CAUTION:

- Do not reuse the bolt and nut. Always use new bolts and nuts for them.
- When installing the satellite safing sensor cover, push the cover securely until it contacts the floor panel.
- When the installation of the satellite safing sensor cover becomes loose and it can be removed easily, replace the cover with a new part.
- After installing the satellite safing sensor cover, check that the sensor harness is not pinched.

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Mounting bracket or connector of satellite safing sensor is damaged.
- The satellite safing sensor cover is damaged
- Side airbag or curtain airbag is deployed.