

2. Airbag Connector

A: PROCEDURE


1. POWER SUPPLY

1) How to disconnect:

Push lock (A), then disconnect the connector.

CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

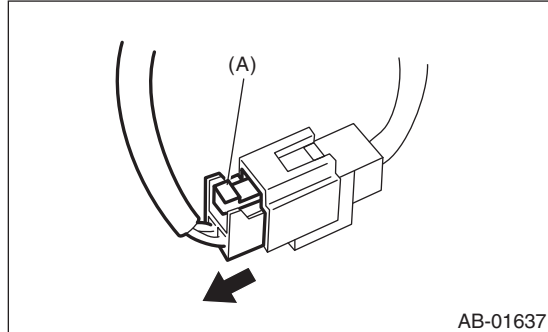


2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:


Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

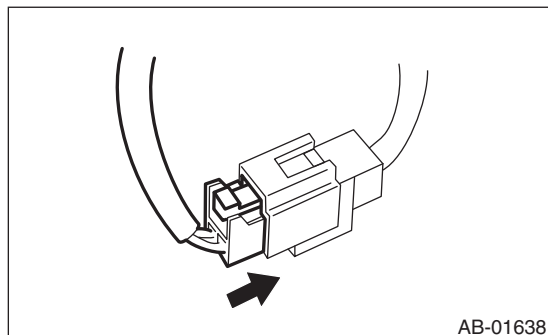

2. AIRBAG CONTROL MODULE

1) How to disconnect:

Press the lock lever plate (A) and pull out the lock lever.

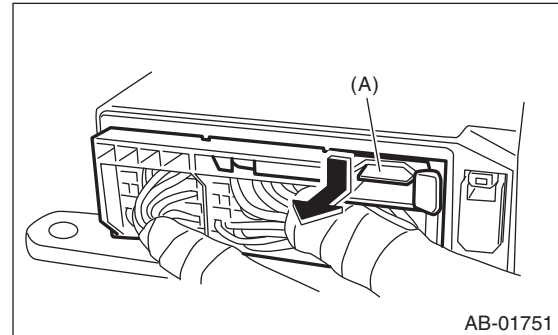

2) How to connect:

Insert the connector, push the lock lever in securely.

CAUTION:

Be sure to insert the connector in until it is locked. Then pull it lightly to make sure that it is locked.


Airbag Connector

AIRBAG SYSTEM

3. DRIVER'S AIRBAG MODULE (BETWEEN AIRBAG MAIN HARNESS AND ROLL CONNECTOR) AND PASSENGER'S AIRBAG MODULE

1) How to disconnect:


- (1) Push the slide lock (A) in the direction of arrow.

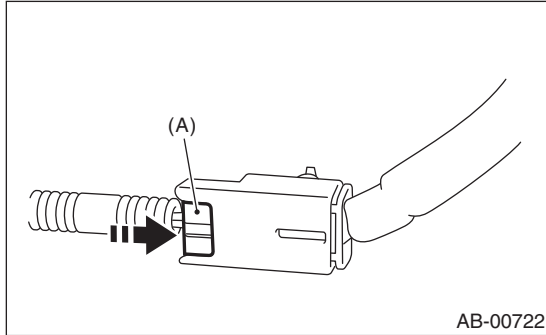

- (2) With the slide lock pushed, disconnect the connector.

CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

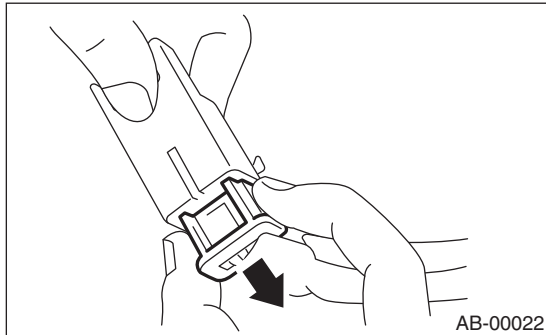


2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:


Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

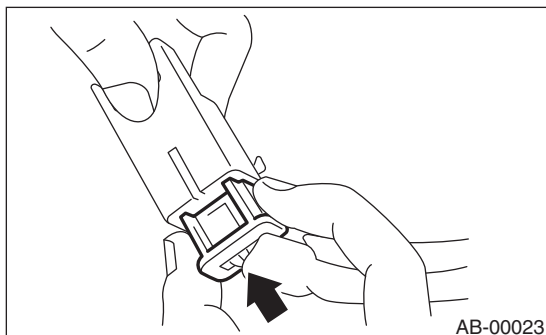


4. DRIVER'S AIRBAG MODULE, CURTAIN AIRBAG MODULE AND PRETENSIONER

1) How to disconnect:

- (1) Using a flat tip screwdriver, pry the push lock upward to unlock.

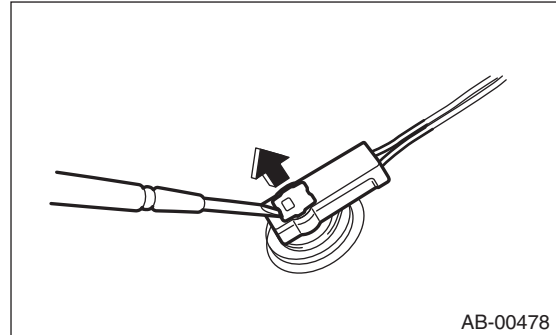

- (2) Pull the connector to disconnect from the driver's airbag module assembly or the retractor assembly.

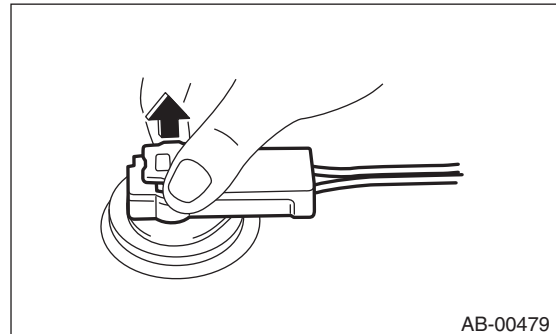


2) How to connect:

Connect the connector in the reverse order of disconnecting. At this time, be sure to insert until a clicking sound is heard.

CAUTION:

- Be sure to insert the connector in until it is locked.
- Be sure to push the push lock in securely. Then pull it gently to make sure that it is locked.

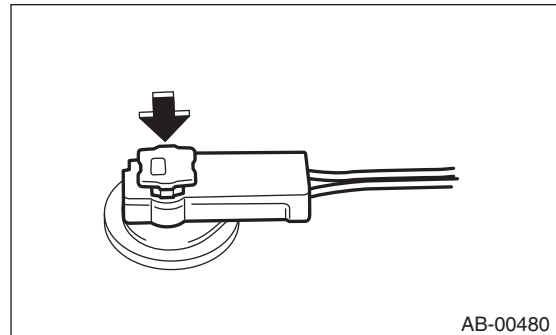


5. SIDE AIRBAG SENSOR, CURTAIN AIRBAG SENSOR AND SATELLITE SAFING SENSOR

1) How to disconnect:

Holding outer part (A), pull it in the direction of arrow.

CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

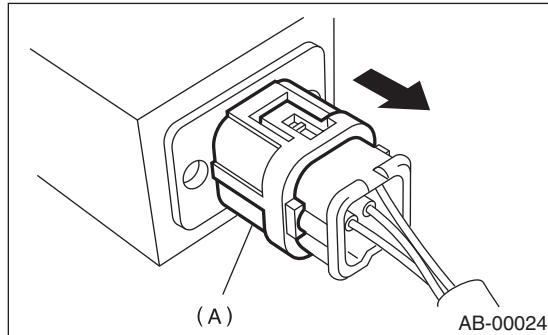


2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:

- Do not touch the outer side section or else the outer side (A) will move back.
- Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

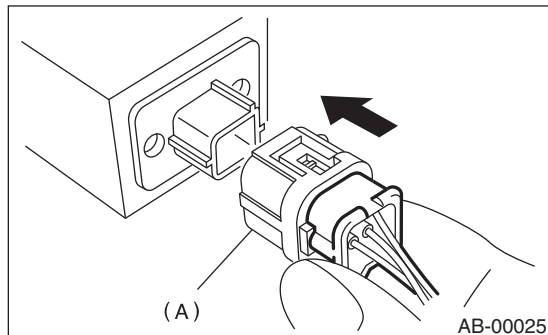

6. SIDE AIRBAG MODULE


1) How to disconnect:

(1) Move the slide lock (A) in the direction of arrow and hold it.

(2) With the slide lock (A) moved, pull the connector (B) in the direction of arrow.

CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

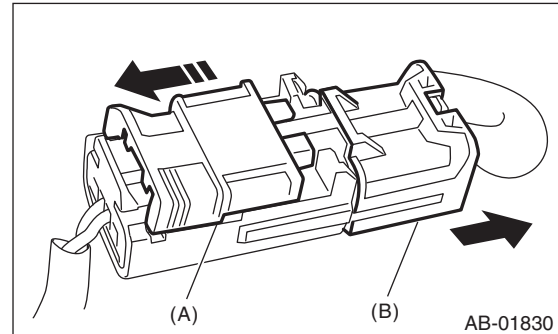


2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

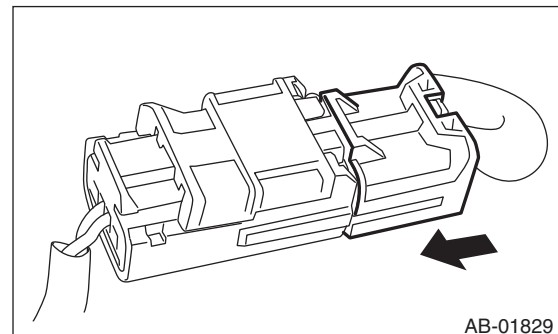


7. BUCKLE SWITCH RH

1) How to disconnect:

- (1) Move the slide lock (A) in the direction of arrow and hold it.
- (2) With the slide lock (A) moved, pull the connector (B) in the direction of arrow.

CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

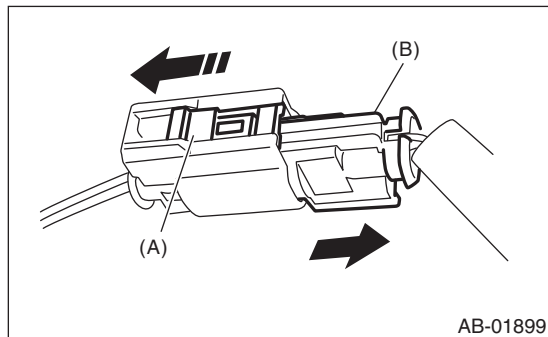


2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

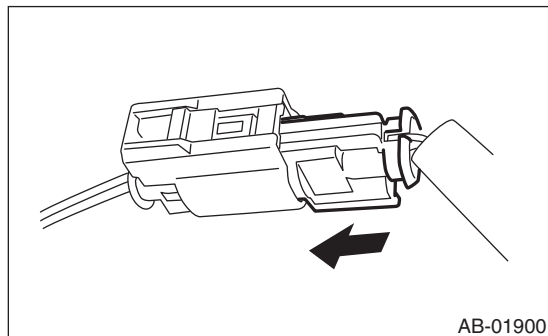


8. FRONT SUB SENSOR

1) How to disconnect:

CAUTION:


When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

- (1) Push the lock arm.
- (2) Holding outer part, pull it for one level in the direction of arrow.

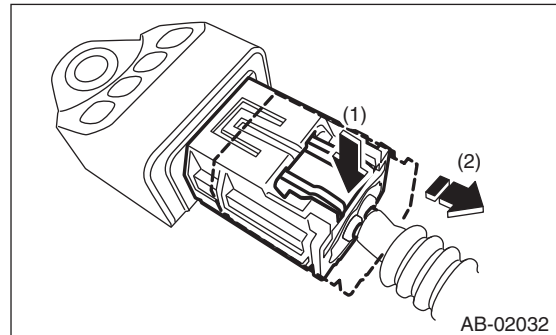

(3) Push the lock arm again.

- (4) Holding outer part, pull it in the direction of arrow to separate the connector.

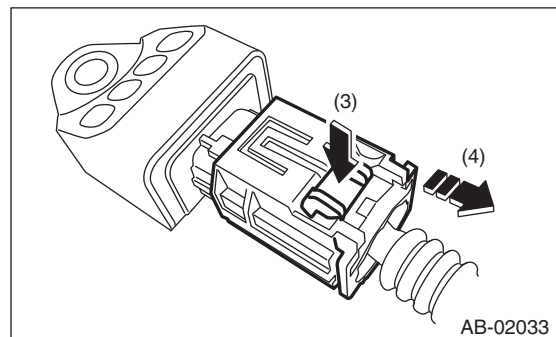

2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

