


9. Front Sub Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the front bumper face. <Ref. to EI-28, REMOVAL, Front Bumper.>
- 4) Remove the headlight assembly. <Ref. to LI-17, REMOVAL, Headlight Assembly.>
- 5) Remove the bolt, and then detach the front sub sensor.

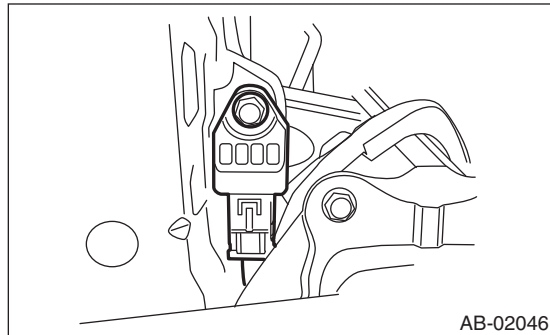

- 6) Disconnect the connector from front sub sensor.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.
- When installing the sensor, securely insert the arrest pin on the back side of sensor into the body side hole.
 - After attaching the headlight assembly, always perform headlight beam level adjustment.

Tightening torque:

13 N·m (1.32 kgf-m, 9.6 ft-lb)

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Front sub sensor or connector is damaged.
- Airbag is deployed.