

10. Clear Memory Mode

A: OPERATION

Clear the DTC stored in the airbag control module after repairing the airbag system. (After the breakdown is recovered, the breakdown code for completed recoveries are read out when the next breakdown occurs if the memory clear work is not performed.)

- 1) On the «Main Menu», select {Each System Check}.
- 2) On the «System Selection Menu», select {Airbag System}.
- 3) Select the {Clear Memory} in «Airbag System».
- 4) When the “Clear Memory?” is shown on the screen, select the [OK].
- 5) When “Done” is displayed, end the Subaru Select Monitor.
- 6) When “Done” and “Turn OFF the ignition switch” are shown on the display screen, turn the ignition switch to OFF.

NOTE:

- For details concerning the operation procedure, refer to the “PC application help for Subaru Select Monitor”.
- After the memory is cleared, initial diagnosis of the electronic throttle control is performed. Therefore, start the engine 10 seconds or more after have turning the ignition switch to ON.