


Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

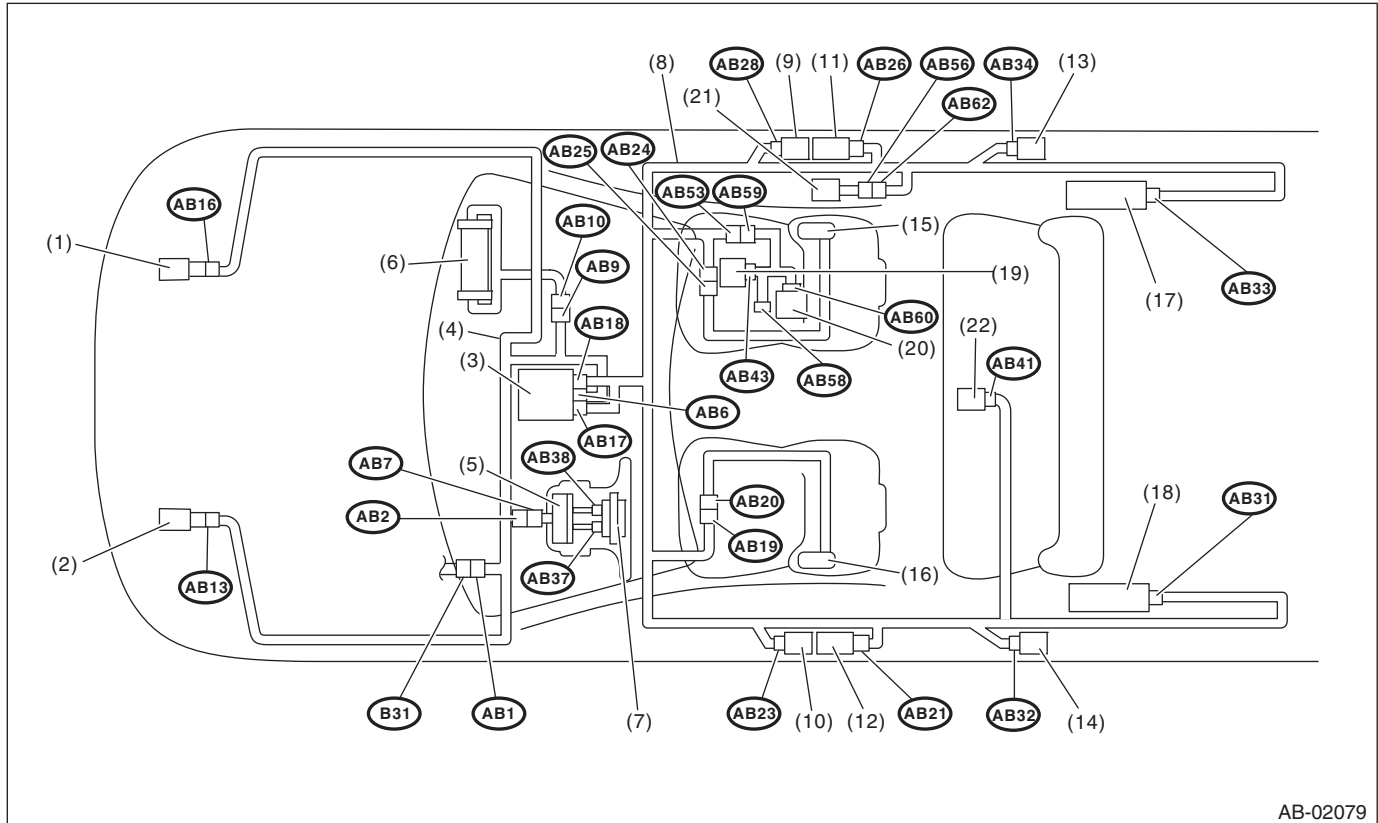

AB-02079

- | | | |
|---------------------------------|----------------------------------|--|
| (1) Front sub sensor (RH) | (9) Side airbag sensor (RH) | (16) Side airbag inflator (LH) |
| (2) Front sub sensor (LH) | (10) Side airbag sensor (LH) | (17) Curtain airbag inflator (RH) |
| (3) Airbag control module | (11) Seat belt pretensioner (RH) | (18) Curtain airbag inflator (LH) |
| (4) Airbag main harness | (12) Seat belt pretensioner (LH) | (19) Occupant detection control module |
| (5) Roll connector | (13) Curtain airbag sensor (RH) | (20) Buckle switch (RH) |
| (6) Passenger's airbag inflator | (14) Curtain airbag sensor (LH) | (21) Belt tension sensor |
| (7) Driver's airbag inflator | (15) Side airbag inflator (RH) | (22) Satellite safing sensor |
| (8) Airbag rear harness | | |

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB10)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB20)
Pin	6	4	30	4	4	4	2	2	20	20	2	2
Color	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow
Male/Female	Female	Female	Female	Male	Female	Male	Female	Female	Female	Female	Female	Male

Connector No.	(AB21)	(AB23)	(AB24)	(AB25)	(AB26)	(AB28)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)
Pin	2	4	2	2	2	4	2	4	2	4	2	2
Color	Black	Yellow	Yellow	Yellow	Black	Yellow	Black	Yellow	Black	Yellow	Orange	Black
Male/Female	Female	Female	Female	Male	Female	Female	Female	Female	Female	Female	Female	Female

Connector No.	(AB41)	(AB43)	(AB53)	(AB56)	(AB58)	(AB59)	(AB60)	(AB62)				
Pin	2	18	6	3	3	6	2	3				
Color	Yellow	Black	Gray	Brown	Gray	Gray	Yellow	Brown				
Male/Female	Female	Female	Female	Male	Female	Male	Male	Female				