

8. Read Diagnostic Trouble Code (DTC)

A: OPERATION

When malfunction of airbag system occurs, the DTC stored in airbag control module will be read out.

- 1) On the «Main Menu», select {Each System Check}.
- 2) On the «System Selection Menu», select {Airbag System}.
- 3) After {Airbag System} is displayed, select [OK].
- 4) Select the {Diagnostic Code(s) Display} in «Airbag System».
- 5) Record the DTC displayed.

NOTE:

- For details concerning the operation procedure, refer to the “PC application help for Subaru Select Monitor”.
- For details concerning DTCs, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to AB(diag)-40, List of Diagnostic Trouble Code (DTC).>
- If “No diagnostic Code Present” is displayed, the combination meter fault or the open circuit of harness is possible. For the diagnostic procedure, refer to <Ref. to AB(diag)-35, Airbag Warning Light Failure.>.
- When the airbag warning light is OFF and “No diagnostic Code Present” is displayed on Subaru Select Monitor, the airbag system is operating properly.