


Packet
print

$$\longleftrightarrow \uparrow \downarrow + - =$$

8/18/2011

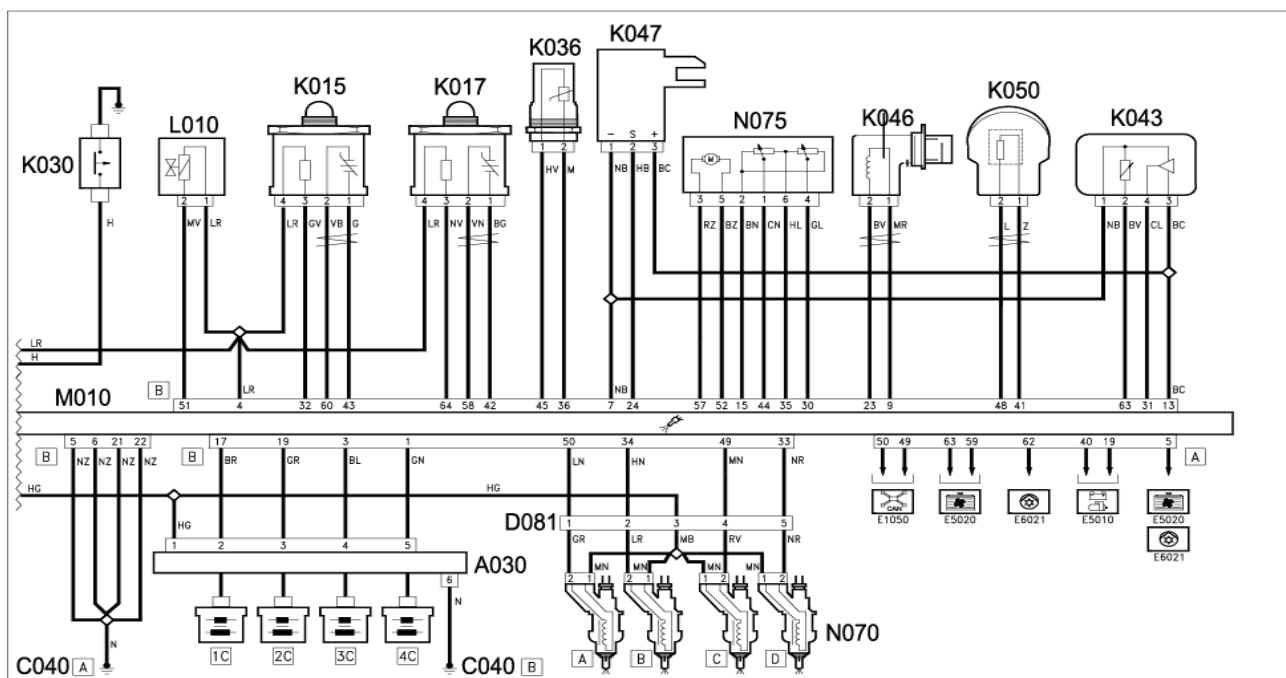

↔ ↑ ↓ + - =

[Full-size](#)

COMPONENTS

Component code	Description	Reference to the operation
A030	IGNITION COIL	Op. 5510C14 IGNITION COIL/S - R.R.
B001	JUNCTION UNIT	Op. 5505A13 ADDITIONAL JUNCTION U IN ENGINE COMPARTMENT - R.R.
B099	MAXI FUSE BOX ON BATTERY	Op. 5530B40 SUPPLY BOX ON BATTI (LINK BATTERY AND FUSE BOX) - R R
C010	LEFT FRONT EARTH	-
C015	DASHBOARD EARTH, DRIVER'S SIDE	-
C040	ENGINE EARTH	-
D020	DASHBOARD/REAR COUPLING	-
D029	ENGINE CABLES/ENGINE SERVICES CABLE COUPLING	-
D81	GIUNZIONE INIETTORI	-
D107	DASHBOARD-REAR/ENGINE SERVICES COUPLING	-
E050	INSTRUMENT PANEL	Op. 5560B10 CONTROL PANEL - R+R
I020	REVERSING LIGHTS SWITCH	Op. 5550D22 REVERSING LIGHT SWITC R+R
I030	BRAKE PEDAL SWITCH	Op. 5550D10 BRAKE LIGHT SWITCH - R-

I031	CLUTCH PEDAL SWITCH	Op. 1056B78 SWITCH ON CLUTCH PEDAL - R.R (PETROL ENGINES)
I050	INERTIA SWITCH	Op. 1040A74 INERTIA SWITCH FOR ELECTRIC PUMP SUPPLY CIRCUIT R + R
K015	LAMBDA SENSOR ON PRE-CATALYZER	Op. 1080B94 FRONT LAMBDA SENSOR WITH CATALYTIC CONVERTER - R.R
K017	LAMBDA SENSOR ON CATALYZER	Op. 1080B95 REAR LAMBDA SENSOR CATALYTIC CONVERTER - R.R
K030	LOW ENGINE OIL PRESSURE SENSOR (SWITCH)	Op. 1084A42 ENGINE OIL PRESSURE WARNING LIGHT SWITCH - R + R
K036	ENGINE COOLANT TEMPERATURE SENSOR/SENDER UNIT	Op. 1056B50 COOLANT TEMPERATURE SENSOR - R + R
K043	INTEGRATED AIR TEMPERATURE SENSOR	Op. 1056B54 INTAKE AIR PRESSURE/TEMPERATURE SENSOR - R.R.
K044	AIR PRESSURE - TEMPERATURE SENSOR	Op. 1056B44 AIR PRESSURE SENSOR - R
K047	TIMING SENSOR	Op. 1056B51 CAM ANGLE SENSOR - R.R.
K050	DETONATION SENSOR	Op. 5510C42 DETONATION SENSOR (ONE) - R.R.
K055	ACCELERATOR PEDAL POTENTIOMETER	Op. 1068A20 ACCELERATOR PEDAL WITH BUILT-IN POTENTIOMETER - R.R
L010	FUEL VAPOUR RECOVERY SOLENOID VALVE	Op. 1080E28 ENABLEMENT SOLENOID FOR FLOW OF FUEL VAPOUR TO INLET - R+R
M001	BODY COMPUTER	Op. 5505A32 BODY COMPUTER - R.R
M010	ENGINE MANAGEMENT ECU	Op. 1056B82 INJECTION/IGNITION SYSTEM E.C.U. (ONE) - R + R
N040	FUEL PUMP AND LEVEL GAUGE	Op. 1040A70 SUBMERGED PUMP ASSEMBLY COMPLETE WITH LEVEL GAUGE CONTROL - R + R
N070	INJECTOR	Op. 1056B70 INJECTOR (ONE) - R + R WITH FUEL MANIFOLD PIPE REMOVED INCLUDES SEAL REPLACEMENT
N075	THROTTLE BODY ACTUATOR	Op. 1056B14 THROTTLE CASE - R + R