


Buick Park Avenue 1998 – 1999 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is located to the far right side under the instrument panel.

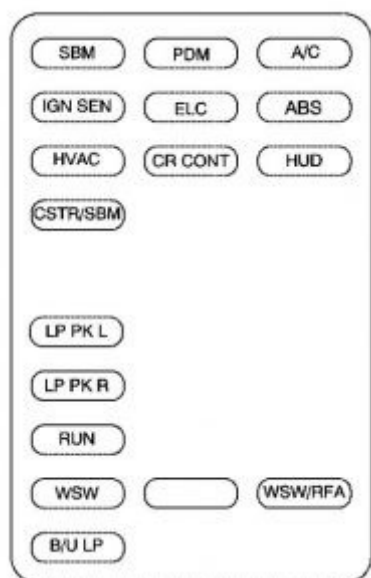


Buick Park Avenue – fuse box – main instrument fuse panel

Fuses	Usage
SBM	Interior Lamps
PDM	PDM Module
A/C	HVAC Motor, HVAC Mix Motors
IGN SEN	EC Mirror, Driver HTS Seat, Rear Defog Relay, MEM Module, Cool LVL Sensor, Pass Heated Seat
ELC	HVAC Flat Pk Mtrs, Electronic Level Control Sensor, Electronic Level Control Sensor (R Bec)
ABS	Anti-Lock Brake System Module
HVAC	HVAC Main Con Head, HVAC Programmer, IPC
CR CONT	Stepper Motor Cruise, Cruise Switch
HUD	HUD Switch, HUD Display
CSTR/SBM	HVAC Programmer, Instrument Panel Cluster, SBM (275 to LCM) (1135 to BTSI SL)
LP PK L	Underhood Lamp, L PK/ Sidemarker, L Park/Turn Lamp, SBM, L Tail Signal Lamp, L Tail/Stoplamp, L Rear Sidemarker
LP PK R	Rt Pk/Sidemarker Lamp, Rt PK/Turn Lamp, Rt Tail/Sign Lamp, Rt Tail/Stoplamp, Rt Rear Sidemarker, Stop/Taillamp, Tail/Signal Lamp, License Lamp, RFA
RUN	Run/Accessory
WSW	Wiper Motor

Blank	Not Used
WSW/RFA	Wiper Switch, RFA, Rain Sense
B/U LP	EC Mirror, Back-Up Lamps

Underhood Fuse Block

There are additional fuses located in the engine compartment on the passenger's side of the vehicle.

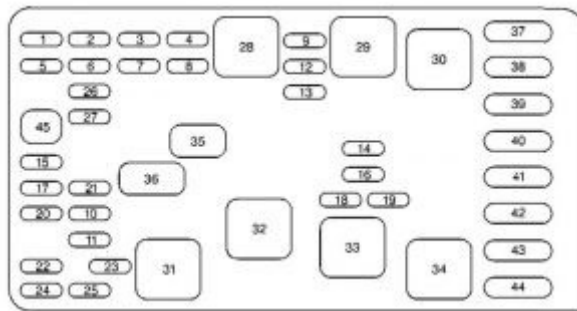


Buick Park Avenue – fuse box – underhood

Position	Usage
1	Not Used
2	SBM, LCM
3	Turn Signal
4	Pre-Oxygen Sensor, Post-Oxygen Sensor
5	SDM-R Module
6	PCM, MAF Sensor
7	AC Clutch
8	Brake Switch, Trans Shift, PCM/ EGR Ref, Lin EGR, Cnstr Purge Sol, Cnstr Purge SW
9	Horn Relay
10	Not Used
11	Not Used
12	Injectors #1-6
13	Ignition Module
14	Rt High Beam
15	Not Used
16	Lt High Beam
17	Not Used
18	Rt Low Beam
19	Lt Low Beam
20	Turn Signal, Stepper Mtr, Brake Lamp, CHMSL
21	Fuel Pump Relay (Wire in BEC)
22	Ignition Switch
23	In Key Module, PCM

24	To IP BEC-B/U Lamp
25	Flasher Module
26	Not Used
27	Not Used
28	Relay–Ignition
29	Relay–Horn
30	Relay–Cooling Fan #2
31	Relay–Starter
32	Not Used
33	Relay–Cooling Fan S/P
34	Relay–Cooling Fan #1
35	Relay–A/C CLU micro
36	Relay–Fuel Pump micro
37	BAT #1
38	HVAC Blower Motor
39	Low Speed Fan Relay
40	LCM Module
41	BAT #2
42	IGN
43	Starter
44	High Speed Fan Relay

Rear Compartment Fuse Block

Additional fuses are located in the fuse center under the rear seat. The rear seat cushion must be removed to access the fuses.

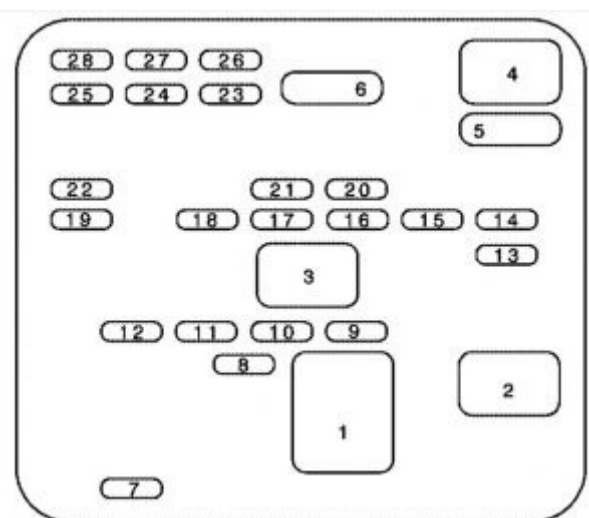

Buick Park Avenue – fuse box – rear

compartment

Position	Usage
1	Relay–Heated Backlite to Rear Grid
2	Relay–Rap
3	Relay–Trunk Release to Solenoid
4	Relay–ELC to Compressor
5	Memory Seat Module, Driver Seat Switch, Driver Lumbar SW
6	ELC Sensor, ELC Compressor Solenoid
7	Crank
8	Auxiliary Outlet (2 in Cn), Auxiliary Outlet (1 in St)
9	PCM/CRU
10	SBM Module
11	Radio/Phone
12	Sunroof
13	Not Used
14	Cell Phone Handset, Cell Phone Booster, CD Changer
15	Driver Door Module
16	Not Used
17	Amp, Radio Head
18	Driver Heated Seat Module
19	Rear Door Mod (2 LD)
20	Fuel Door Rel Solenoid, Trunk Release Relay, DLC
21	Not Used
22	IP Ashtray Cigarette Lighter
23	Not Used
24	Not Used
25	Passenger Heated Seat Module
26	Rt Rear Cig Lighter
27	Lt Rear Cig Lighte
28	RFA, Memory Seat Module, Driver Seat Switch