


IGNITION OR STARTER SWITCH ASSY REPLACEMENT

8003R-01

HINT:

The installation is in the reverse order of the removal. However when there is a special point concerning the installation, it is indicated.


1. **REMOVE STEERING COLUMN COVER LWR** (See page 50-8)
2. **REMOVE STEERING COLUMN COVER UPR** (See page 50-8)

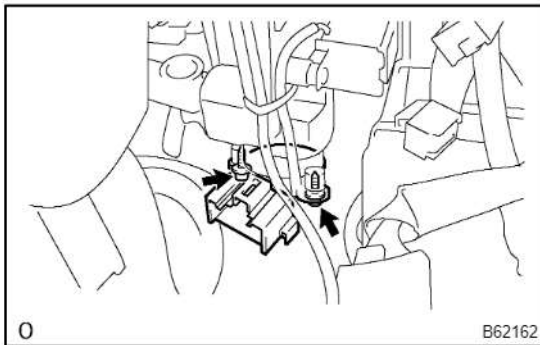

3. **REMOVE IGNITION OR STARTER SWITCH ASSY**
 - (a) Disconnect the ignition switch connector and un-lock warning switch connector.
 - (b) Remove the clamp.
 - (c) Remove the 2 screws and ignition switch.

cardiagn.com

INSPECTION

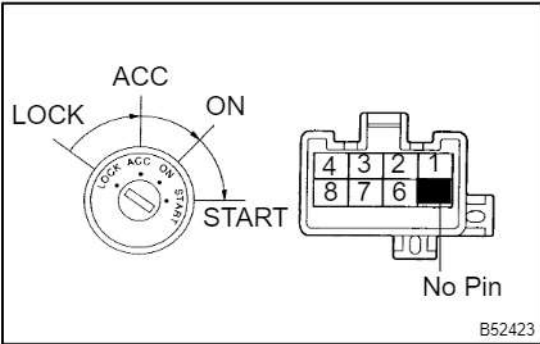

1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Inspect the switch continuity.

Standard:

Terminal No	Switch Position	Specified Condition
–	LOCK	No continuity
2 ⇄ 3	ACC	Continuity
2 ⇄ 3 ⇄ 4 6 ⇄ 7	ON	Continuity
1 ⇄ 2 ⇄ 4 6 ⇄ 7 ⇄ 8	START	Continuity

If the result is not as specified, replace the switch assy.