


Chevrolet Blazer 1992 – 1994 fuse box diagram

Fuse Box diagram

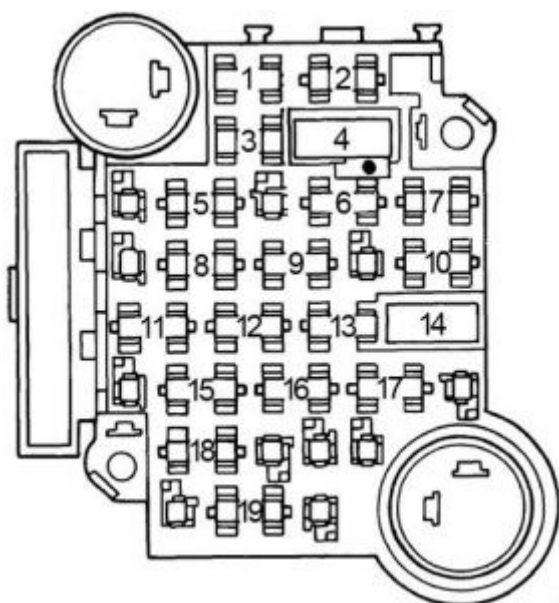

Chevrolet Blazer – fuse box diagram

No.	A	Circuit Protected
1	20	Cruise Control, Rear Window Defogger Timer, 4-Wheel Drive Display Illumination, Auxiliary Battery Relay, Seat Belt Reminder, Cluster Ignition Feed
2	15	Back-Up Lights, Turn Signals
3	–	–
4	30	Circuit breaker: Power Windows
5	5	Discreet Crank
6	10	Torque Converter Clutch, Air Injection Reactor Diverter, Electronic Spark Control, EGR, Electronic Control Module, Anti-Lock Switch
7	25	4-Wheel Drive (4WD)
	15	Speedometer
8	10	Throttle Body Injectors
9	15	Anti-Lock Brakes, Cluster Speedometer
10	25	HVAC, 4-Wheel Drive, Auxiliary Battery
11	20	Courtesy Lights, Glove Box Light, Radio
12	20	Horn Relay, Horn Feed, Cigarette Lighter, Parking Lights
13	5	Switch Illumination, Headlight ON Warning, Radio Illumination, Heater & A/C Illumination, Rear Window Defogger
	20	Switch Illumination, Headlight ON Warning, Radio Illumination, Heater & A/C Illumination, Rear Window Defogger
14	30	Circuit breaker: Door Locks, Rear Window Defogger
15	15	Hazard Flasher, Seat Belt Reminder, Stoplights, Rear Anti-lock Memory
16	25	Windshield Washer/Wiper
17	–	–

18	10	Radio Feed
19	15	Daytime Running Light