

Dodge Dakota 2011 fuse box diagram

Power Distribution center

Cavity	Cartridge fuse	Mini Fuse	Description
1			Spare
2			Spare
3	30		Electric Brake
4	50		Power Seat
5			Spare
6		20	Ignition Off Draw (IOD) Cabin Compartment Node (CCN), Radio
7		10	Powertrain Control Module (PCM)/Fuel/RAD/AC Coils
8		10	Cabin Compartment Node (CCN)/Mirror/4×4
9			Spare
10		2	Low Current Ignition Switch
11		10	AC Clutch
12		15	Trailer Tow Lt Stop/Turn

13		15	Trailer Tow Rt Stop/Turn
14		20	Ignition Off Draw (IOD) #2
15		25	Trans/Powertrain Control Module (PCM)
16		20	Horn
17		20	Antilock Brakes Feed (Valves)
18		20	Fuel Pump
19		15	Rear Center Brake Lamp
20		20	Instrument Cluster/Door Locks/Brake Transmission Shift Interlock
21		25	Audio Amp
22		20	Power Outlet (Switchable)
23		20	Fog Lamps
24		20	Powertrain Control Module B+
25		15	Instrument Cluster Illumination
26		20	Ignition Run/Start Feed
27		10	Power Mirror

28		20	Power Outlet
29		20	Body Control Module 4 (Wipers)
30			Spare
31		30	Ignition Run/AC/Windows
32	30		Body Control Module 1 (Ext. Lights # 1)
33	30		Automatic Shutdown
34	30		Body Control Module 2 (Ext. Light # 2)
35	40		Climate Control System Blower Motor
36			Spare
37			Spare
38	20		Spare
39	30		Starter Solenoid
40	40		Ignition Run Feeds
41	30		Wiper Motor
42		25	Body Control Module 5 (T-Case)

43		10	Lt Park Lamps
44		10	Rt Park Lamps
45		20	Trailer Tow Park Lamps
46		10	Airbag System # 2
47	40		Spare
48	20		Sunroof/Sound Box
49	30		Trailer Tow B+
50	40		Antilock Brakes Module (Pump)
51	40		Park Lamps
52			Spare
53	40		Rear Defogger
54			Spare
55			Spare
56		10	Heated Seats
57		20	Airbag System # 2

58		20	Heated Seats
59		10	Climate Control System Module
60		10	Antilock Brakes Module
61		20	Body Control Module 3 (Reverse Lamps)