

2004 Toyota RAV4
2004 ACCESSORIES & EQUIPMENT Horn - RAV4



2004 ACCESSORIES & EQUIPMENT

Horn - RAV4

LOCATION

2004 Toyota RAV4

2004 ACCESSORIES & EQUIPMENT Horn - RAV4

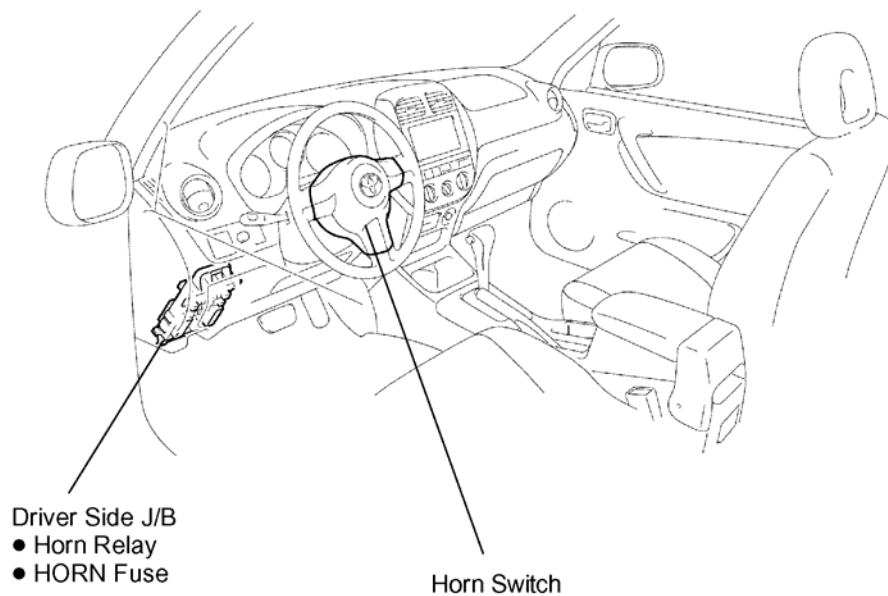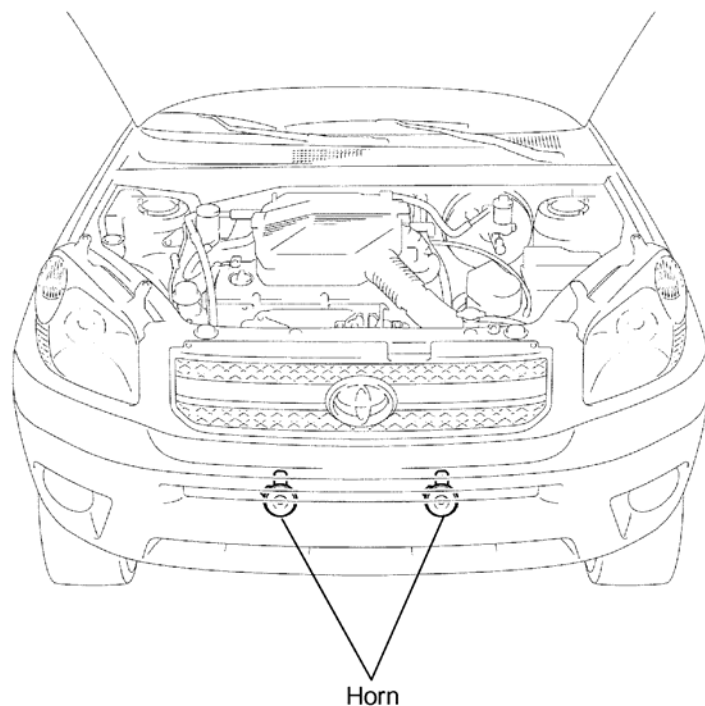

P
G02926559

Fig. 1: Identifying Horn System Locations

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

INSPECTION

1. INSPECT HORN SWITCH

- Check if no continuity exists between terminal 6 of the connector and body ground.
- Check if continuity exists between terminal 6 of the connector and body ground when the horn contact plate is pressed against the steering wheel.

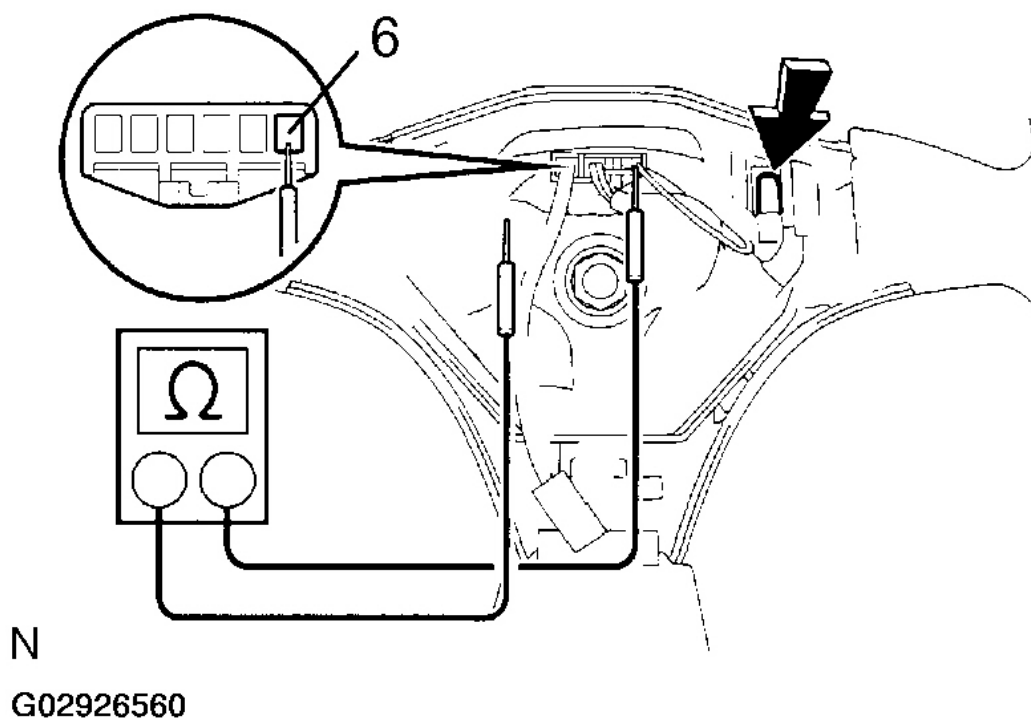



Fig. 2: Inspecting Horn Switch

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If the continuity is not as specified, repair or replace the steering wheel or wire harness as necessary.

2. INSPECT HORN OPERATION

Connect the positive (+) lead from the battery to the terminal and negative (-) lead to the horn body, Check if the horn sounds.

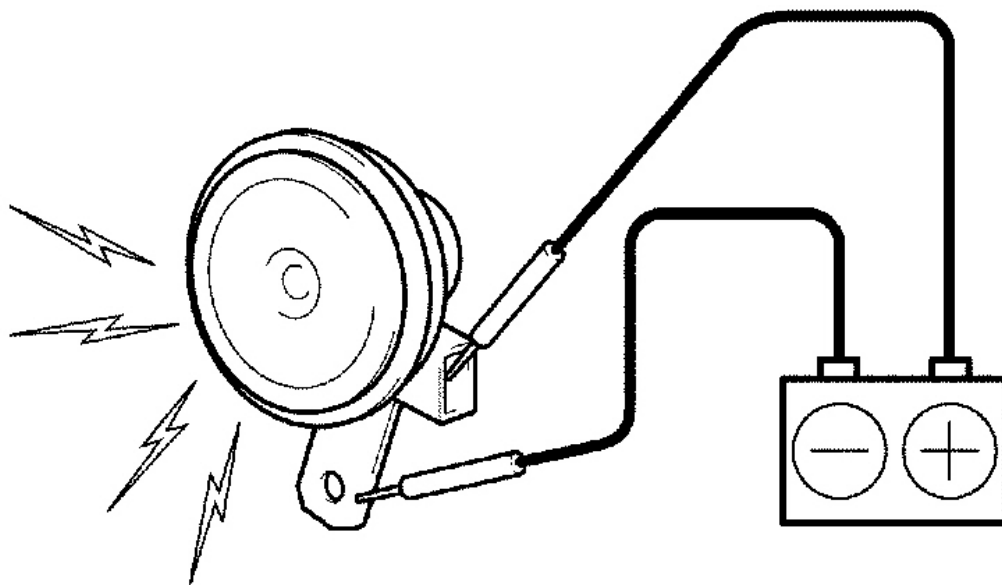

P


G02926561

Fig. 3: Inspecting Horn Operation

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If operation is not as specified, replace the horn.

3. INSPECT HORN RELAY (Marking: HORN) CONTINUITY

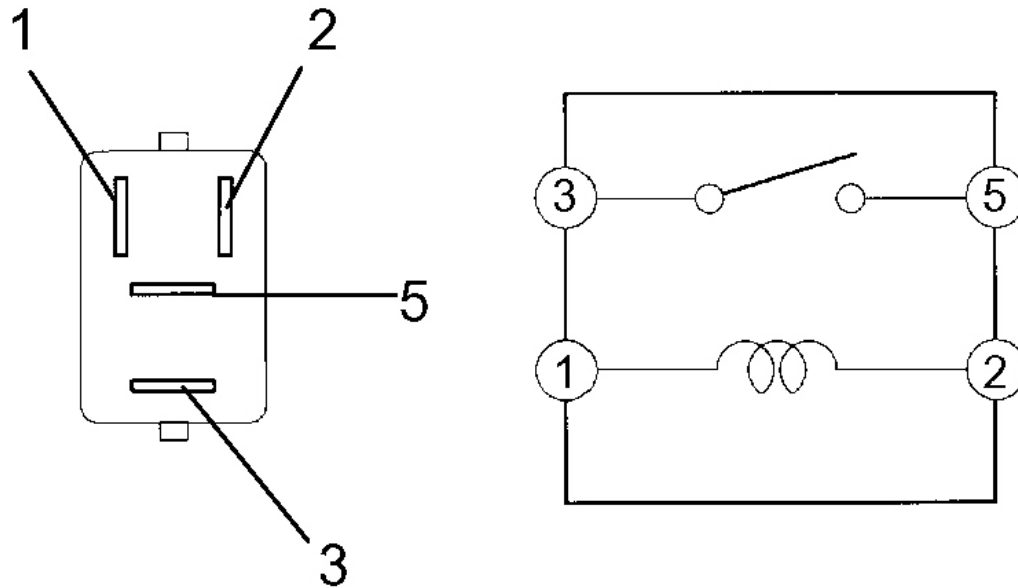

N

G02926562

Fig. 4: Inspecting Horn Relay

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

HORN RELAY CONTINUITY

Tester Connection	Specified Condition
3 - 5	No continuity
3 - 5	Continuity (When battery voltage is applied to terminals 1 and 2)

If the continuity is not as specified, replace the relay.