


Alfa Romeo 159 fuse box diagram

Fuse box on the dashboard

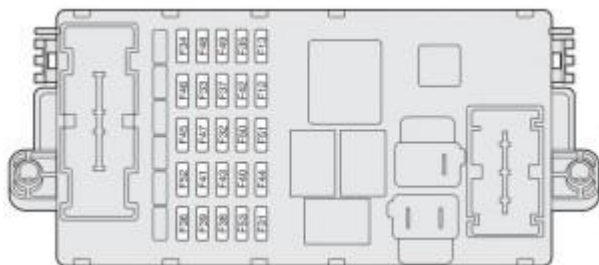


Alfa Romeo 159 – fuse box – dashboard

Nº	A	Function
12	15	Right dipped beam headlight
13	15	Left dipped beam headlight
31	7.5	Supply + key for relay coils of engine compartment control unit/dashboard control unit/Body Computer
32	15	Driver's door branch point/passenger's door branch point/ignition device
33	20	Rear left window control/boot node
34	20	Rear right window control/boot node
35	7.5	Reversing light/Brake light
36	20	Supply of boot node/locks actuators
37	7.5	Third brake light Positive under key for stop lights/third stop/instrument/lights direction

38	15	Boot opening
39	10	Front/rear ceiling light Supply + battery for air conditioner, ceiling lights, volumetric alarm, EOBD system diagnostic socket
40	30	Heated rear window
41	7.5	Defrosting of external mirrors/heated windshield relay coil
42	–	–
43	30	Windshield wiper/washer
44	10	Front cigar lighter on central console
45	15	Supply of socket in the boot
46	20	Sunroof
47	20	Power supply of driver door node
48	30	Power supply of passenger door nodes
49	7.5	Front ceiling light + Key for wheel node/Sunroof control unit/Front and rear ceiling lights/Cvs/Blue&Me node/Volumetric/Left and right seat
50	–	–

51	7.5	Supply under key for Telematic info node/Automatic gearbox node/Additional heater/Left dashboard controls/ START/STOP button, Parking sensors control unit/Electrochromatic mirror/Blue&Me node/Car radio prearrangement/AQS/Cruise Control
52	15	Rear window wiper/Rear lighter
53	10	Direction indicators Hazard lights Instrument panel branch point


Fuse box on the battery positive pole

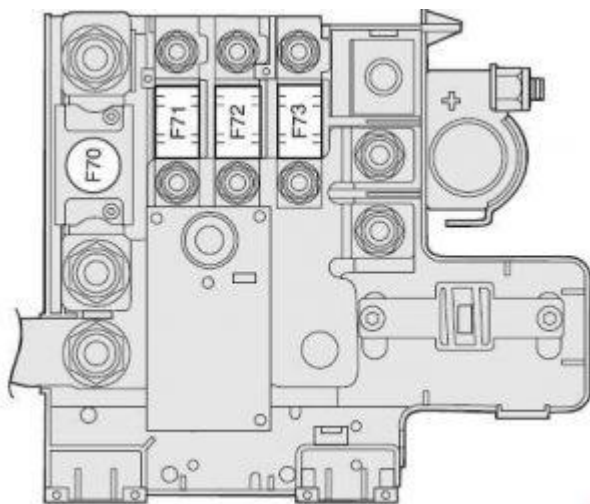

Alfa Romeo 159 – battery positive pole

Nº	A	Function
70	150	Engine housing control unit services
71	70	Instrument panel control unit
72	50	Additional heater (passenger compartment water heating 600W) (diesel versions)
73	60	Plug pre-heating control unit (diesel versions)

Fuse box near the battery

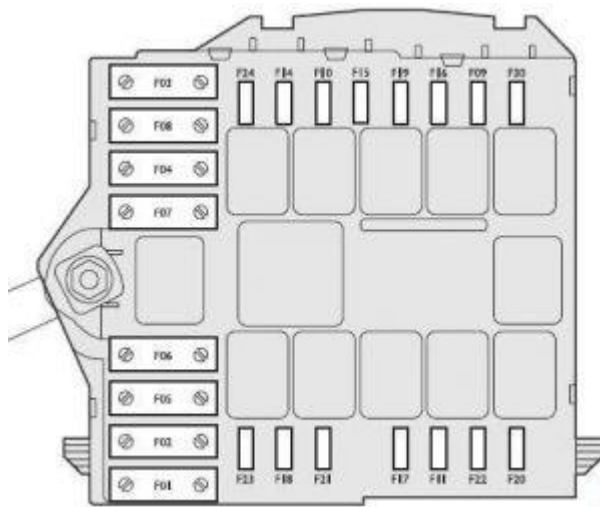


Alfa Romeo 159 -near the battery

Nº	A	Function
1	60	Instrument panel control unit
2	40 60*	Climate control system fan (1.8 140 HP versions) Climate control system fan (2.2 JTS Selespeed versions)*
3	20	Electric steering lock
4	40	Brake branch point (pump)
5	40 20*	Brake branch point (solenoid valve) (ABS version) Brake branch point (solenoid valve) (VDC version)*
6	40	Radiator fan (low speed) (1.8 140 HP, 2.2 JTS Selespeed versions)
7	50	Radiator fan (high speed)
8	30	Additional heater supply (passenger compartment water heating 300W) (diesel versions)

9	20	Headlight washer
10	15	Horns
11	–	–
14	7.5	Right main beam headlight
15	7.5	Left main beam headlight
16	–	–
17	–	–
18	–	–
19	7.5	Climate control system compressor
20	20	Rear window heating
21	20	Fuel pump supply
22	–	–
23	15	Sound system/radionavigation system power/Blue&Me
24	–	–
30	15	Front fog light

Fuse box in the boot (left-hand side)

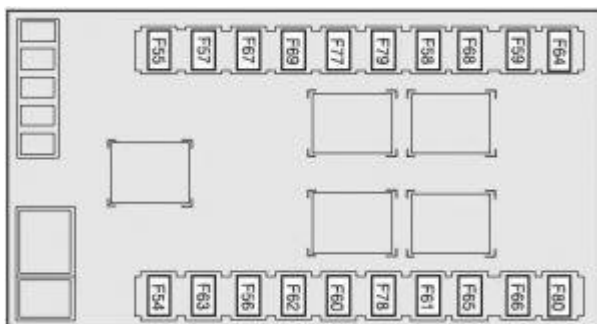

Alfa Romeo 159 – fuse box diagram – in

boot left hand

Nº	A	Function
54	30	Amplifier Bose audio system
55	–	–
56	25	Front left seat movement control
57	7.5	Driver's seat warming left
58	–	–
59	–	–
60	25	Front right seat movement control
61	15	Amplifier Bose audio system on rear parcel shelf
62	–	–
63	–	–
64	–	–

65	–	–
66	–	–
67	7.5	Front passenger' seat warming right
68	–	–
69	–	–
77	–	–
78	–	–
79	–	–
80	–	–

Fuse box in the boot (right-hand side)

Nº	A	Function
55	15	Socket