


Rear ABS Wheel Speed Sensor

VEHICLE DYNAMICS CONTROL (VDC)

8. Rear ABS Wheel Speed Sensor

A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector from the rear ABS wheel speed sensor.

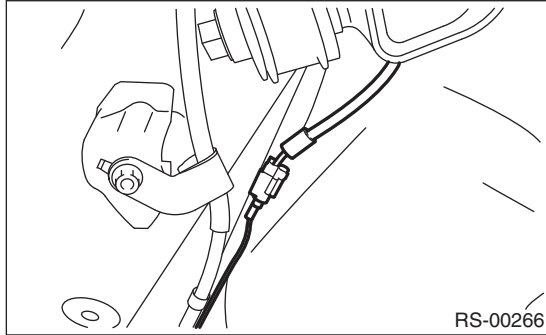

- 3) Remove the sensor harness clamp of the rear sub frame.




- 4) Remove the sensor harness bracket from the upper arm.

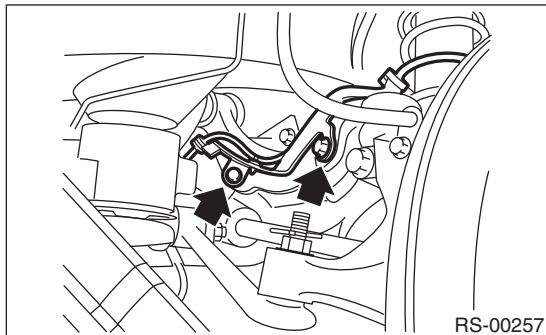

- 5) Remove the rear ABS wheel speed sensor from the rear axle.

CAUTION:

- Be careful not to damage the sensor.
- Do not apply excessive force to the sensor harness.

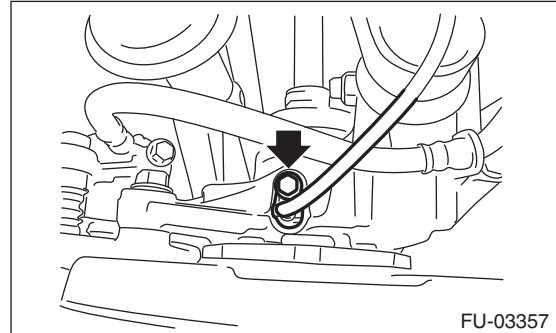

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be careful not to damage the sensor.

Tightening torque:

Sensor:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

Bracket:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

Check the identification (mark) on the harness to make sure there is no warpage. (RH: P3 (light blue), LH: P4 (brown))

C: INSPECTION

1. ABS WHEEL SPEED SENSOR

<Ref. to VDC-25, ABS WHEEL SPEED SENSOR, INSPECTION, Front ABS Wheel Speed Sensor.>