


Dodge Viper 2004 – 2006 fuse box diagram

Power Distribution Center

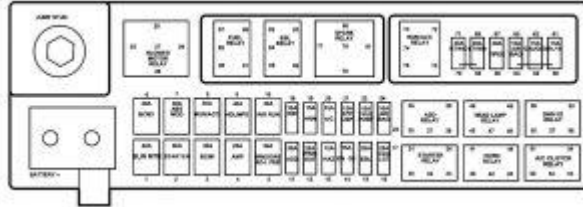

Dodge Viper – fuse box – power distribution center

Cavity	Fuse	Circuits
1	40	Batt-Relay Contact, High Blower Motor Module ABS Pump Feed
2	40	ABS Pump Feed
3	30	Battery
4	20	Fused Feed to RS Amplifier or Power Amplifier
5	30	Ignition Switch (Run & Accessory)-(Downstream)
6	40	Batt
7	30	Batt-Relay Contact, ABS Pump Motor
8	30	Batt-Motor, Wiper
9	40	Batt-Fuseblock

10	30	Batt-Switch, Ignition (Run/Start/Accy)
11	20	Batt-Relay Contact, Auto Shutdown
12	20	Secondary Power Outlet Feed
13	15	Batt-Flasher, Hazard
14	15	Rear O2 Sensor to Heater Relay
15	20	Electric Heated RR. WDO (EBL)
16	20	Fused Feed-Cigar Lighter
17		
18	15	Batt-Locks, Power Door
19	15	Batt
20	15	Feed-Courtesy, Dome, Visor, Illuminated Entry, Reading
21	15	Fuse Feed to Stop Lamp Switch
22	15	Battery to AC Clutch Relay
23	10	Airbag, Ignition Run
24		

25	ISO RELAY	Batt-Relay Contact, High Blower Motor
26		
27		
28		
29		
30	MICRO RELAY	Batt-Relay-Starter Contact to Solenoid
31		
32		
33		
34		
35	MICRO RELAY	Feed-Auto Shutdown Relay Coil
36		
37		
38		
39		

40	MICRO RELAY	Feed-Horn (From Relay)
41		
42		
43		
44		
45	MICRO RELAY	Batt-Relay-Headlamps
46		
47		
48		
49		
50	MICRO RELAY	Relay-A/C Clutch Output from Relay Contact (B+)
51		
52		
53		
54		

55	MICRO RELAY	Left/Right Downstream Oxygen Sensor Output Feed FR
56		
57		
58		
59		
60	15	Ignition Start/Run Relay Coil
61		
62	15	Ignition Start/Run Gauges
63		
64	10	Ignition Start/Run Airbag
65		
66	20	Feed-Ign Run/Acc Wiper Switch
67		
68	20	Left HID Headlamp
69		

70	20	Right HID Headlamp
71		
72	MICRO RELAY	Batt-Run/Acc Relay
73		
74		
75		
76		
77		
78		
81	MICRO RELAY	Heated Rear Window (EBL) Relay
83		
84		
85		
86		
87	MICRO RELAY	Batt-Motor, Fuel Pump Relay

88		
89		
90		
91		