

Citroen C5 II (mk2) (from 2008) – fuse box diagram

Year of production: 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016

There are two fuse boxes, one below the dashboard and one under the bonnet.

To access the fuses under the dashboard, open glove box and then detach the stowage cover.

Fuse box under dashboard (Box A)



Citroen C5 mk2 – fuse box- under dashboard –

box A

Symbol	Ampere rating [A]	Function
G29	—	Not used
G30	5	Heated rear view mirrors
G31	5	Rain and brightness sensor
G32	5	Seat belt not fastened warning lamps
G33	5	Electrochrome rear view mirrors
G34	20	Sun roof
G35	5	Passenger door lighting – Passenger rear view mirror adjustment
G36	30	Electric tailgate (tourer)
G37	25	Heated front seatsprzednie podgrzewane
G38	25	Driver's electric seat
G39	40	Passenger's electric seat – HIFI amplifier
G40	3	Trailer relay unit supply

Dashboard fuses (Box B)

Symbol	Ampere rating [A]	Function
G36	15	6 speed automatic gearbox
	5	4 speed automatic gearbox
G37	10	Daytime-running lamps – Diagnostic socket
G38	3	ESP
G39	10	Hydraulic suspension
G40	3	STOP switch


Dashboard fuses (Box C)



Citroen C5 mk2 – fuse box – (Box C)

Symbol	Ampere rating [A]	Functions
F1	15	Rear screen wiper (Tourer)
F2	30	Locking and deadlocking relay
F3	5	Airbags
F4	10	Automatic gearbox – Additional heater unit (Diesel) – Electrochrome rear view mirrors
F5	30	Front window – Sun roof – Passenger door lighting – Passenger rear view mirror adjustment
F6	30	Rear window
F7	5	Vanity mirror lighting – Glove box lighting – Interior lamps
F8	20	Radio – CD changer – Controls at the steering wheel – Display – Tyre deflation detection
F9	30	Cigar-lighter – Front 12V socket
F10	15	Alarm – Controls on the steering wheel, signalling and screen wipe control
F11	15	Low current anti-theft switch
F12	15	Driver's electric seat – Instrument panel – Seat belt not fastened warning lamps – Air conditioning controls
F13	5	Engine relay unit – Hydraulic suspension pump cut-off relay – Airbag ECU supply
F14	15	Rain and brightness sensor – Parking assistance – Passenger's electric seat – Trailer relay unit – HIFI amplifier ECU – Handsfree kit – Lane Departure Warning System
F15	30	Locking and deadlocking relay
F17	40	Heated rear screen – Exterior heated rear view mirrors
FSH	SHUNT	CUSTOMER PARK SHUNT

Fuse box in engine compartment

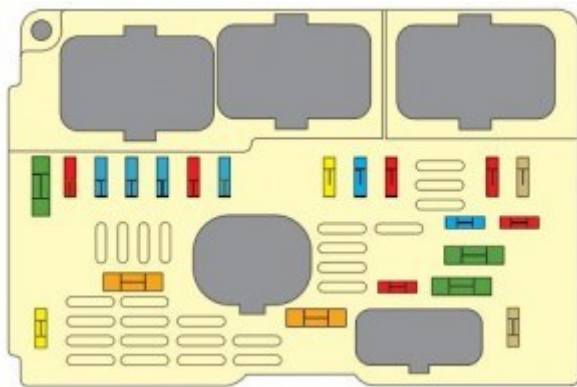

Citroen C5 mk2 – fuse box – in engine

compartment

To access the fusebox in the engine compartment, undo each screw a 1/4 turn.

Symbol	Ampere rating [A]	Function
F1	20	Engine control unit
F2	15	Horn
F3	10	Screen wash pump
F4	10	Headlamp wash pump
F5	15	Starter
F6	10	Air flow meter – Directional headlamps – Diagnostic socket
F7	10	Automatic gearbox lever lock – Power steering
F8	25	Starter
F9	10	Clutch switch – STOP switch
F10	30	Starter
F11	40	Air conditioning blower
F12	30	Wipers
F13	40	BSI supply (ignition on)
F14	30	—
F15	10	Right-hand main beam
F16	10	Left-hand main beam
F17	15	Right-hand dipped beam
F18	15	Left-hand dipped beam
F19	15	Starter
F20	10	Starter
F21	5	Starter

Fuses on the battery (all engines except V6 HDI)

To access the fusebox located on the battery, detach and remove the cover.

Symbol	Ampere rating [A]	Function
F6	25	Rear 12V socket (max power: 100W)
F7	15	Foglamps

F8	20	Additional burner (Diesel)
F9	30	Electric parking brake

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.