 


Citroen C4 mk1 (2004 – 2010) – fuse box diagram


Yesr of production: 2004, 2005, 2006, 2007, 2008, 2009, 2010

Fuse box under the dashboard

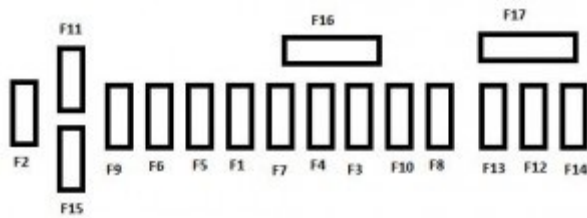

Citroen C4 mk1 – fuse box – under dashboard


Number	Ampere rating [A]	Function
F1	15	Central locking
F2	30	Central locking, deadlocking
F3	5	Airbags and pretensioners
F4	10	Diagnostic socket, brake switch, photochromic rear view mirror, ESP, coolant level sensor, diesel fuel additive system, power steering Clutch pedal switch (ESP, cruise control and speed limiter)
F5	30	Electric front windows, heated exterior rear view mirrors
F6	30	Electric rear windows
F7	5	Interior lighting
F8	20	Audio system, NaviDrive, display, alarm, front 12V socket, trailer relay unit, driving school module
F9	30	Cigar lighter, rear 12V socket
F10	15	Tyre pressure sensor – Auto, STOPLAMP switch
F11	15	Ignition, diagnostic socket, particle filter
F12	15	Electric seat, lane wandering alert, parking assistance
F13	5	Rain sensor, sunlight sensor, (6 speed) Electronic Gearbox System, engine relay unit
F14	15	Air conditioning, instrument panel, tachometer, airbags and pretensioners, trailer relay unit, bluetooth telephone
F15	30	Central locking, deadlocking
F16	SHUNT	
F17	40	Heated rear screen

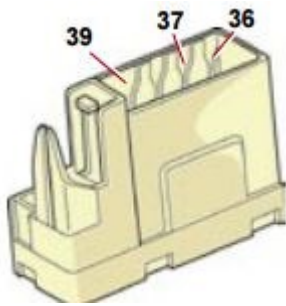 

Citroen C4 mk1 – fuse box – under dashboard

Number	Ampere rating [A]	Function
F36	20	Hi Fi amplifier
F37	30	Front left hand electric seat
F39	20	Heated seats

 Fuse box in engine compartment

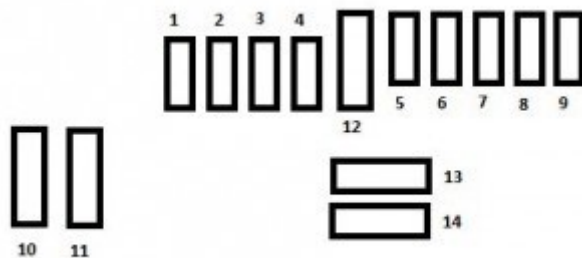

Citroen C4 mk1 – fuse box – engine compartment

Number	Ampere rating [A]	Functions
F1	20	ECU engine management, cooling fan
F2	15	Warning
F3	10	Windscreen and rear screen wash
F4	20	Headlamp washer
F5	15	Fuel pump
F6	10	Auto, Xenon lamps, directional headlamps, canister purge electrovalve (2.0 16V engine)
F7	10	ABS ECU/ESP ECU, power steering
F8	20	Starter
F9	10	Additional heating control unit (Diesel), engine coolant level switch
F10	30	Engine electrovalve, water-in-diesel-fuel sensor, ECU engine management, injectors, ignition coil, oxygen sensor, canister purge electrovalve (1.4 16V and 1.6 16V engines)
F11	40	Air blower, air conditioning
F12	30	Windscreen wiper
F13	40	Built-in Systems Interface

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.