



F RELAY LOCATIONS

[Engine Compartment]

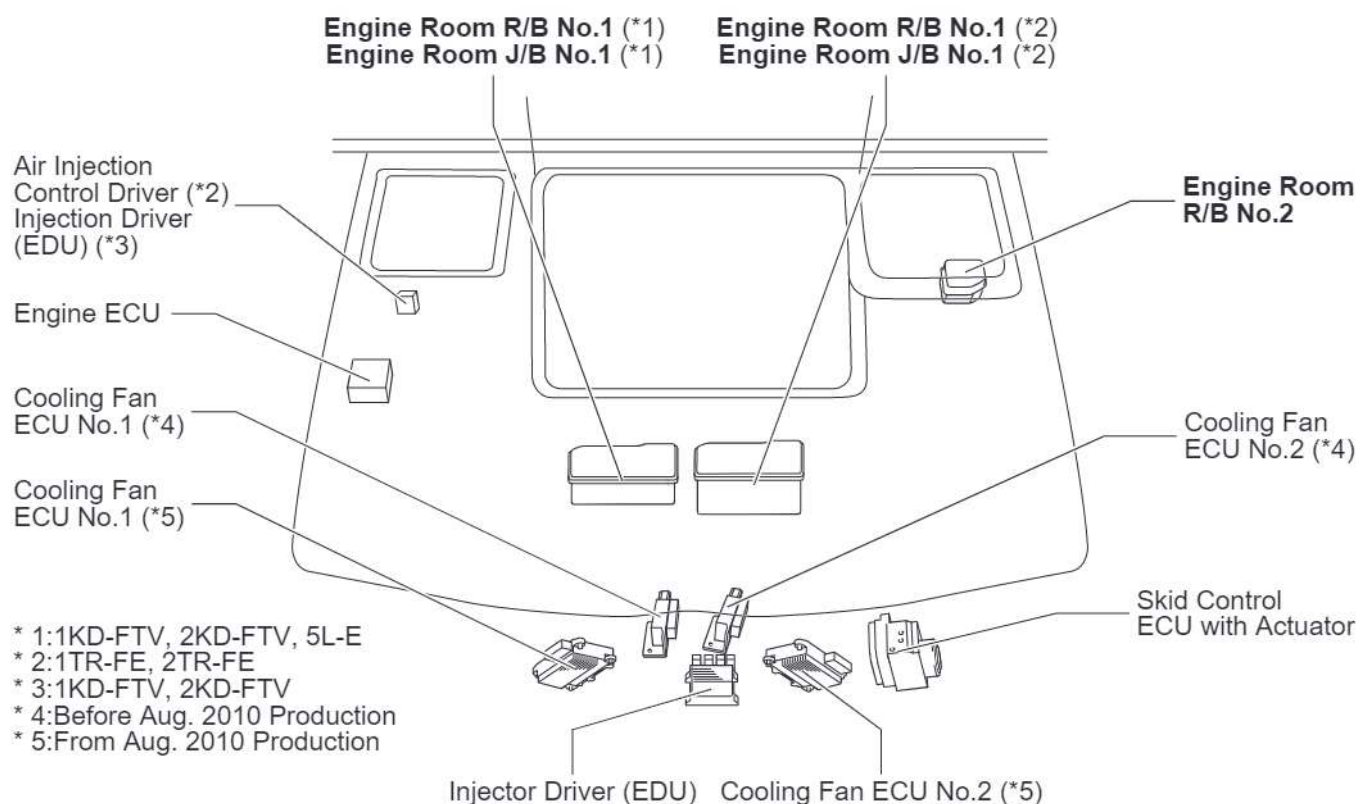

[Body]

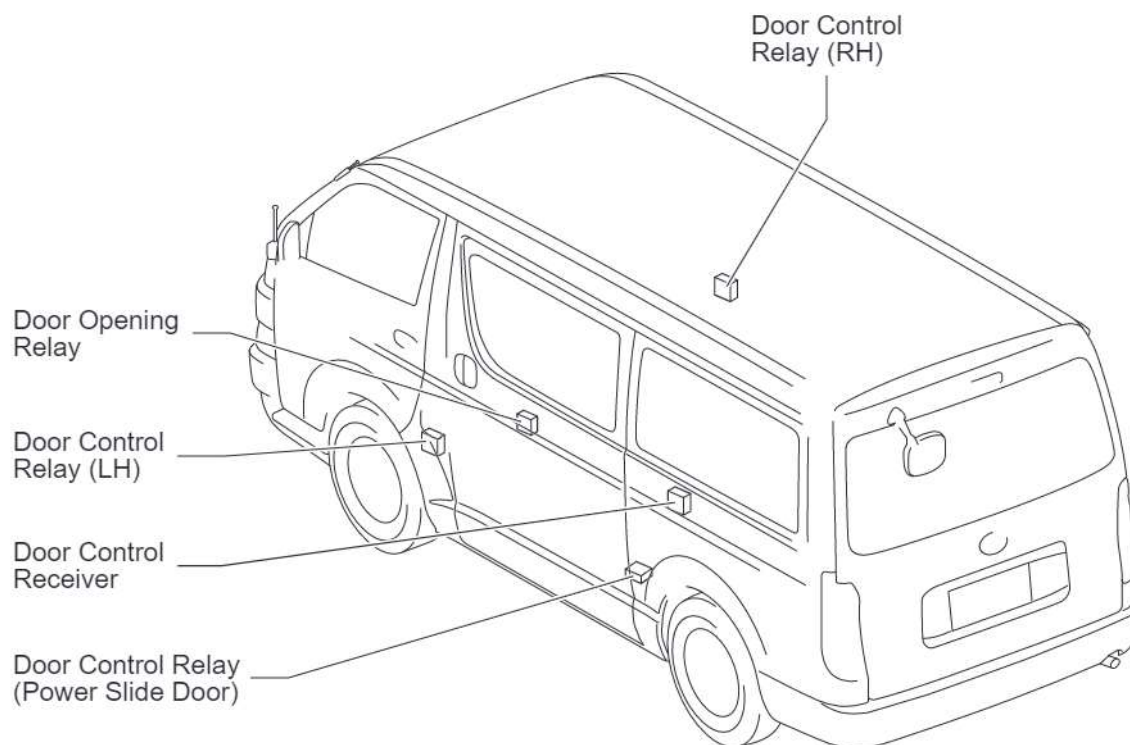


F RELAY LOCATIONS

○ : Center J/B


LHD : Instrument Panel Reinforcement LH (See Page 21)

RHD : Instrument Panel Reinforcement RH (See Page 21)

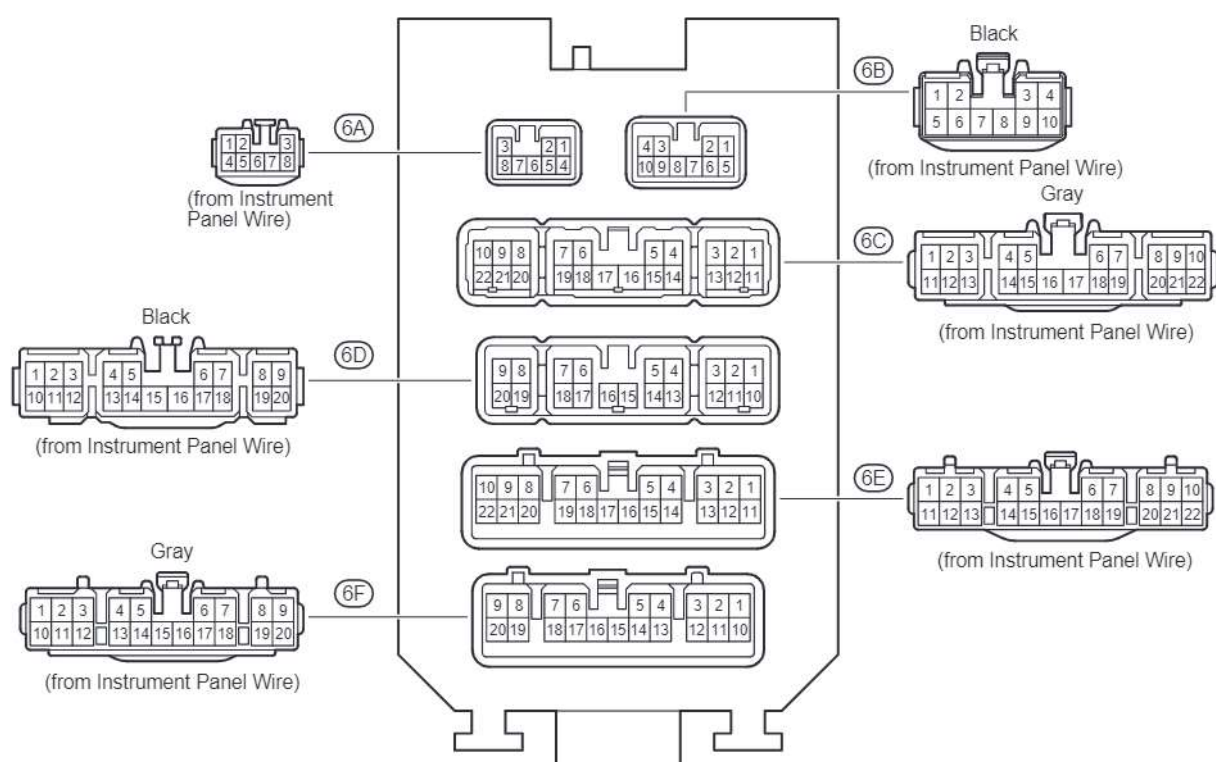


F RELAY LOCATIONS

[Center J/B Inner Circuit]

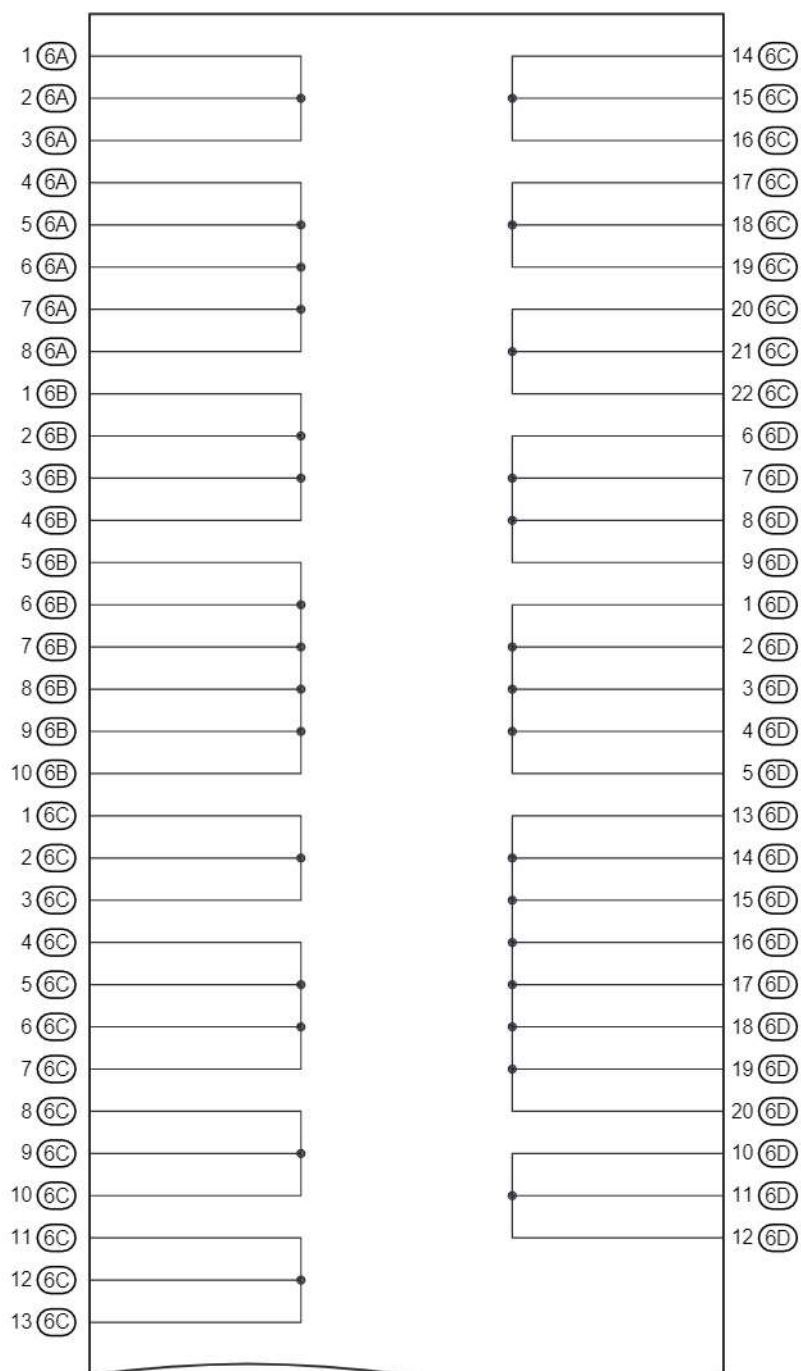


(Cont. Next Page)

(Cont'd)

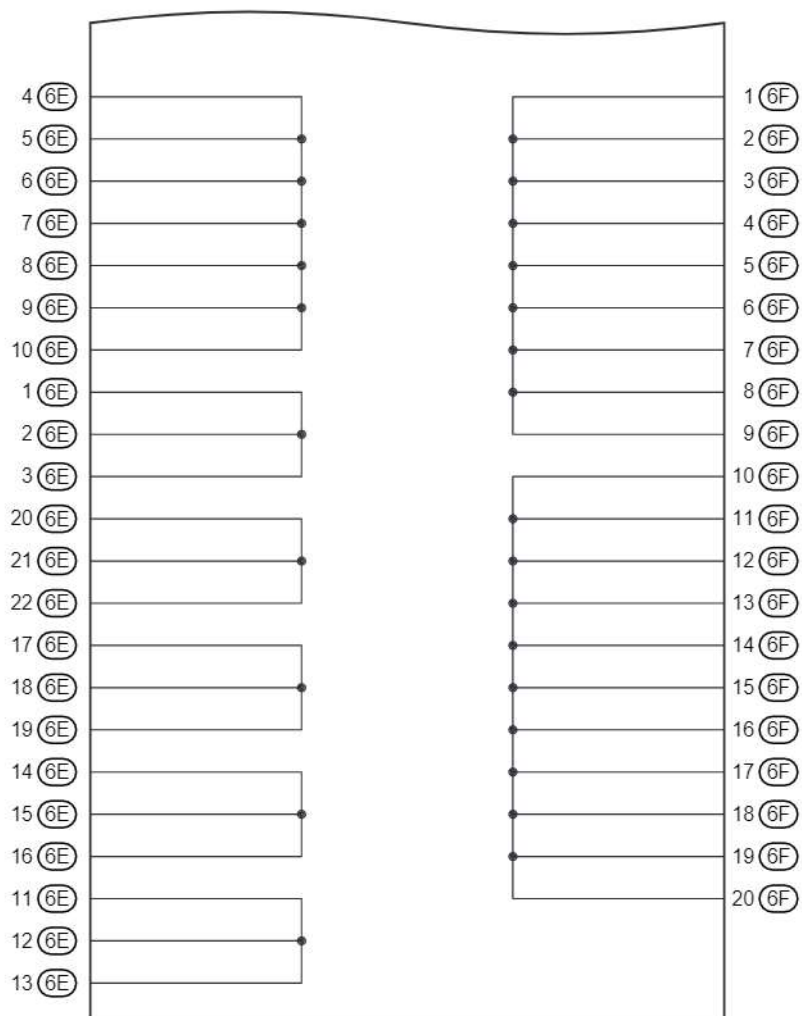


F RELAY LOCATIONS

[Engine Compartment]

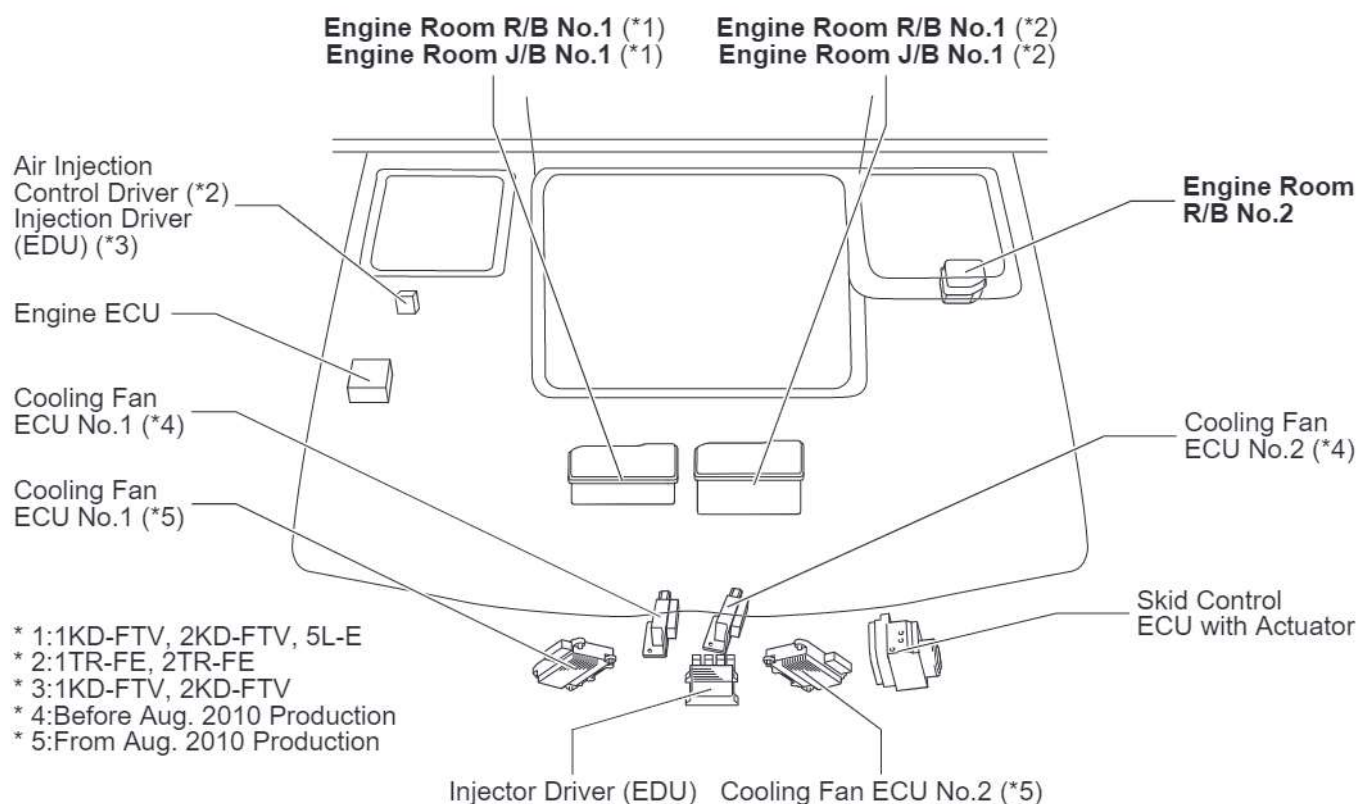


[Body]

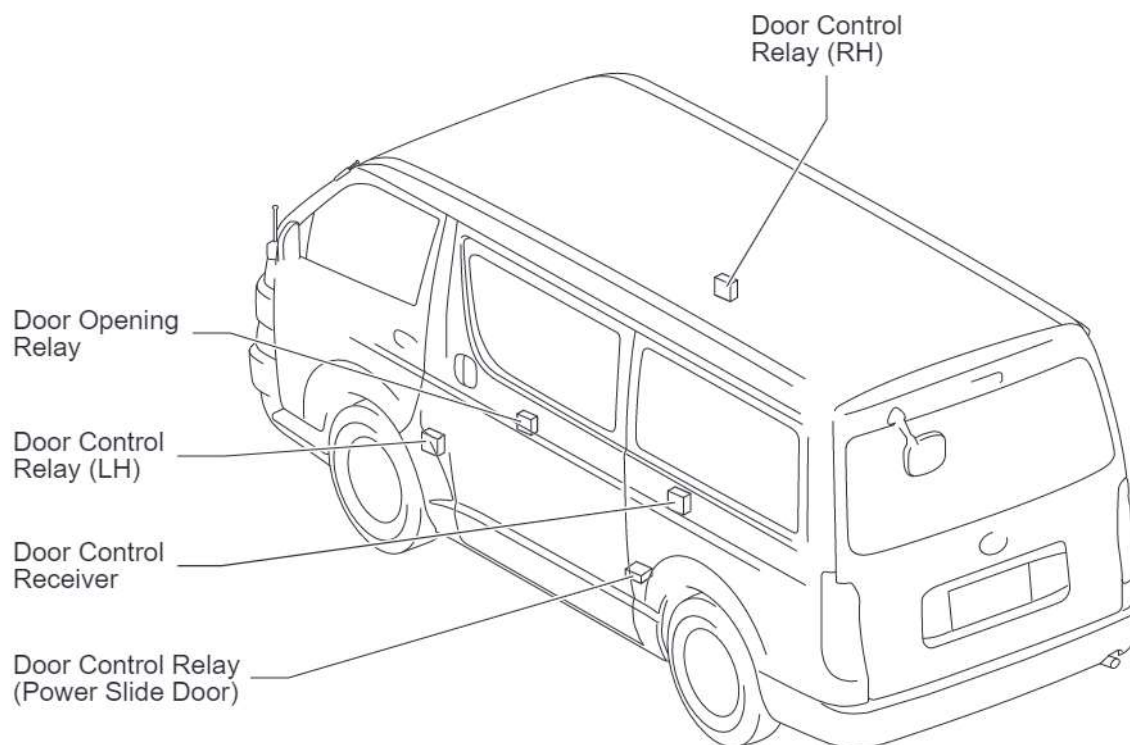

F RELAY LOCATIONS


② : Engine Room R/B No.2 Inside of Battery Room (See Page 20)
(Before Apr. 2012 Production)

* 1:10A ETCS (2TR-FE)
15A A/F (1KD-FTV w/ DPF)

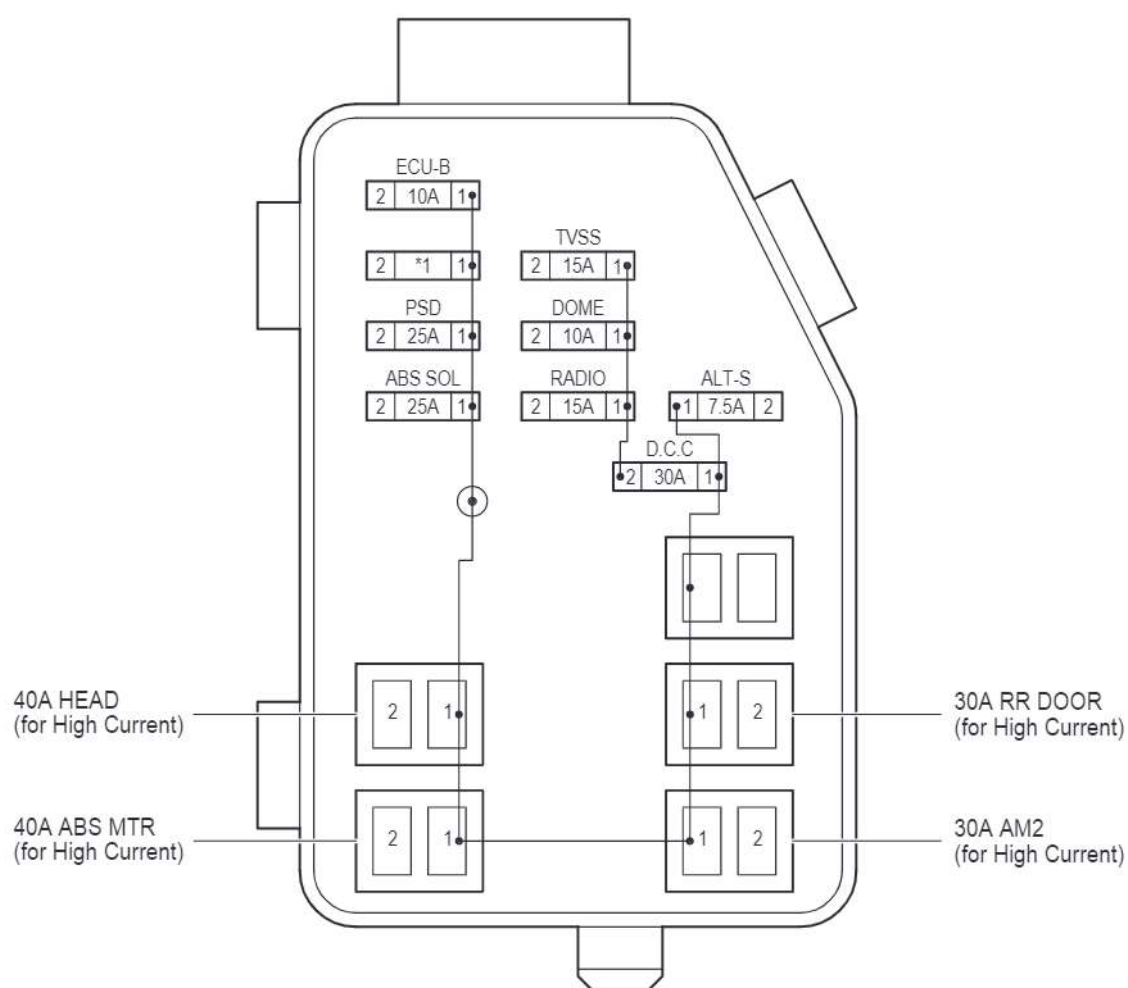

② : Engine Room R/B No.2 Inside of Battery Room (See Page 20)
(From Apr. 2012 Production)


- * 1:10A ETCS (1TR-FE, 2TR-FE)
15A A/F (1KD-FTV w/ DPF)
- * 2:40A HEAD (for High Current)
- * 3:30A RR DOOR (for High Current)

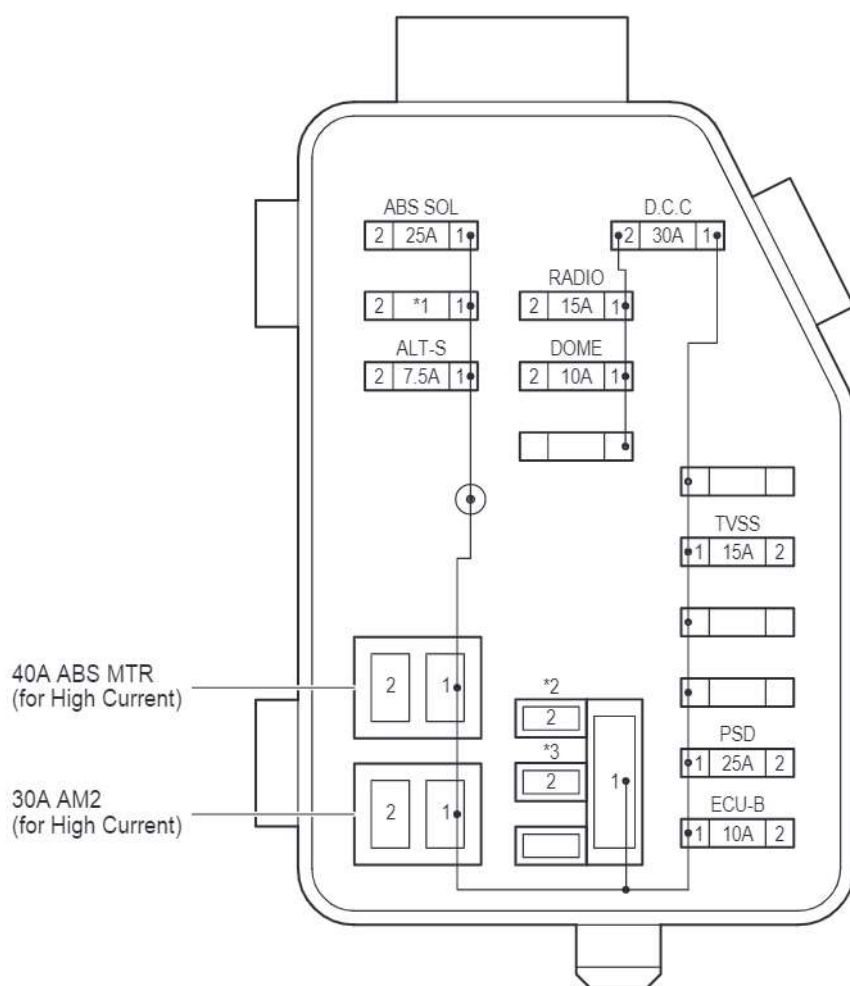

F RELAY LOCATIONS

① : Engine Room R/B No.1	Engine Compartment Front (See Page 20)
② : Engine Room J/B No.1	

(1TR-FE, 2TR-FE)

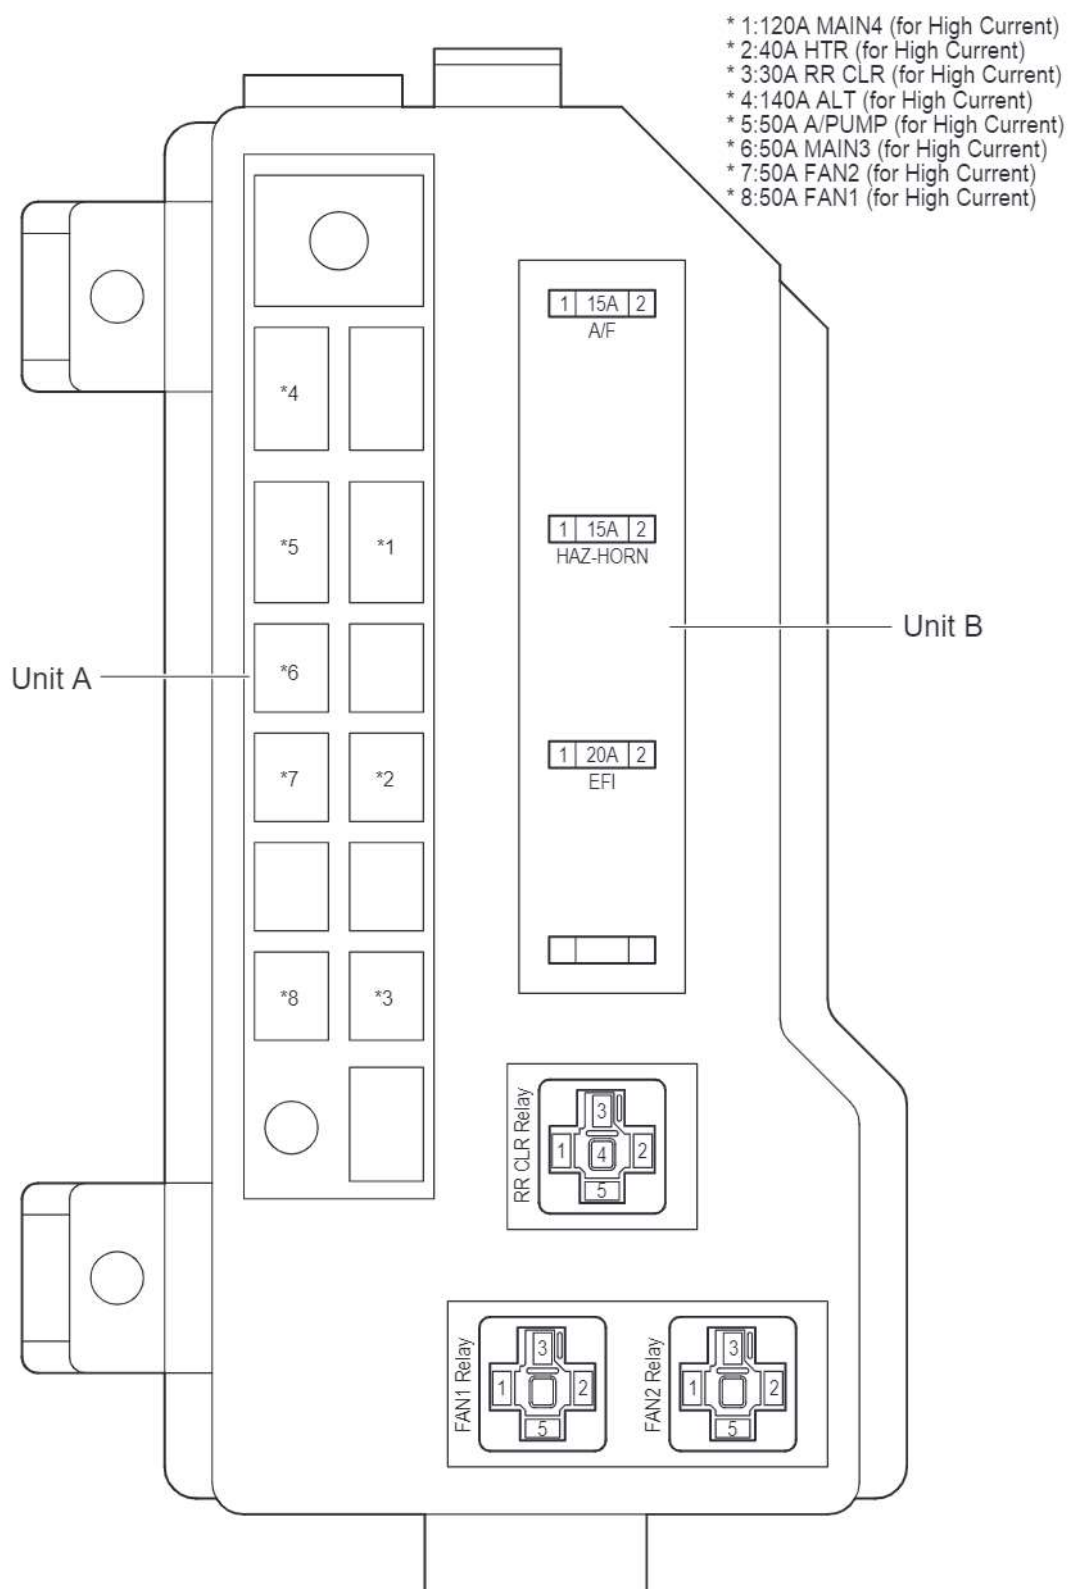


① : Engine Room R/B No.1

○ : Engine Room J/B No.1


Engine Compartment Front (See Page 20)

(1KD-FTV, 2KD-FTV, 5L-E)

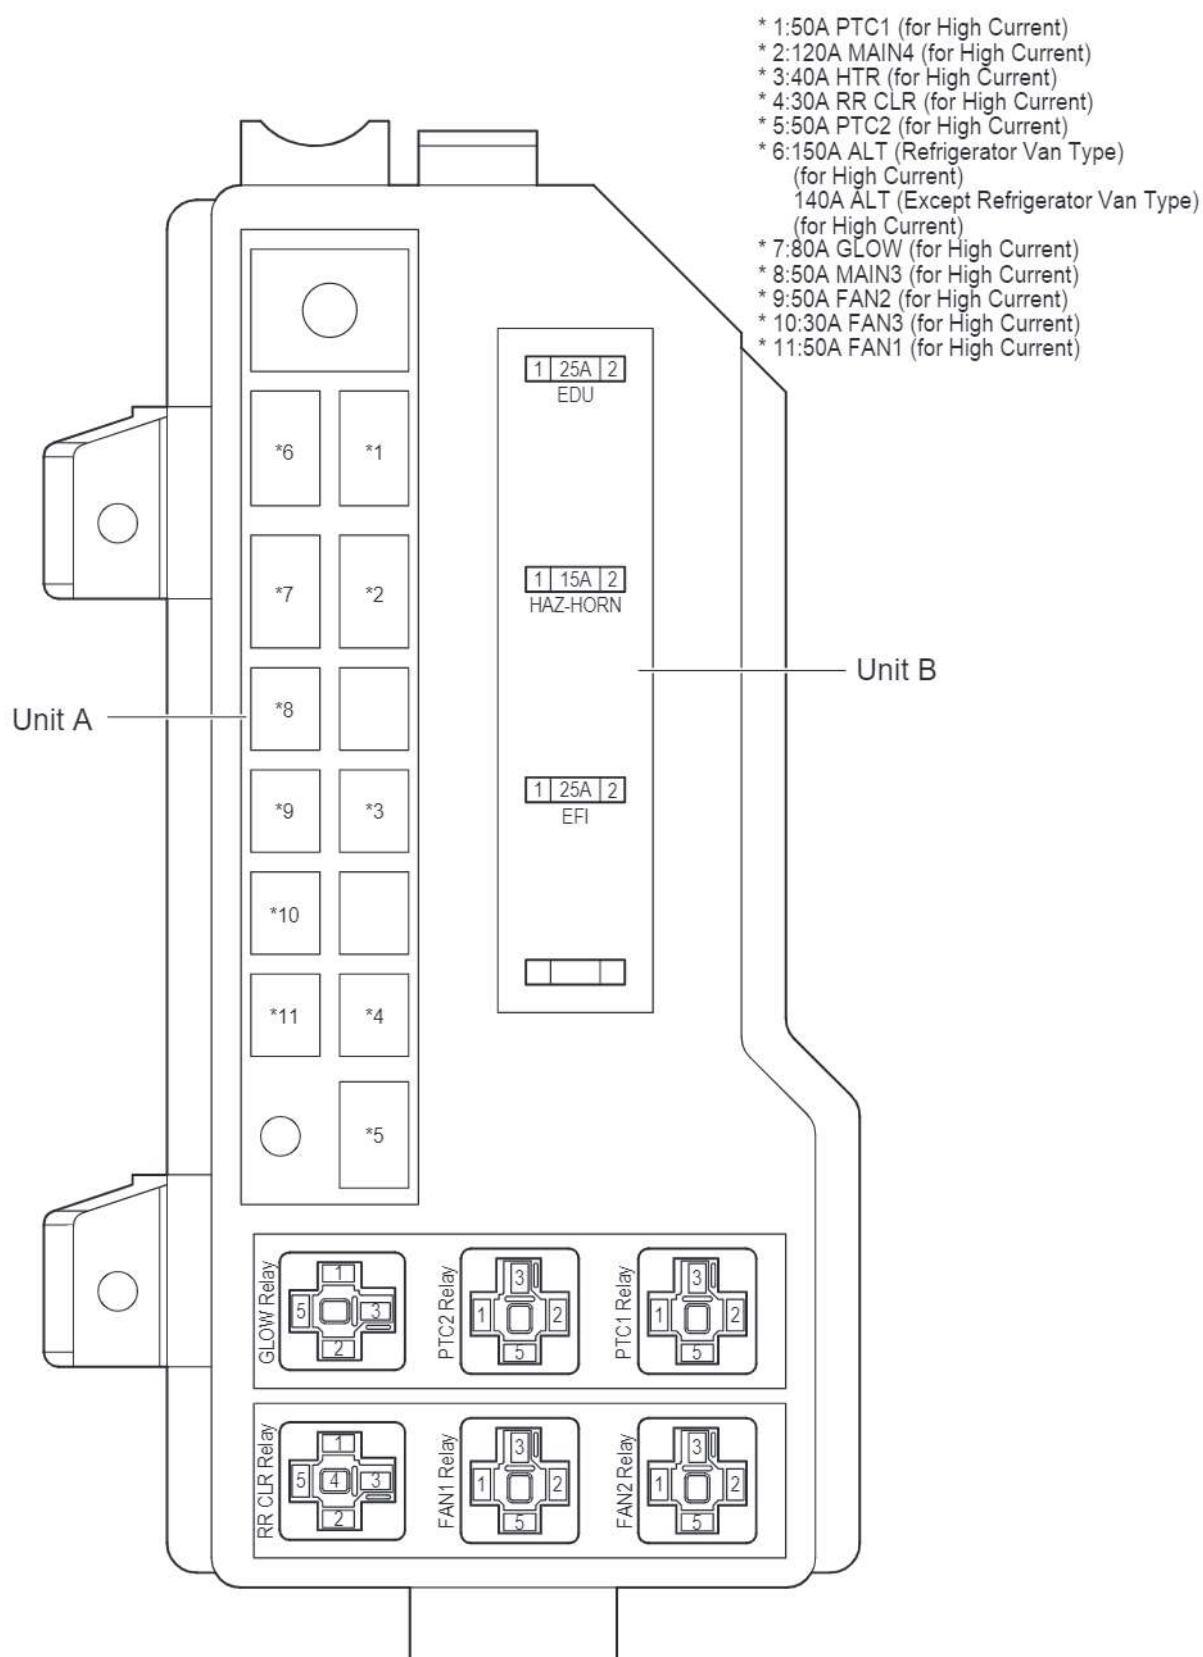

F RELAY LOCATIONS


① : Engine Room R/B No.1	Engine Compartment Front (See Page 20)
○ : Engine Room J/B No.1	

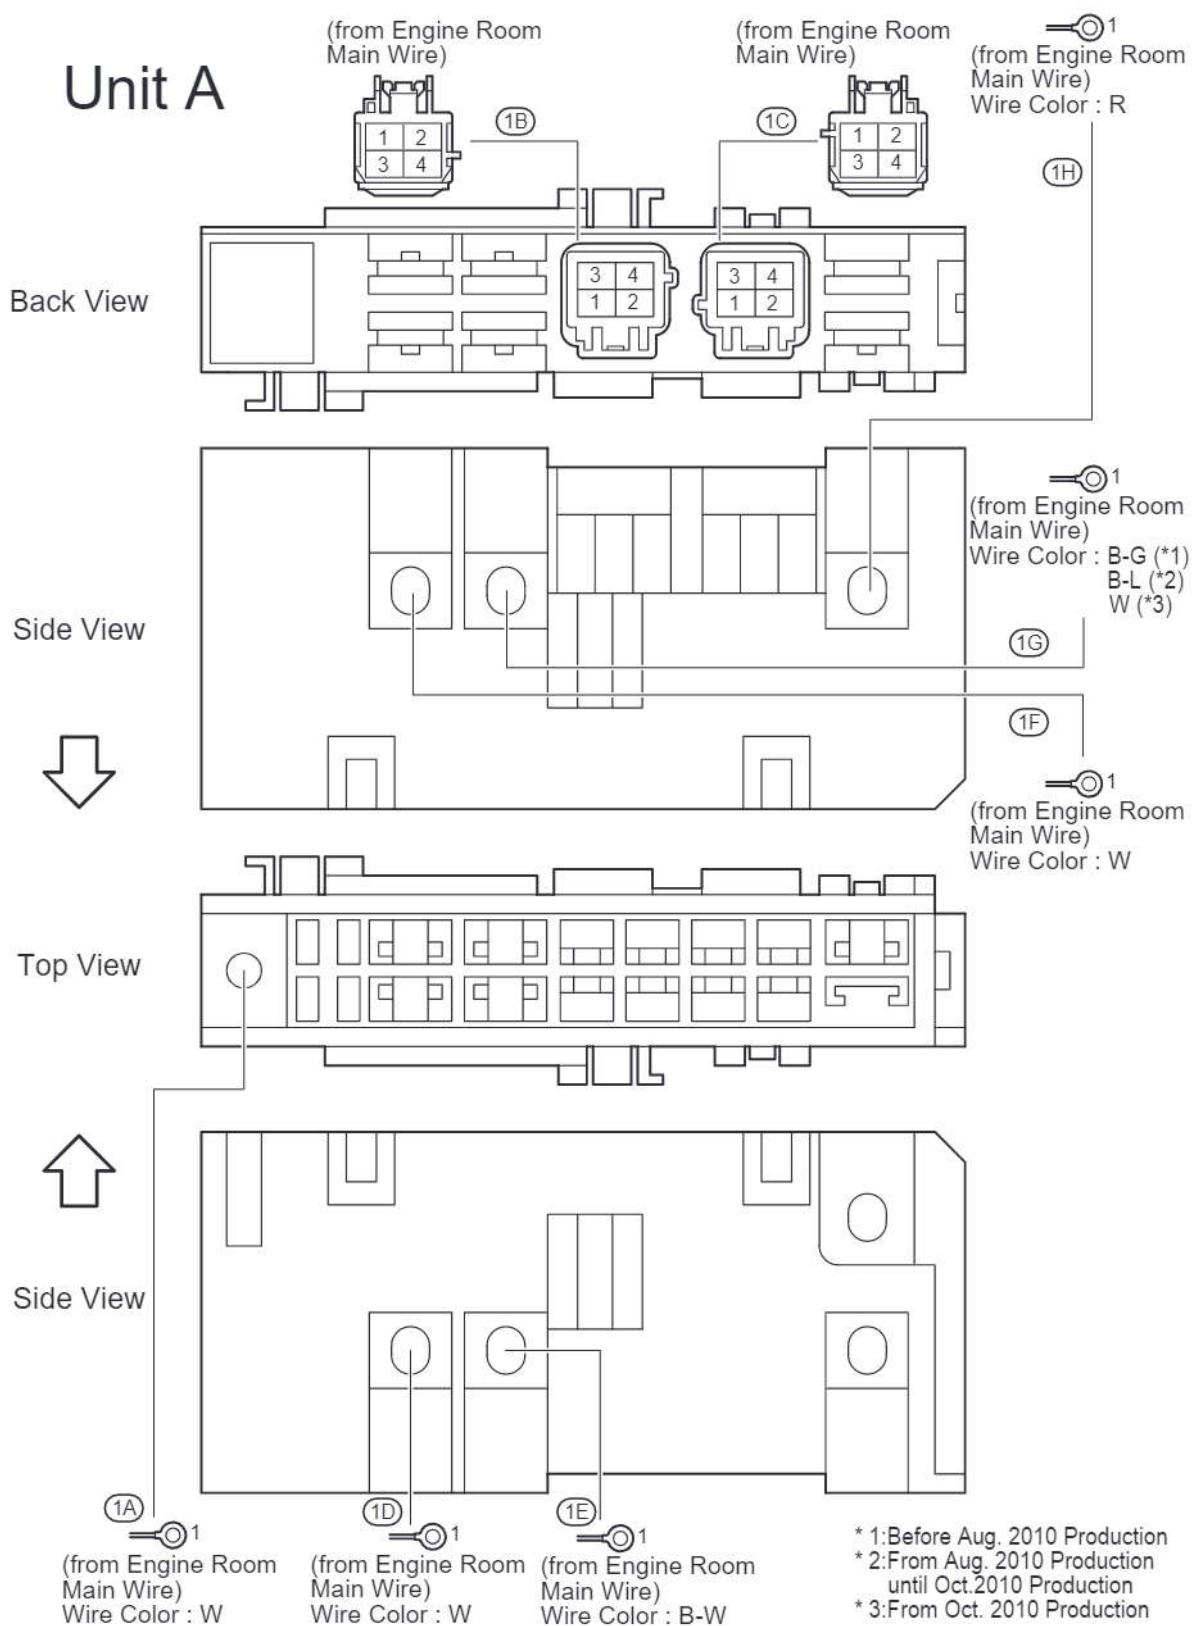

Unit B


* 1:1KD-FTV w/ DPF

* 2:Except *1

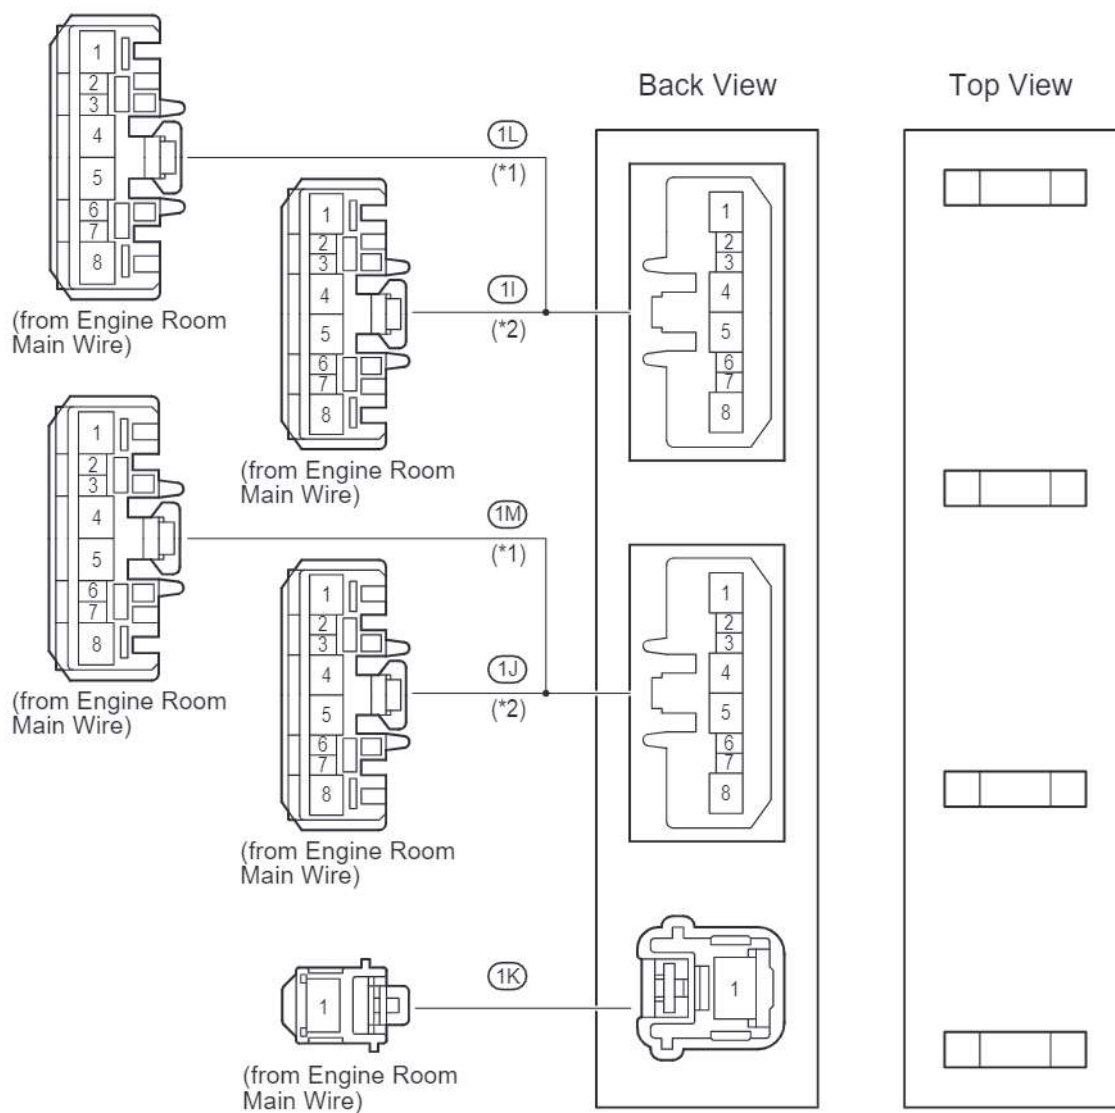


F RELAY LOCATIONS

[Engine Room R/B No.1 and Engine Room J/B No.1 Inner Circuit]

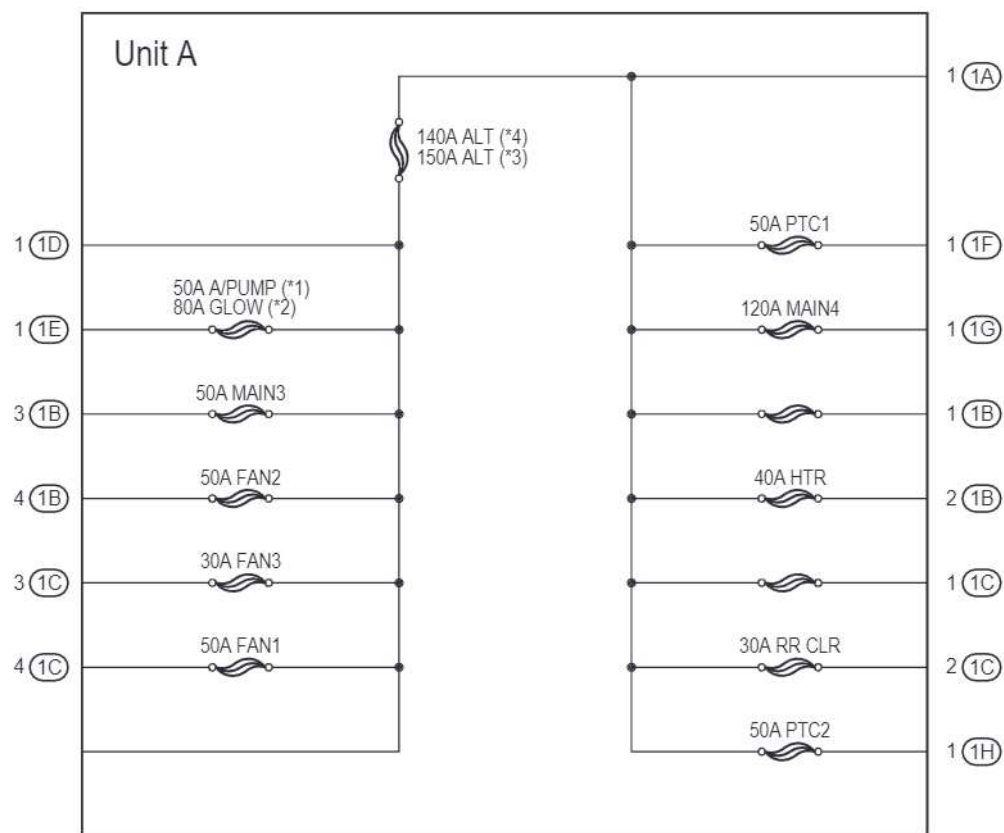

- * 1:1TR-FE, 2TR-FE
- * 2:1KD-FTV, 2KD-FTV, 5L-E
- * 3:Refrigerator Van Type, *1
- * 4:Except Refrigerator Van Type

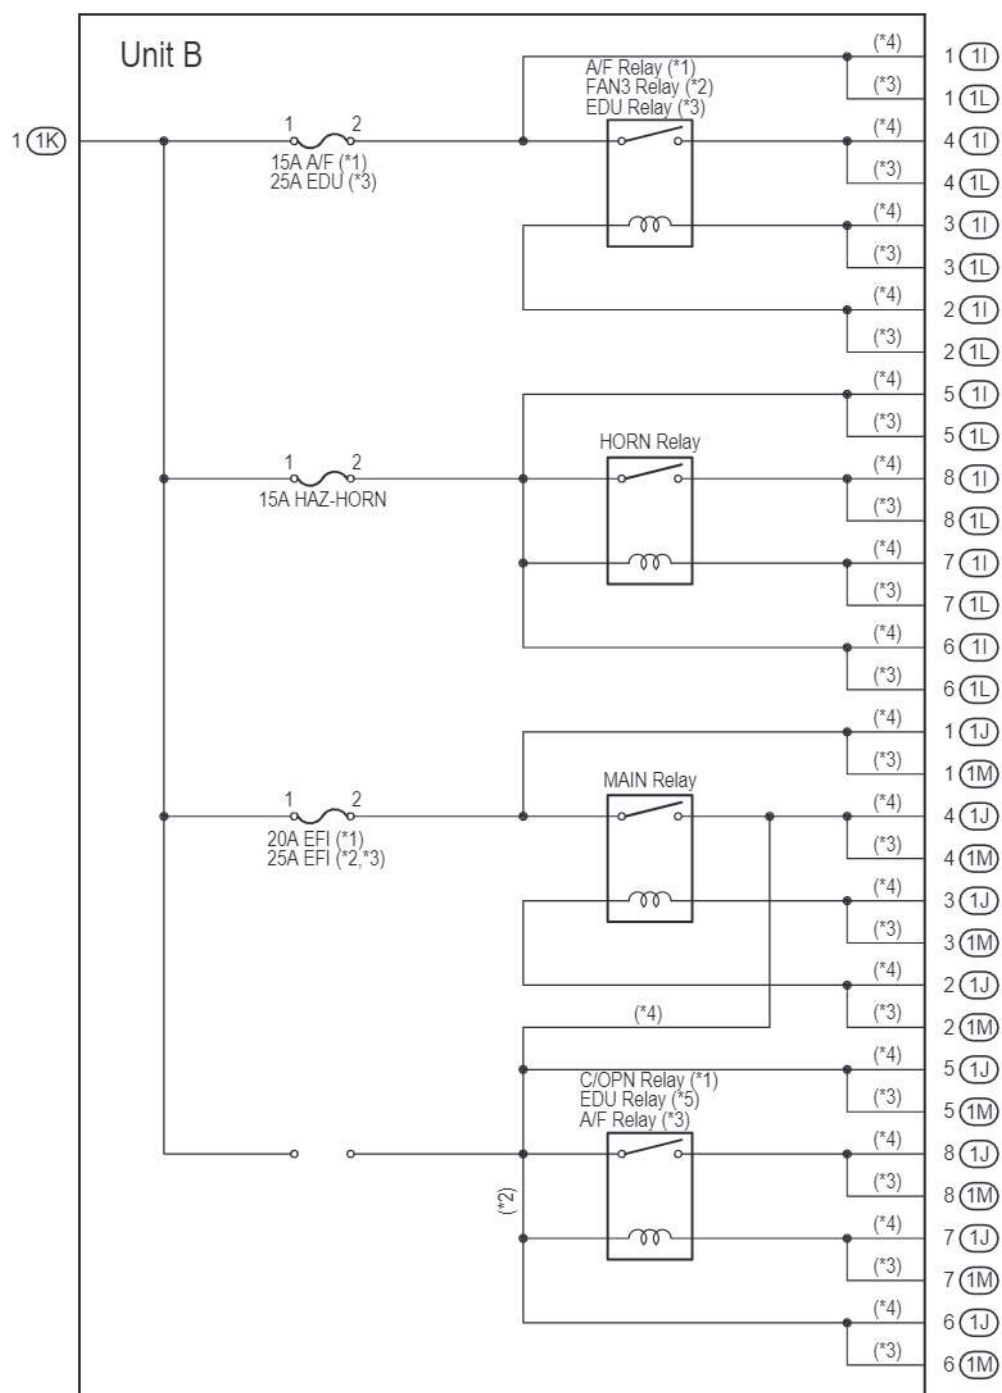


- * 1:1TR-FE, 2TR-FE
- * 2:1KD-FTV w/o DPF, 2KD-FTV, 5L-E
- * 3:1KD-FTV w/ DPF
- * 4:Except *3
- * 5:1KD-FTV w/o DPF, 2KD-FTV

No Image

: Instrument Panel J/B	Left Side of Instrument Panel (See Page 21)
--	---



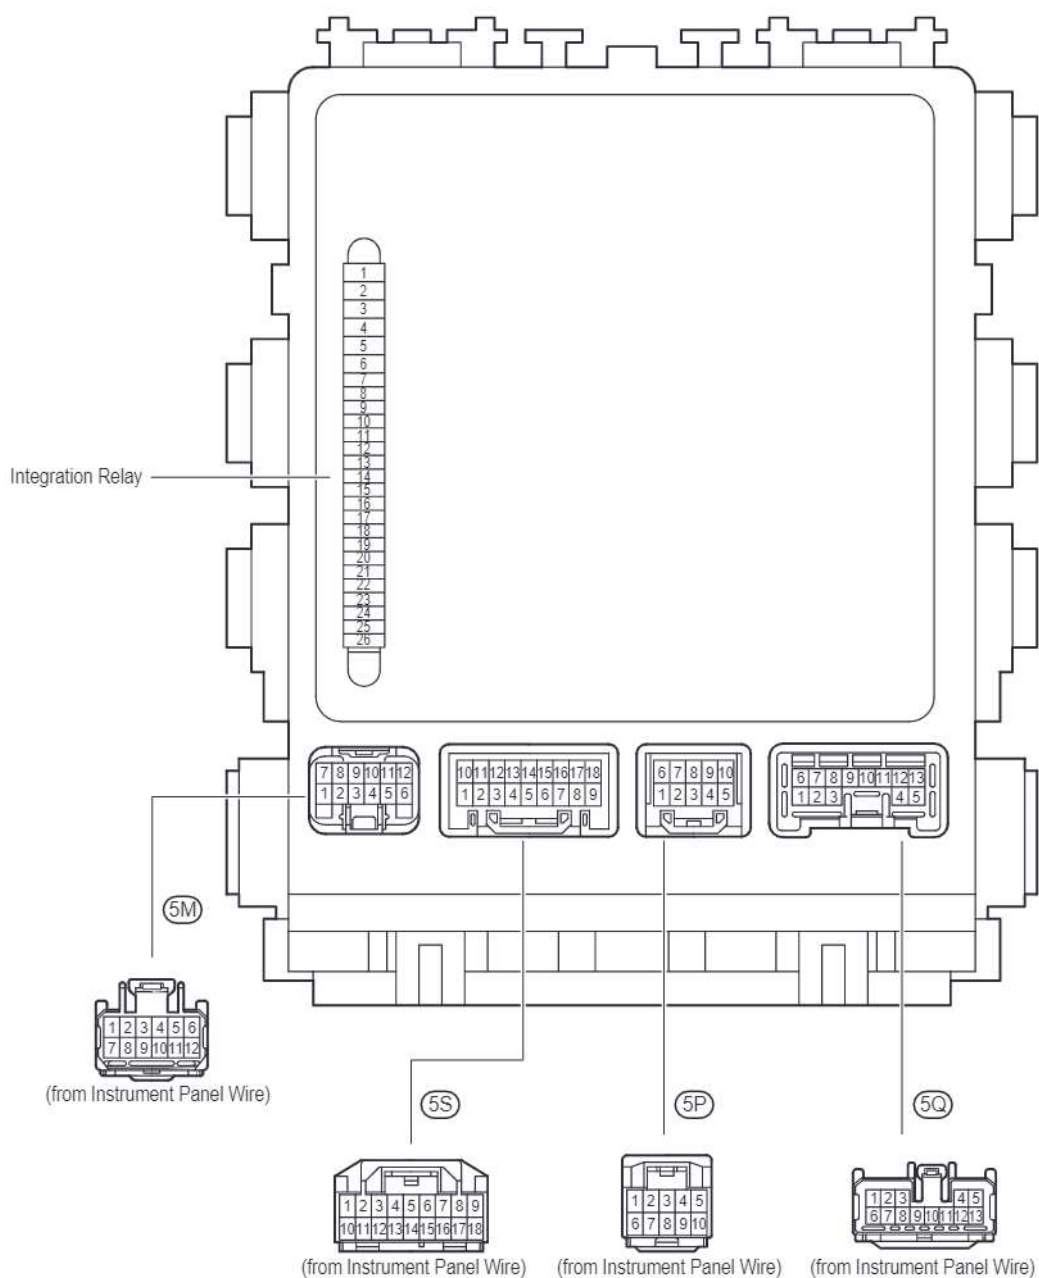


HIACE (EM26T4E)

F RELAY LOCATIONS

: Instrument Panel J/B

Left Side of Instrument Panel (See Page 21)

* 3:15A (Before Apr. 2012 Production)
10A (From Apr. 2012 Production)

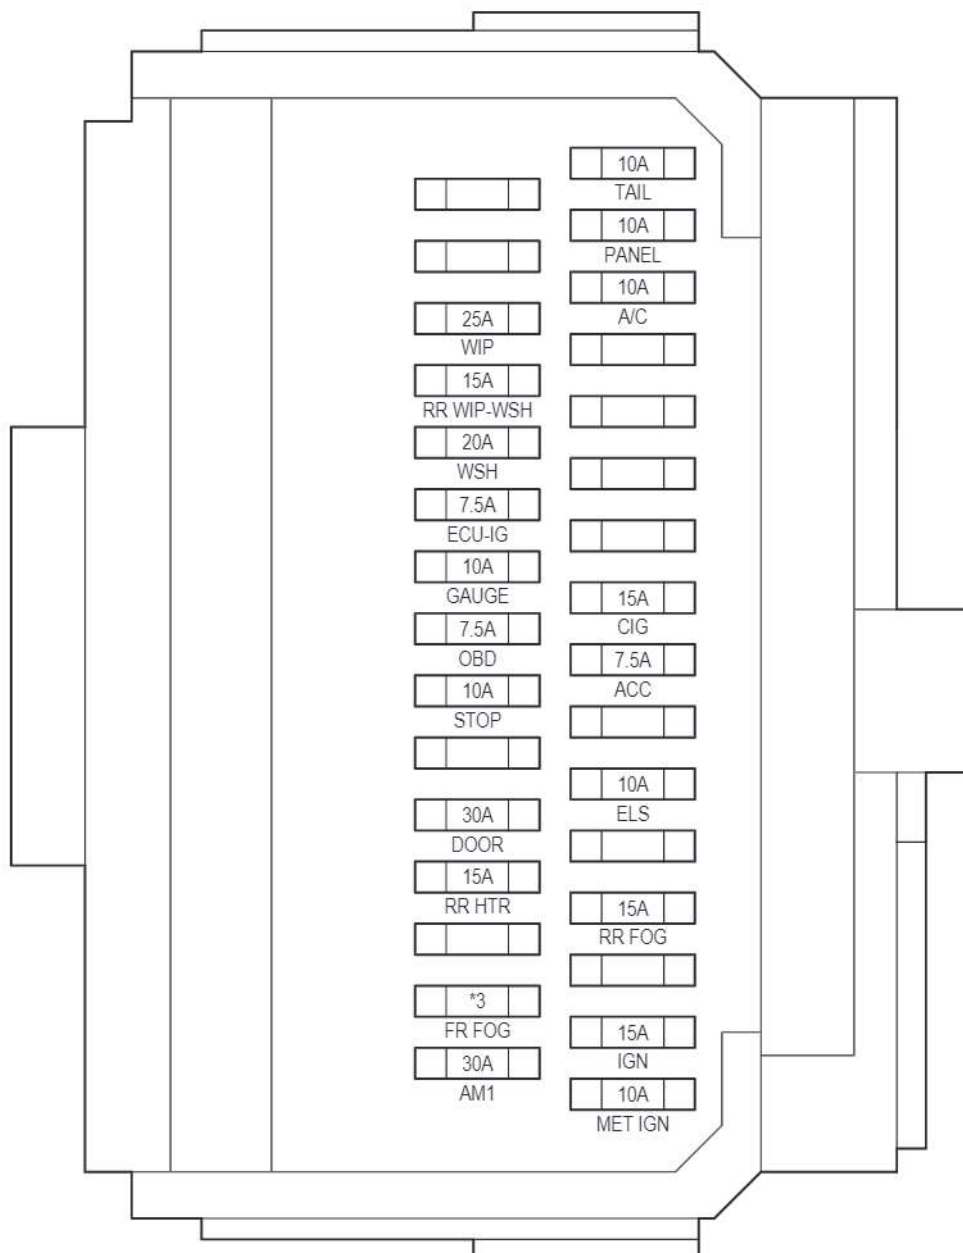


HIACE (EM26T4E)

F RELAY LOCATIONS


[Instrument Panel J/B Inner Circuit]

* 4: Before Apr. 2012 Production
* 5: From Apr. 2012 Production

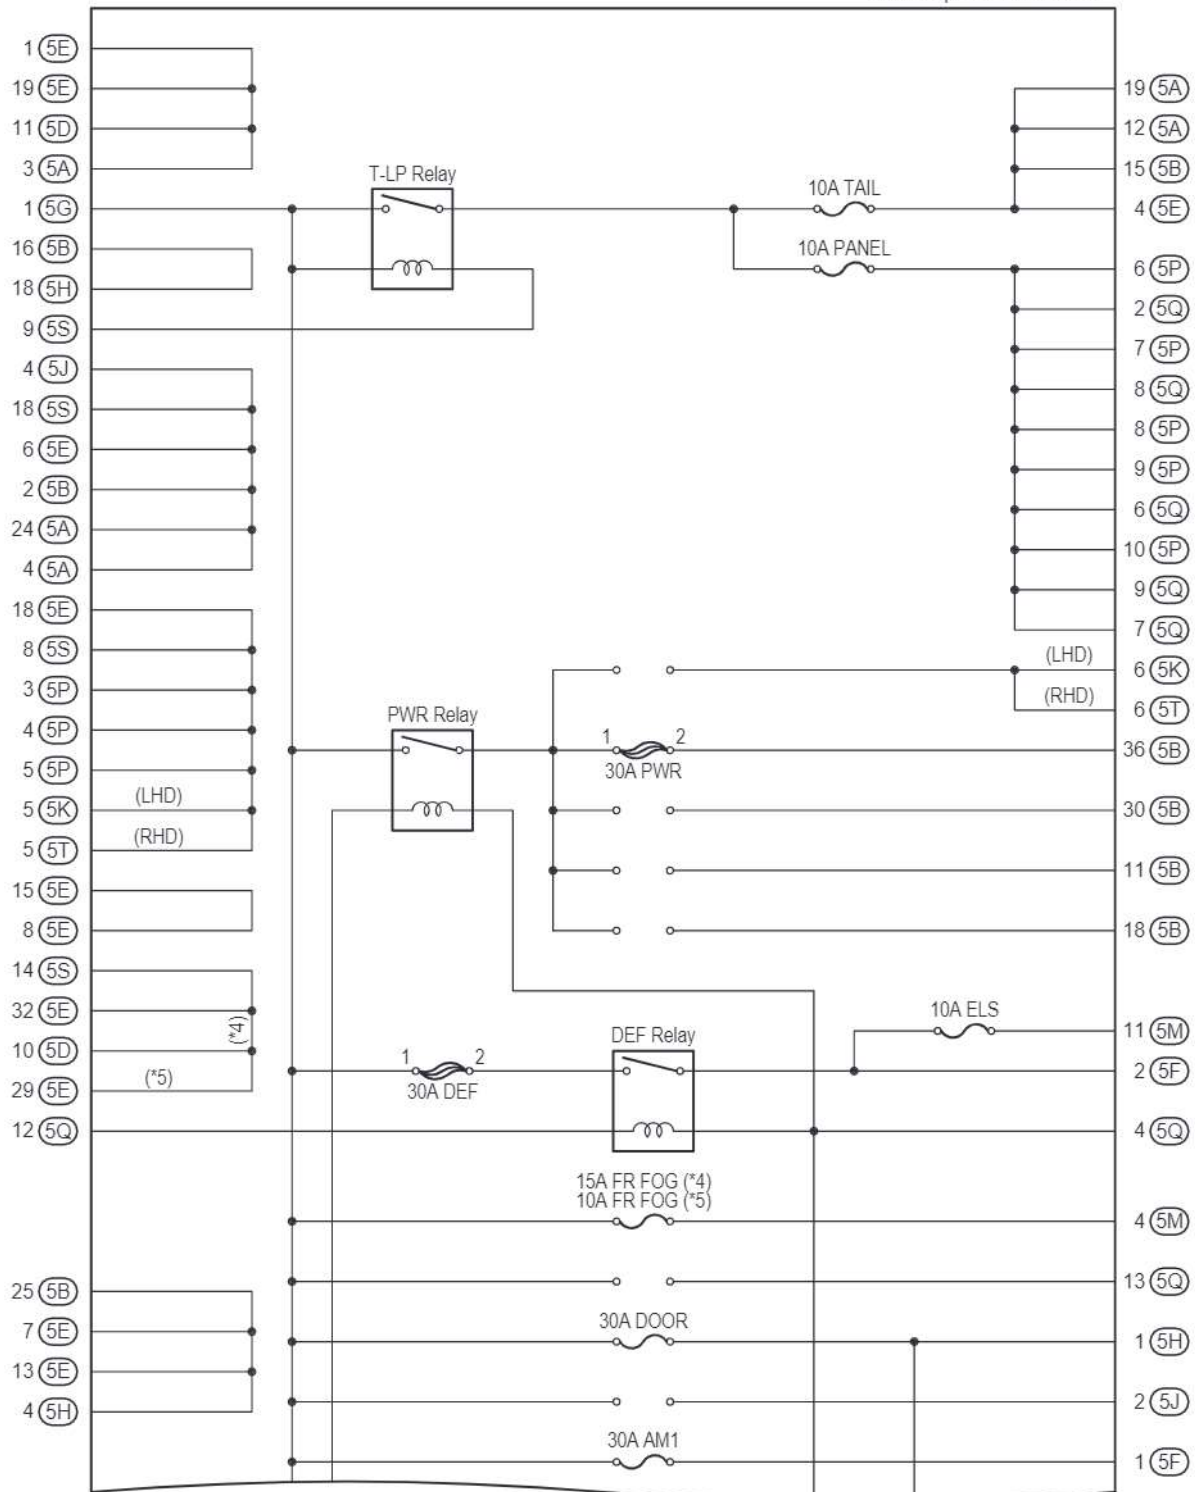

(Cont. Next Page)

(Cont'd)

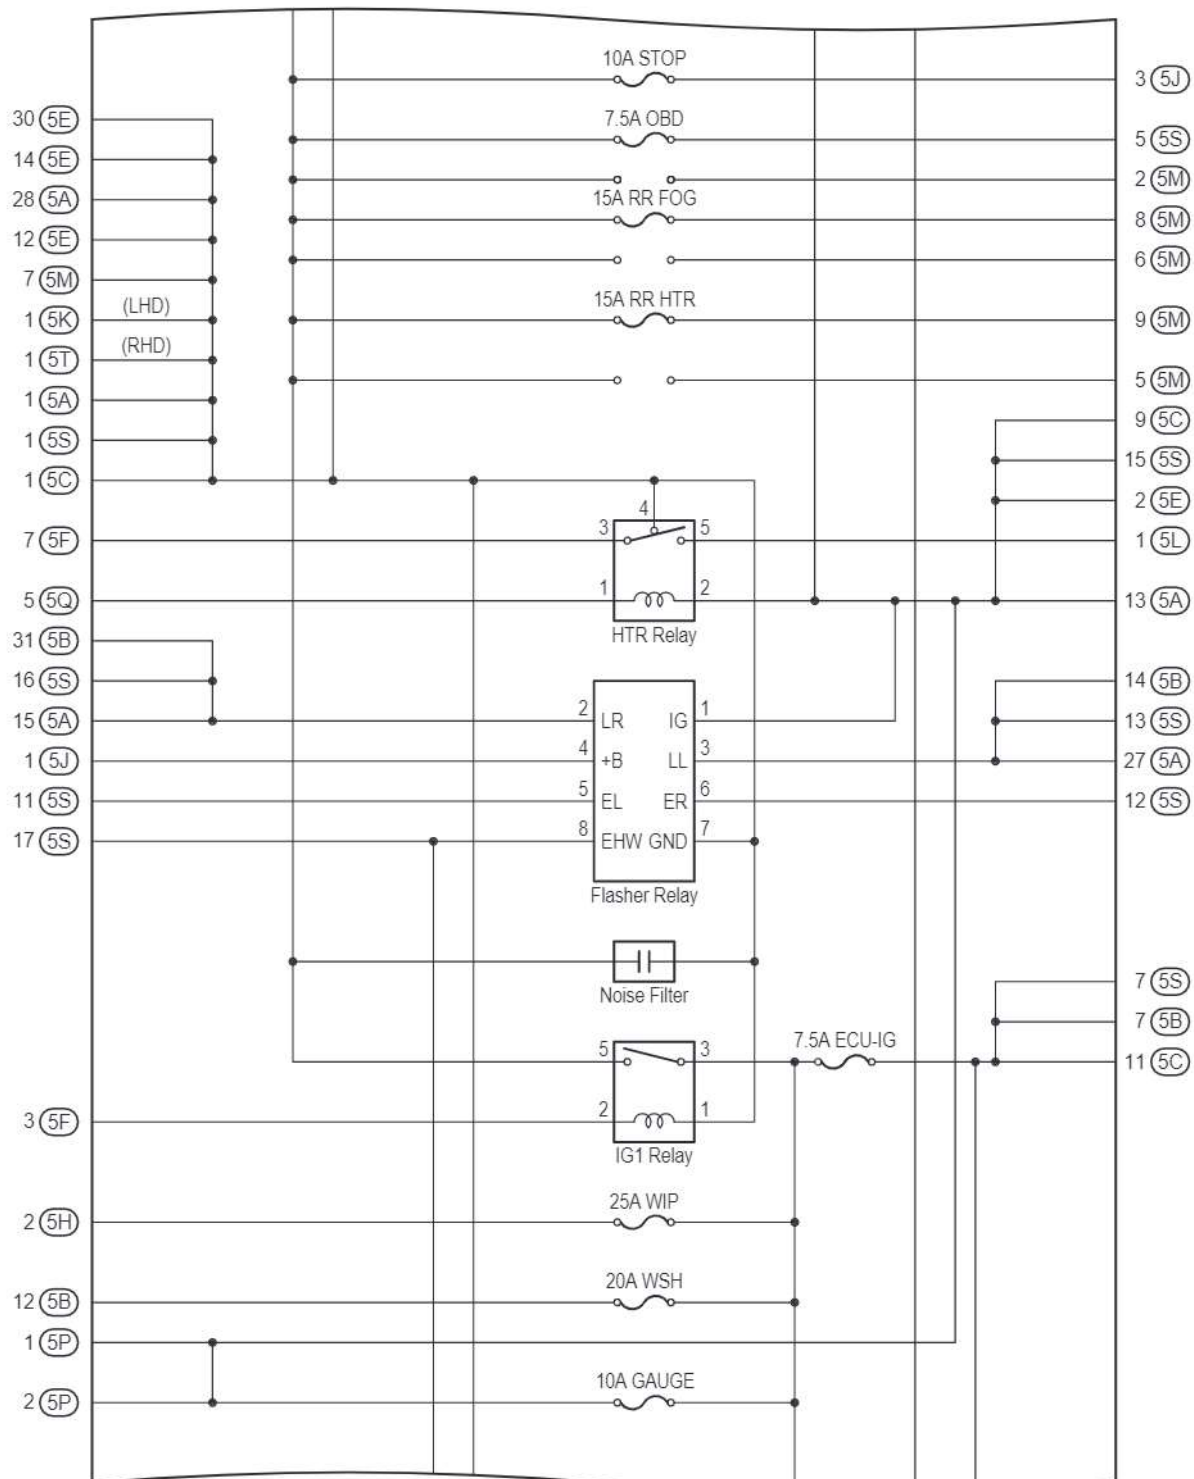


(Cont. Next Page)

F RELAY LOCATIONS


[Instrument Panel J/B Inner Circuit]

(Cont'd)

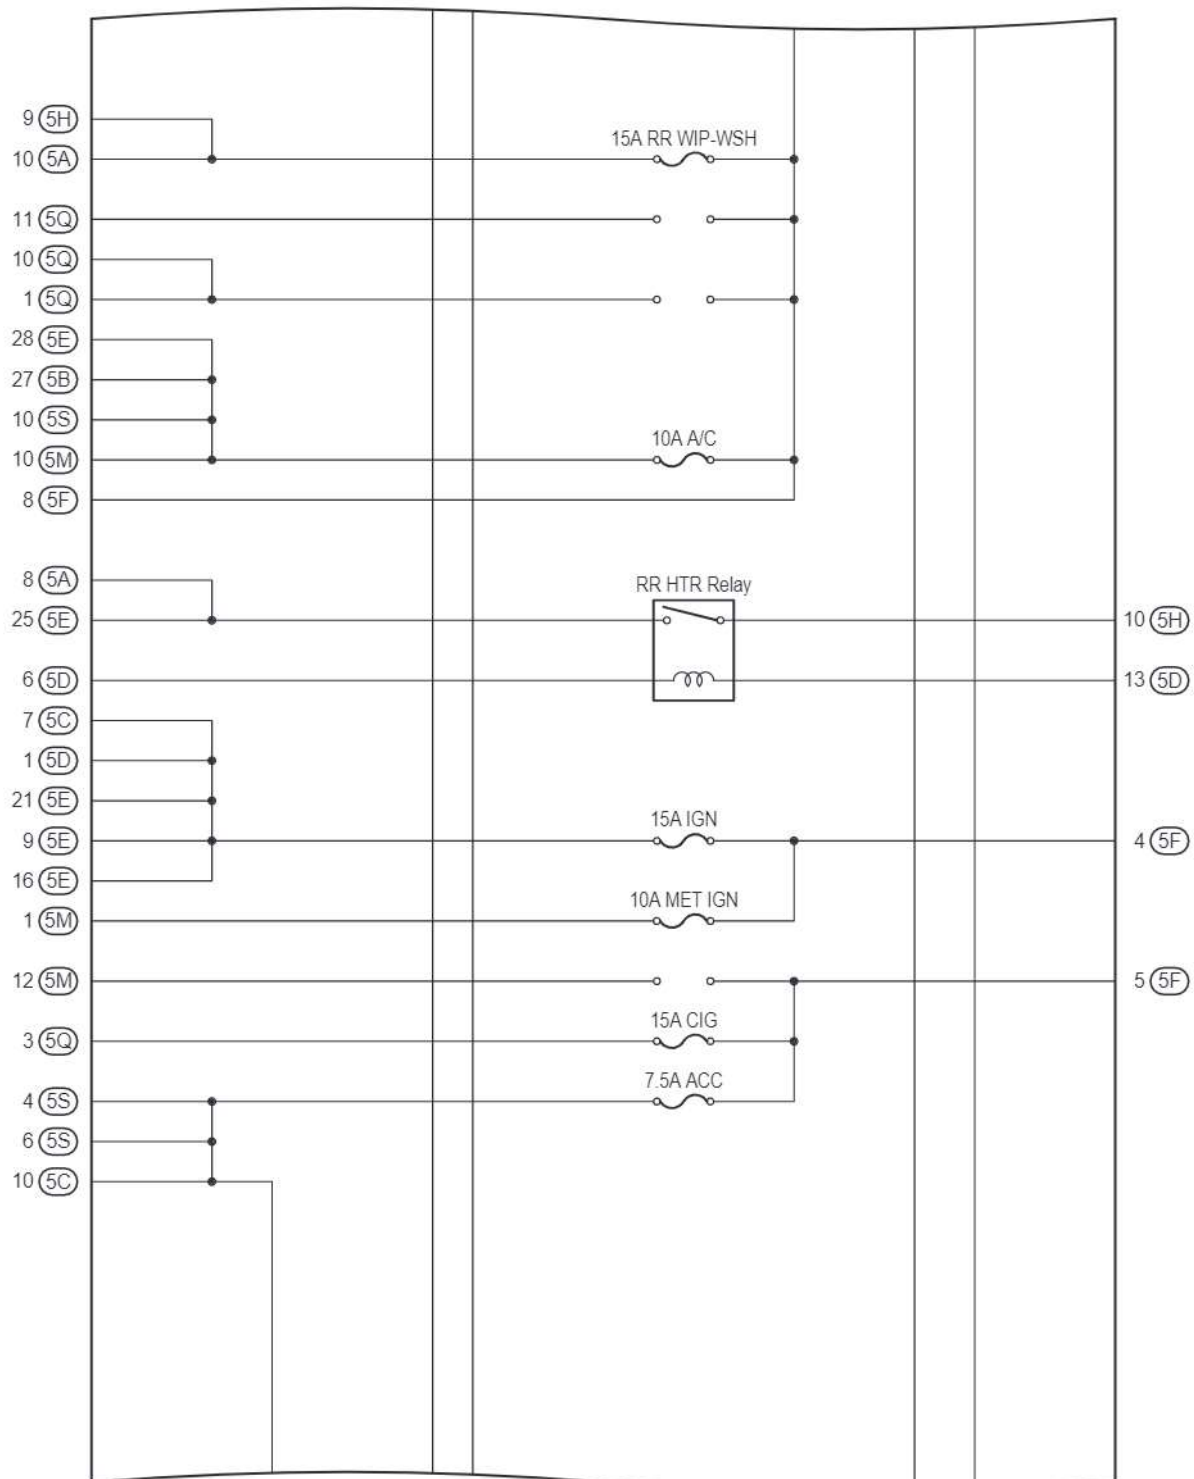


(Cont. Next Page)


(Cont'd)

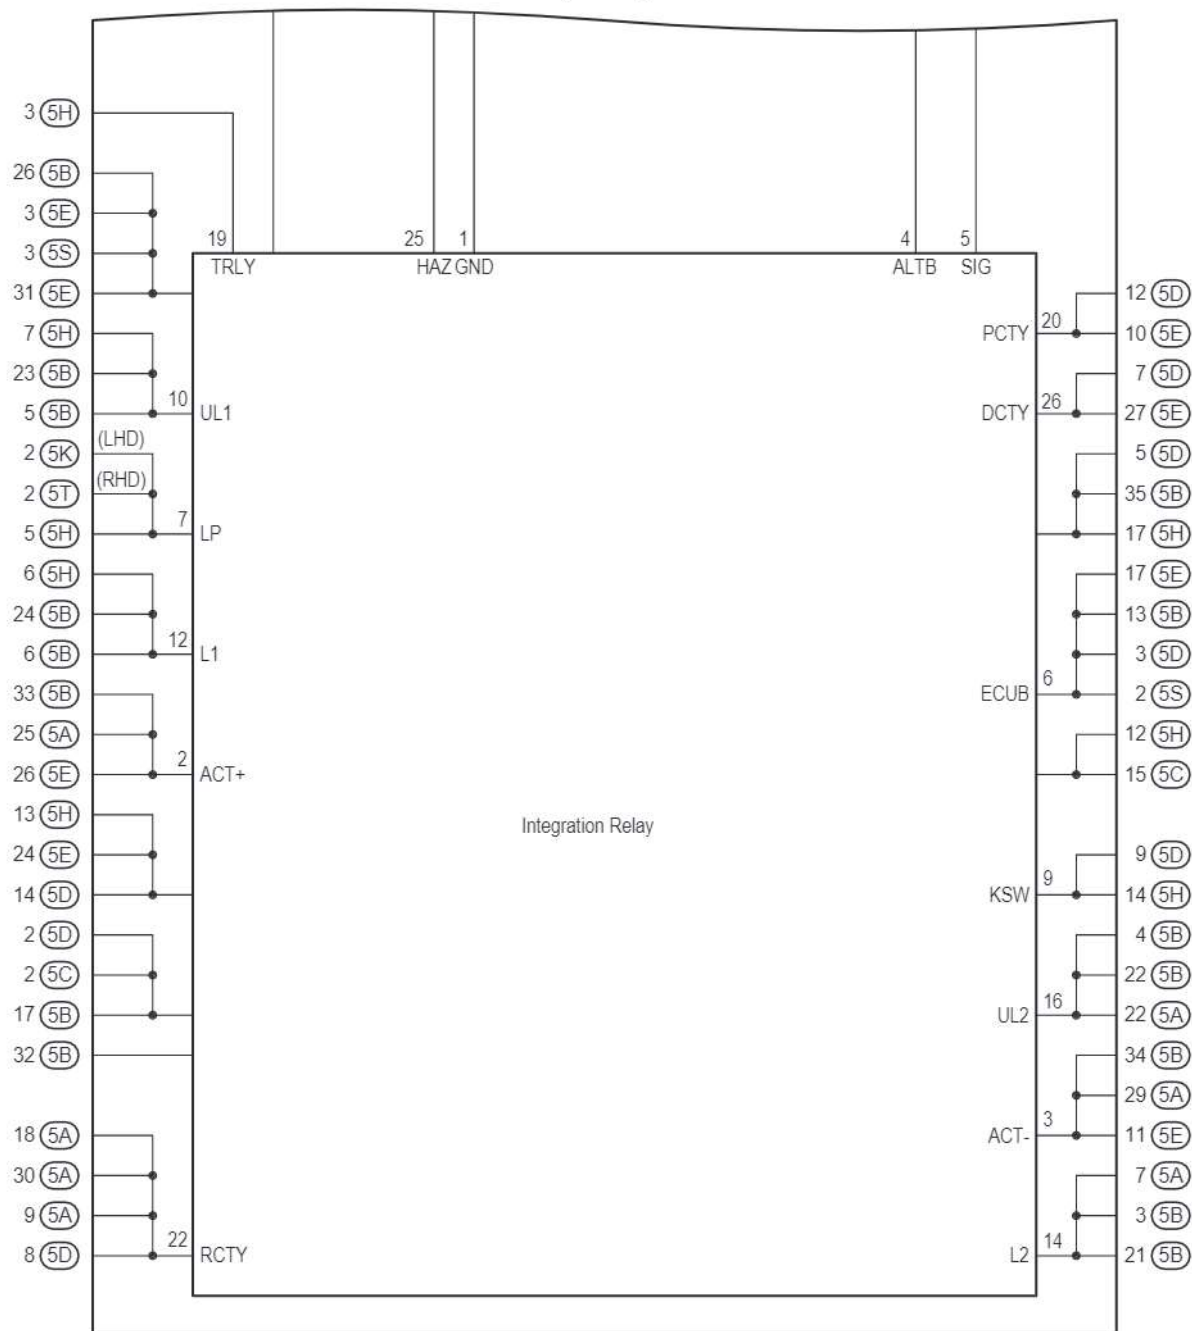


[Instrument Panel] (LHD)

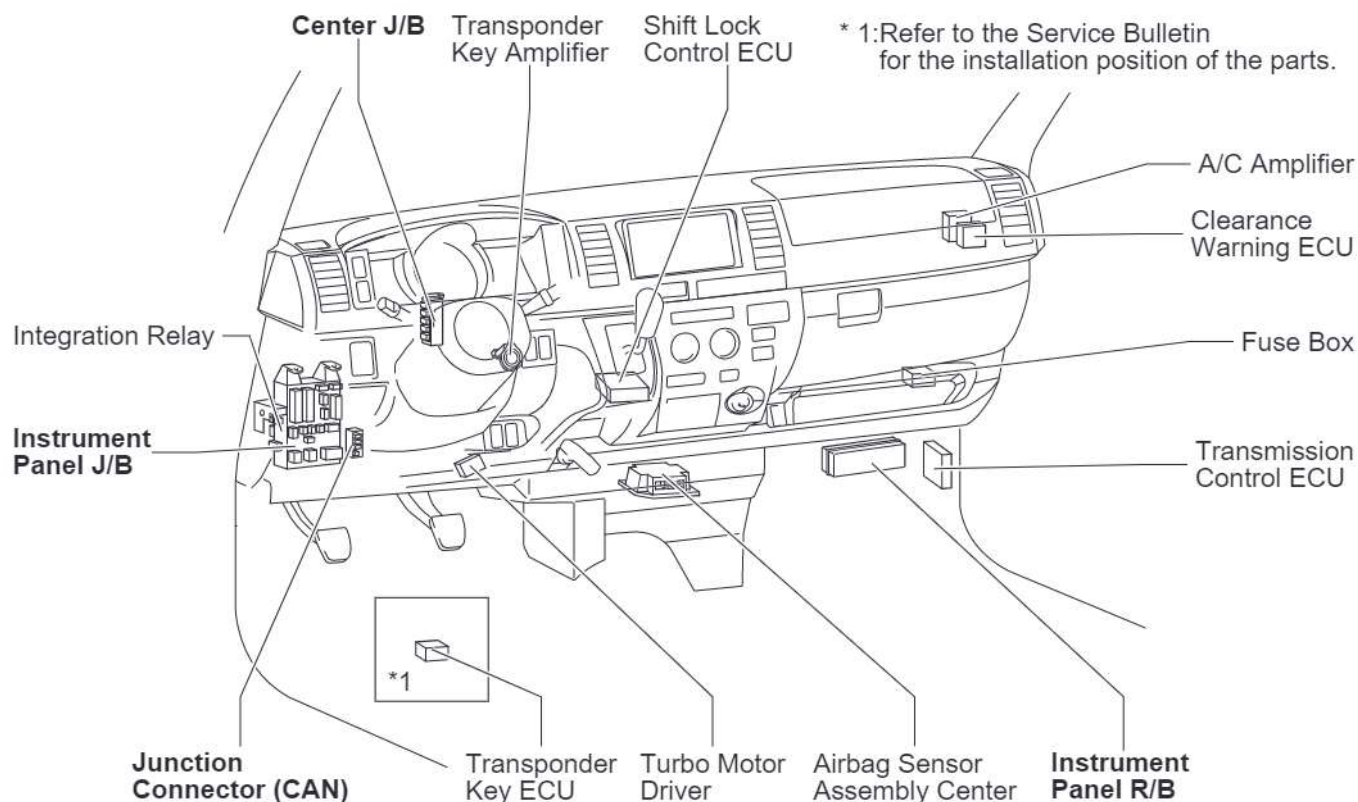


(RHD)

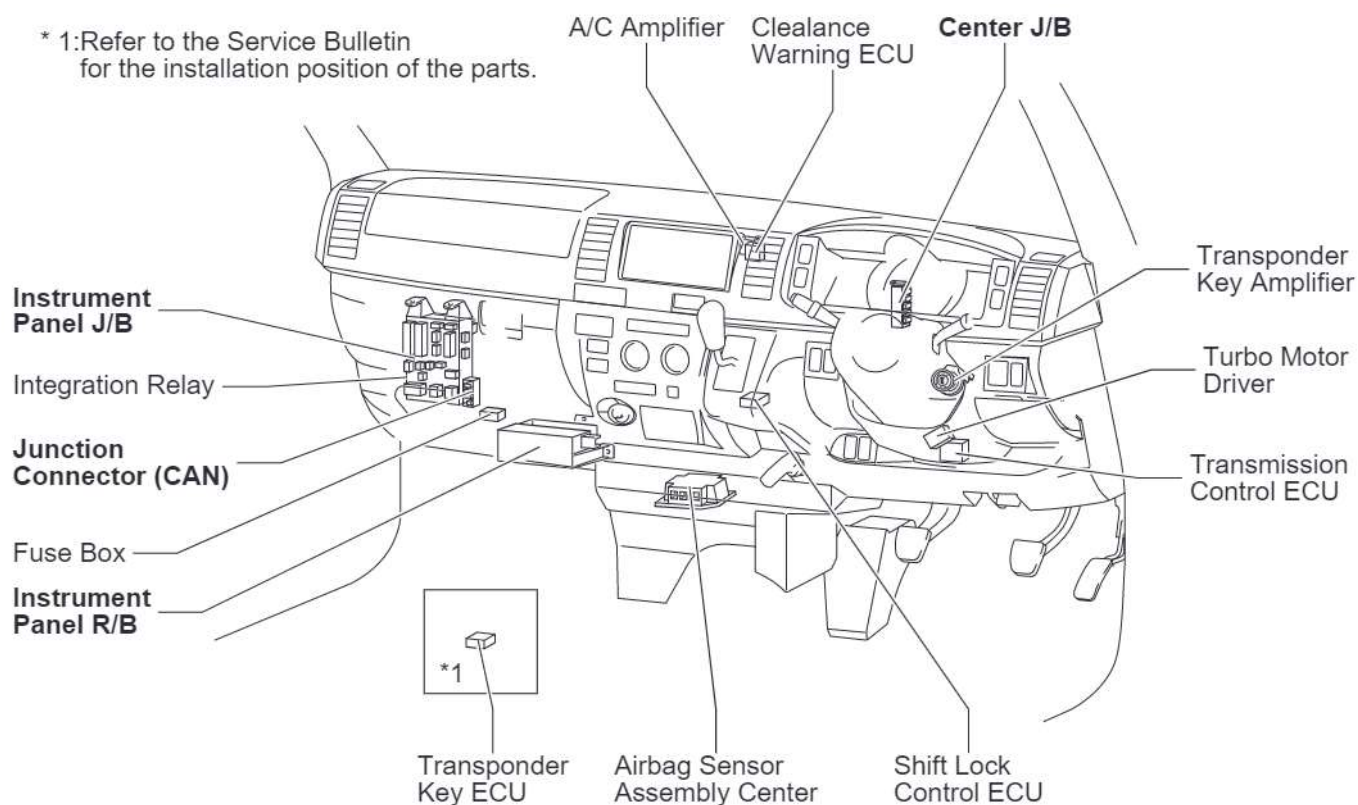

[Instrument Panel] (LHD)

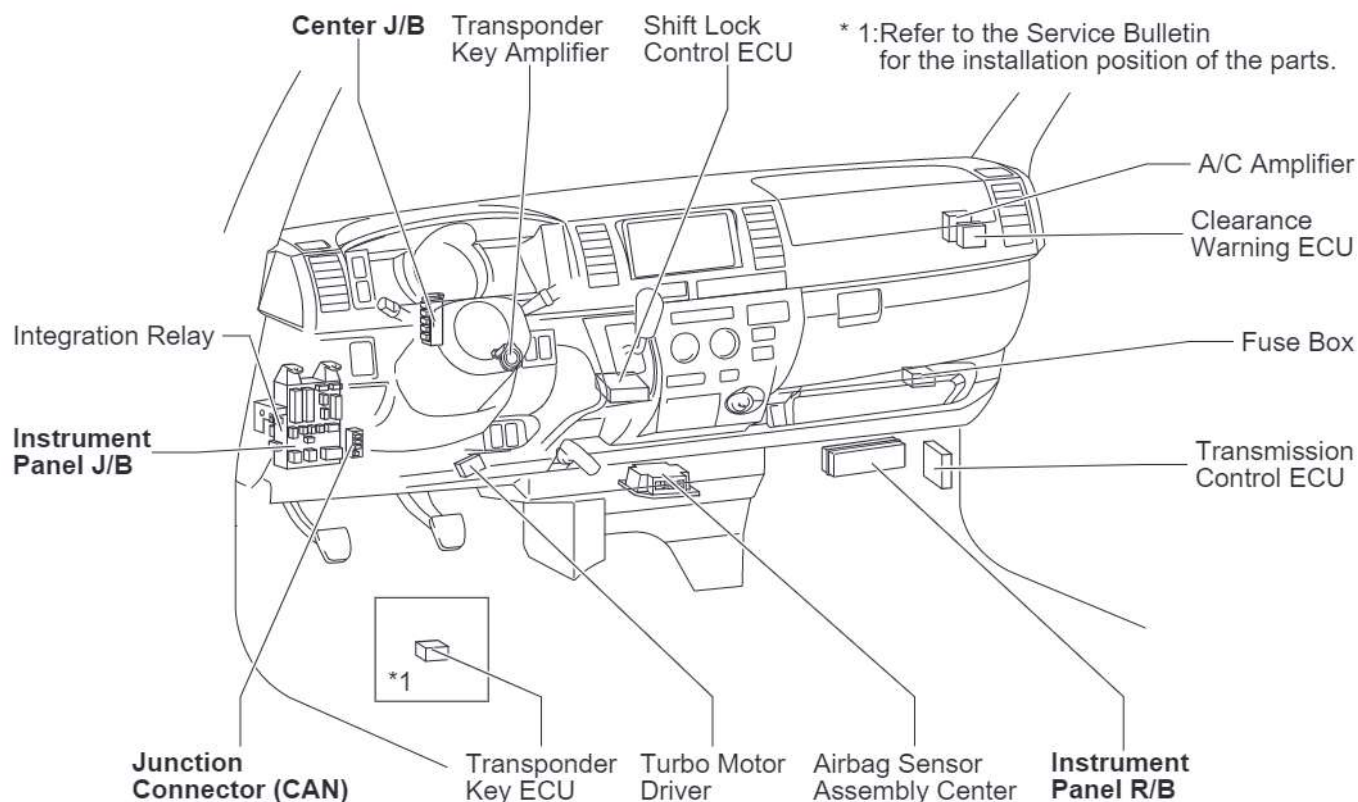


(RHD)

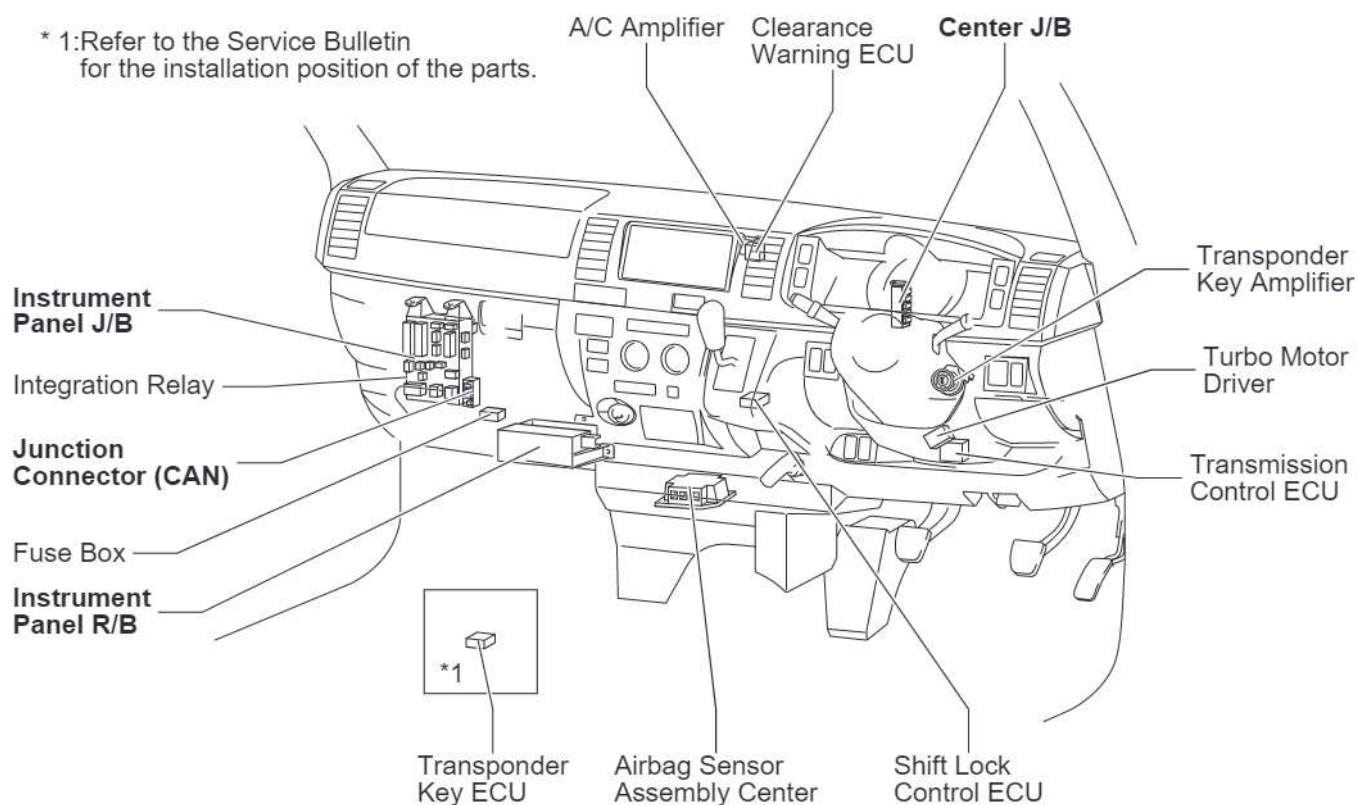

F RELAY LOCATIONS

④ : Instrument Panel R/B


Under the Glove Box (See Page 21)

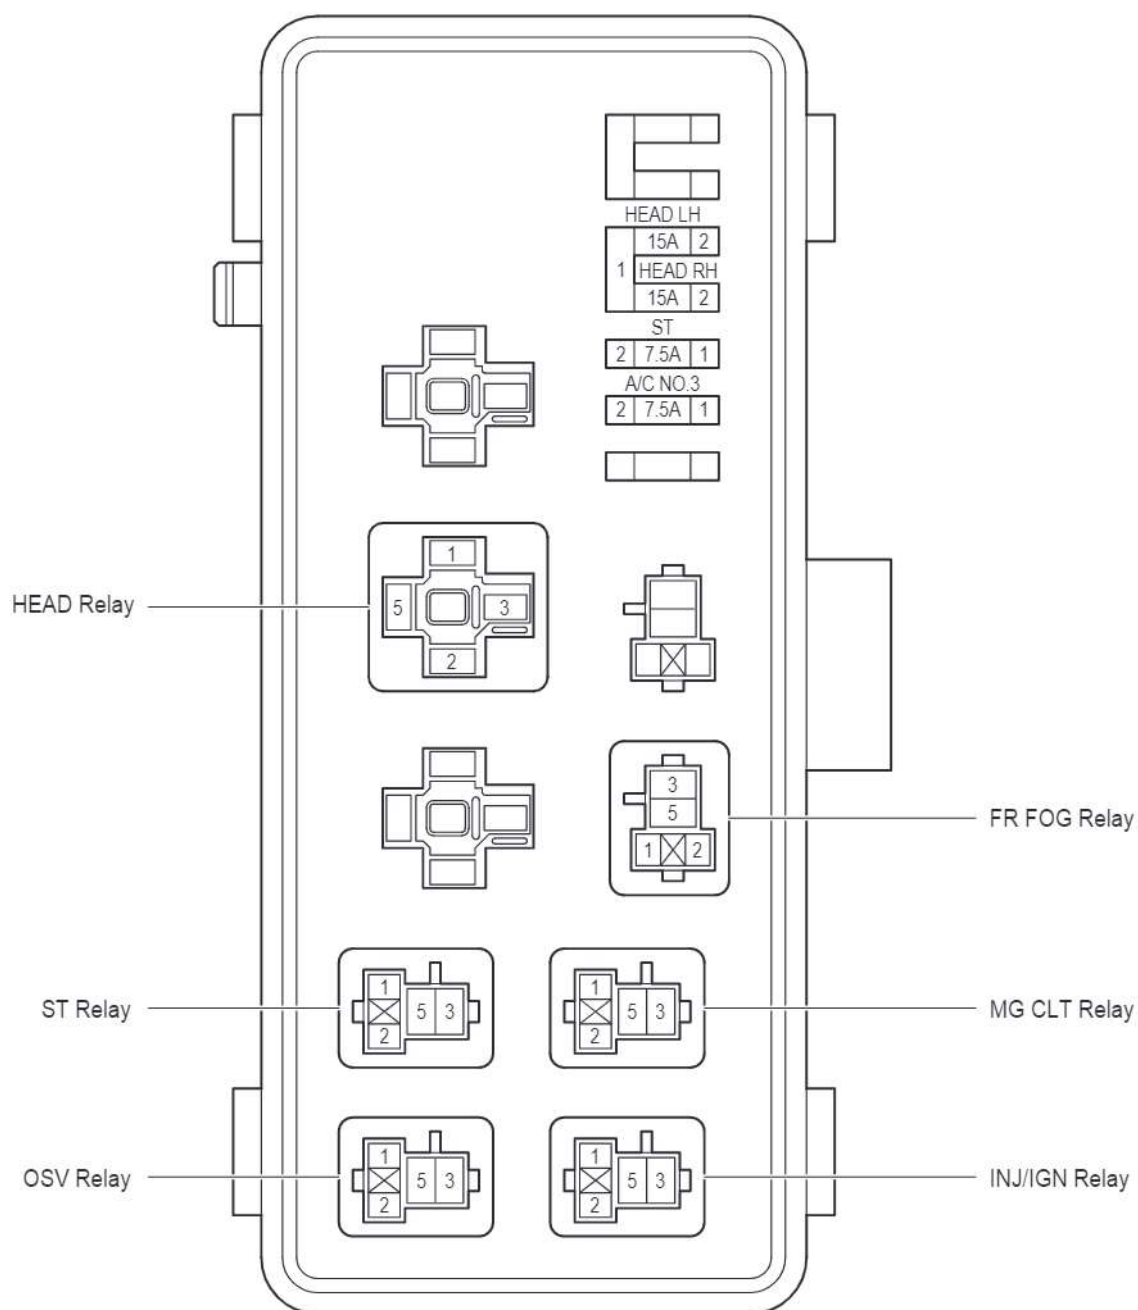


F RELAY LOCATIONS

Junction Connector (CAN)

Instrument Panel J/B RH Side (See Page 21)

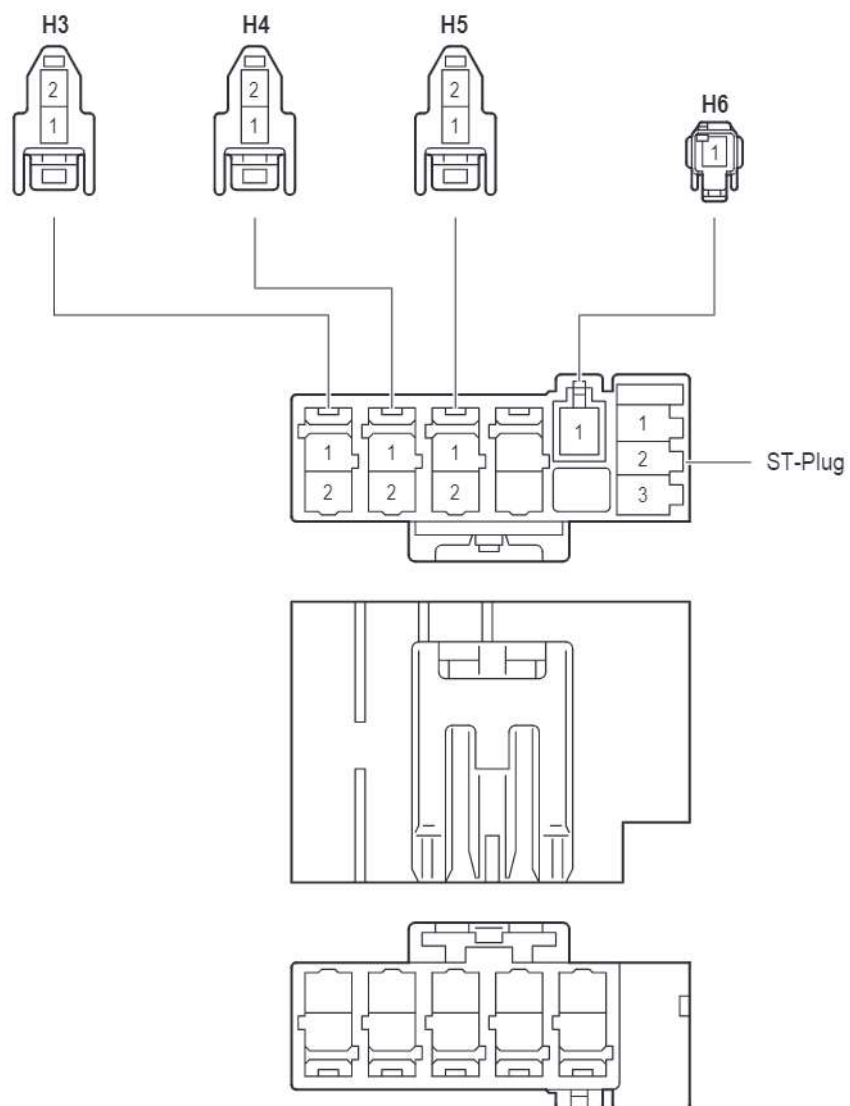


[Junction Connector (CAN) Inner Circuit]

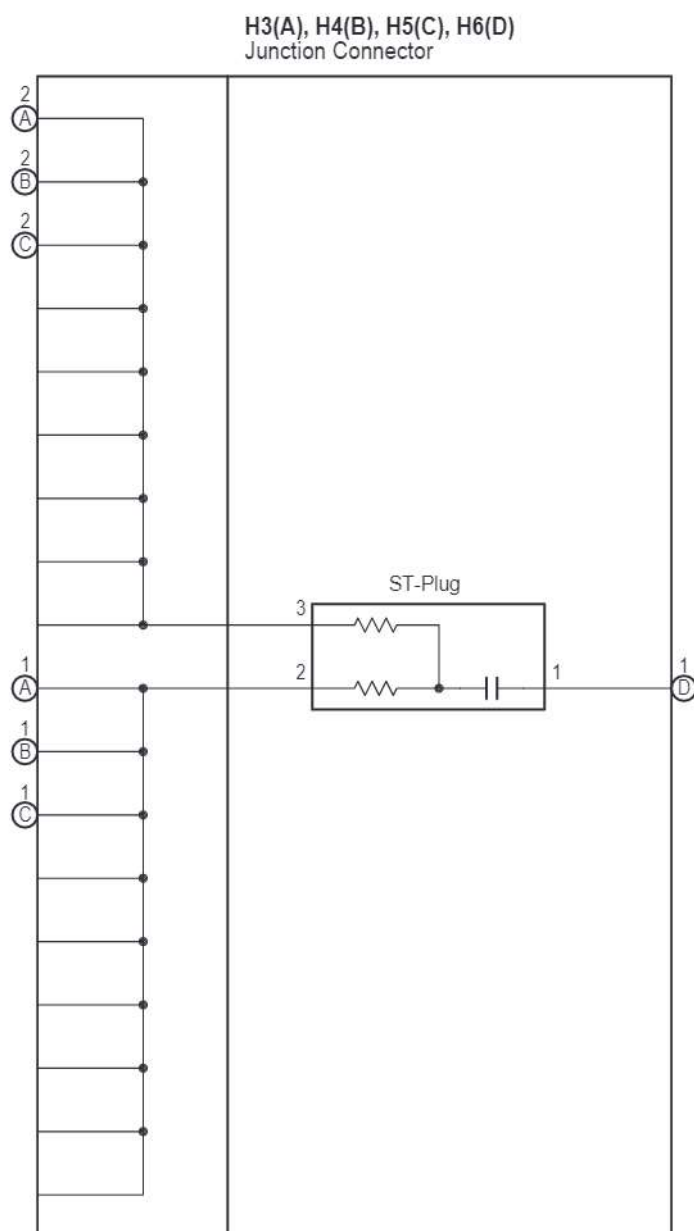


F RELAY LOCATIONS

[Engine Compartment]

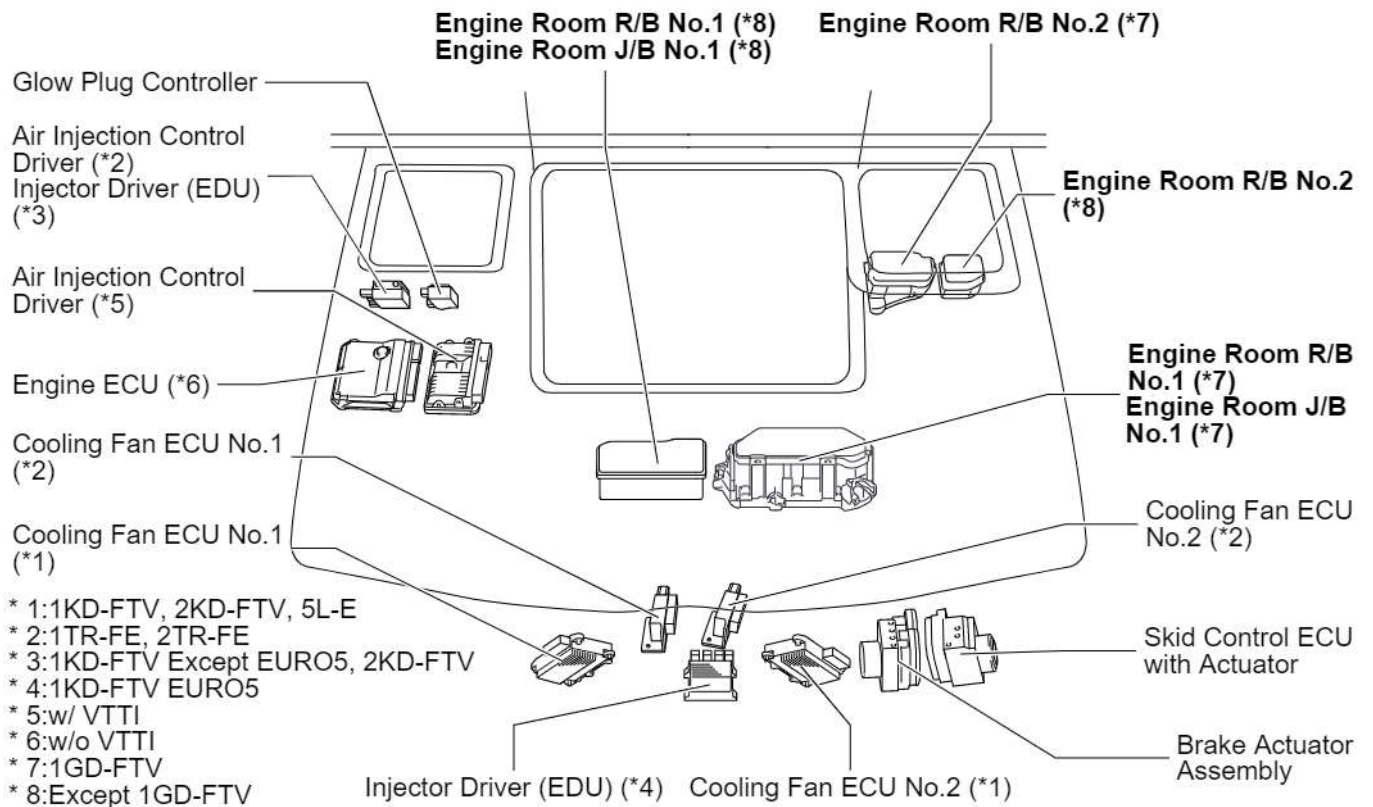


[Body]

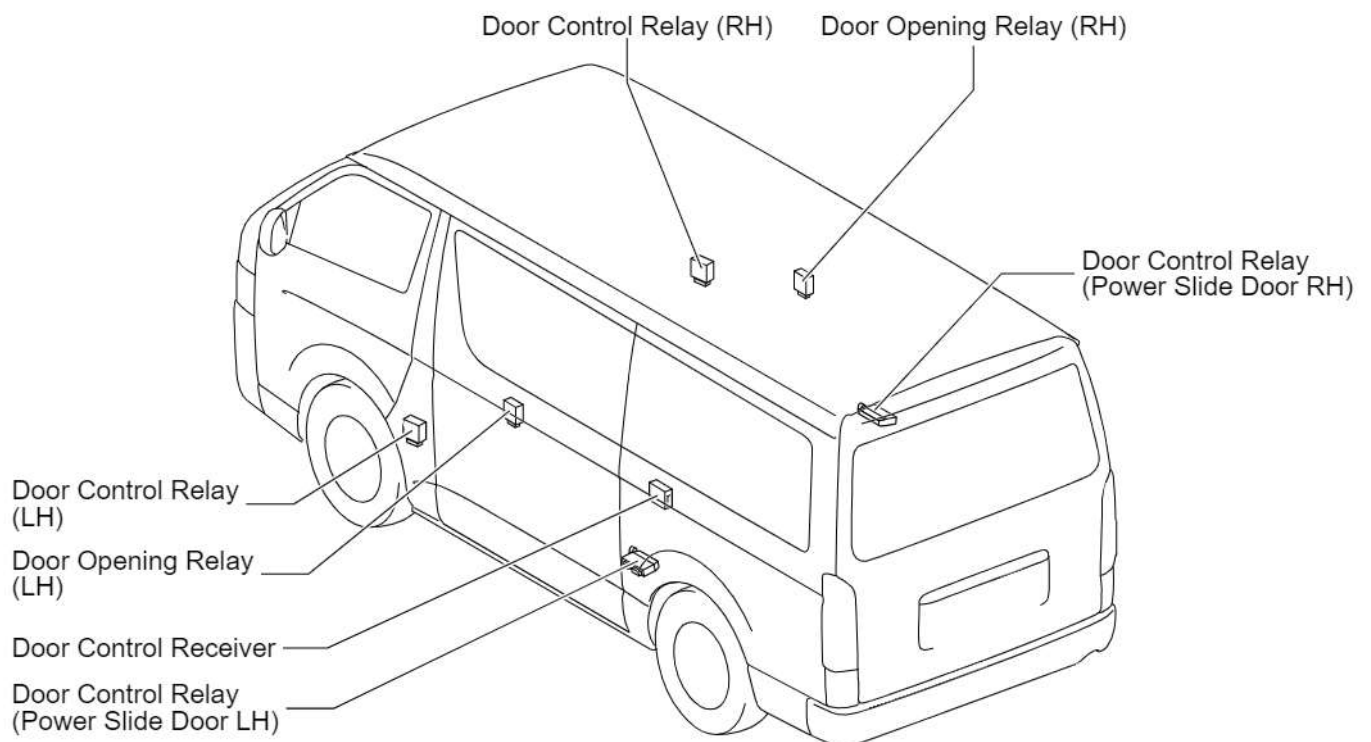


F RELAY LOCATIONS

[Engine Compartment]

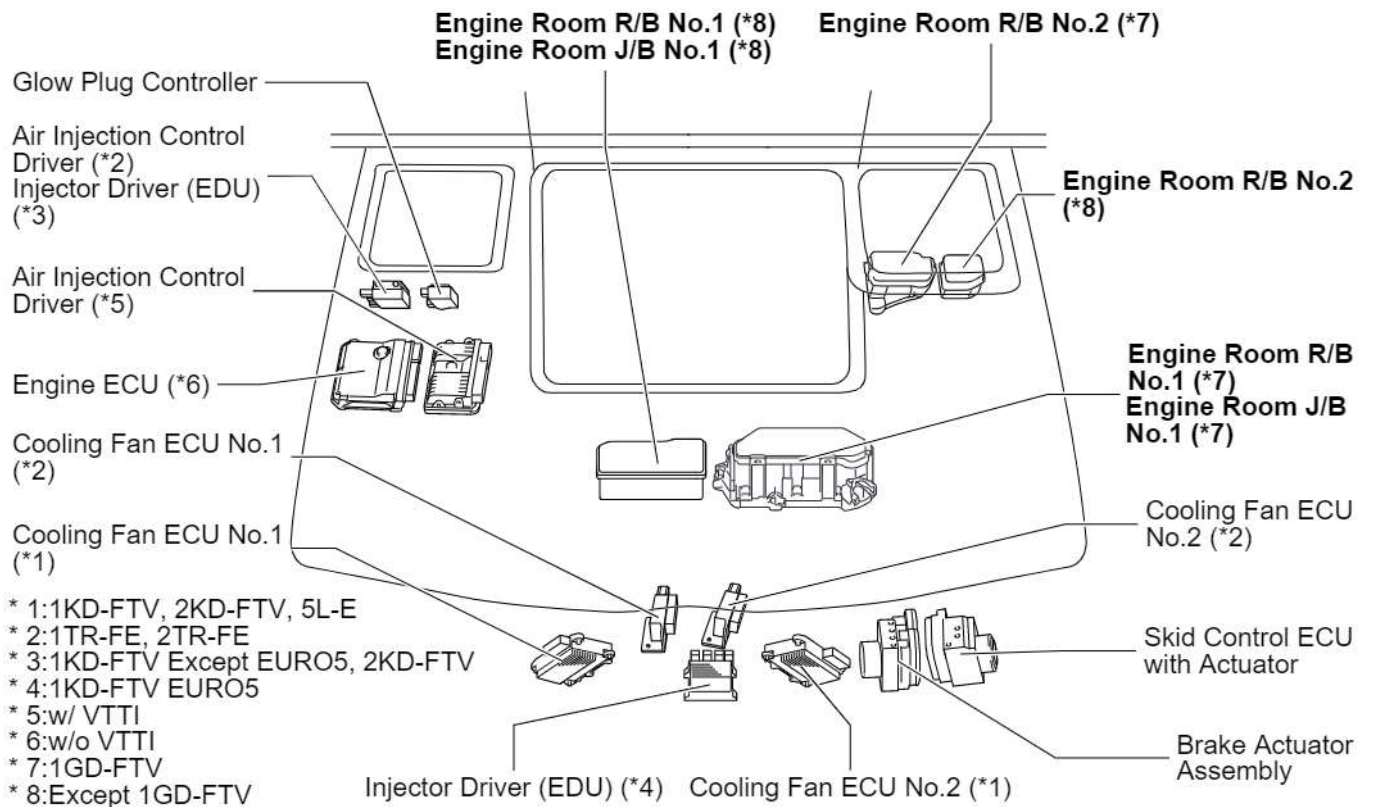


[Body]

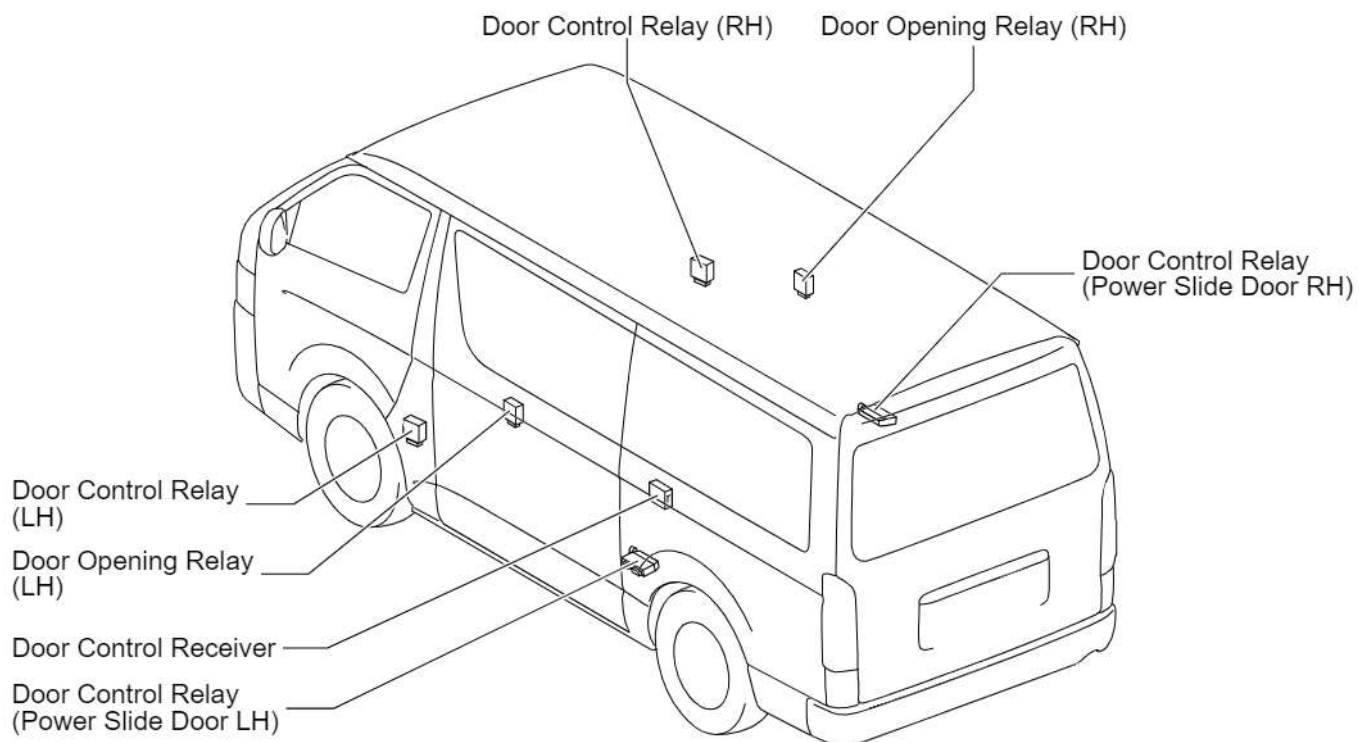


[Instrument Panel]

(LHD)

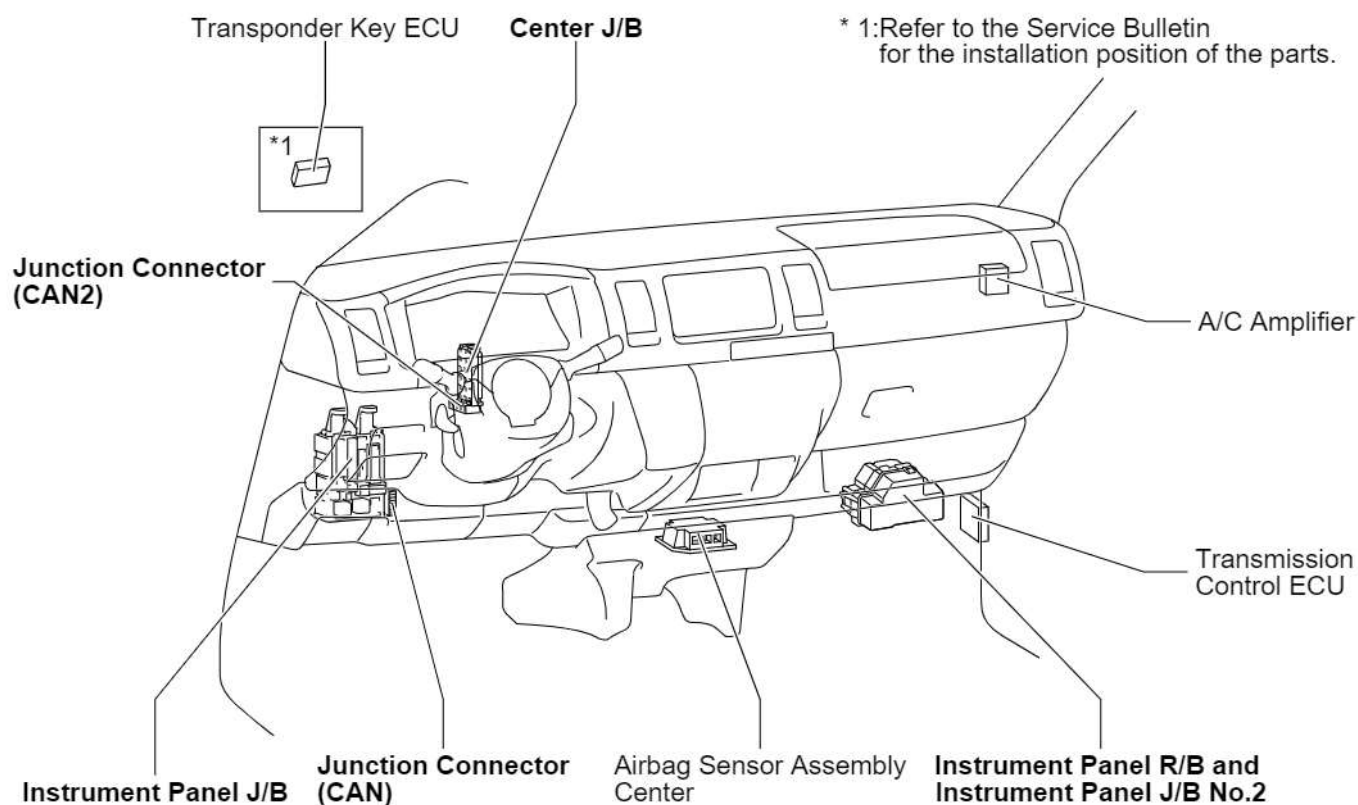


(RHD)

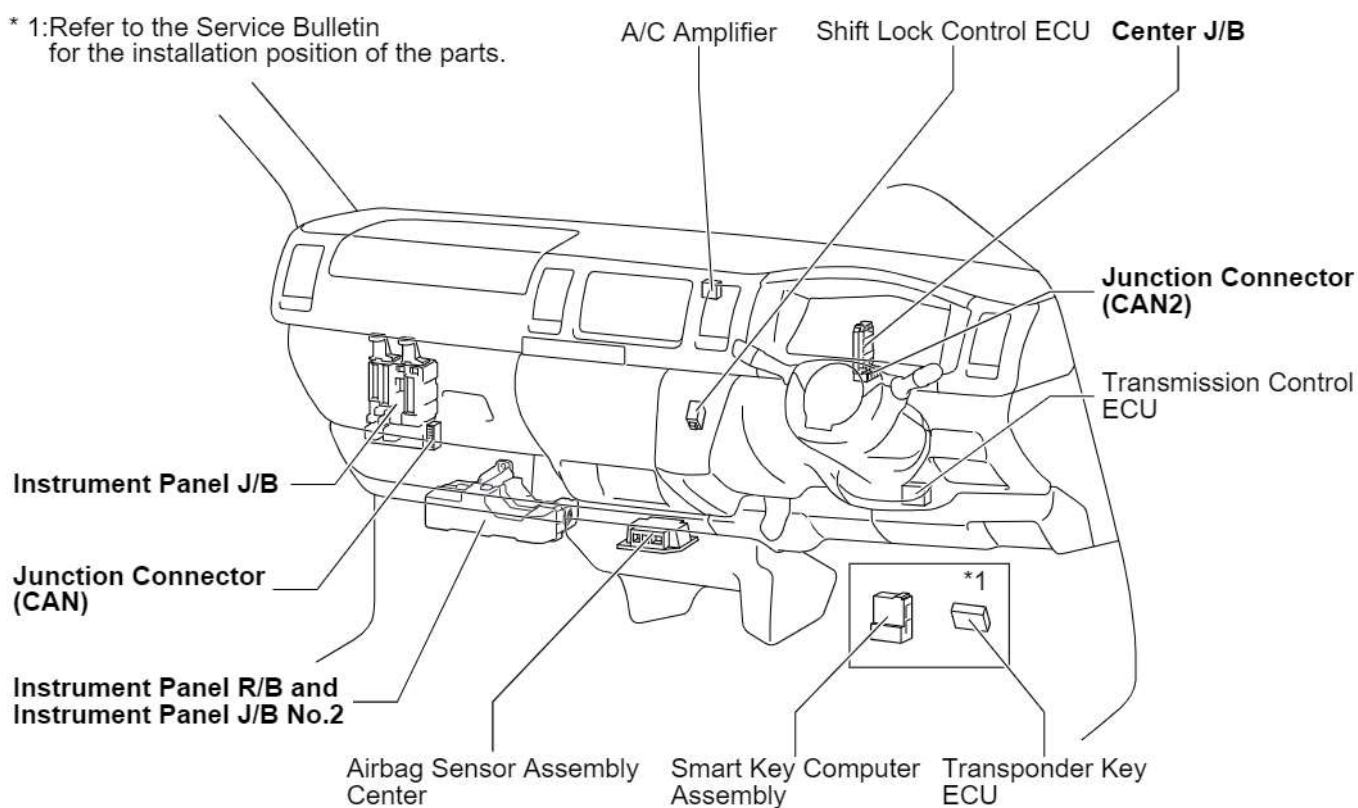


[Instrument Panel]

(LHD)

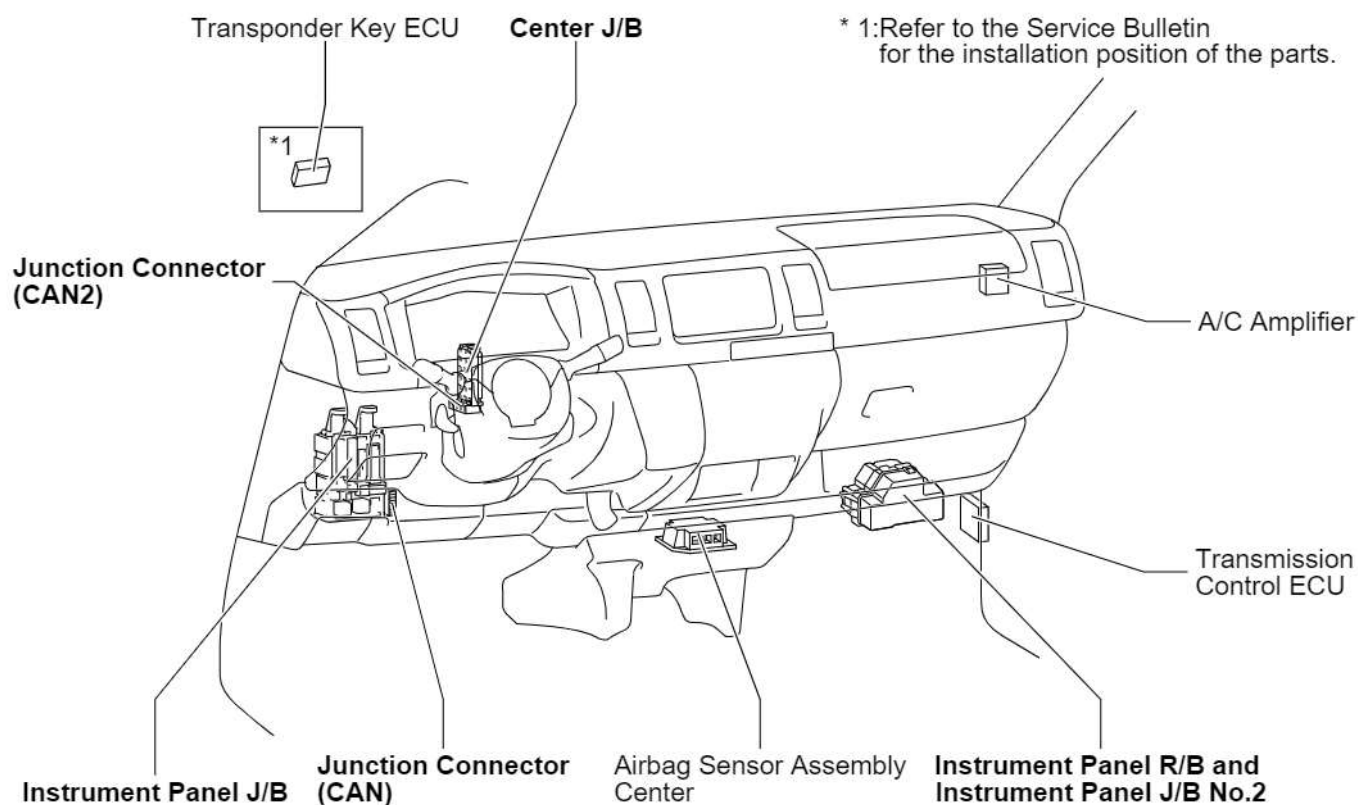


(RHD)

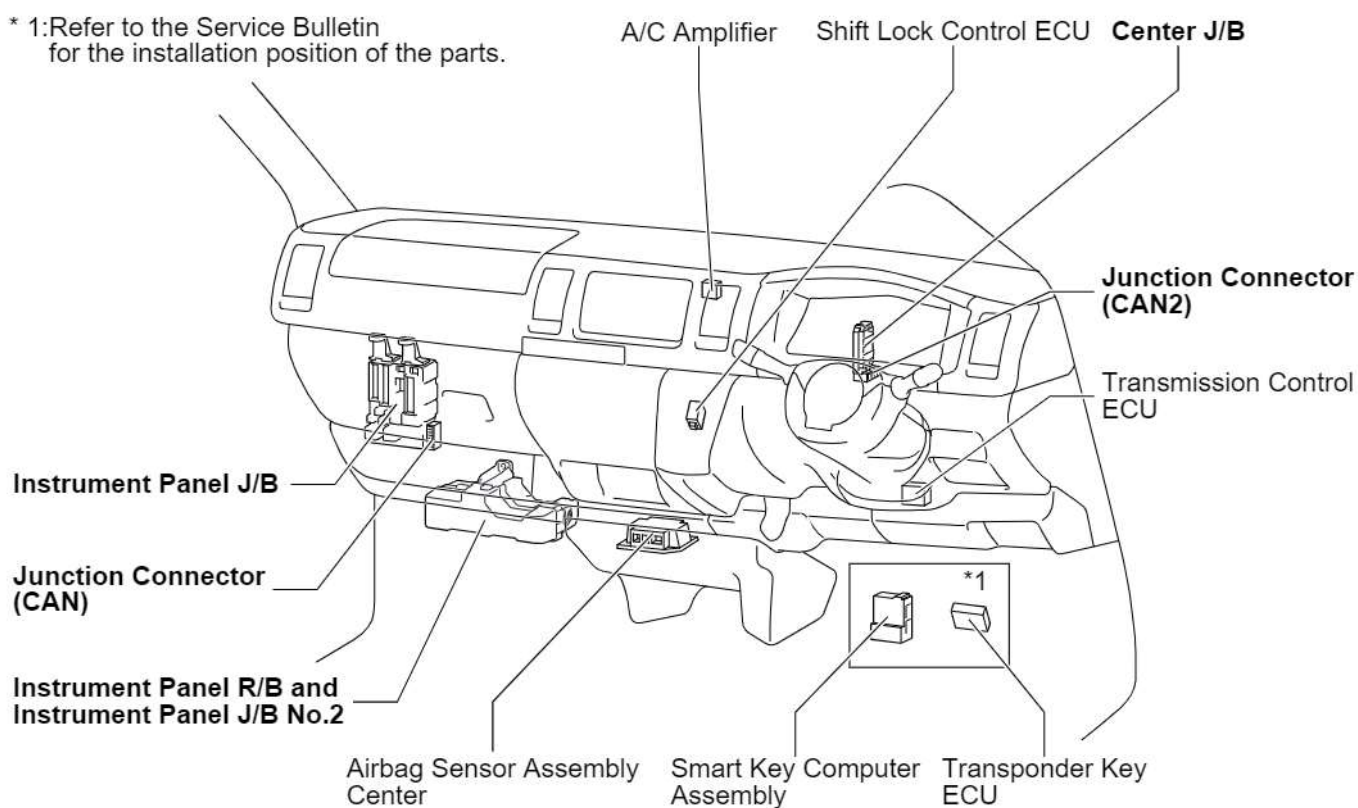


F RELAY LOCATIONS

 : Center J/B	LHD : Instrument Panel Reinforcement LH (See Page 23)
	RHD : Instrument Panel Reinforcement RH (See Page 23)

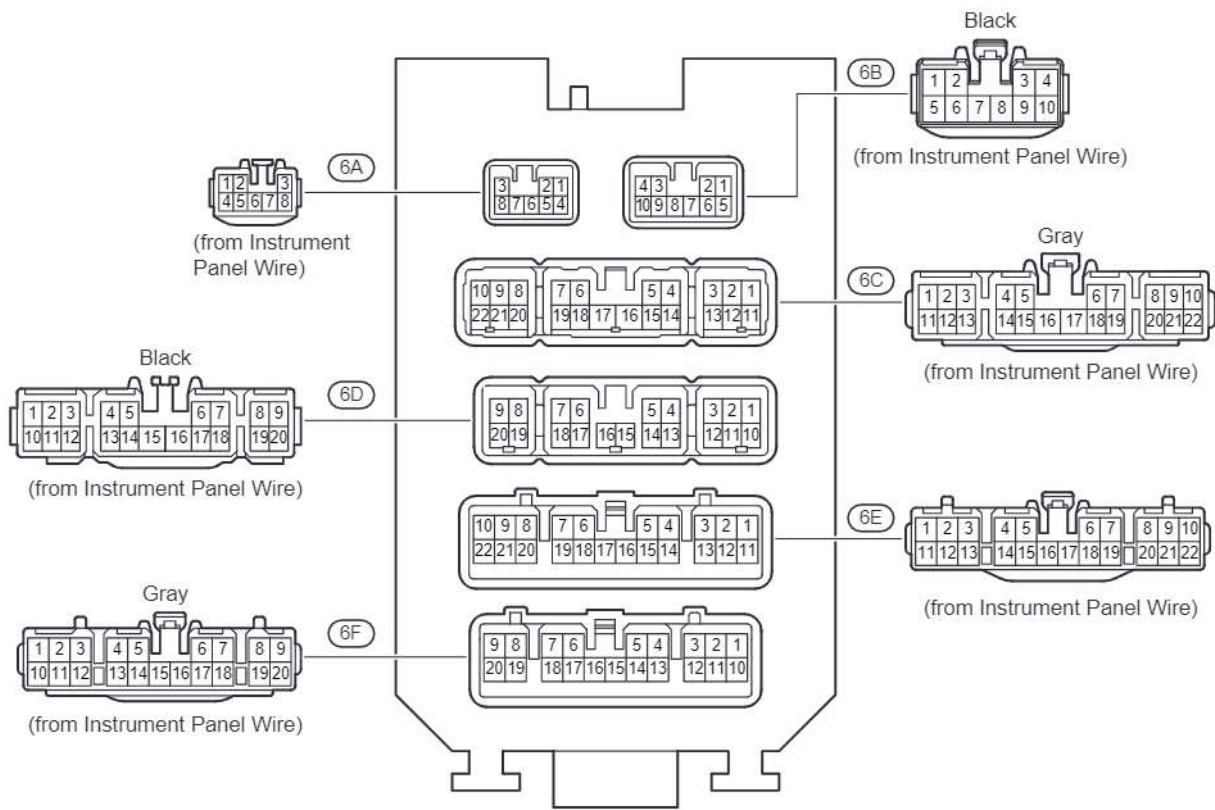


F RELAY LOCATIONS

[Center J/B Inner Circuit]

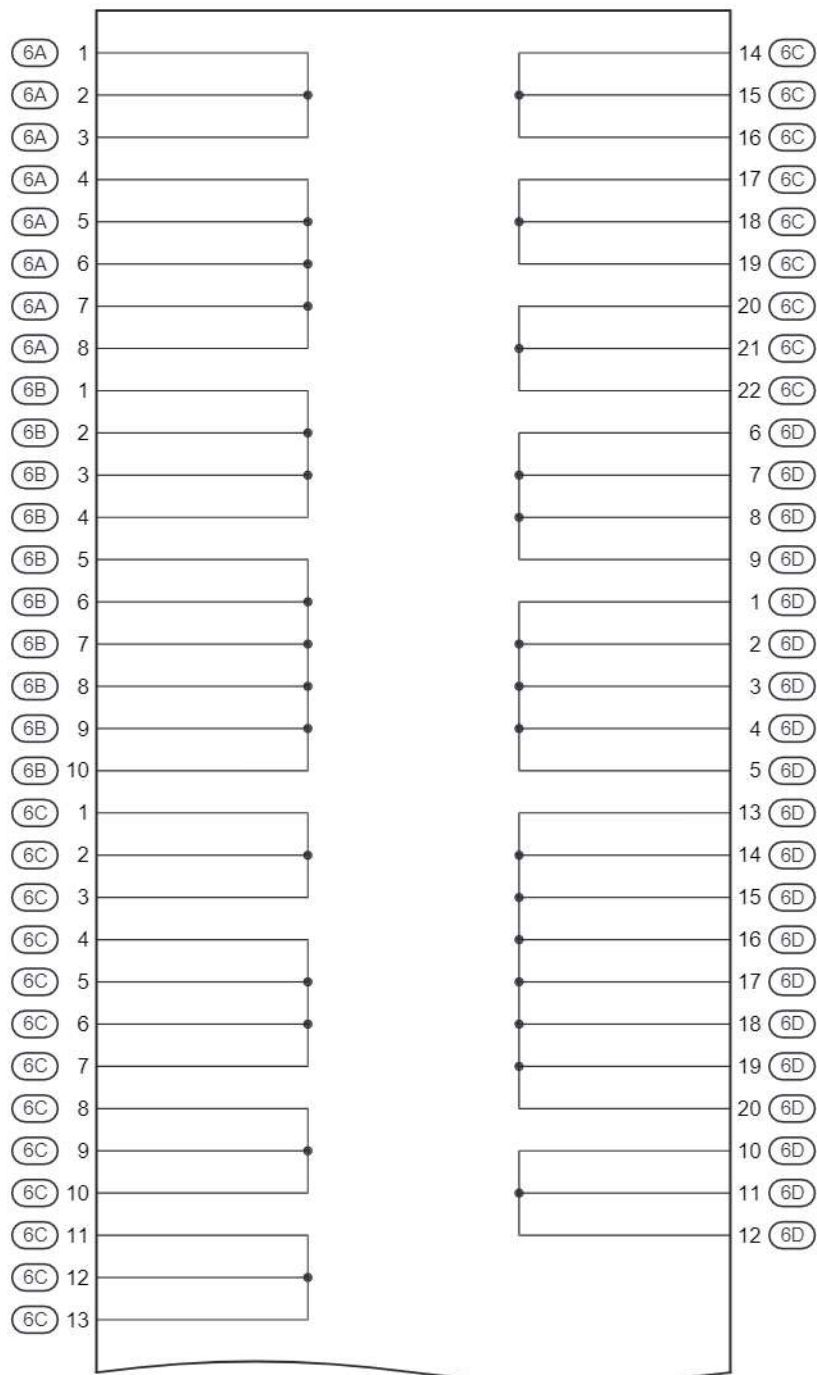

(Cont. Next Page)

(Cont'd)

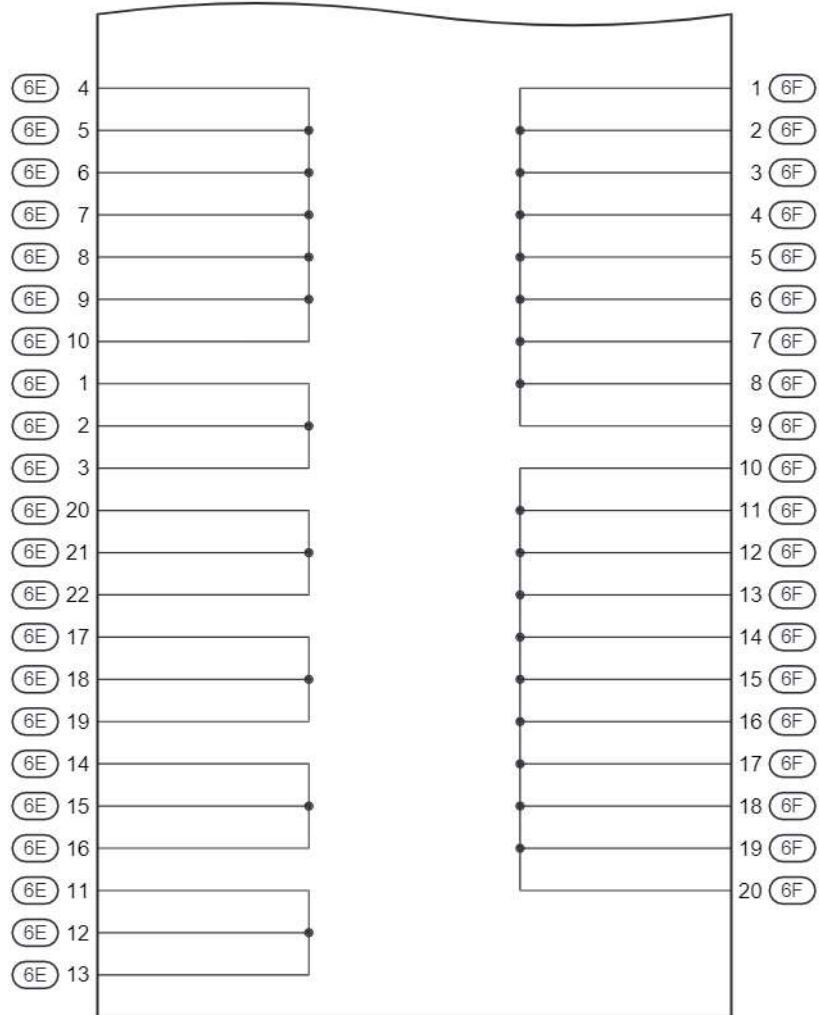


HIACE (EM26T2E)

F RELAY LOCATIONS

11 : Engine Room R/B No.2	Inside of Battery Room (See Page 22)
(From Dec. 2013 Production)	(Except 1GD-FTV)


- * 1:40A HEAD (for High Current)
- * 2:30A DOOR R/L (for High Current)
- * 3:30A DOOR BK (for High Current)
- * 4:15A TVSS (w/o AIR_PMP_HTR)
15A AIR PMP HTR(w/ AIR_PMP_HTR)

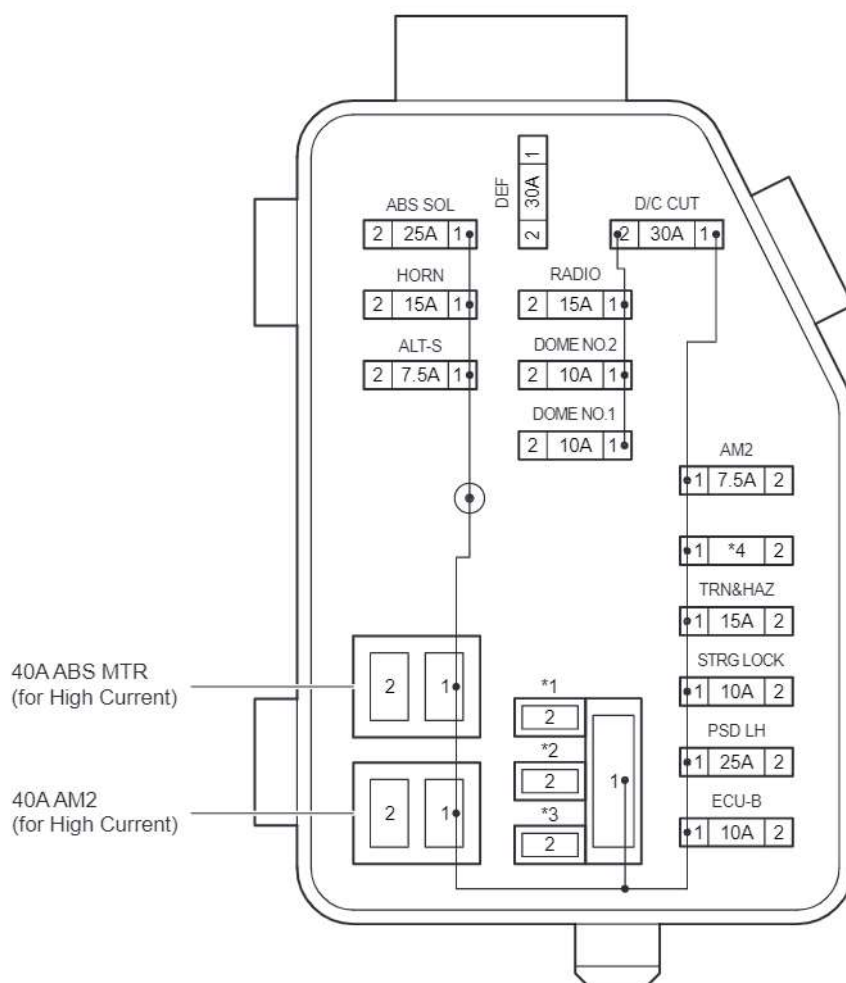

F RELAY LOCATIONS

(14) : Engine Room R/B No.2 Inside of Battery Room (See Page 36)
(1GD-FTV) (Inner Circuit : see Page 36)


- *1 : 40A ABS MTR
- *2 : 40A HEAD
- *3 : 40A ST
- *4 : 40A AM2
- *5 : 30A DOOR BK
- *6 : 30A DOOR R/L
- *7 : 40A HTR FR
- *8 : 30A DEF
- *9 : 30A CLR RR

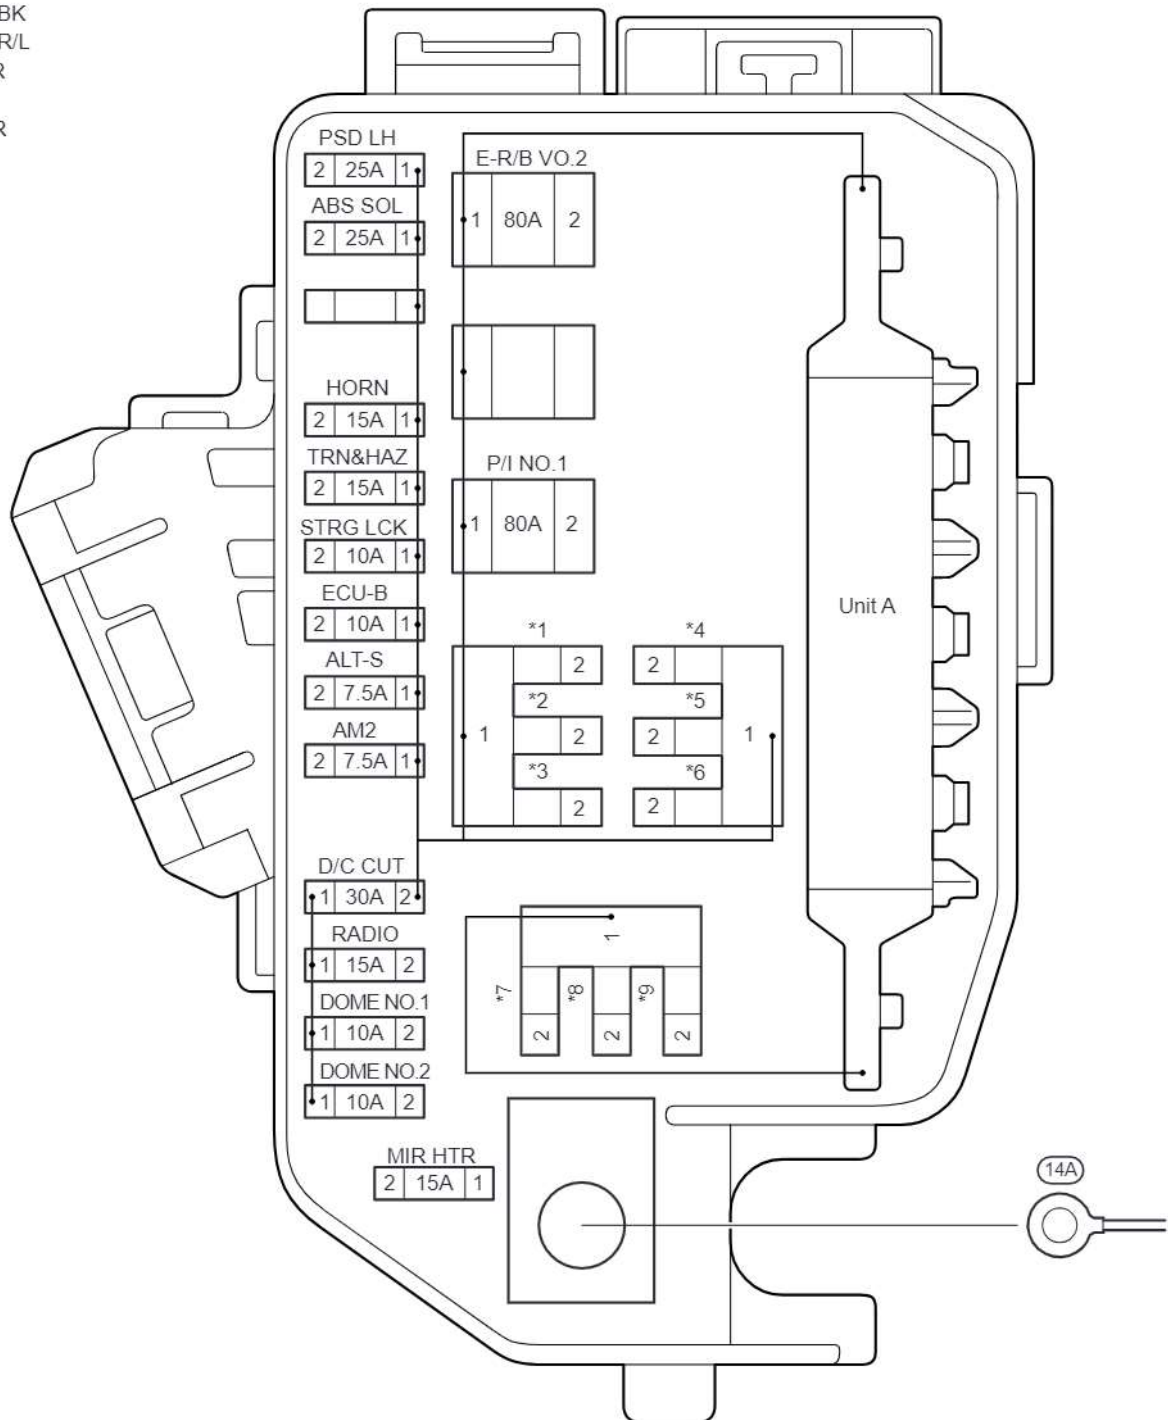

HIACE (EM26T4E)

14 : Engine Room R/B No.2**Inside of Battery Room (See Page 36)****(1GD-FTV)****(Inner Circuit : see Page 36)**


Unit A

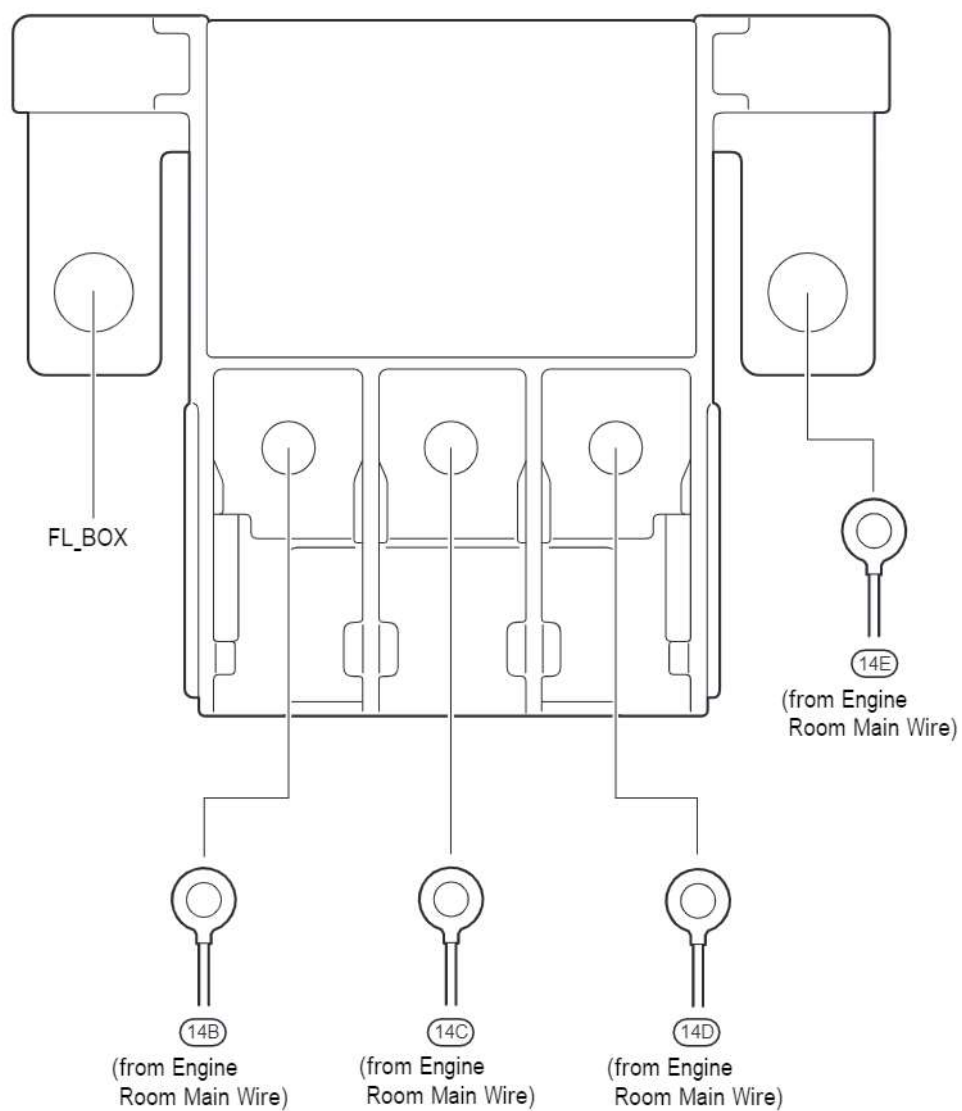

HIACE (EM26T4E)

F RELAY LOCATIONS

[Engine Room R/B No.2 Inner Circuit]
(1GD-FTV)

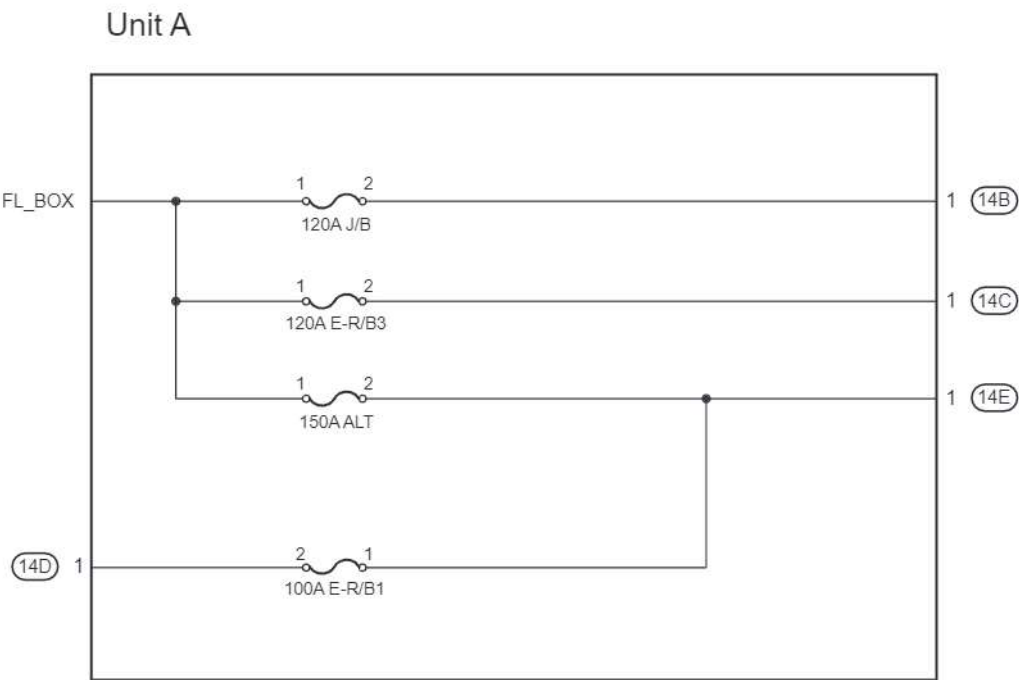


F RELAY LOCATIONS

10 : Engine Room R/B No.1

11 : Engine Room J/B No.1

Engine Compartment Front (See Page 22)

(1TR-FE, 2TR-FE) (From Dec. 2013 Production)

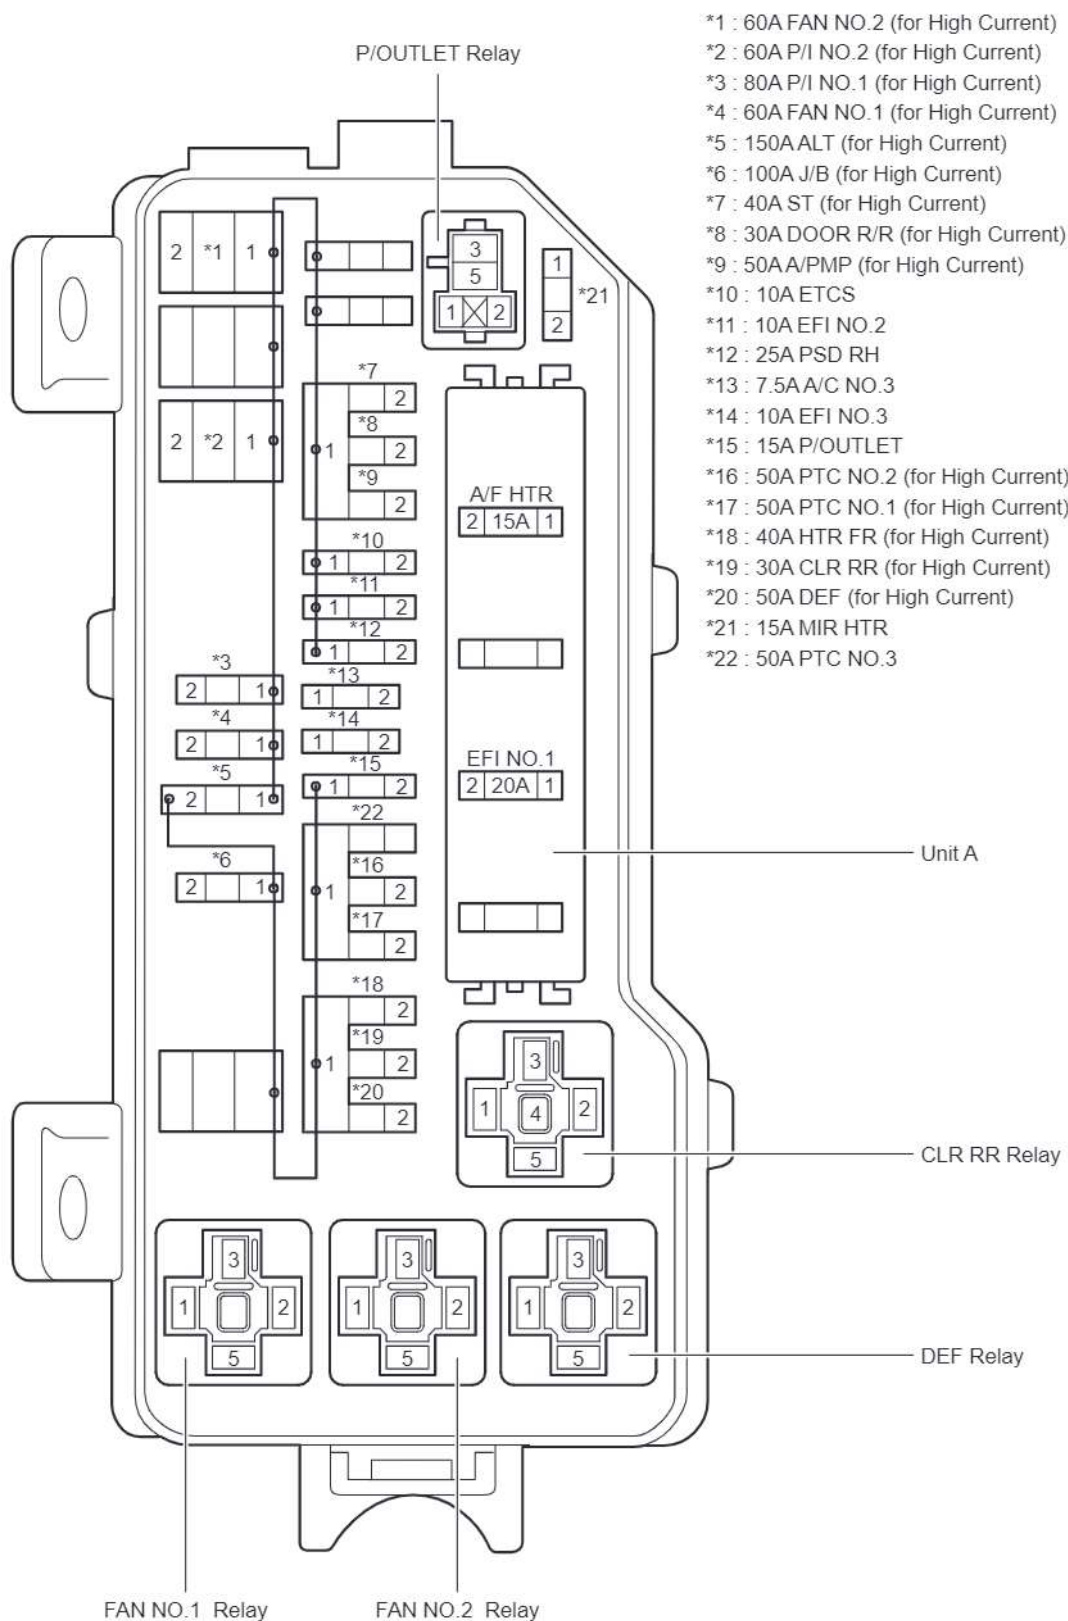


HIACE (EM26T4E)

10 : Engine Room R/B No. 1

Engine Room J/B No. 1

Engine Compartment Front (See Page 22)

(1KD-FTV, 2KD-FTV, 5L-E) (From Dec. 2013 Production)

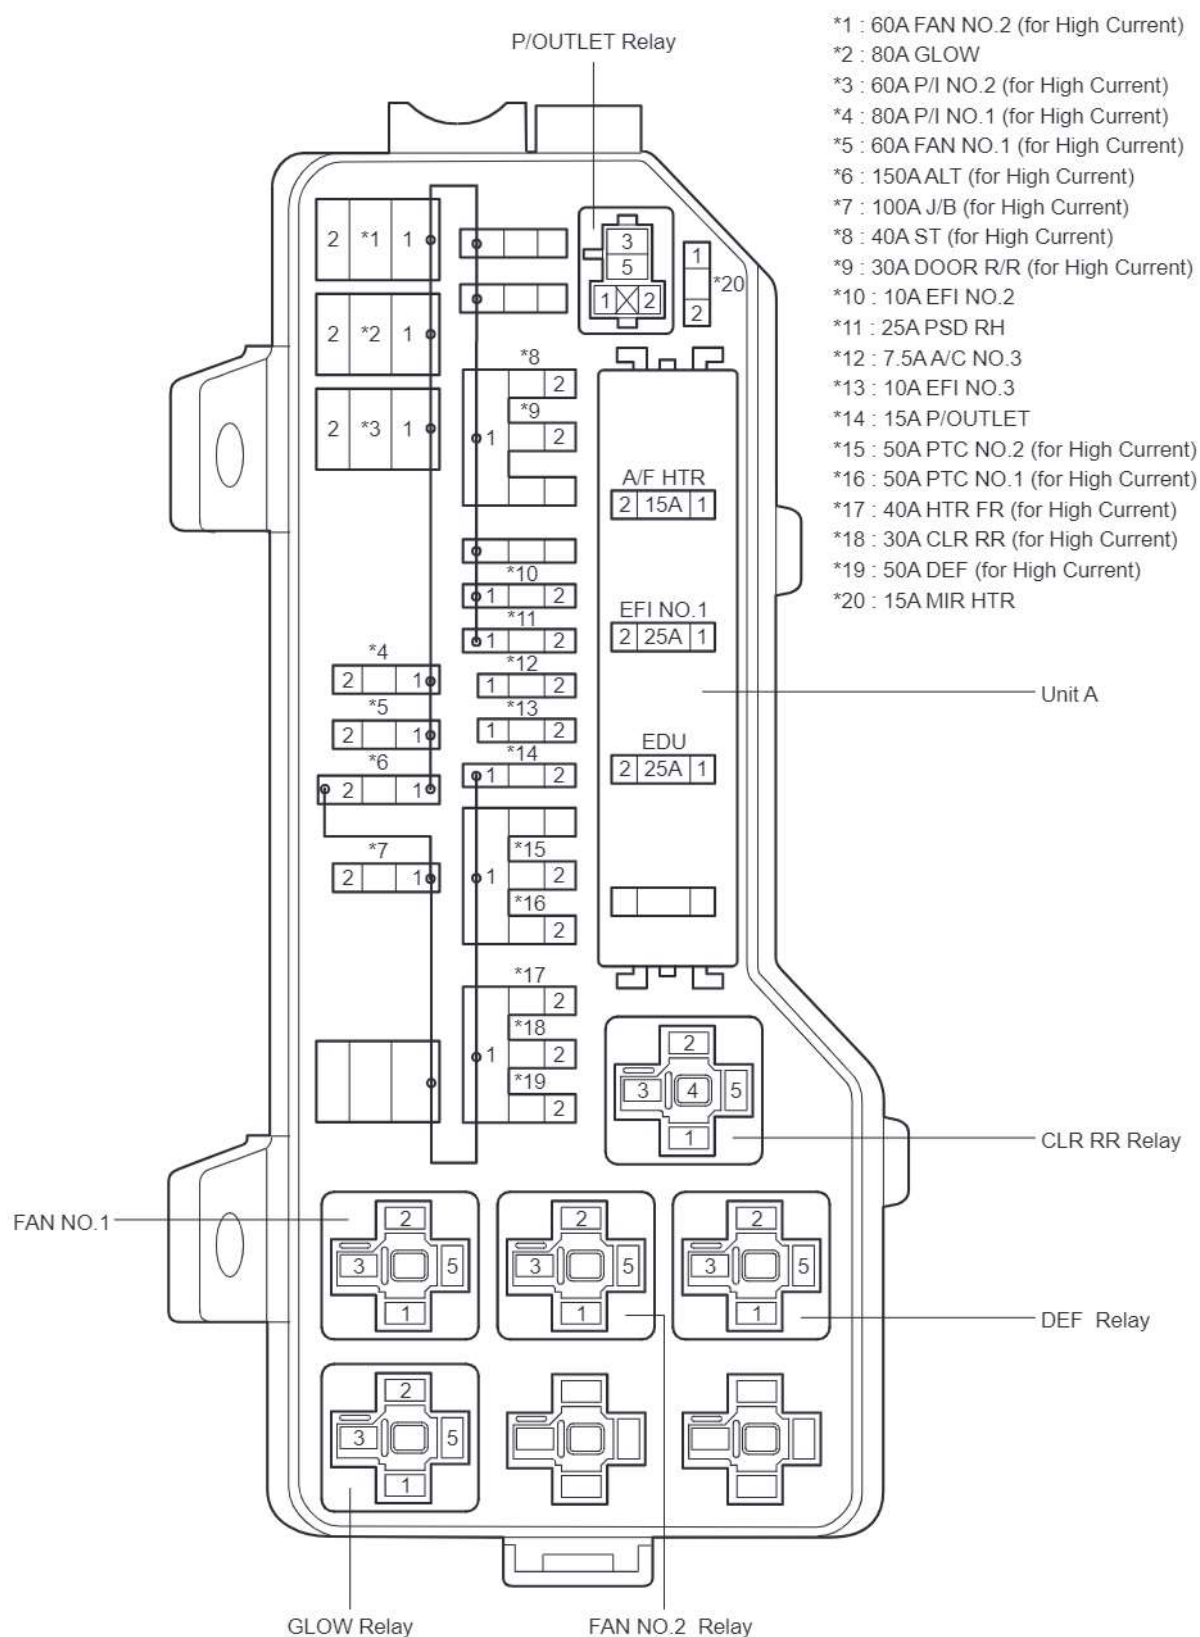


HIACE (EM26T4E)

F RELAY LOCATIONS

 : Engine Room R/B No. 1	Engine Compartment Front (see Page 22)
 : Engine Room J/B No. 1	

(From Dec. 2013 Production)

Unit A

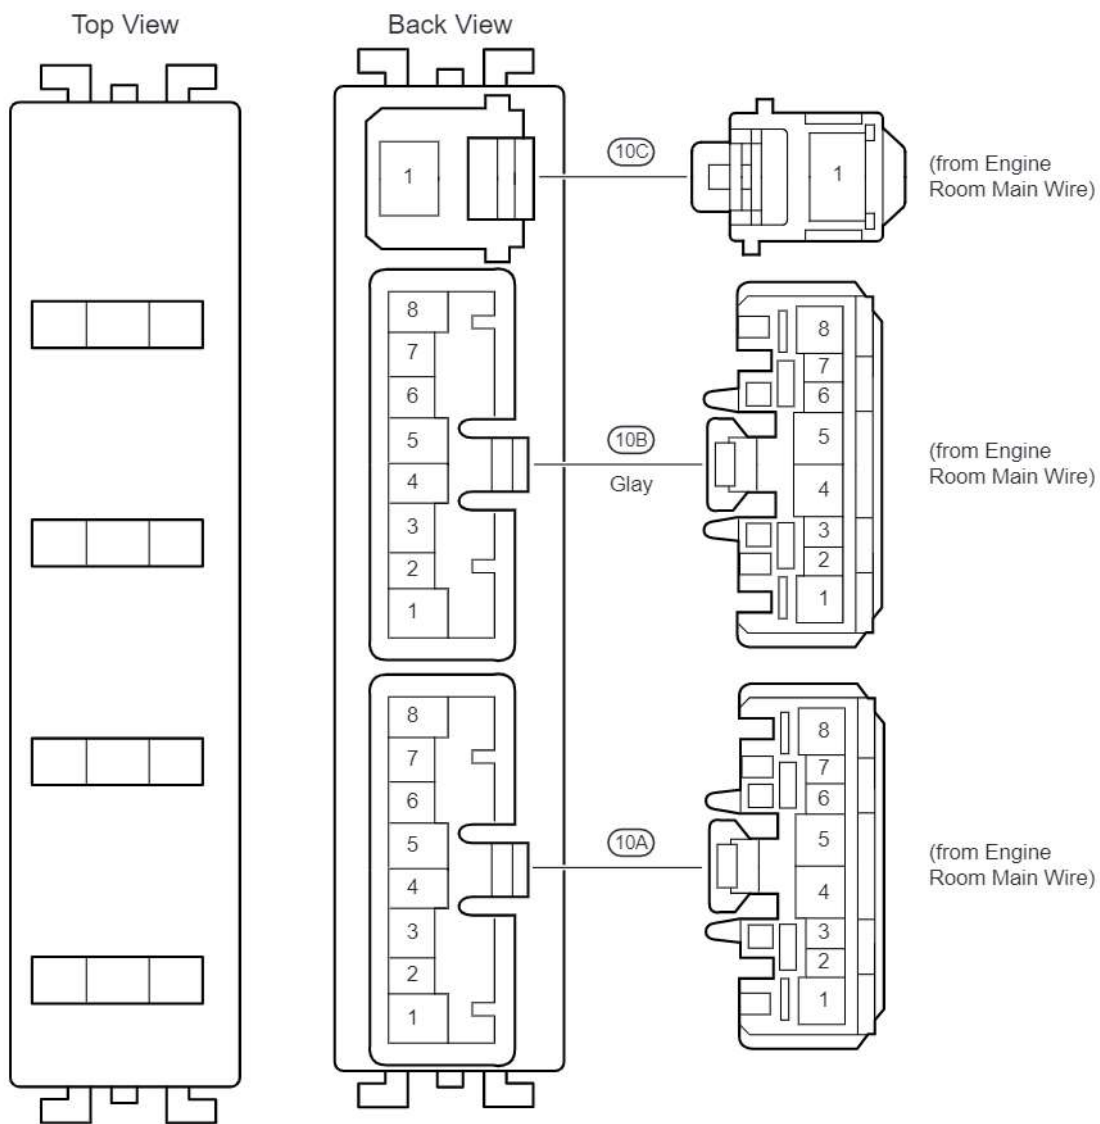


10 : Engine Room R/B No. 1

Engine Room J/B No. 1

Engine Compartment Front (See Page 22)

(1GD-FTV)

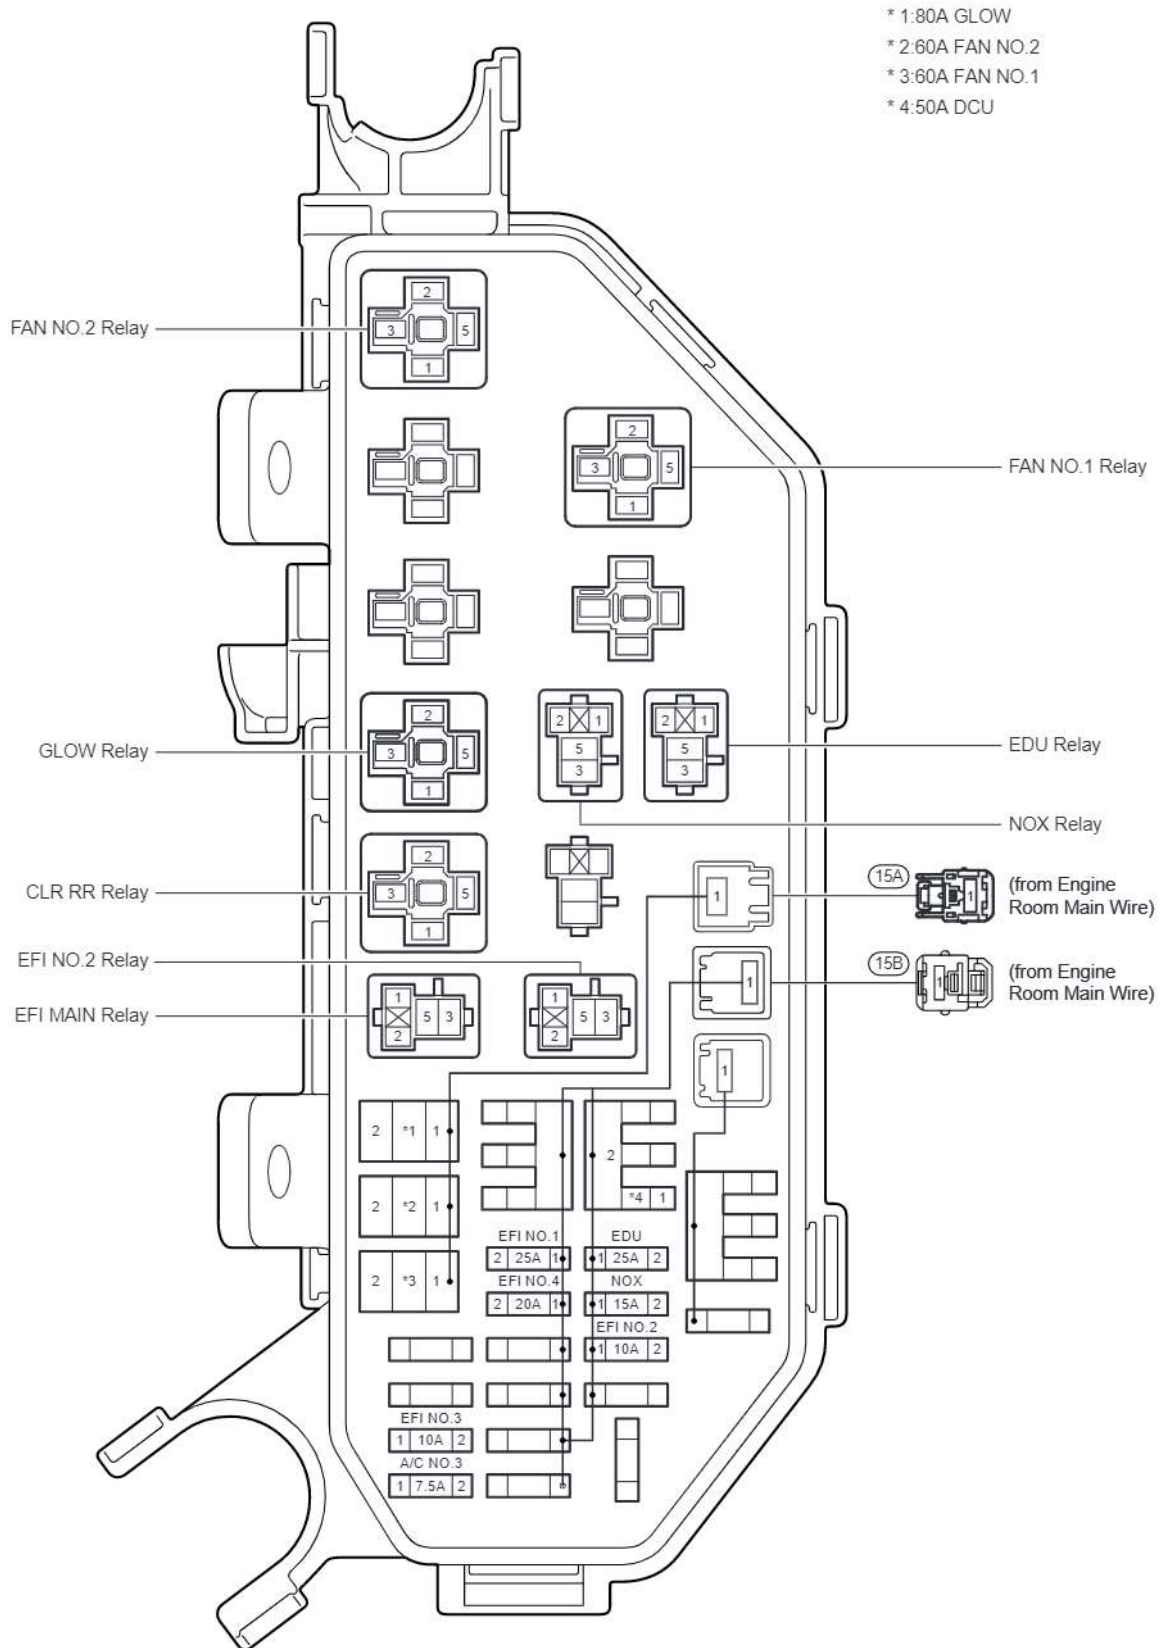





F RELAY LOCATIONS

 : Instrument Panel J/B

Left Side of Instrument Panel (See Page 23)

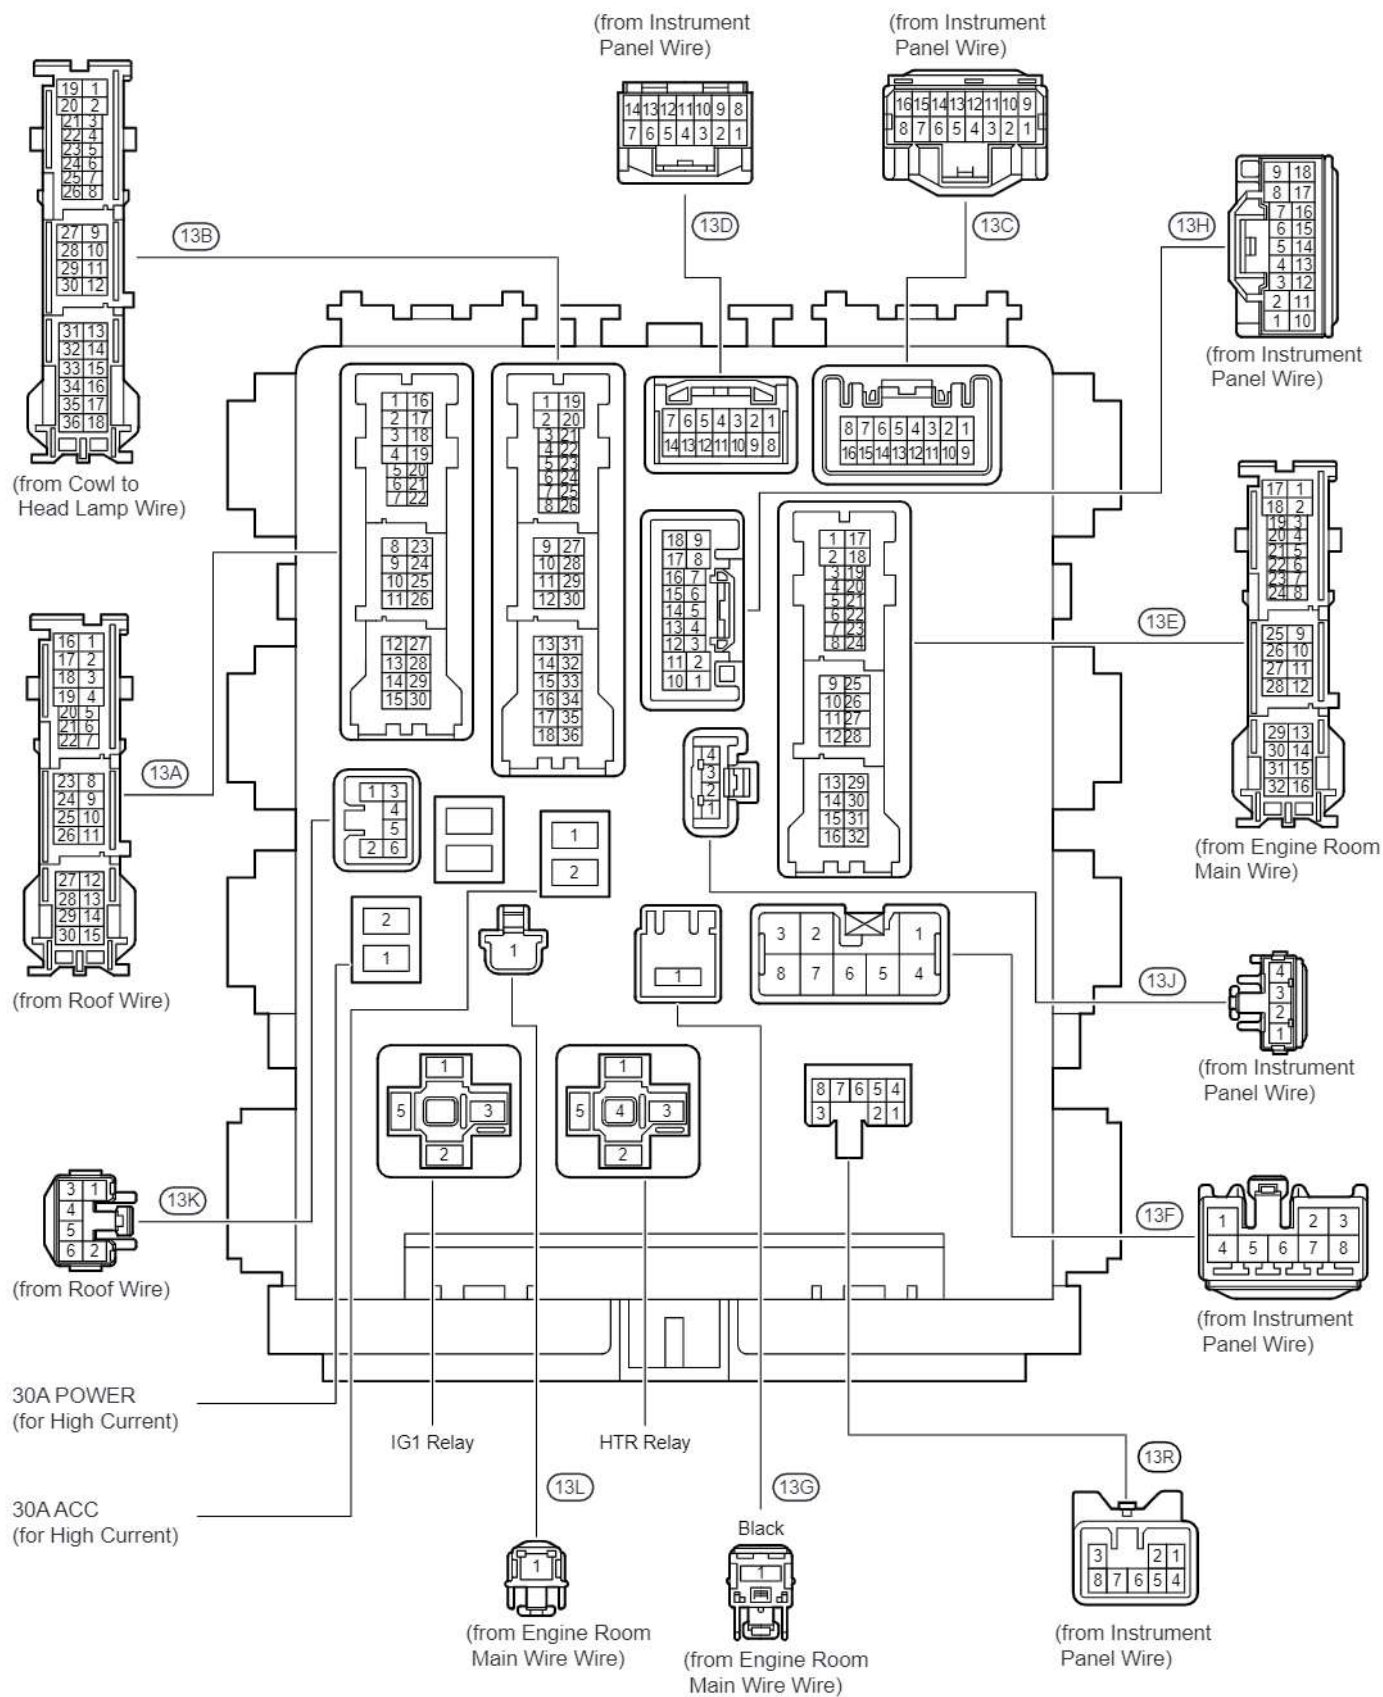


HIACE (EM26T2E)

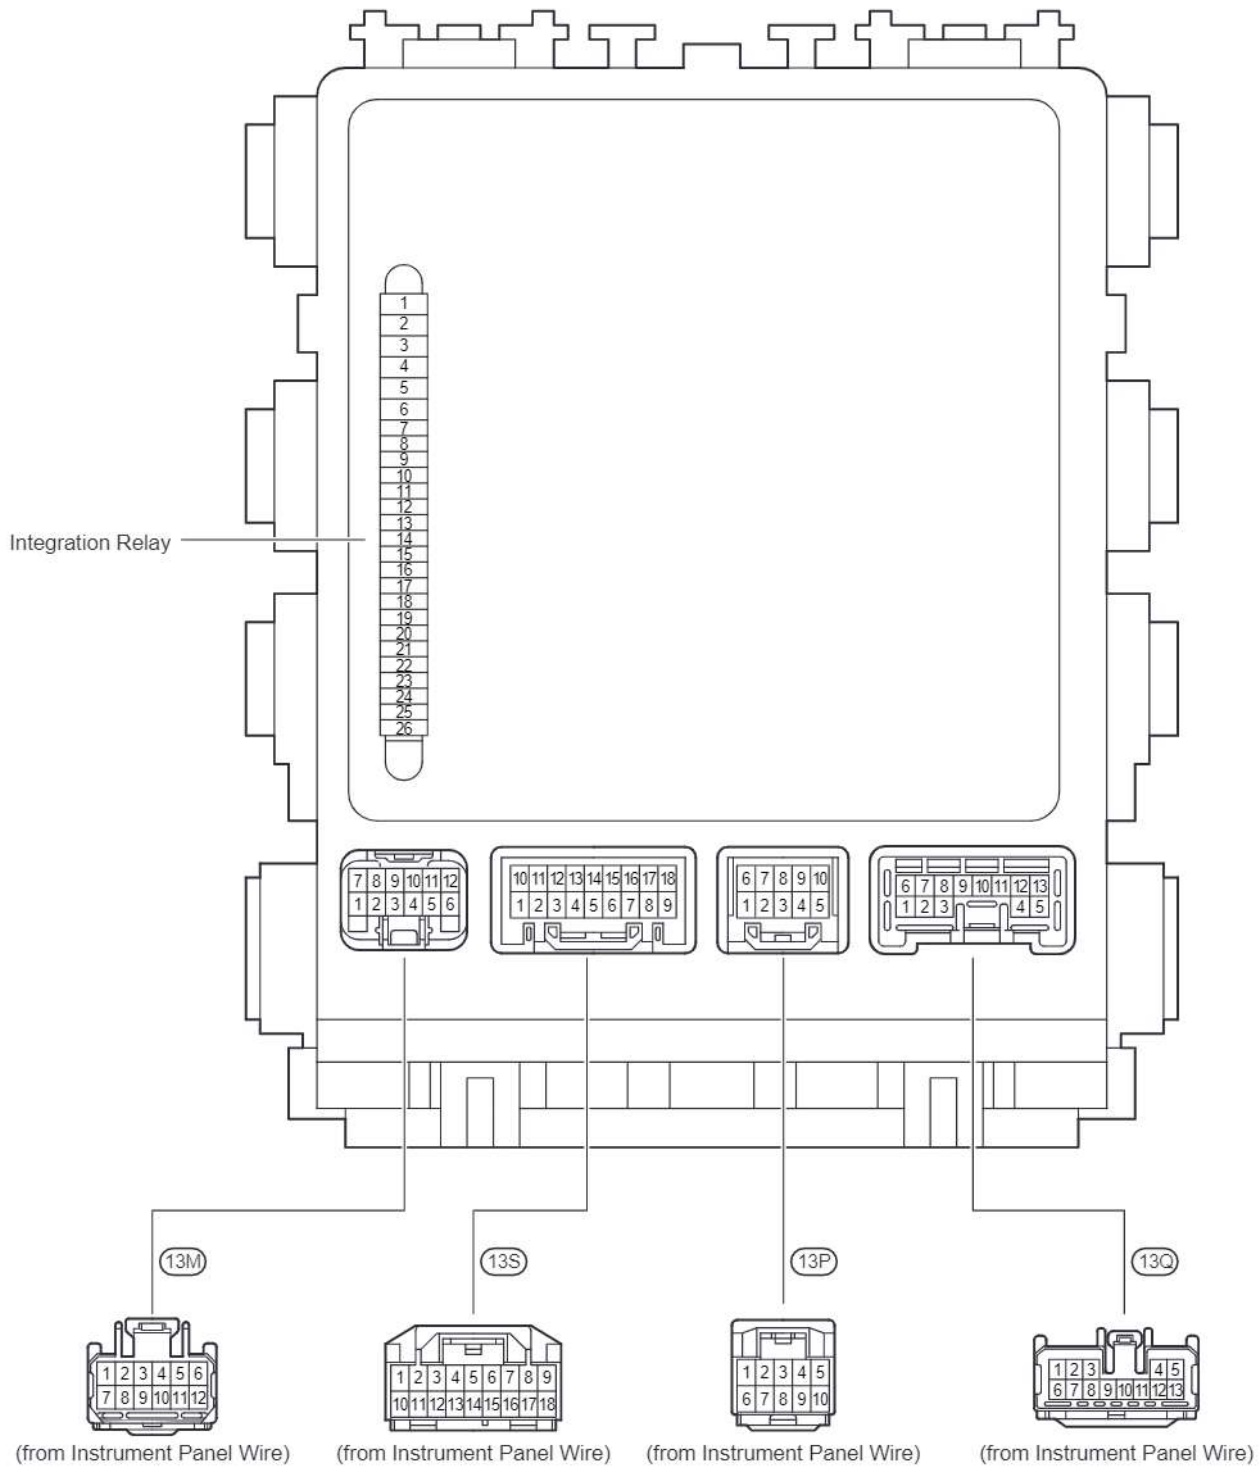

HIACE (EM26T2E)


F RELAY LOCATIONS

 : Instrument Panel J/B	Left Side of Instrument Panel (See Page 23)
--	---

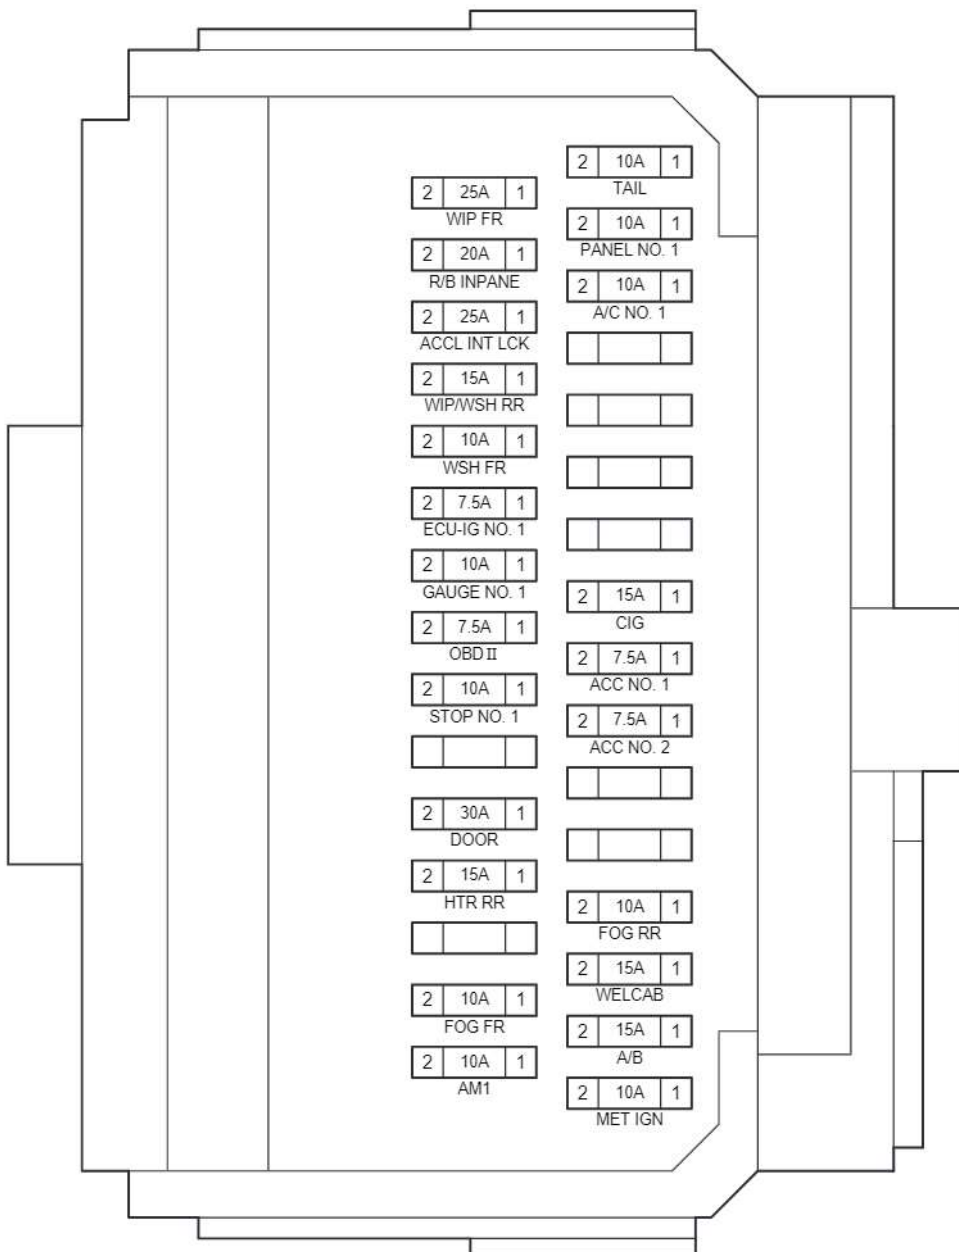


F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

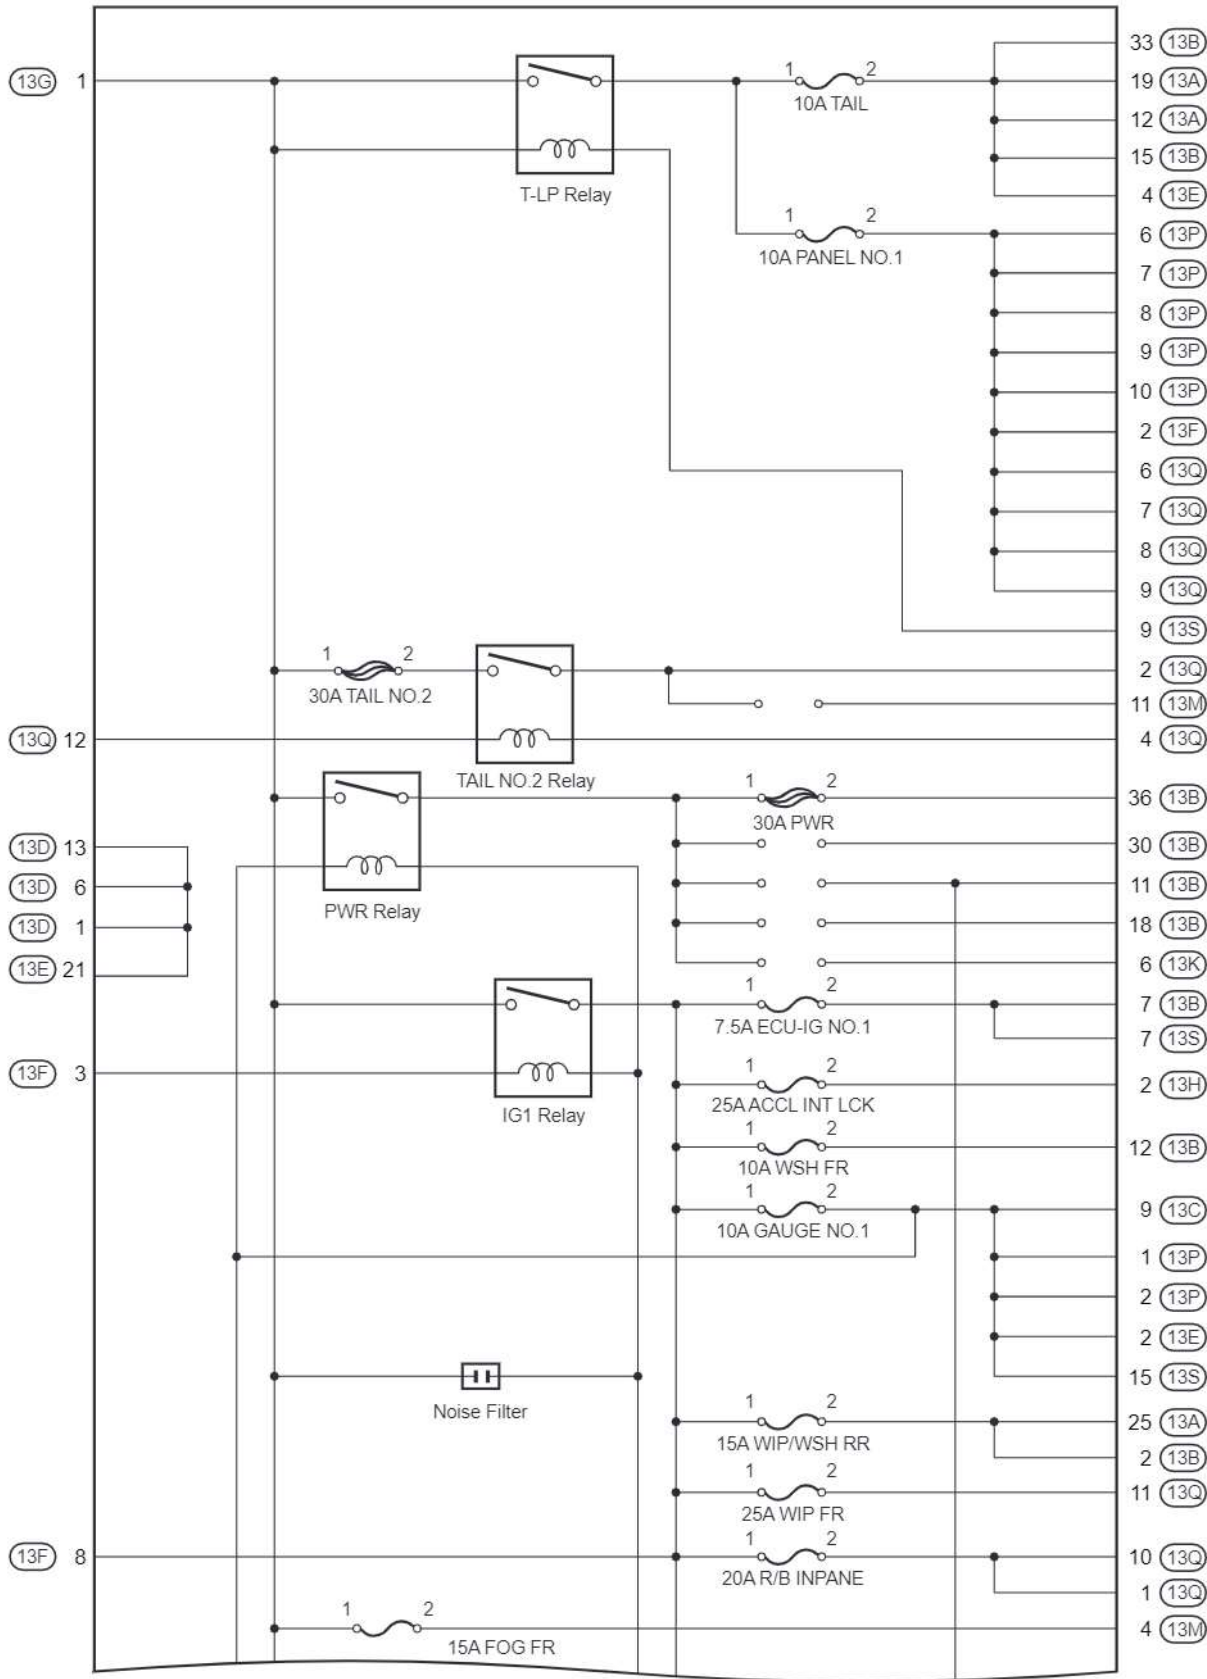

(Cont. Next Page)


[Instrument Panel J/B Inner Circuit]

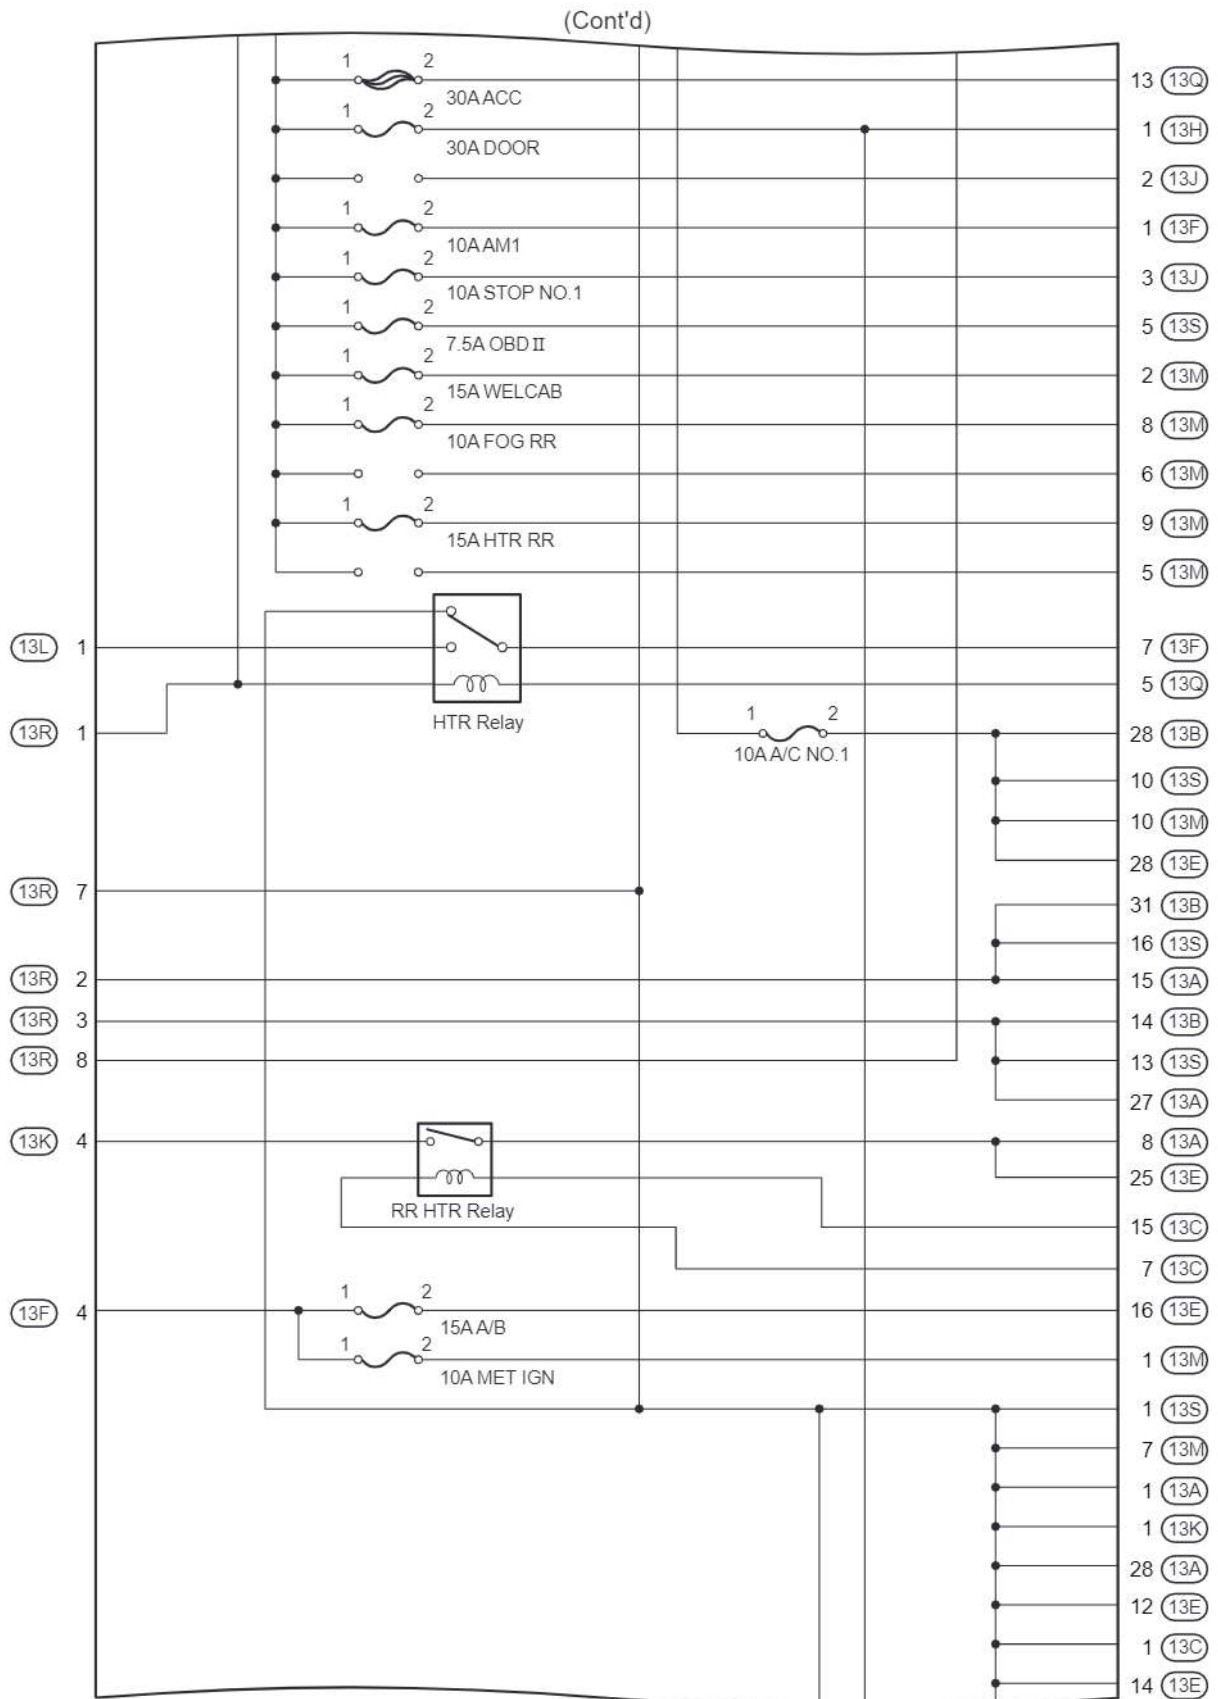

(Cont. Next Page)

F RELAY LOCATIONS


[Instrument Panel J/B Inner Circuit]

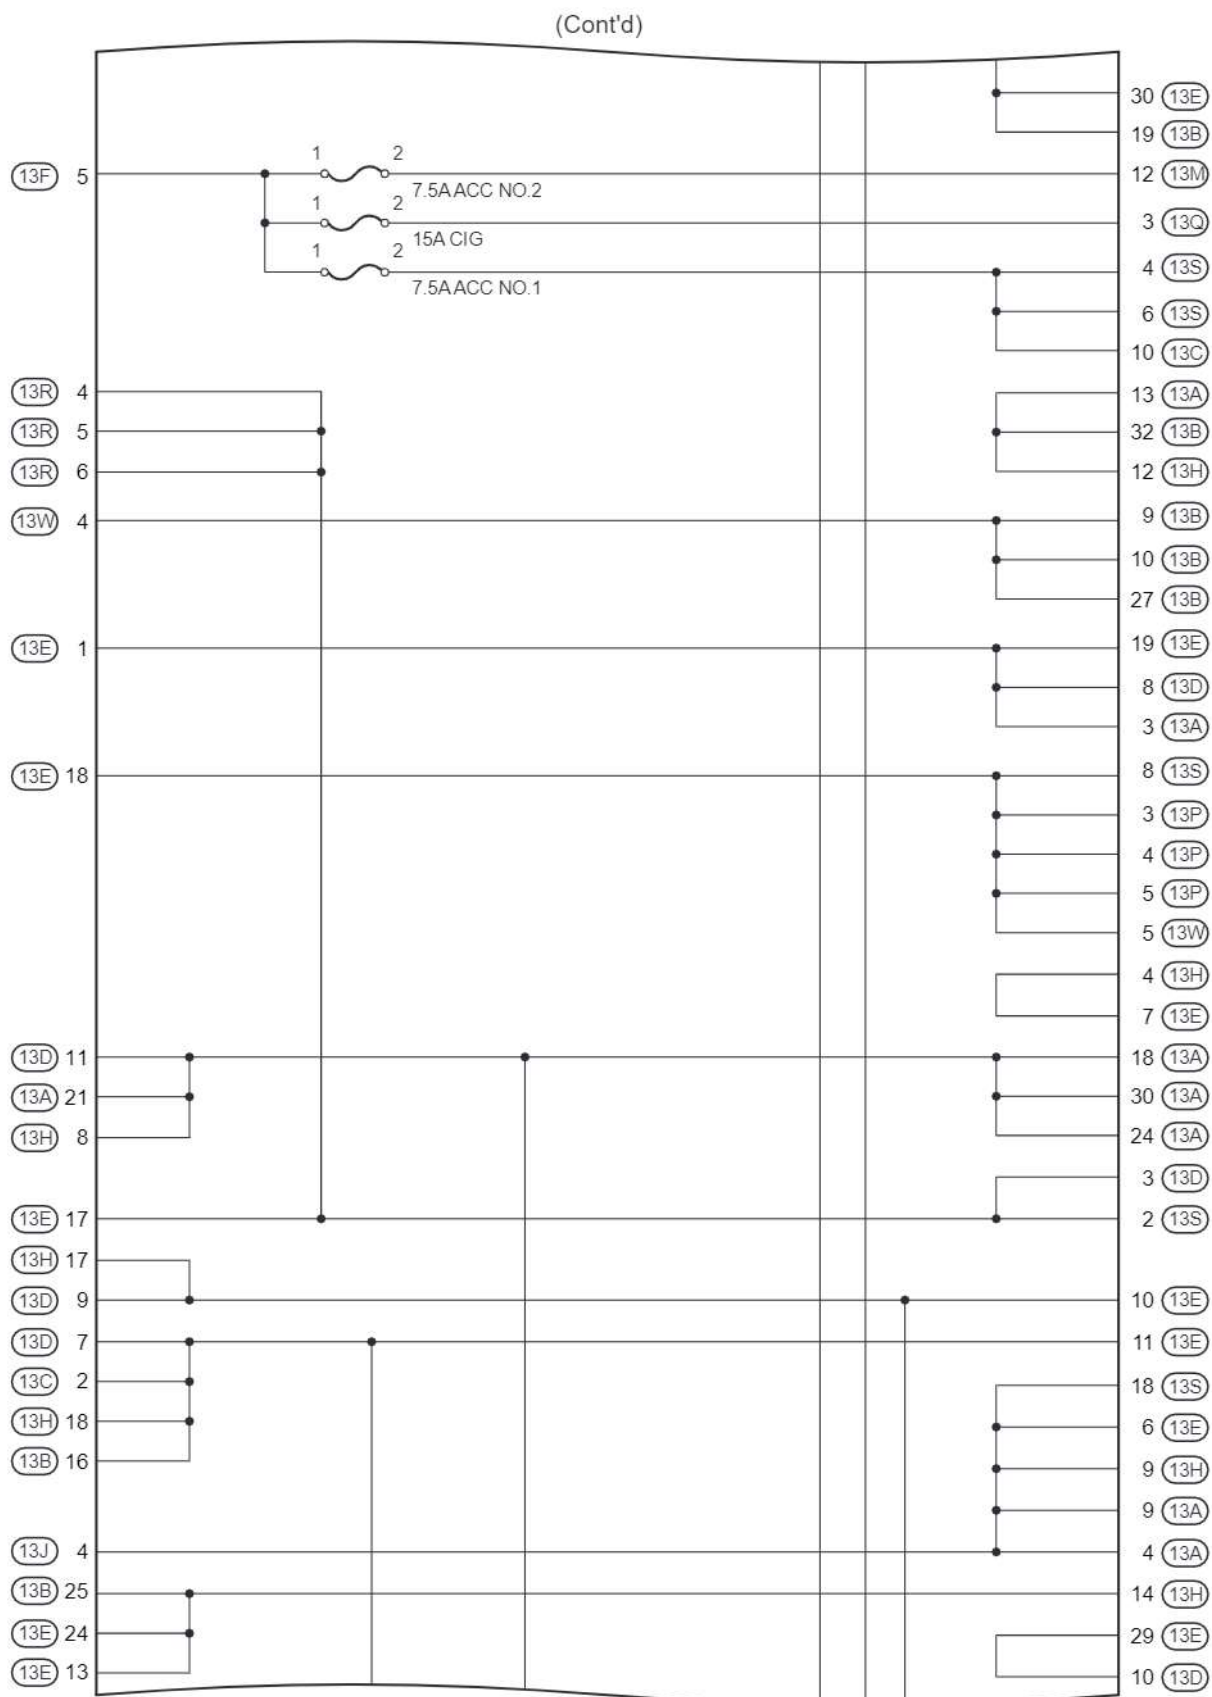

(Cont. Next Page)

[Instrument Panel J/B Inner Circuit]

(Cont'd)

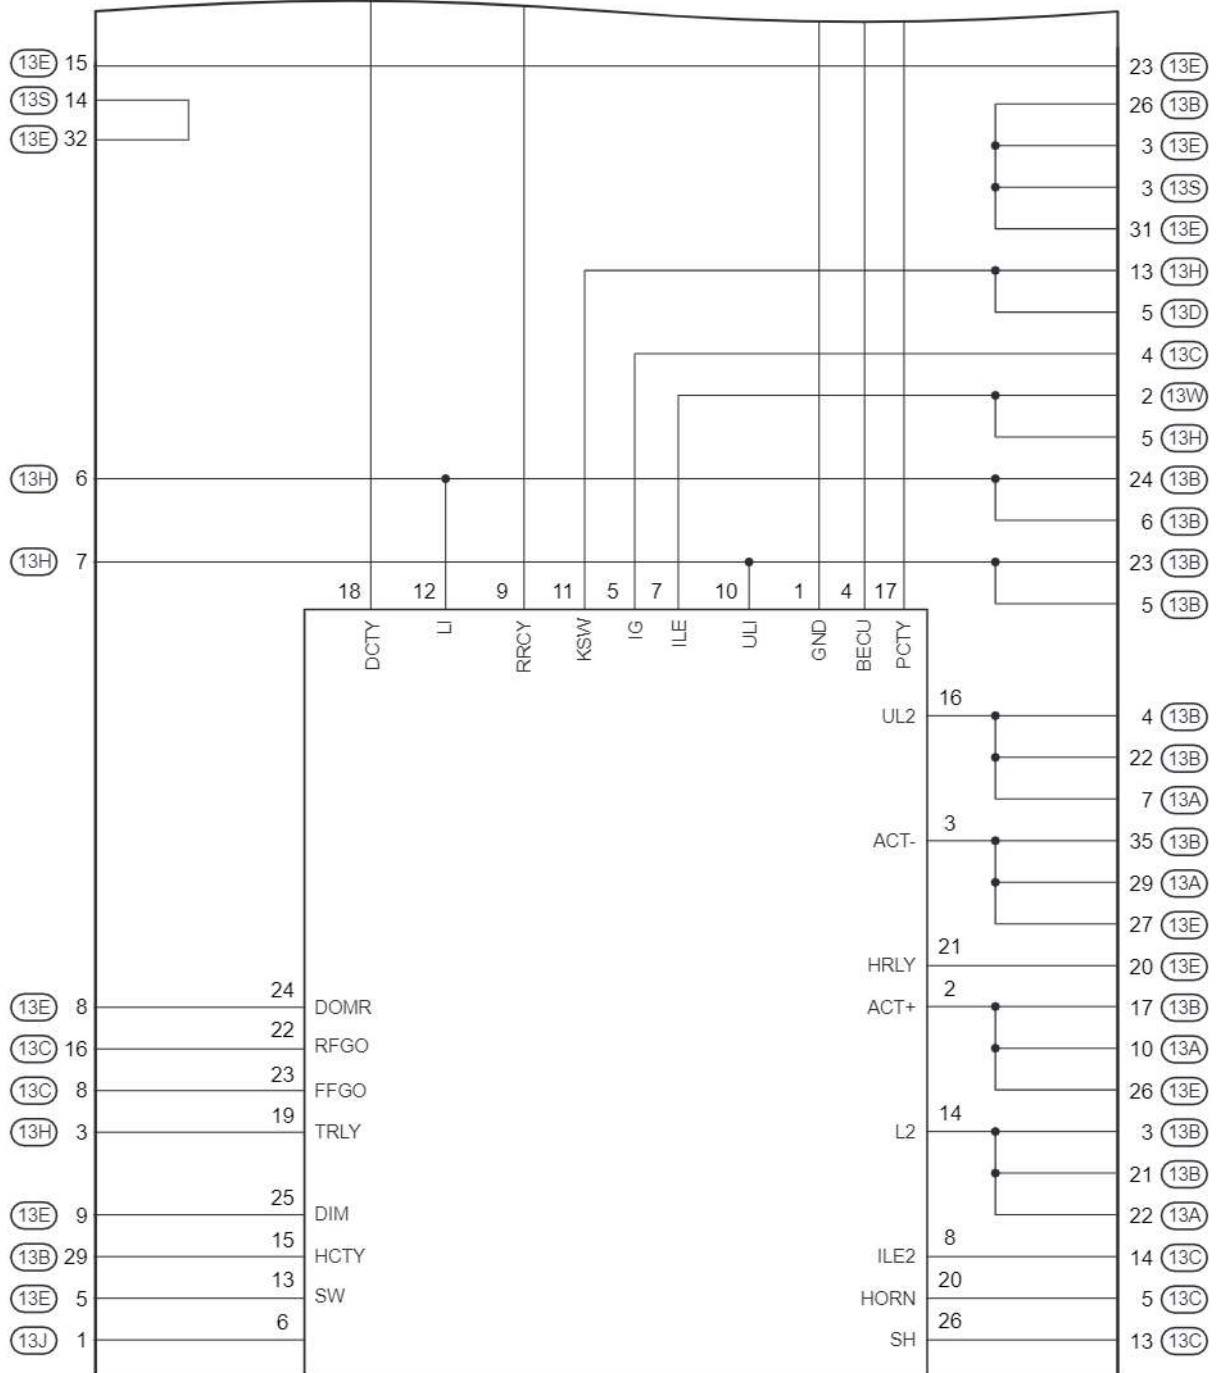

F RELAY LOCATIONS

 : Instrument Panel R/B


 : Instrument Panel J/B No.2

Under the Glove Box (See Page 23)

(LHD) (From Dec. 2013 Production)

- * 1:7.5A ECU IG NO.2
- * 2:10A GAUGE NO.2
- * 3:7.5A STOP NO.2
- * 4:7.5A A/C NO.2
- * 5:7.5A ST
- * 6:10A H-LP LH-HI
(Halogen Headlight)
- * 7:10A H-LP RH-HI
(Halogen Headlight)
- * 8:10A H-LP LH-LO
(Halogen Headlight)
- * 9:10A H-LP RH-LO
(Halogen Headlight)

- * 10:10A H-LP RH-LO
(LED Headlight)
- * 11:10A H-LP LH-LO
(LED Headlight)
- * 12:10A H-LP RH-HI
(LED Headlight)
- * 13:10A H-LP LH-HI
(LED Headlight)
- * 14:7.5A ECU-IG NO. 3

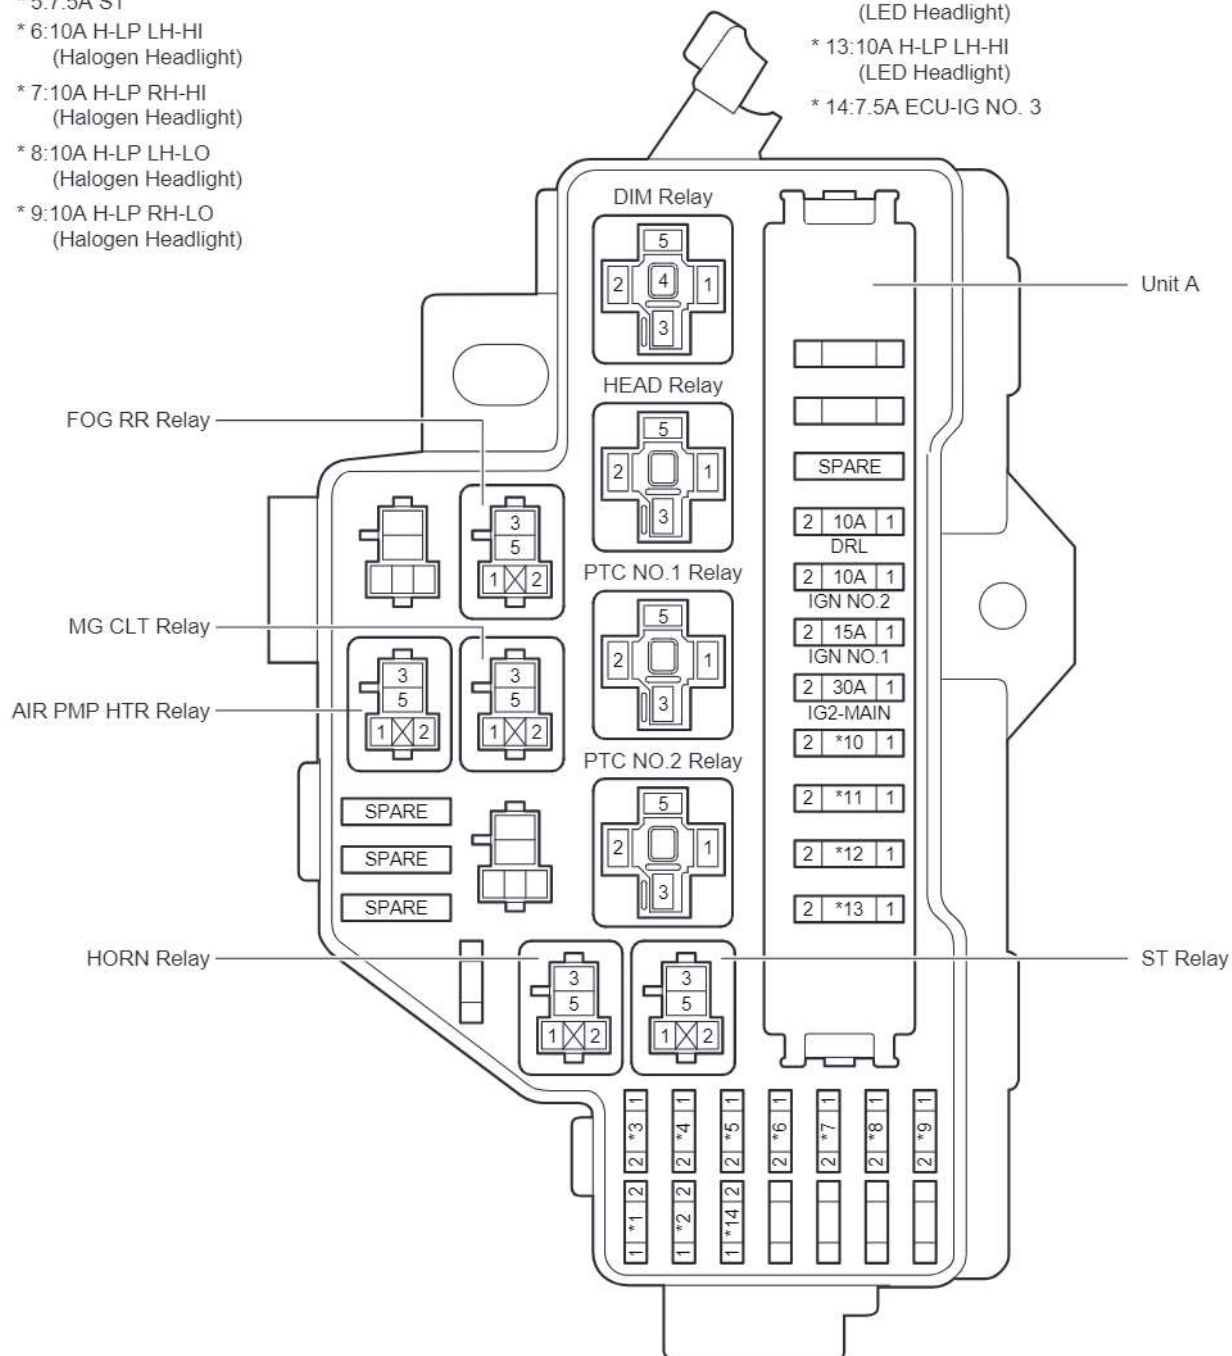

12 : Instrument Panel R/B

Instrument Panel J/B No.2

Under the Glove Box (See Page 23)

(RHD) (From Dec. 2013 Production)

* 1:10A H-LP RH-LO
(Halogen Headlight)

* 2:10A H-LP LH-LO
(Halogen Headlight)

* 3:10A H-LP RH-HI
(Halogen Headlight)

* 4:10A H-LP LH-HI
(Halogen Headlight)

* 5:10A GAUGE NO.2

* 6:7.5A ECU IG NO.2

* 7:7.5A ST

* 8:7.5A A/C NO.2

* 9:7.5A STOP NO.2

* 10:10A H-LP RH-LO
(LED Headlight)

* 11:10A H-LP LH-LO
(LED Headlight)

* 12:10A H-LP RH-HI
(LED Headlight)


* 13:10A H-LP LH-HI
(LED Headlight)

* 14:PTC NO.2 Relay
(Except 1GD-FTV),
DCU Relay(1GD-FTV)

* 15:PTC NO.1 Relay
(Except 1GD-FTV),
DEF Relay(1GD-FTV)

* 16:25A DCU NO.2

* 17:15A DCU NO.1

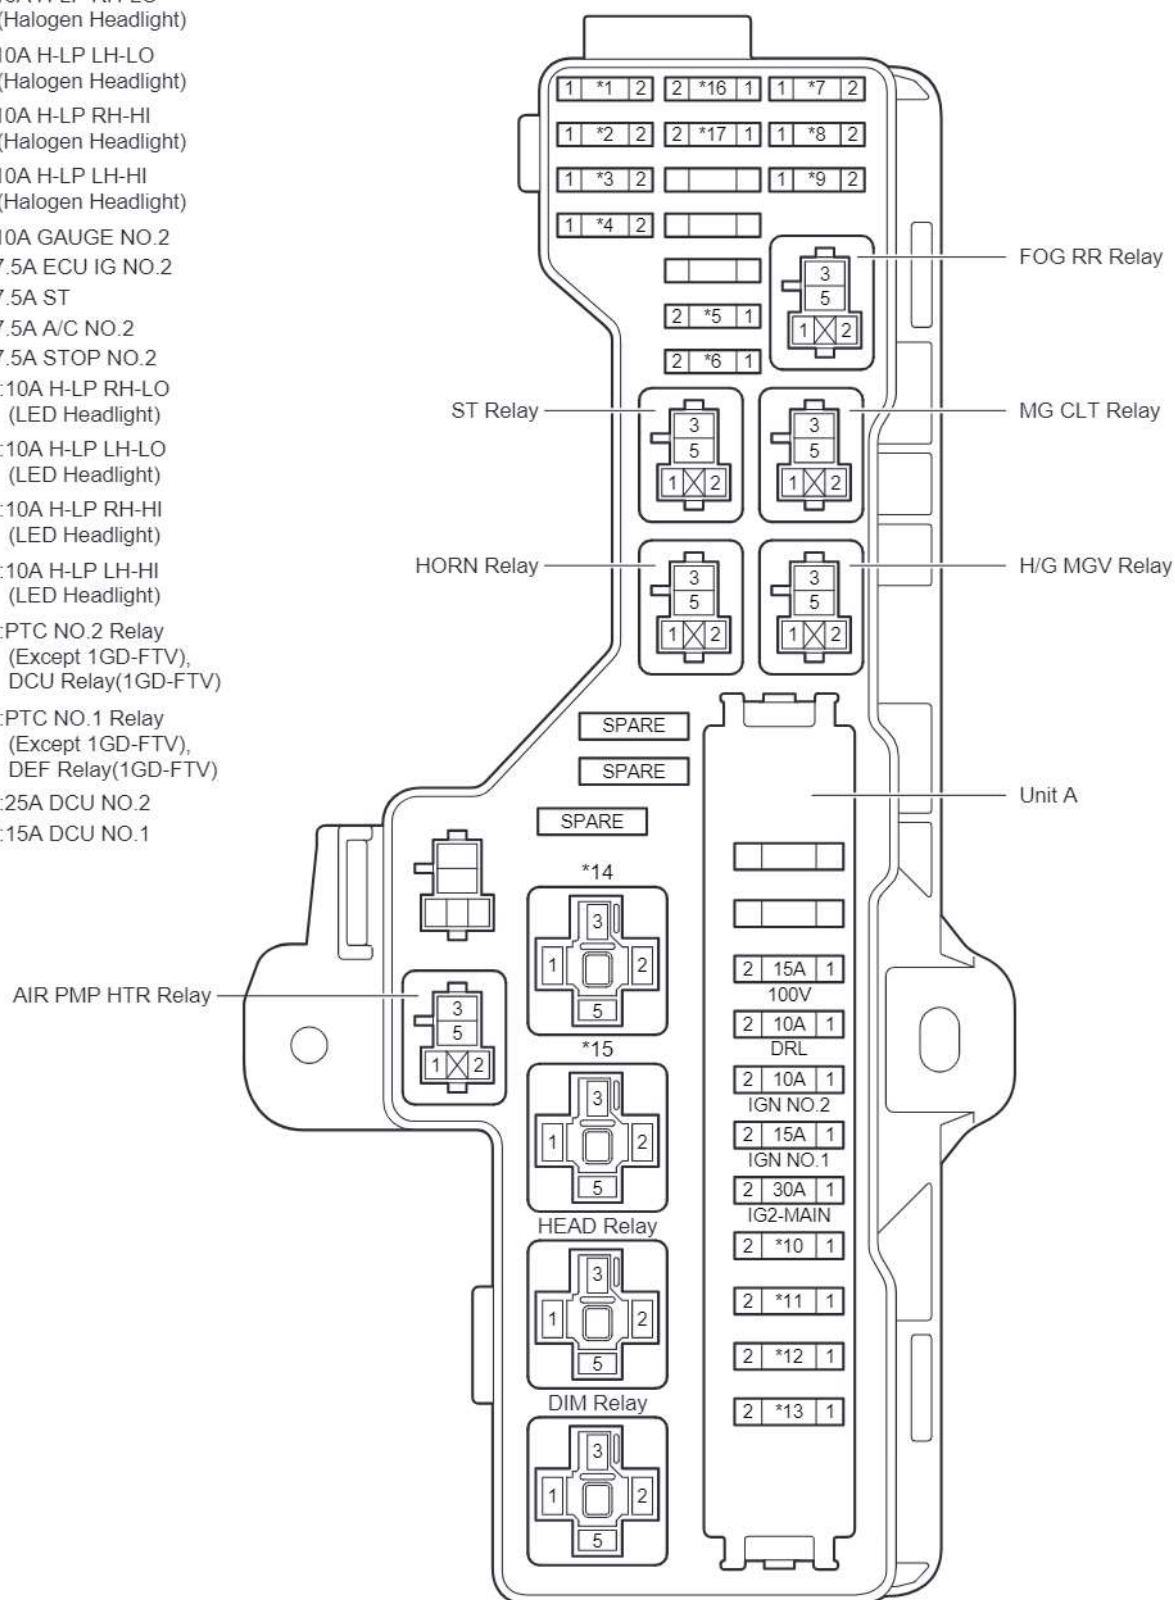


HIACE (EM26T4E)

F RELAY LOCATIONS


 : Instrument Panel R/B	Under the Glove Box (See Page 23)
 : Instrument Panel J/B No.2	

(From Dec. 2013 Production)

Unit A

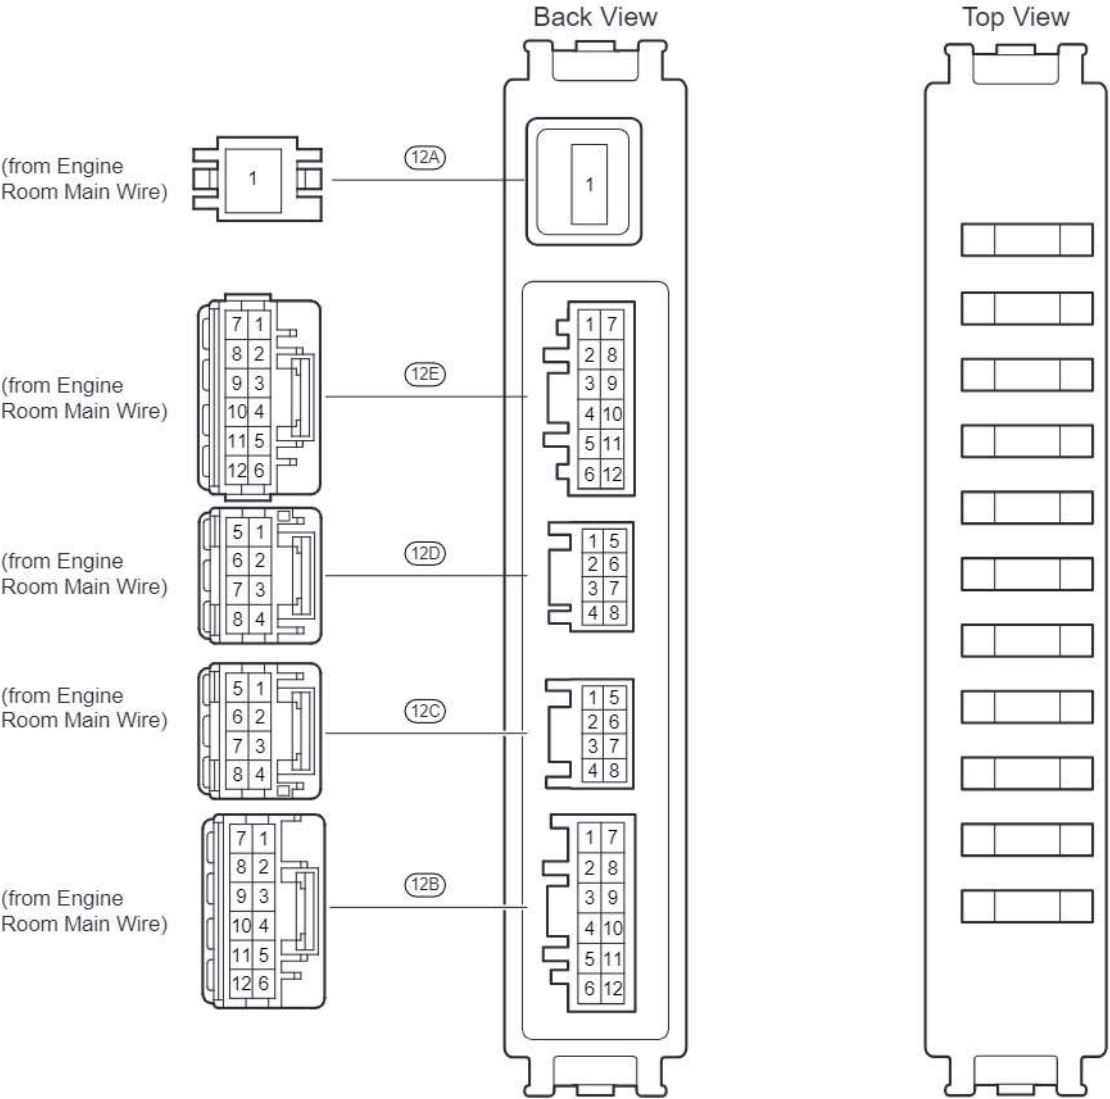


[Instrument Panel R/B and Instrument Panel J/B No.2 Inner Circuit]
(From Dec. 2013 Production)

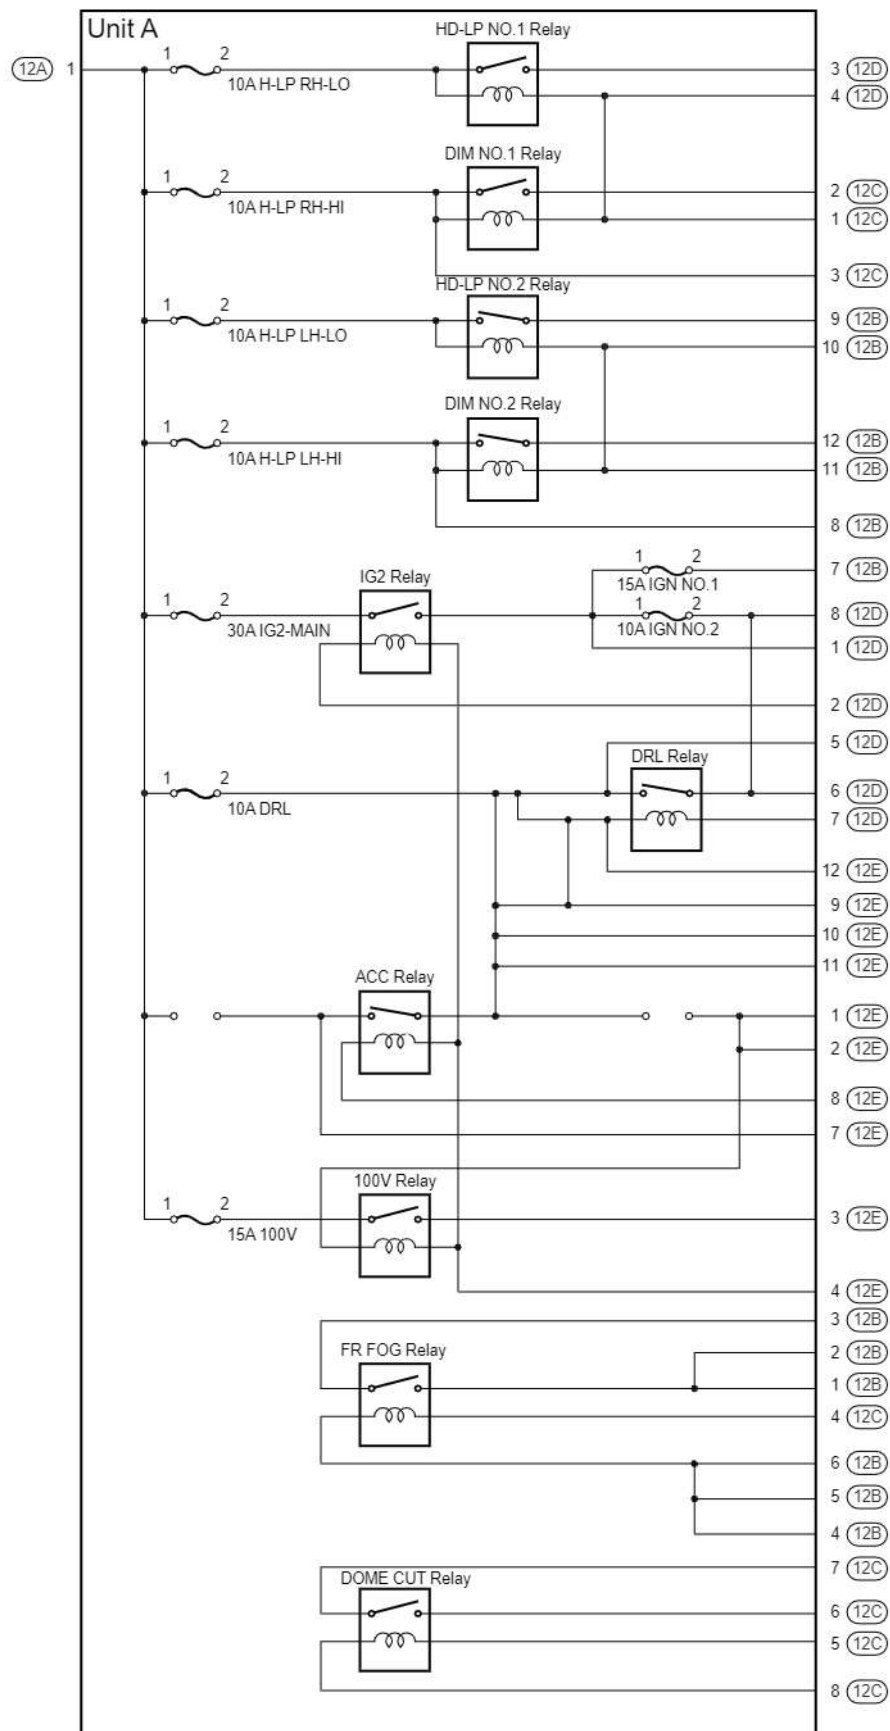


F RELAY LOCATIONS

 : Junction Connector (CAN) | Instrument Panel J/B RH Side (See Page 23)
(From Dec. 2013 Production until Jan. 2015 Production)

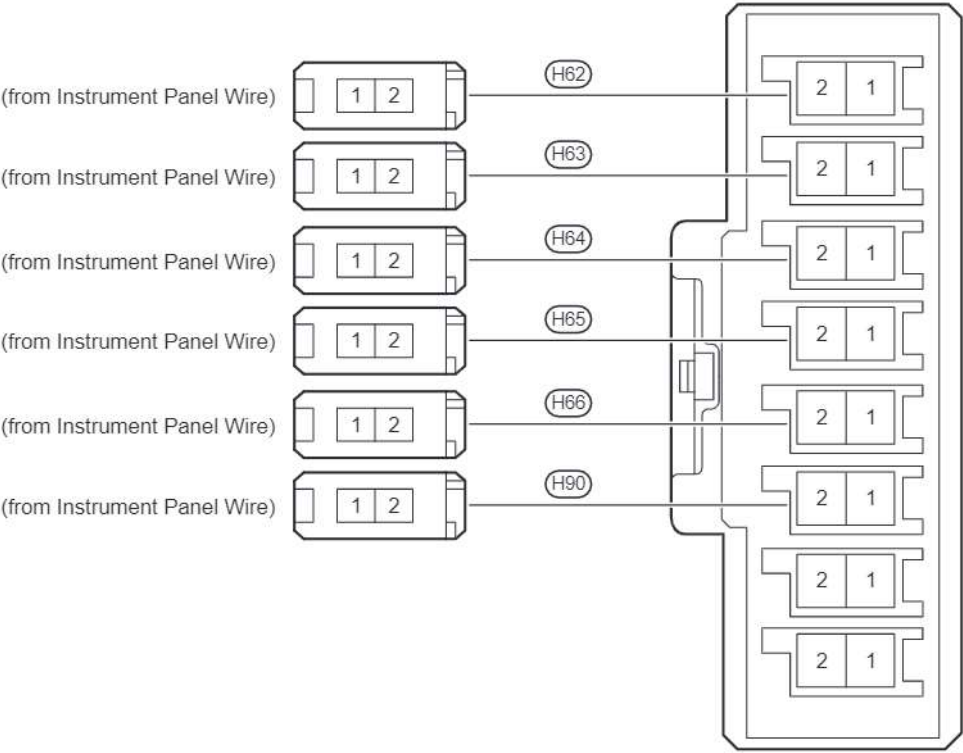

 : Junction Connector (CAN) | Instrument Panel J/B RH Side (See Page 23)
(From Dec. 2015 Production)

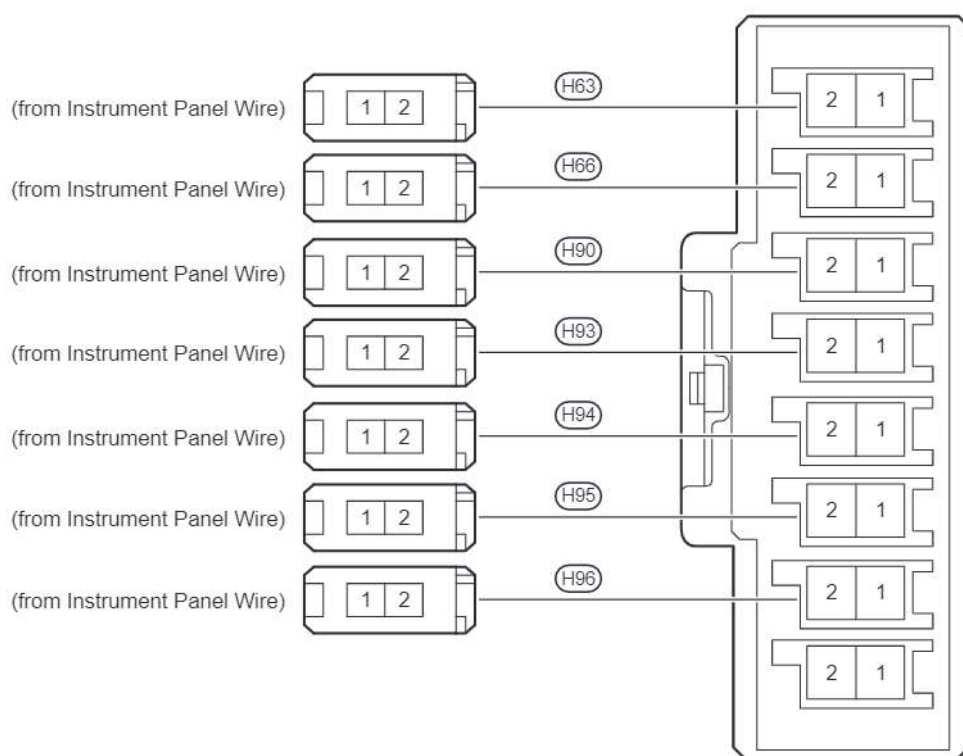


F RELAY LOCATIONS


 : Junction Connector (CAN2)

Instrument Panel J/B RH Side (See Page 23)

(From Jan. 2015 Production)

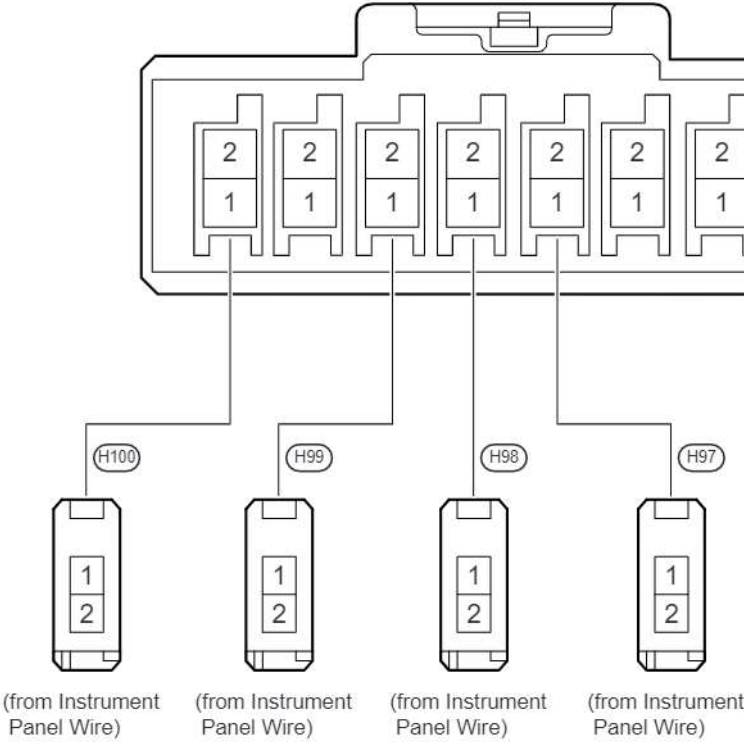


[Junction Connector (CAN2) Inner Circuit]
(From Jan. 2015 Production)

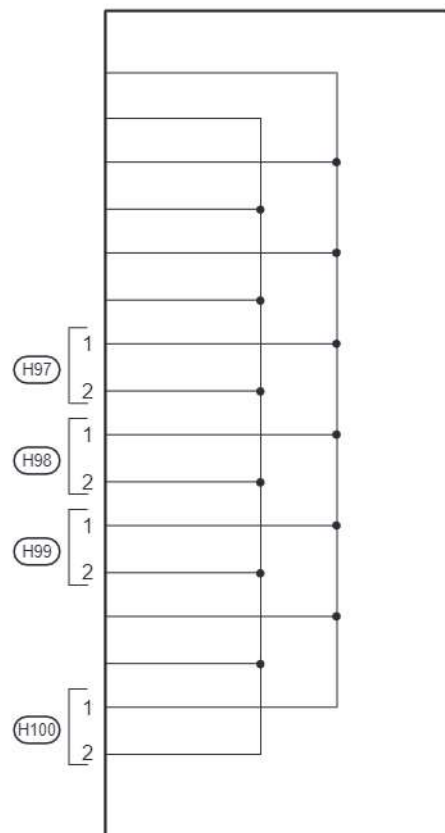

F RELAY LOCATIONS

[Junction Connector (CAN) Inner Circuit]
(From Dec. 2013 Production until Jan. 2015 Production)

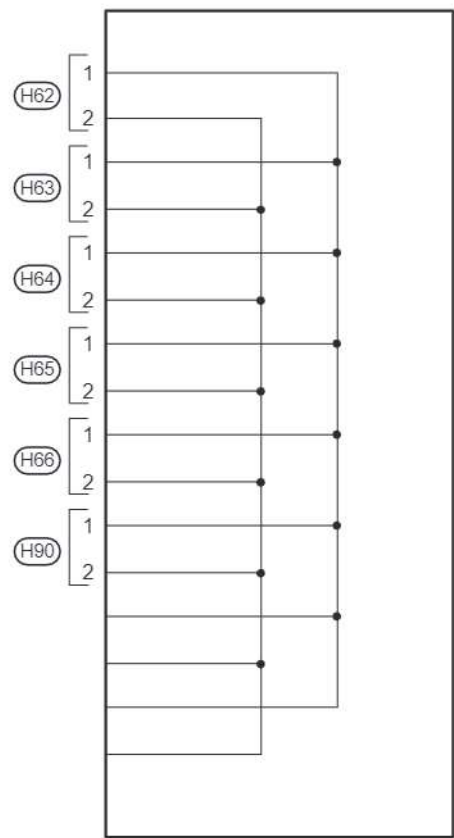

[Junction Connector (CAN) Inner Circuit]
(From Jan. 2015 Production)

