



[Body H/B]

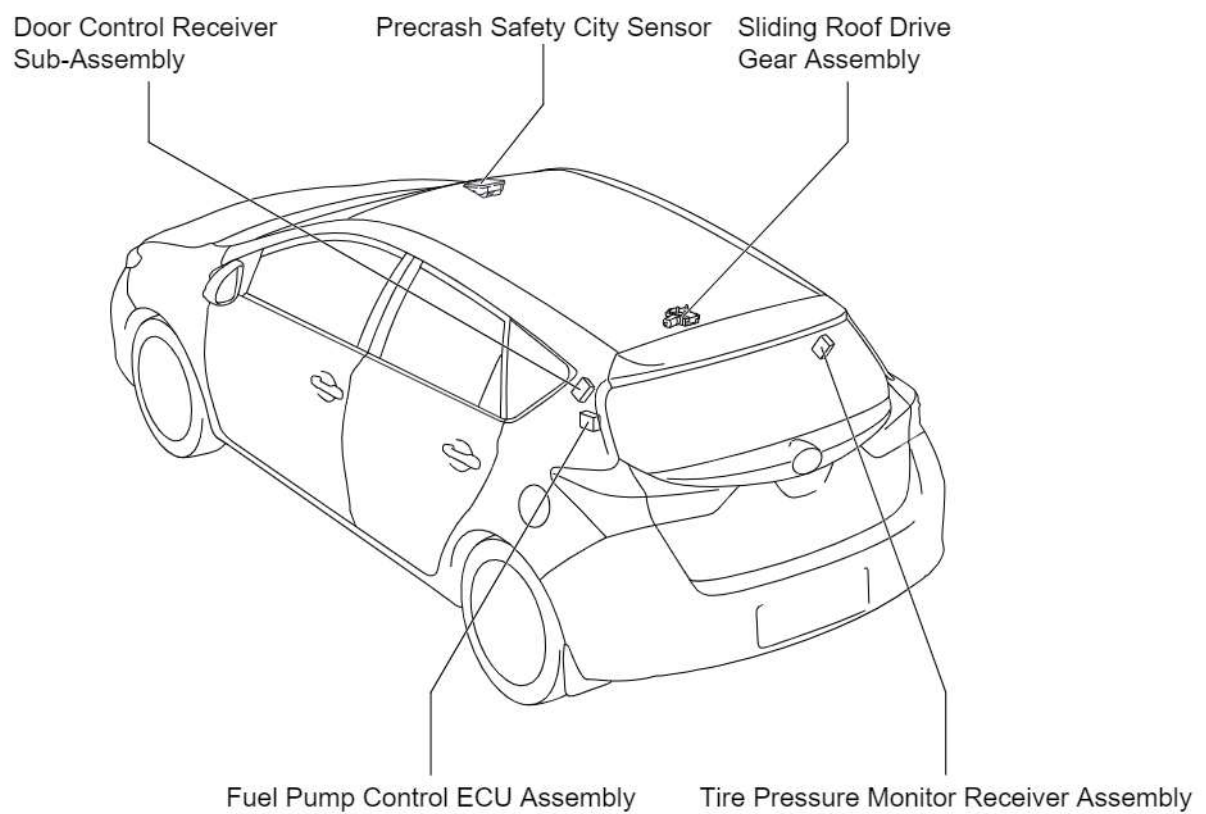


[Engine Compartment H/B, W/G]

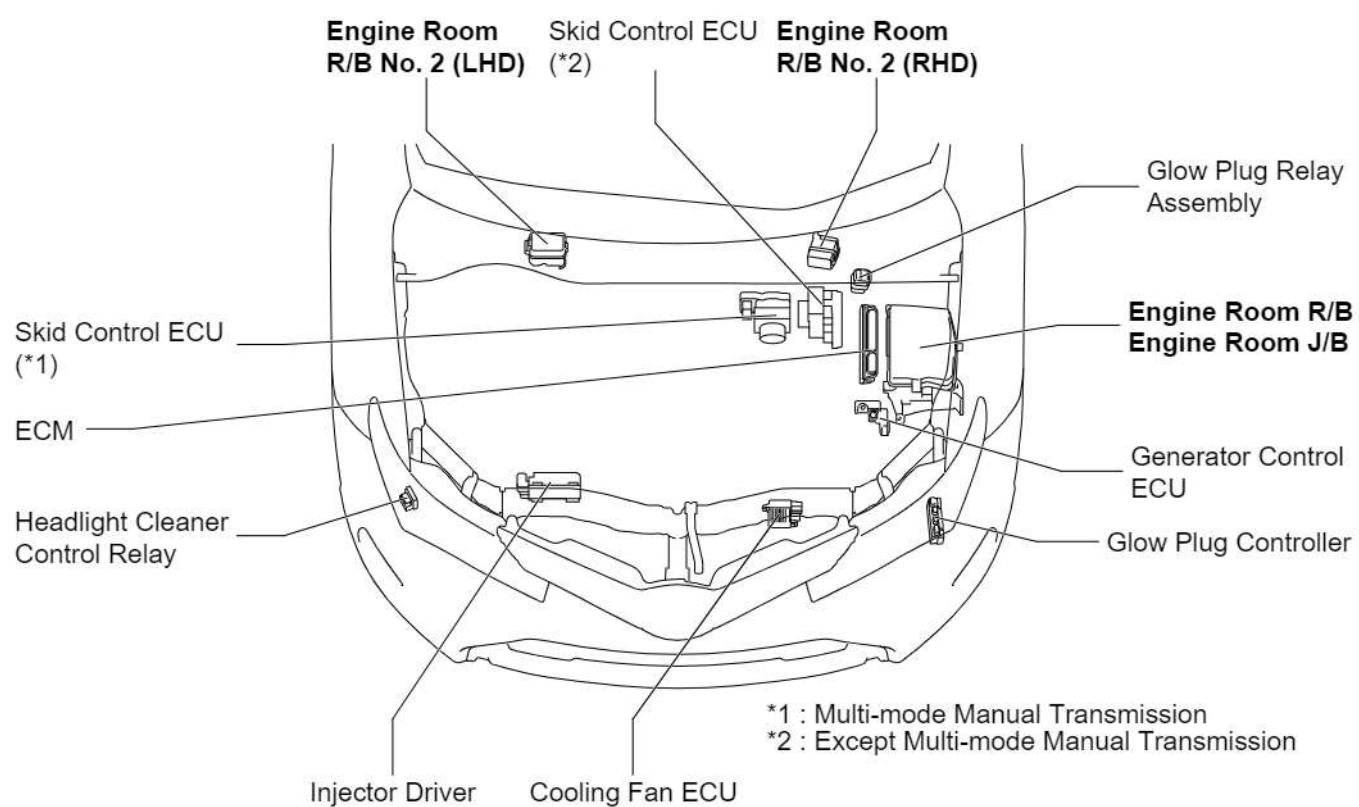

 : Engine Room R/B	Left Engine Compartment
 : Engine Room J/B	

(H/B, W/G) (Except 1WW)


- * 1: 15A H-LP RH-LO (HID Headlight)
10A H-LP RH-LO (Halogen Headlight, LED Headlight)
- * 2: 15A H-LP LH-LO (HID Headlight)
10A H-LP LH-LO (Halogen Headlight, LED Headlight)
- * 3: 40A BBC (w/ Stop&Start System)
50A AMT (Multi-mode Manual Transmission)
- * 4: 140A ALT (Diesel)
120A ALT (Gasoline)
- * 5: 20A EFI-MAIN NO.2 (1AD-FTV)
15A INJ/EFI-B (1ZR-FAE)
10A ECU-B NO.4 (1ND-TV)
20A INJ (8NR-FTS)
- * 6: C/OPN Relay (1NR-FE, 1ZR-FAE)
EDU Relay (1AD-FTV)
EFI MAIN NO.2 Relay (1ND-TV, 8NR-FTS)
- * 7: 10A ETCS (1ZR-FAE, 1NR-FE, 8NR-FTS)
20A EDU (1AD-FTV)
- * 8: 20A EFI-MAIN (1NR-FE)
25A EFI-MAIN (1ZR-FAE, 8NR-FTS)
30A EFI-MAIN (Diesel)
- * 9: 7.5A H-LP RH-HI
* 10: 7.5A H-LP LH-HI
- * 11: 20A EFI-NO.3 (1ND-FTV)
10A EFI-NO.3 (8NR-FTS)
- * 12: 10A EFI NO.1 (Except 8NR-FTS)
15A EFI NO.1 (8NR-FTS)
- * 13: 30A ST (Except 8NR-FTS)
10A TURN & HAZ (8NR-FTS)
- * 14: 10A TURN & HAZ (Except 8NR-FTS)
30A ST (8NR-FTS)
- * 15: 30A EFI-MAIN NO.2 (Except 8NR-FTS)
- * 16: 20A EFI-MAIN NO.2 (8NR-FTS)
- * 17: EFI MAIN NO.2 Relay (1AD-FTV)
TSS-C HTR Relay (1ND-TV)

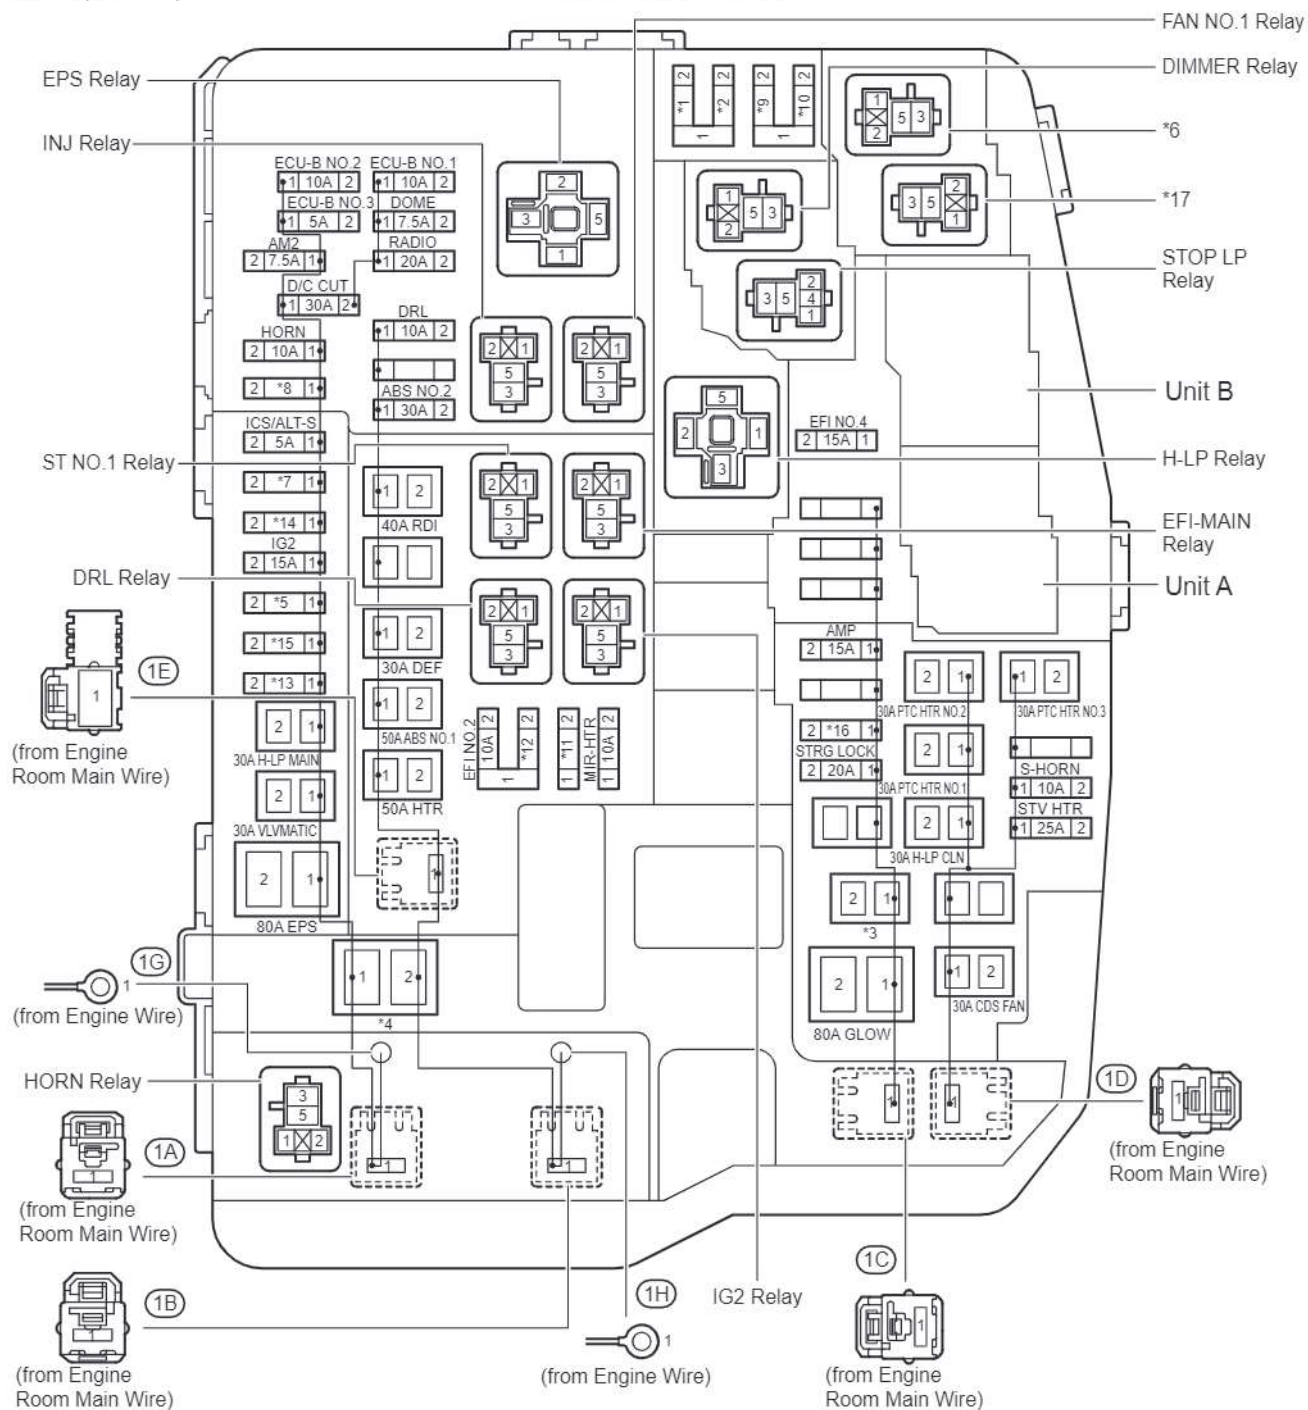

(H/B, W/G) (Except 1WW)

Unit A


AMT Relay

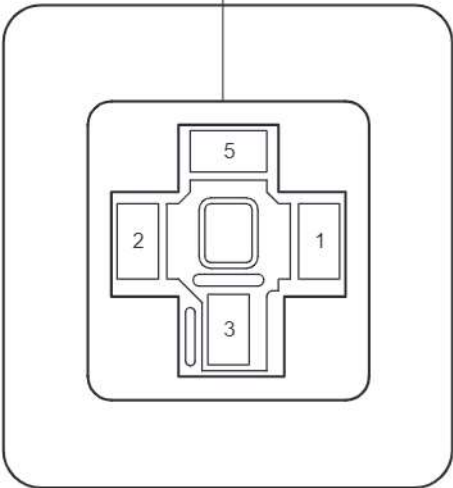

(Multi-mode Manual Transmission)


FAN NO.2 Relay

FAN NO.3 Relay

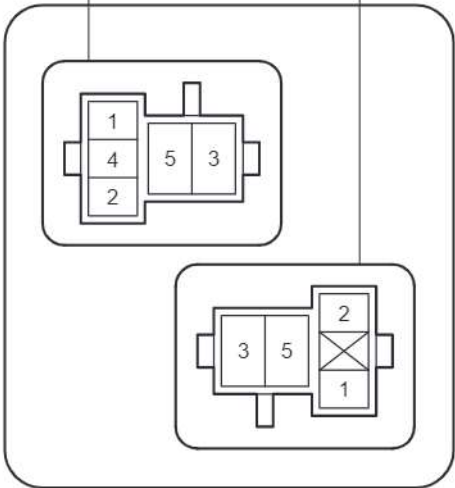


(1AD-FTV)

FAN MAIN Relay

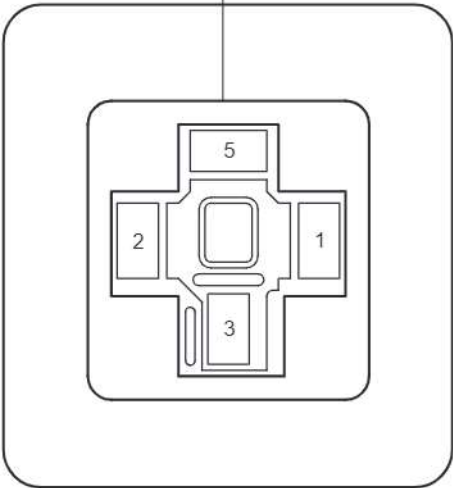


(8NR-FTS)

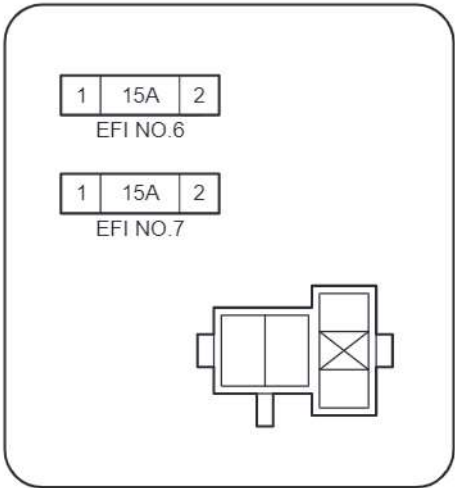


(1ND-TV(May 2015 or later))

(H/B, W/G) (Except 1WW)

Unit B

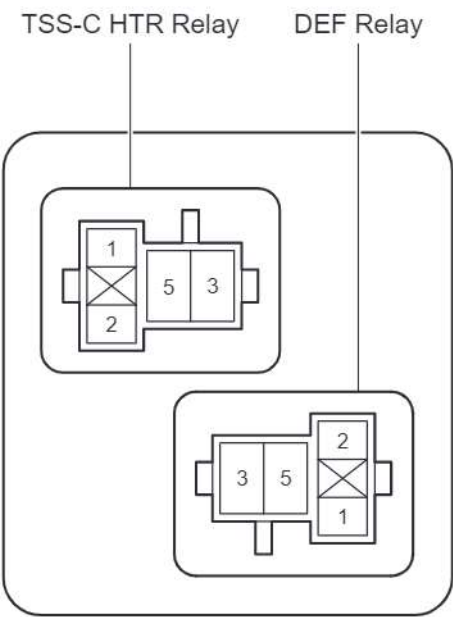

(Except 1ND-TV
(May 2015 or later))

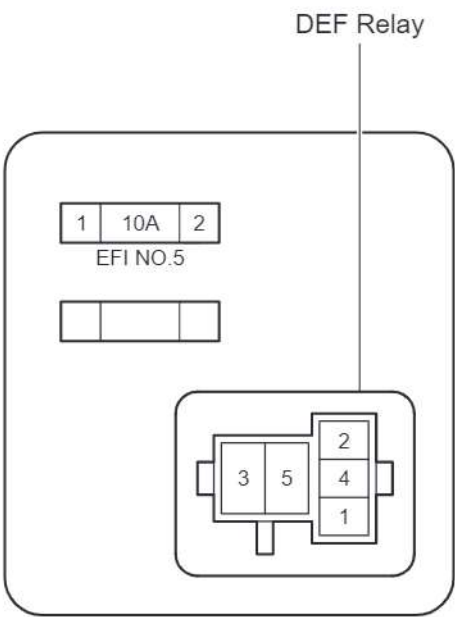


(1ND-TV(May 2015 or later))

① : Engine Room R/B	Left Engine Compartment
② : Engine Room J/B	

(H/B, W/G) (1WW)


- *1 : 50A ABS NO.1
- *2 : 30A CDS FAN
- *3 : 40A RDI FAN
- *4 : 30A H-LP CLN
- *5 : 120A TO IP J/B
- *6 : 50A P/I
- *7 : 50A FUEL HTR
- *8 : 50A EFI MAIN
- *9 : 80A EPS
- *10 : 80A GLOW

- *11 : DRL Relay (Prior November 2016)
FAN NO.1 Relay (November 2016 or later)

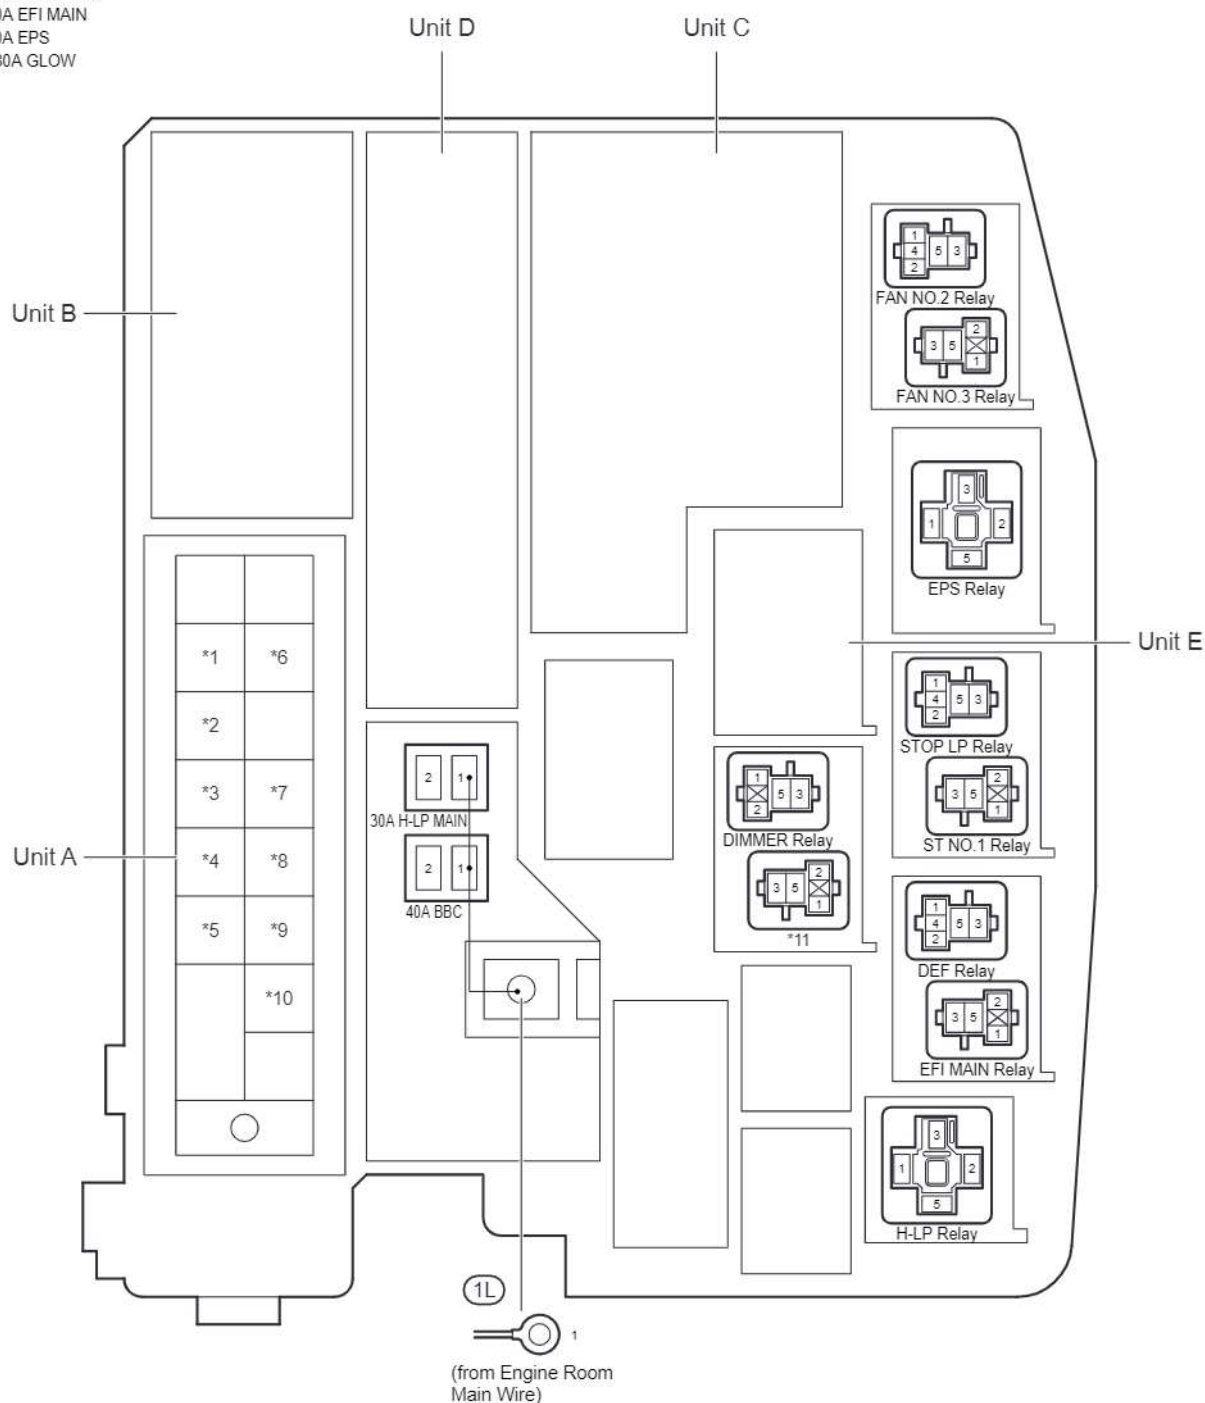


(H/B, W/G) (1WW)

Unit A

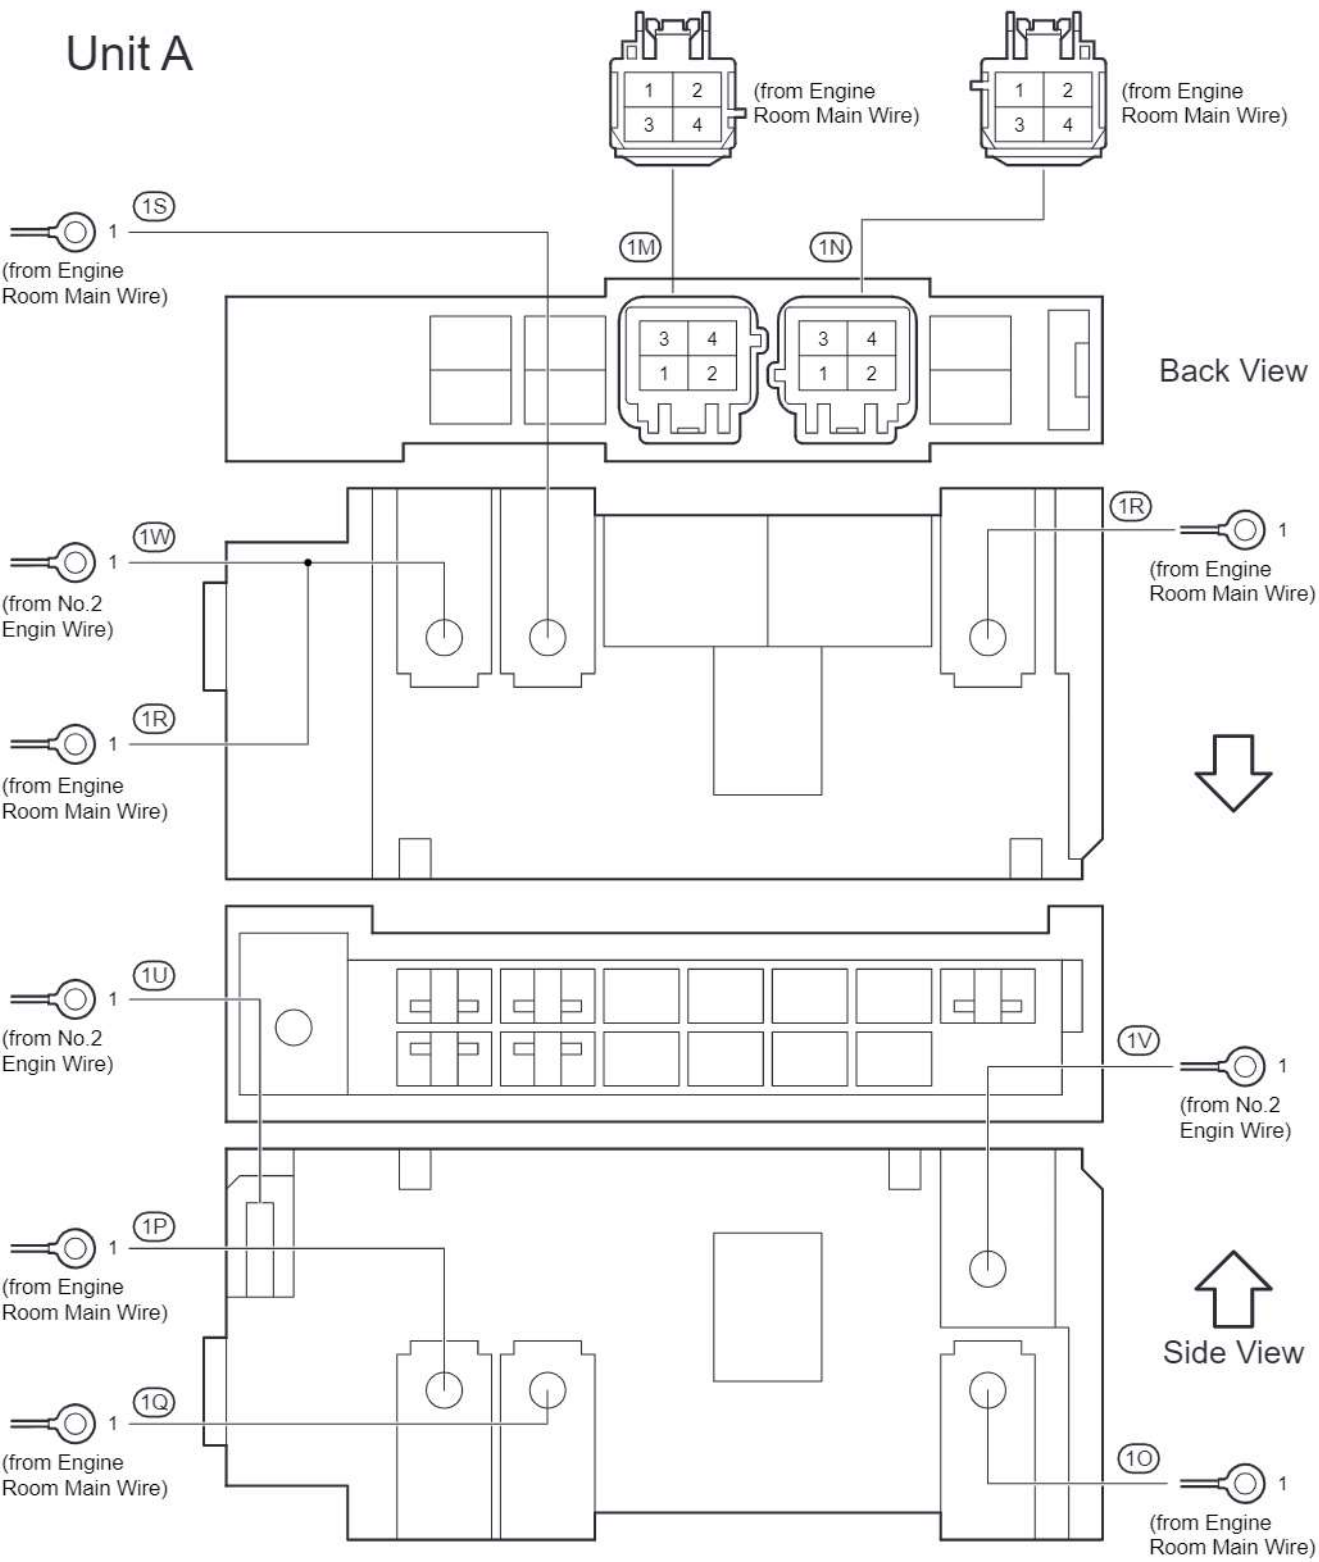


(H/B, W/G) (1WW)

Unit D

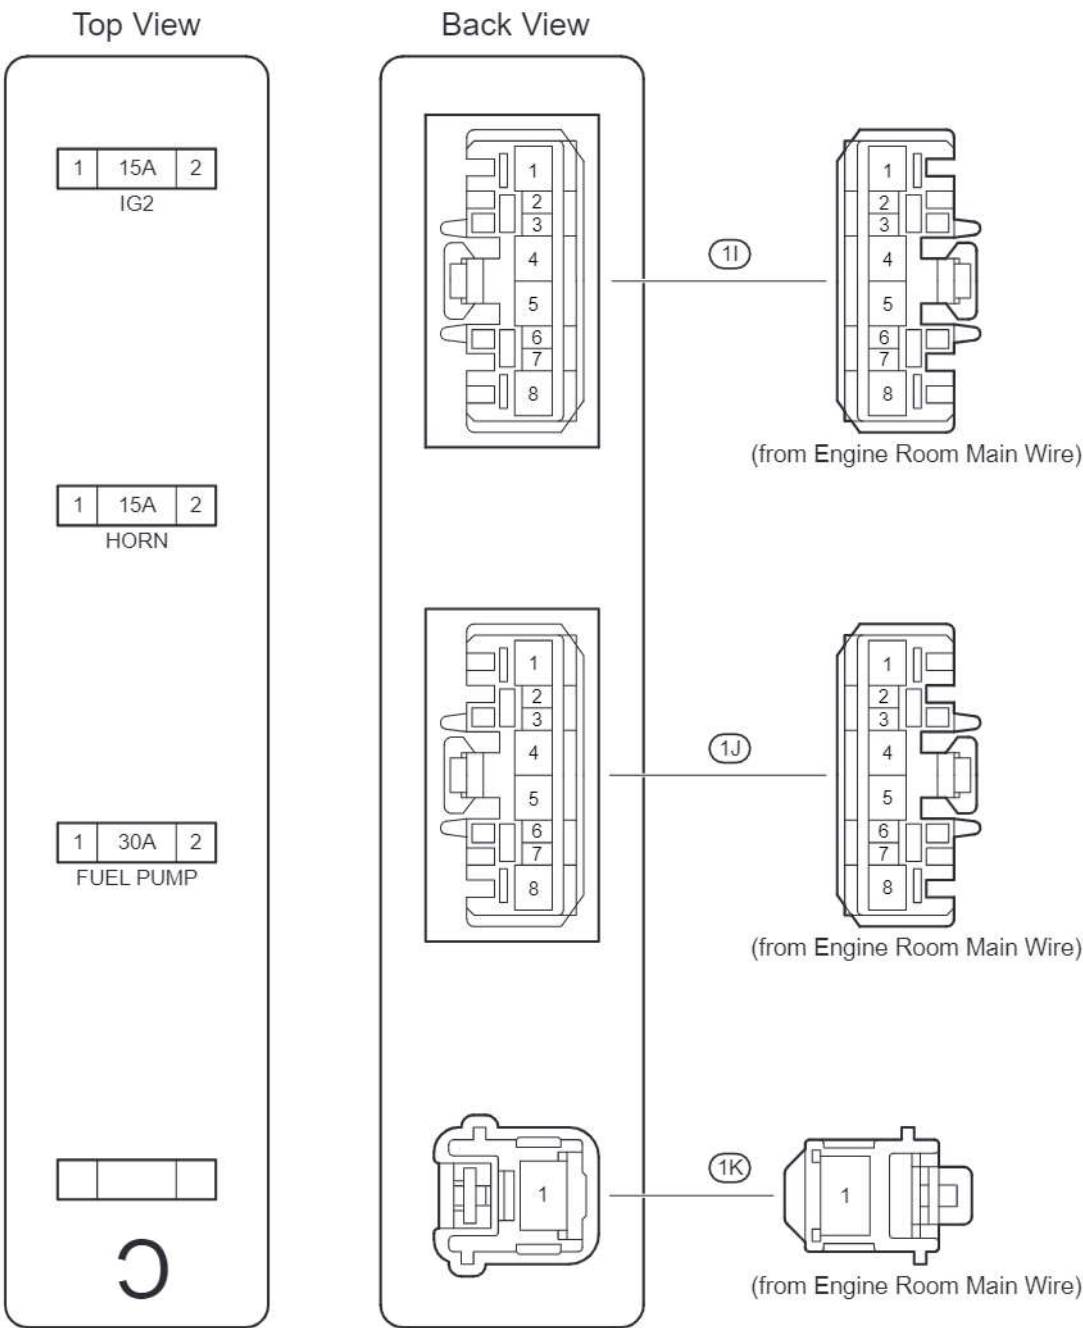


(H/B, W/G) (1WW)

Unit E

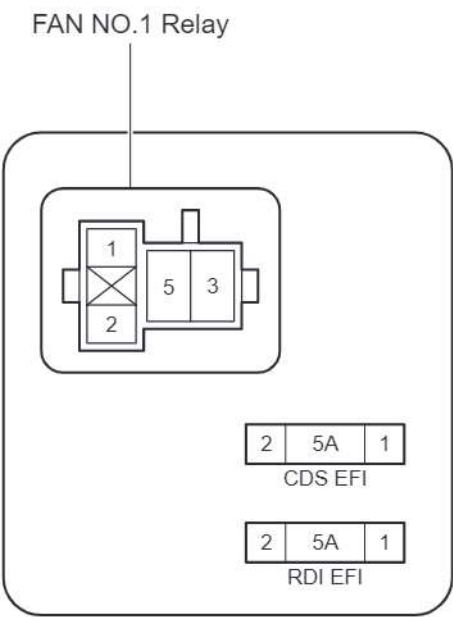

Prior November 2016

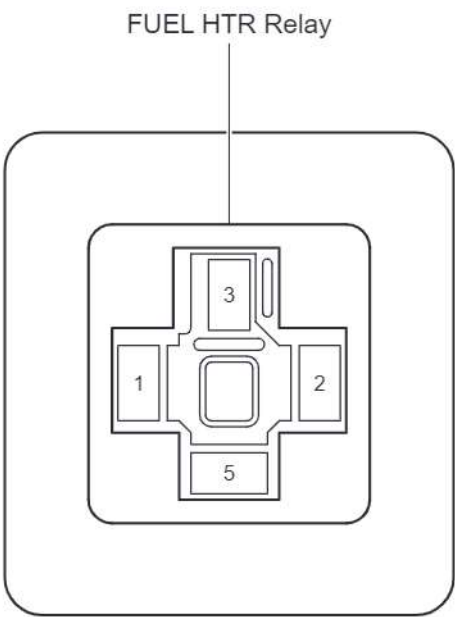


November 2016 or later

 : Engine Room R/B	Left Engine Compartment
 : Engine Room J/B	

(S/D)


- * 1: 10A H-LP RH-LO (Halogen Headlight)
- * 2: 10A H-LP LH-LO (Halogen Headlight)
- * 3: 140A ALT (Diesel)
120A ALT (Gasoline)
- * 4: 15A INJ/EFI-B (Gasoline)
10A ECU-B NO.4 (Diesel)
7.5A DCM/MAYDAY (1NR-FE April 2016 or later)
- * 5: 20A EFI-MAIN (1NR-FE)
25A EFI-MAIN (1ZR-FE, 1ZR-FAE, 2ZR-FE)
30A EFI-MAIN (Diesel)
- * 6: 10A H-LP RH-HI
- * 7: 10A H-LP LH-HI

- * 8: 25A STV HTR (1ND-TV)
20A DEICER (1ZR-FE, 1ZR-FAE, 2ZR-FE, 1NR-FE)
- * 9: 7.5A DCM/MAYDAY (1ZR-FE, 1ZR-FAE, 2ZR-FE)
10A EFI-MAIN NO.2 (1ND-TV)
- * 10: INJ Relay (Except 1ND-TV April 2016 or later)
EFI-MAIN NO.2 (1ND-TV April 2016 or later)
- * 11: STOP LP Relay (Prior November 2016)
TSS-C HTR Relay (November 2016 or later)

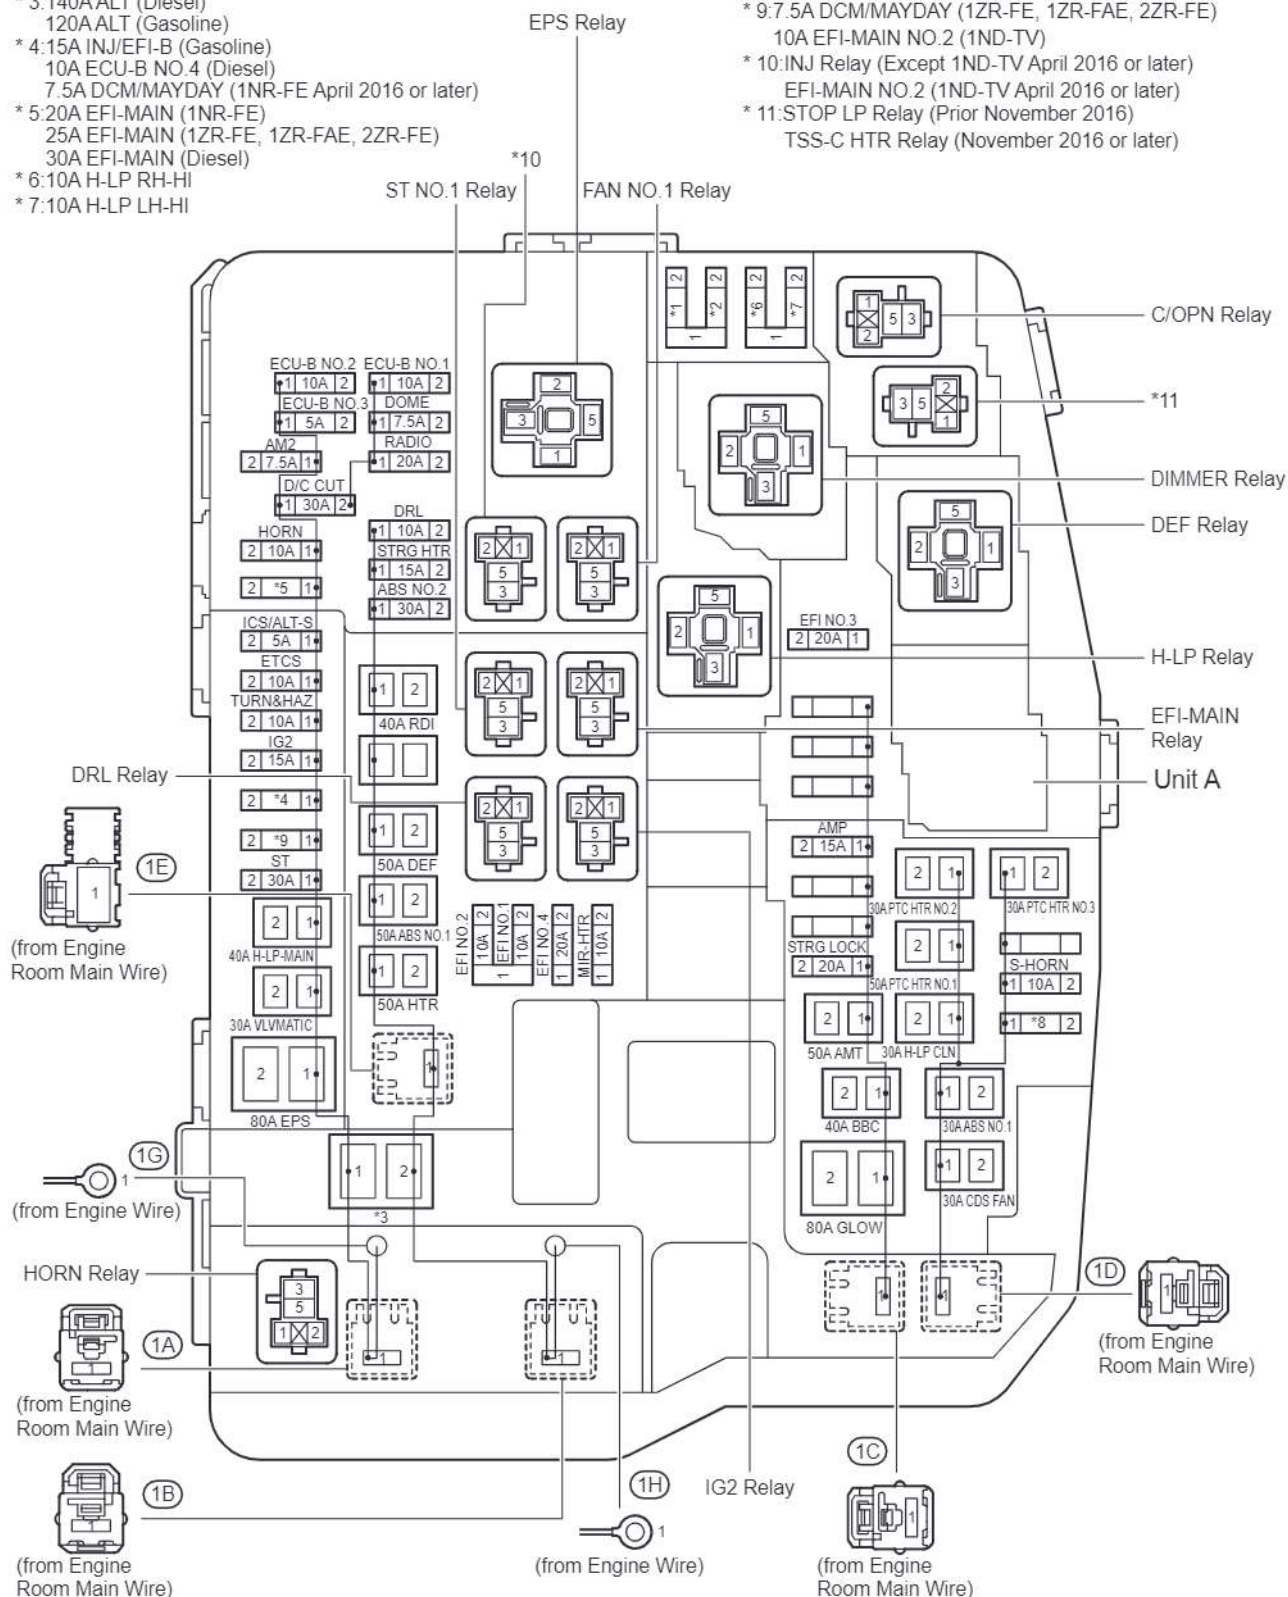


(S/D)

Unit A

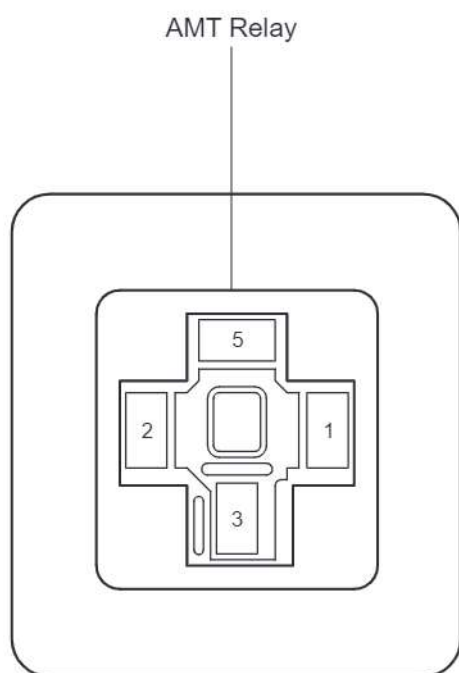


(Multi-mode Manual Transmission)

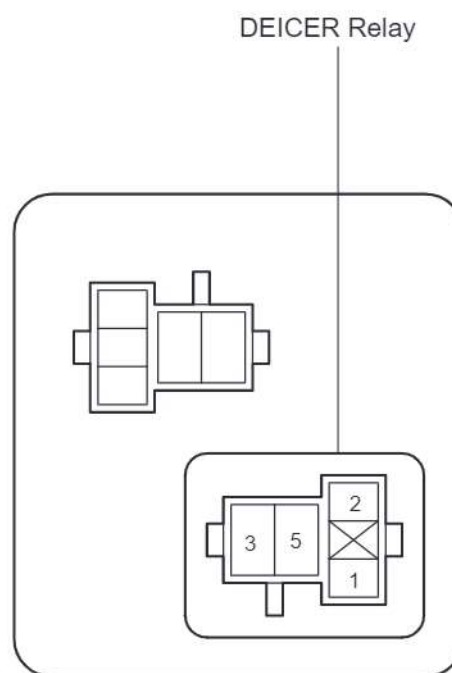


(1ZR-FE, 1ZR-FAE, 2ZR-FE, 1NR-FE)


**[Engine Room R/B and Engine Room J/B Inner Circuit]
(H/B, W/G) (1WW)**

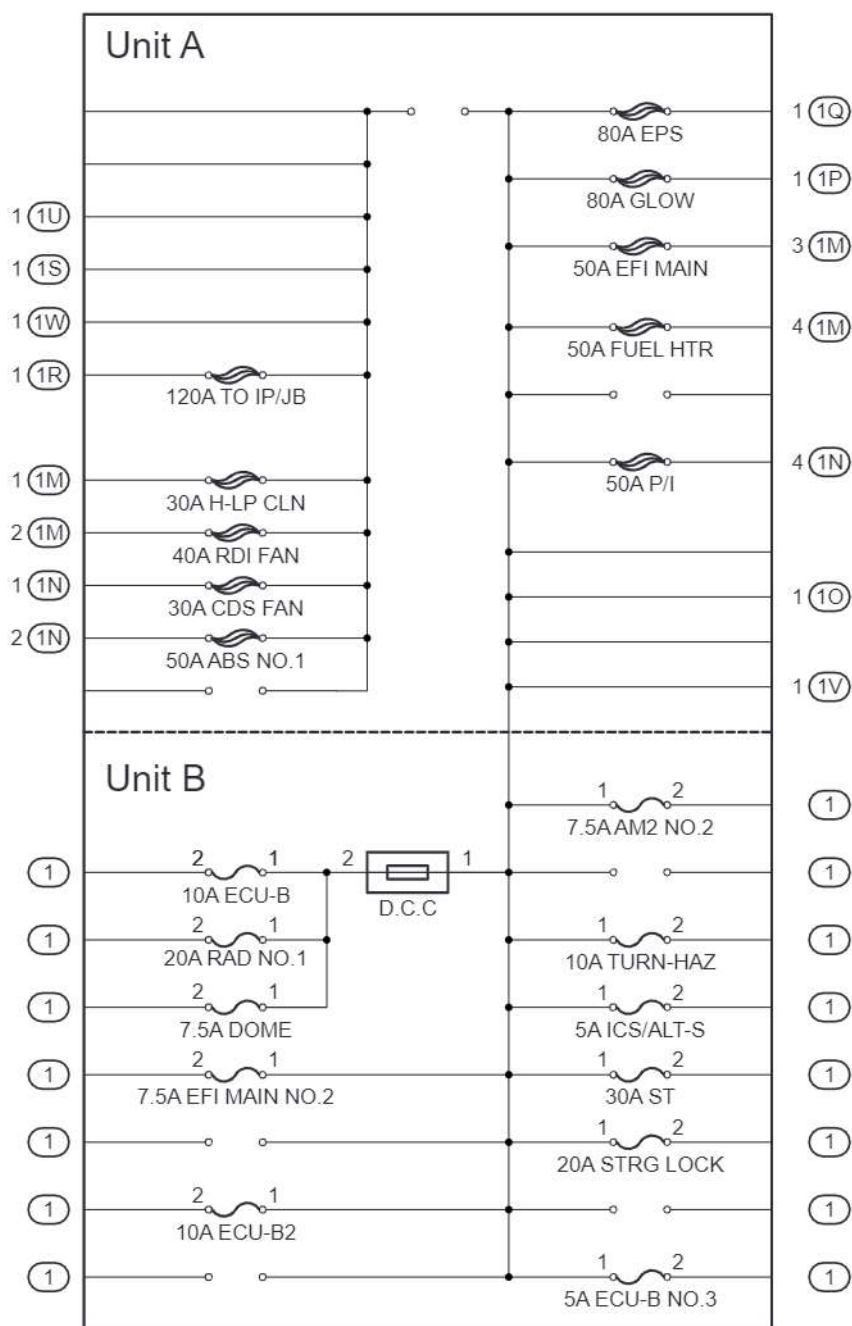



[Engine Room R/B and Engine Room J/B Inner Circuit]
(H/B, W/G) (1WW)

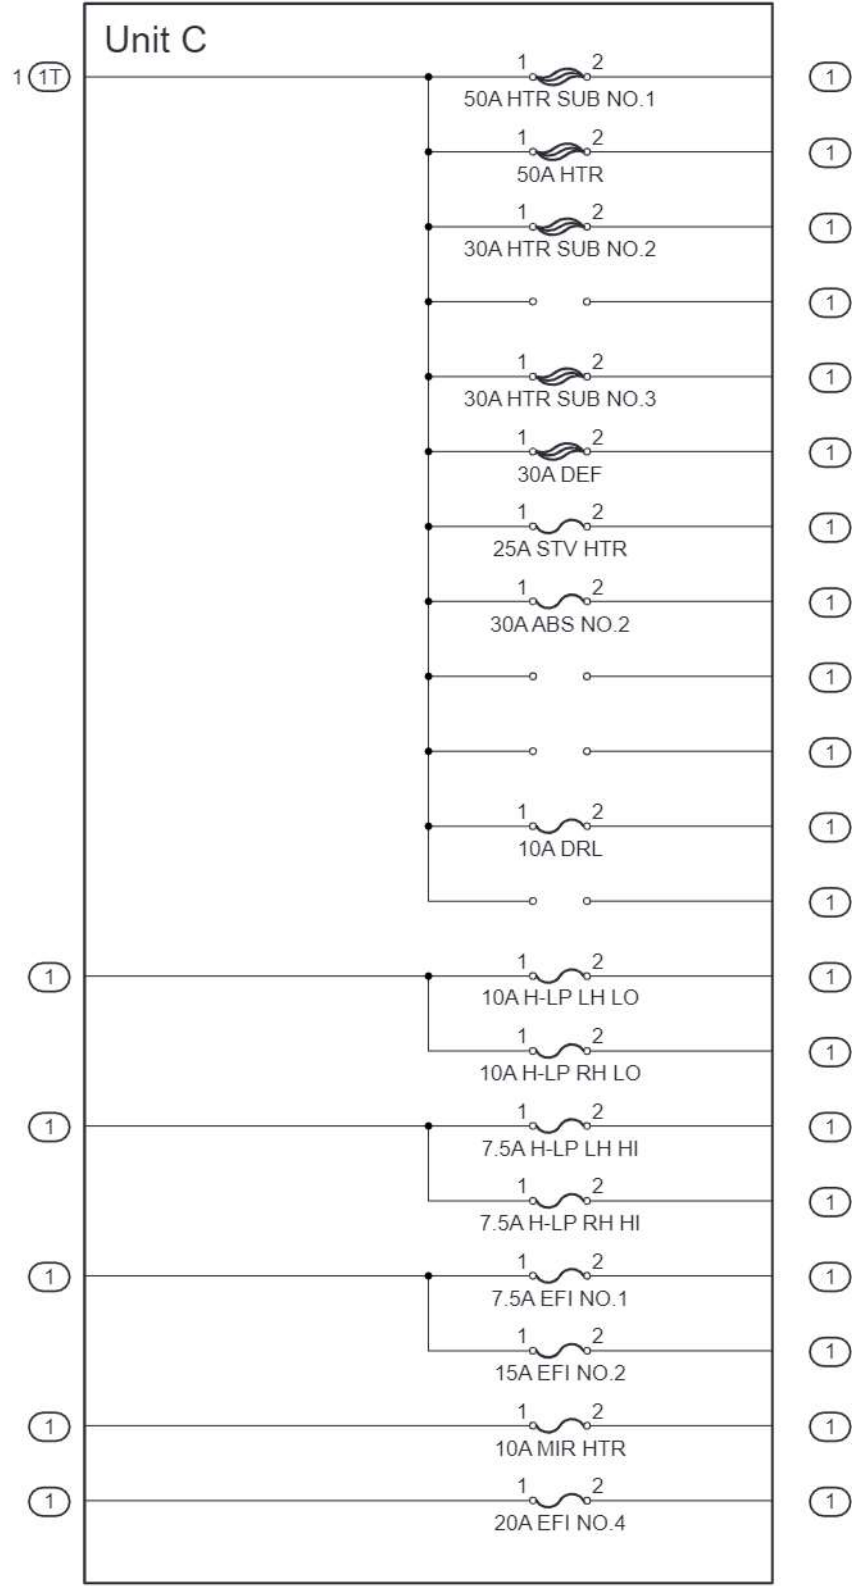


[Engine Room R/B and Engine Room J/B Inner Circuit]
(H/B, W/G) (1WW)

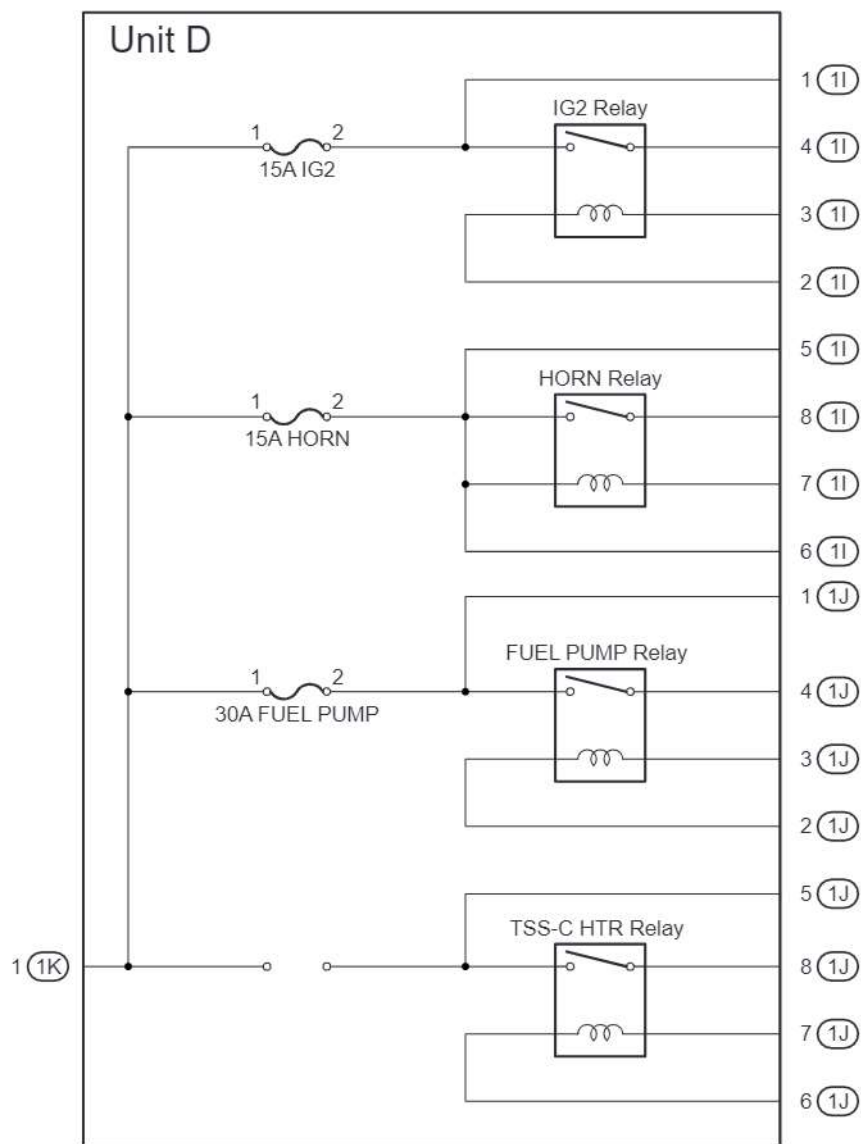


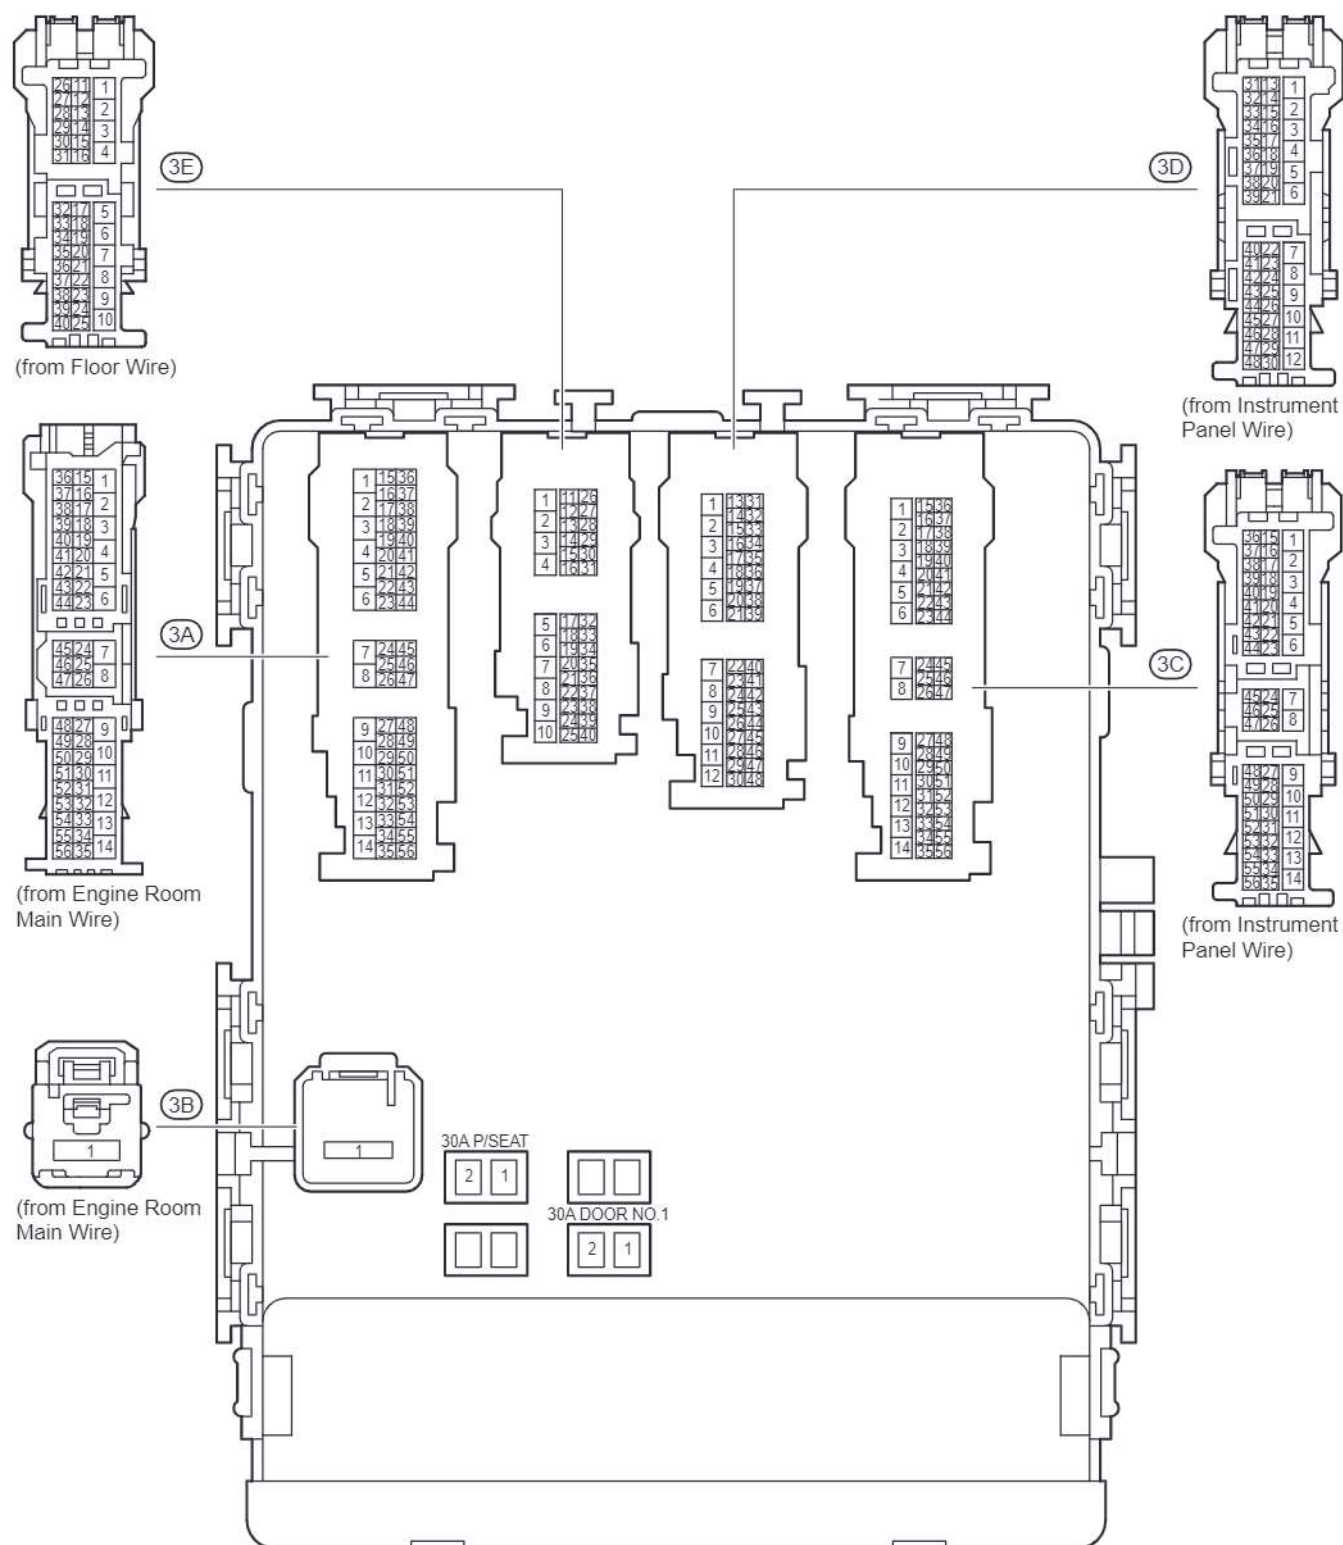

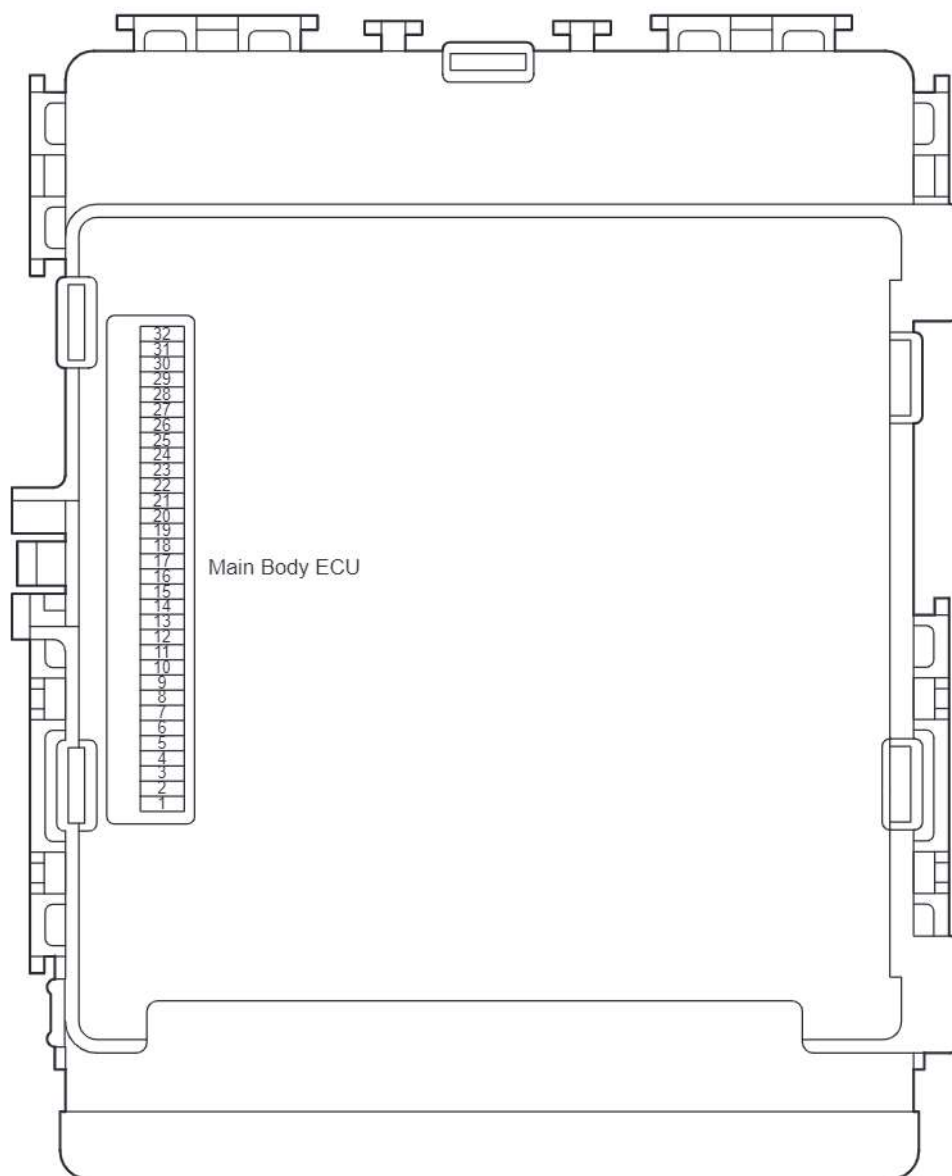

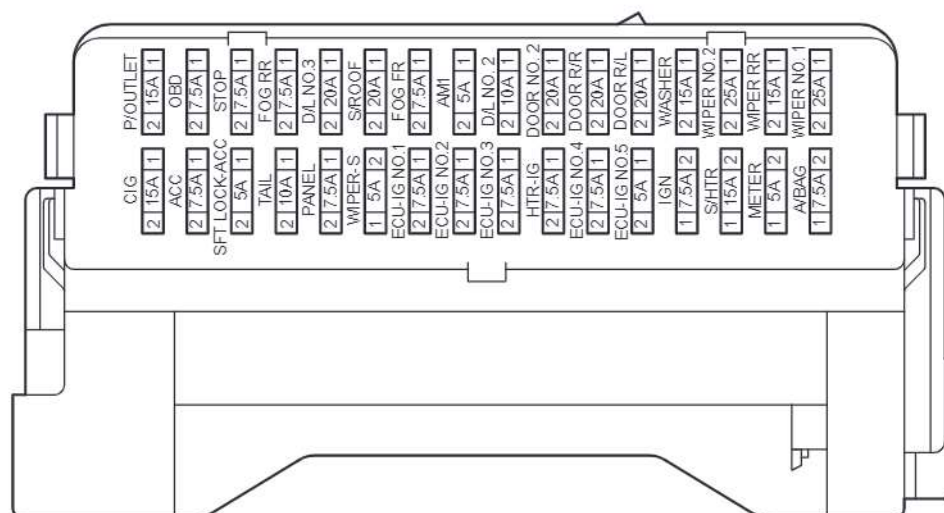


[Instrument Panel J/B Assembly Inner Circuit]

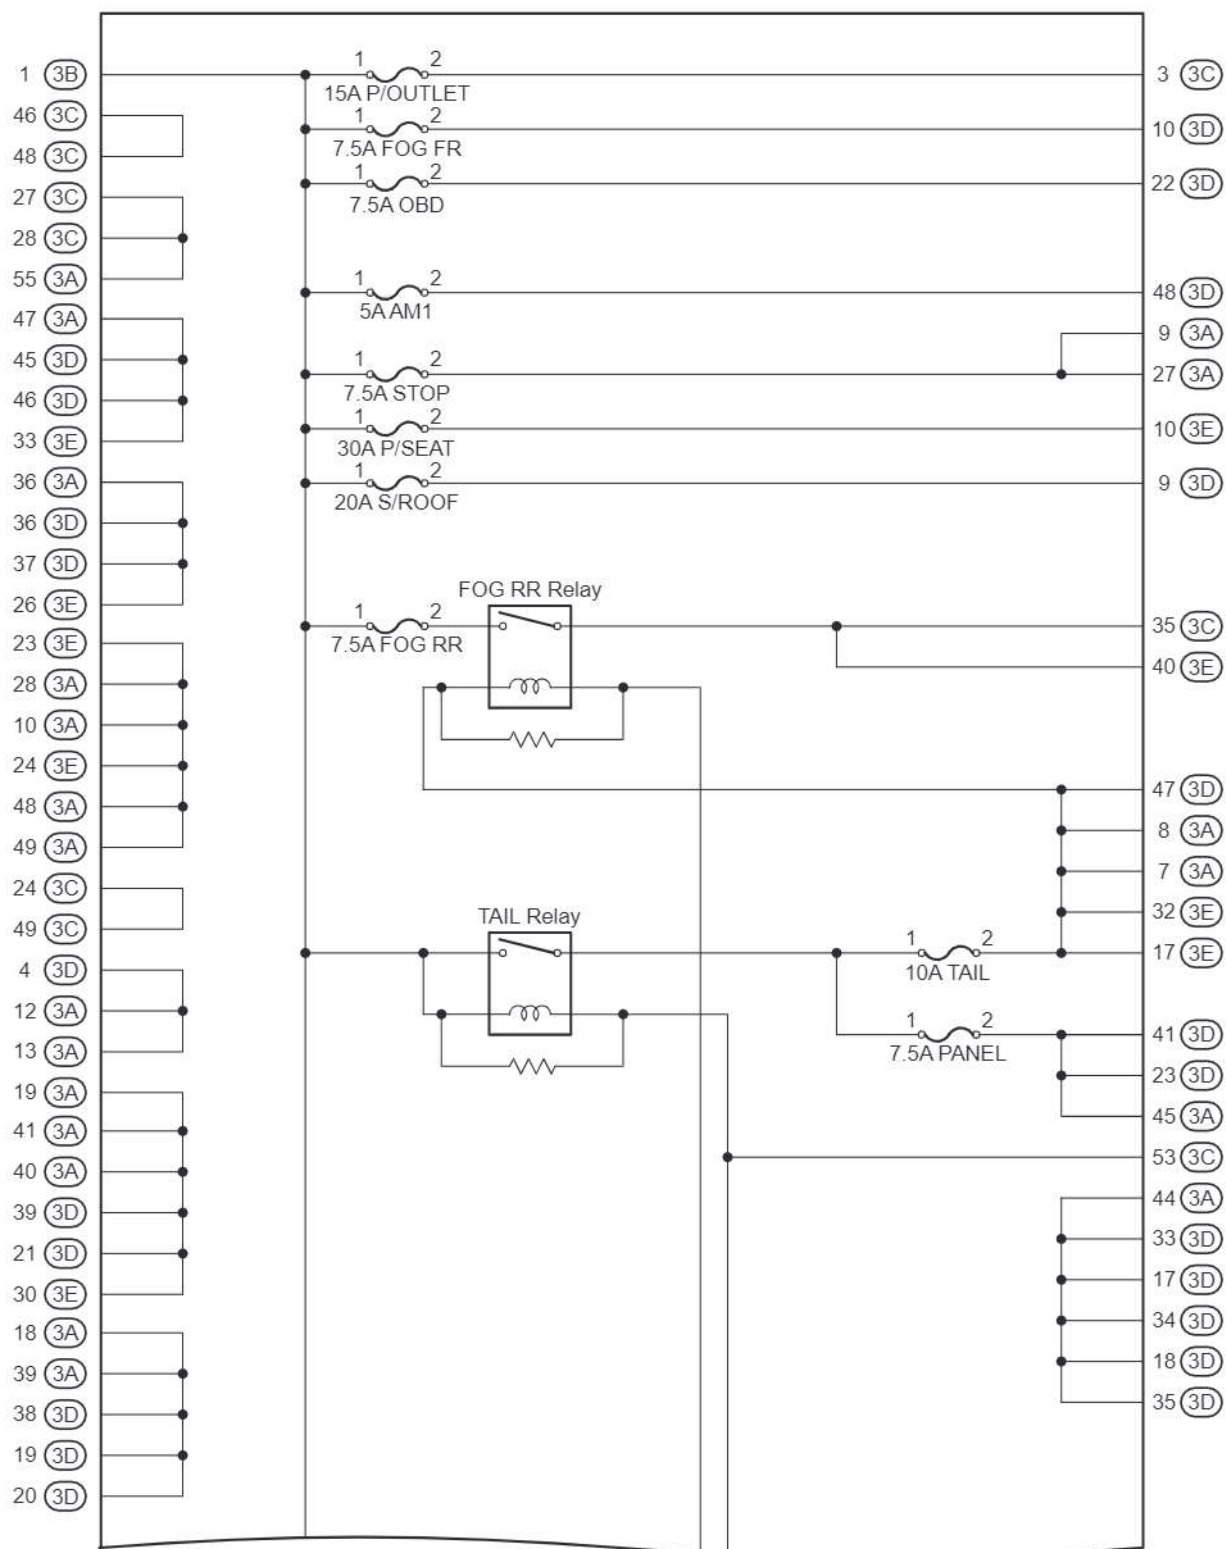

(Cont. Next Page)

[Instrument Panel J/B Assembly Inner Circuit]


(Cont'd)

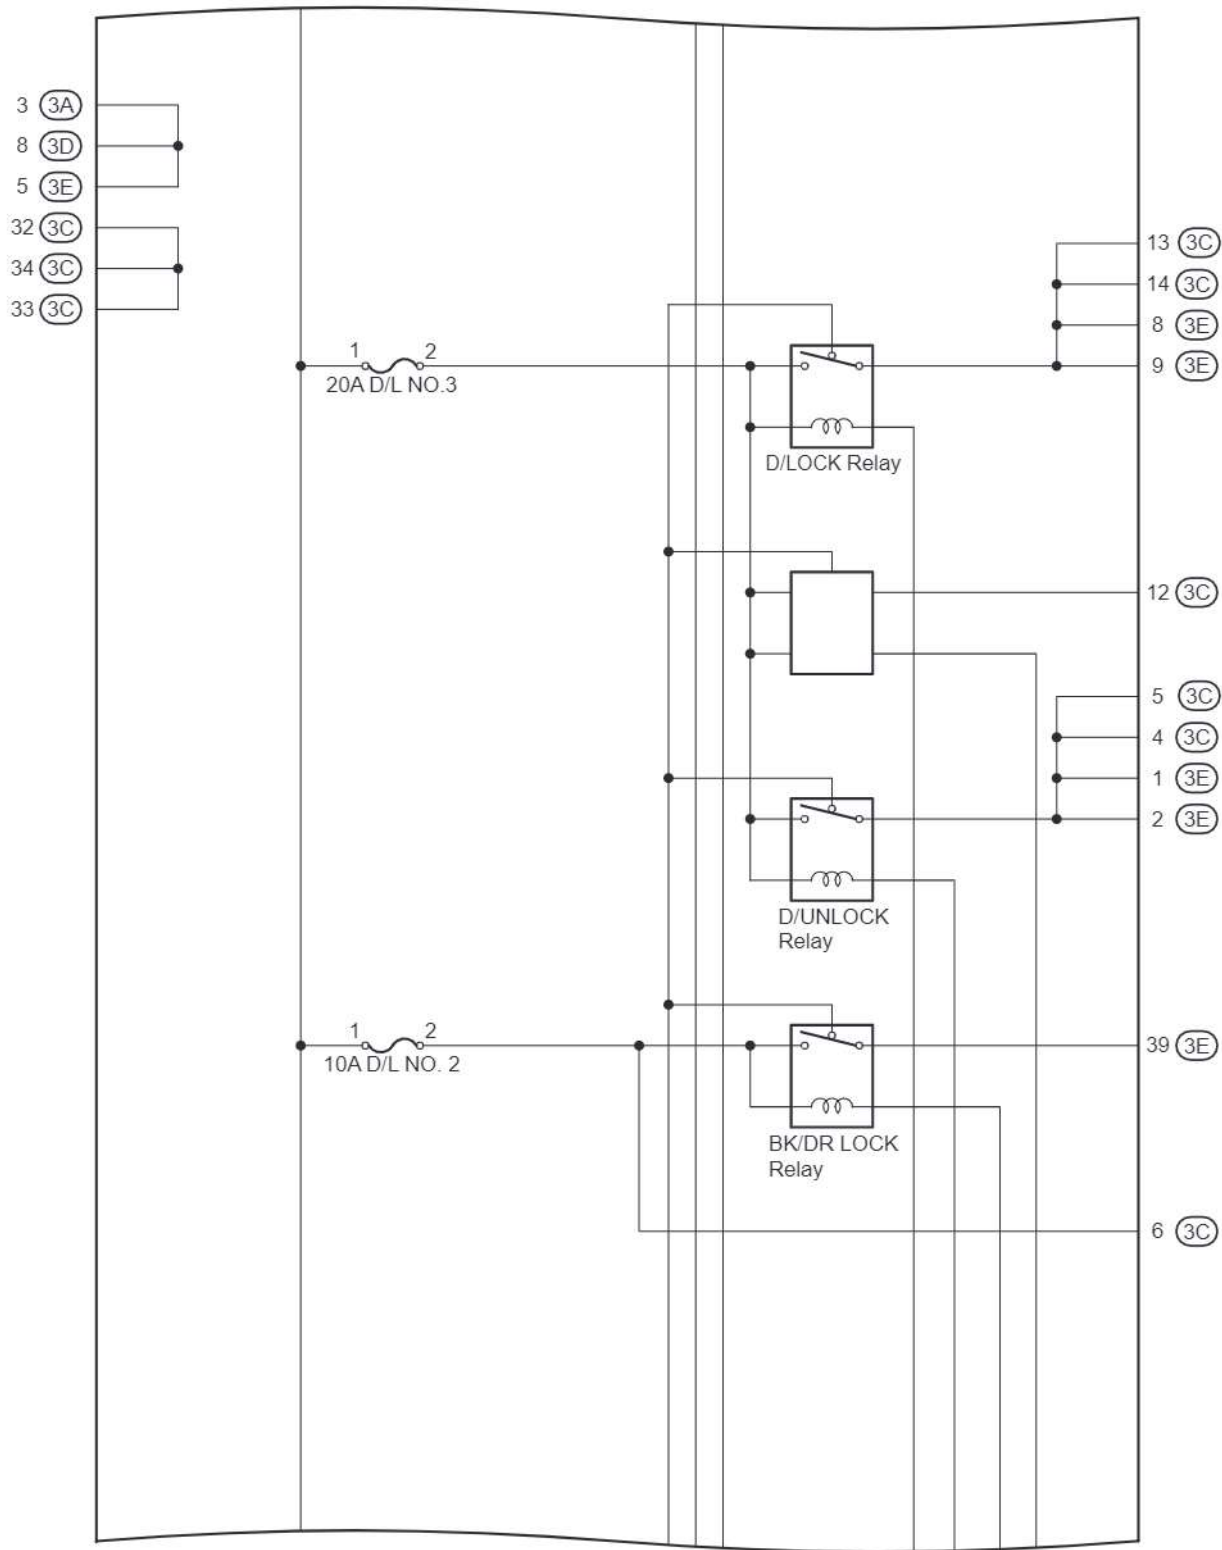

(Cont. Next Page)

[Instrument Panel J/B Assembly Inner Circuit]

(Cont'd)

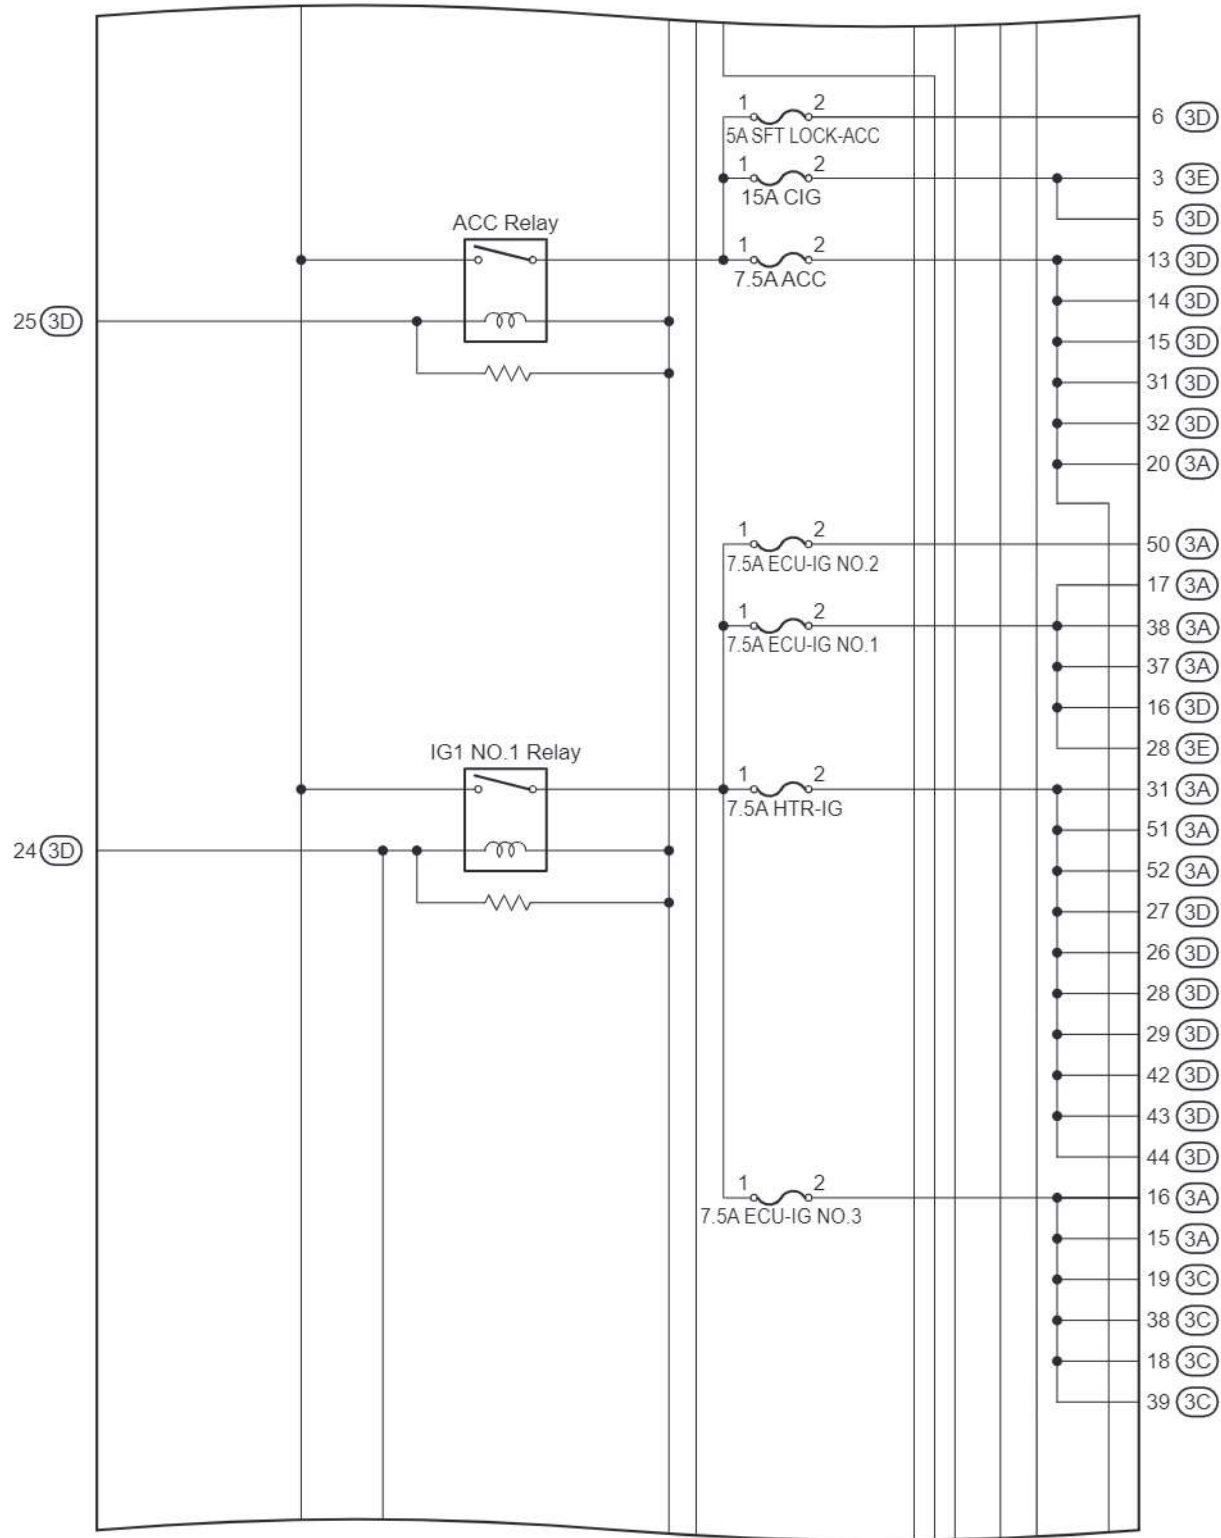


(Cont. Next Page)

[Instrument Panel J/B Assembly Inner Circuit]

* 1:Driver's Door Only Jam Protection


* 2:4-Door Jam Protection

(Cont'd)

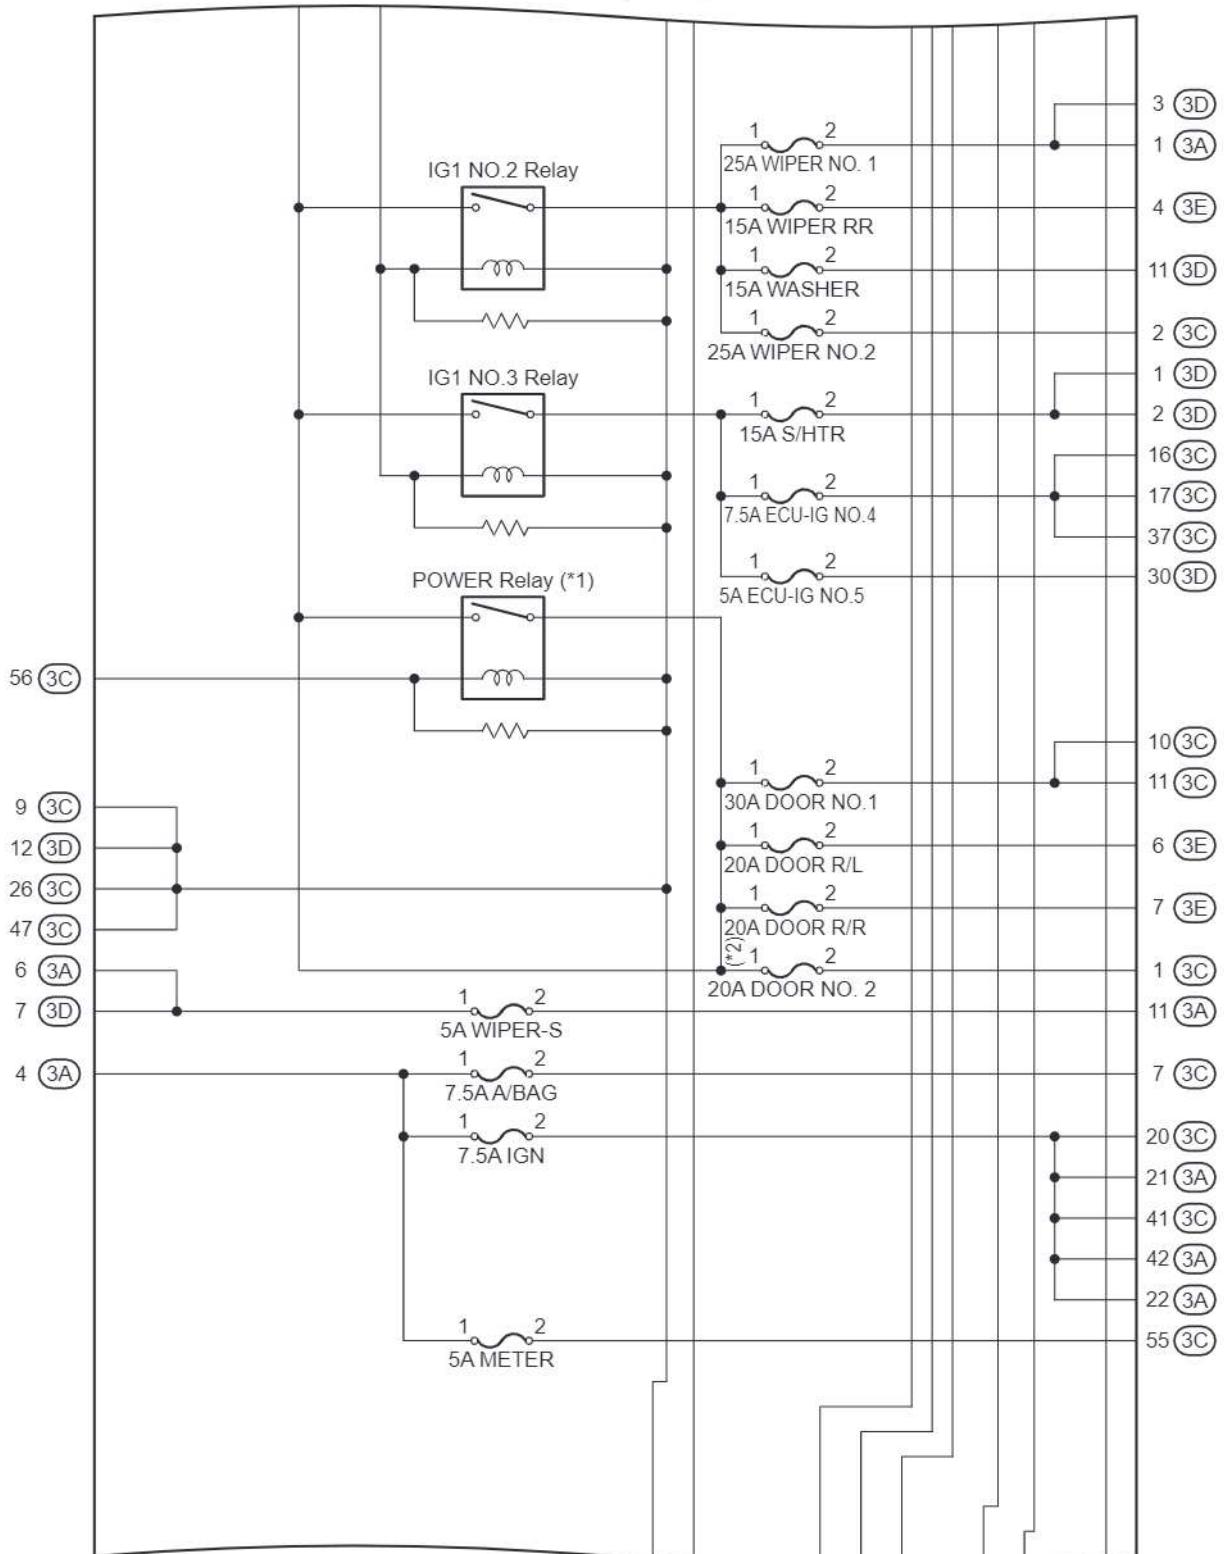

(Cont. Next Page)

[Instrument Panel J/B Assembly Inner Circuit]

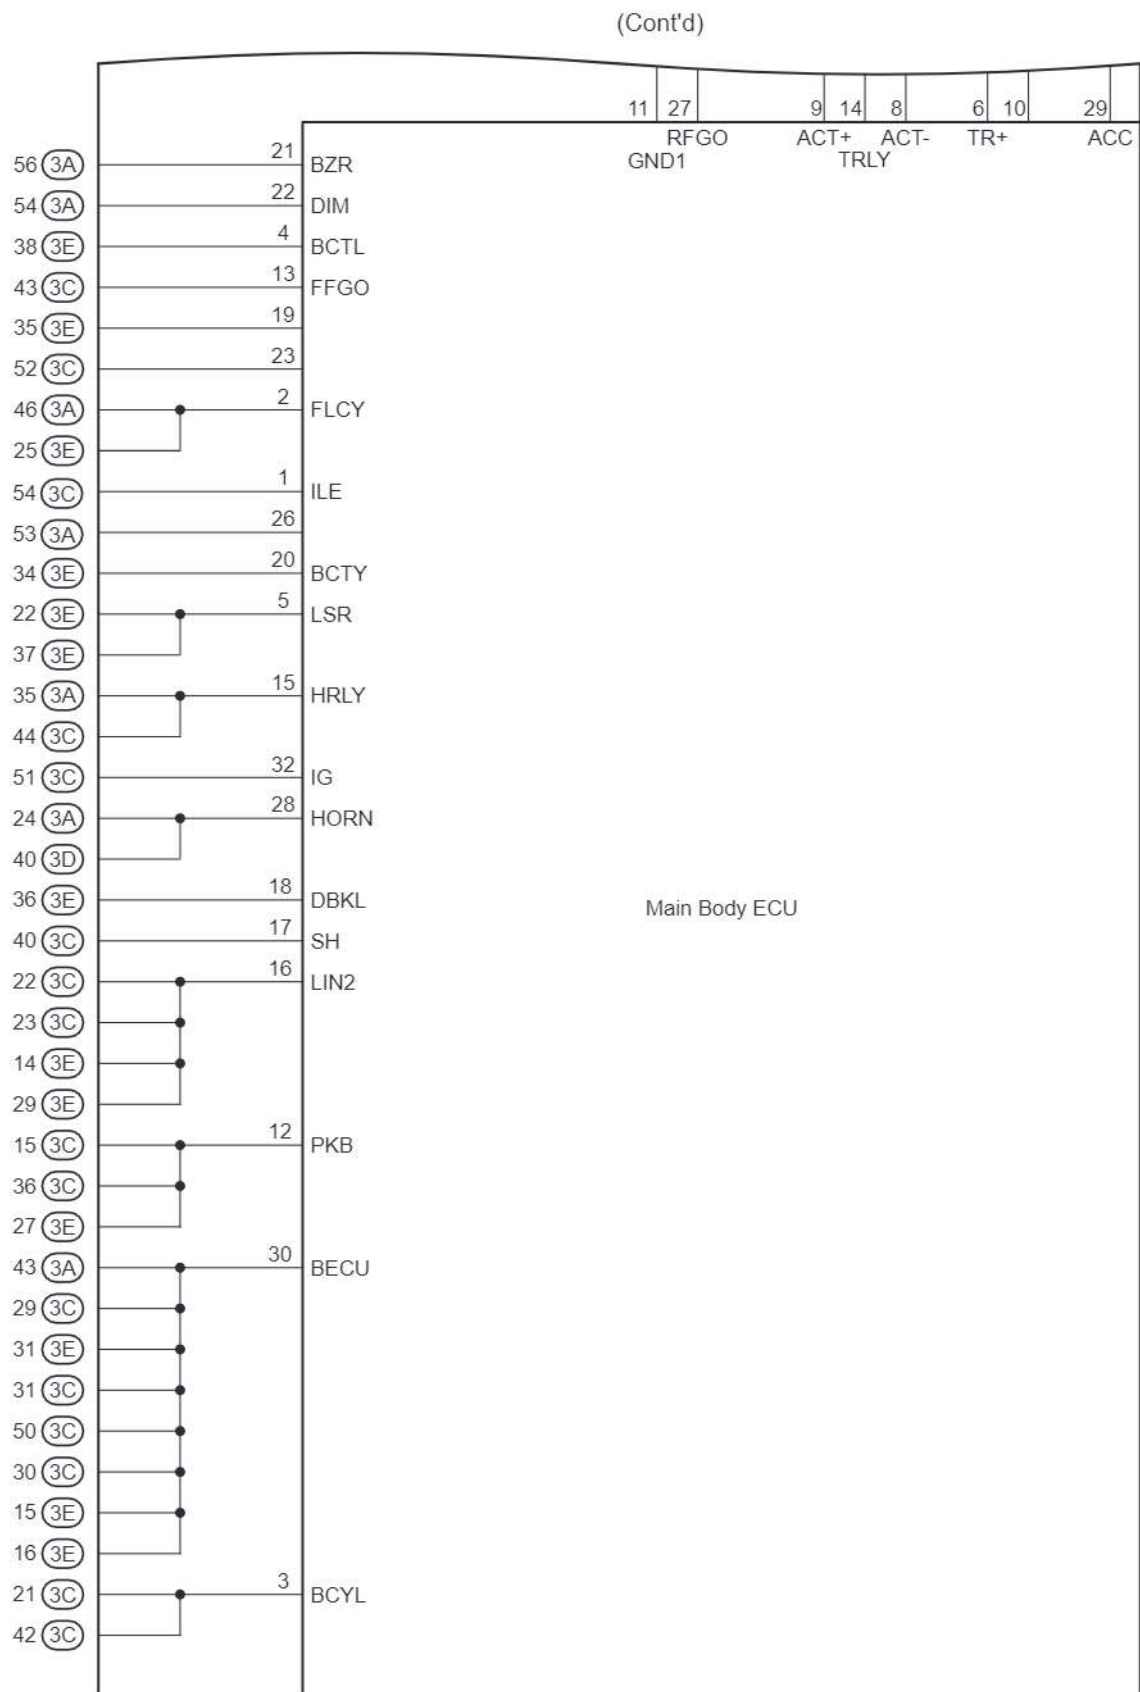

[Instrument Panel]

(LHD H/B, W/G)

*1 : Refer to the Service Bulletin
for the installation position
of the parts.

*2 : w/ Entry & Start System

*3 : w/o Entry & Start System

ID Code Box
(Immobiliser Code
ECU) (*2)

Transponder Key
ECU Assembly (*3)

Certification ECU

Power Steering ECU
Assembly

Headlight Swivel ECU
Assembly

**Instrument Panel J/B
Assembly**
Main Body ECU

Steering Lock Actuator
Assembly

R/B No. 4 Cruise Control ECU
Assembly

Engine Stop
and Start ECU

Windshield Wiper Relay
Assembly

Transmission
Control ECU Assembly


 
Clearance Warning
ECU Assembly

Shift Lock Control
Unit Assembly


A/C Amplifier Assembly

Airbag Sensor Assembly


Stereo Component Amplifier
Assembly

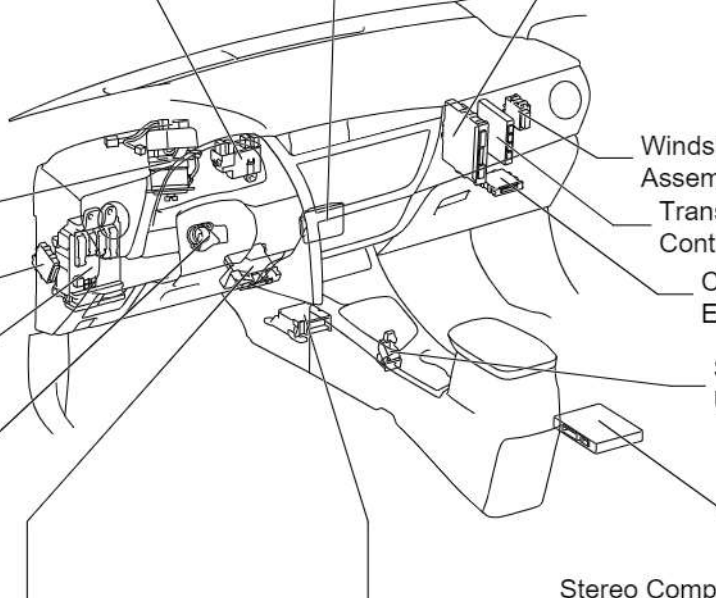


[Instrument Panel]
(RHD H/B, W/G)

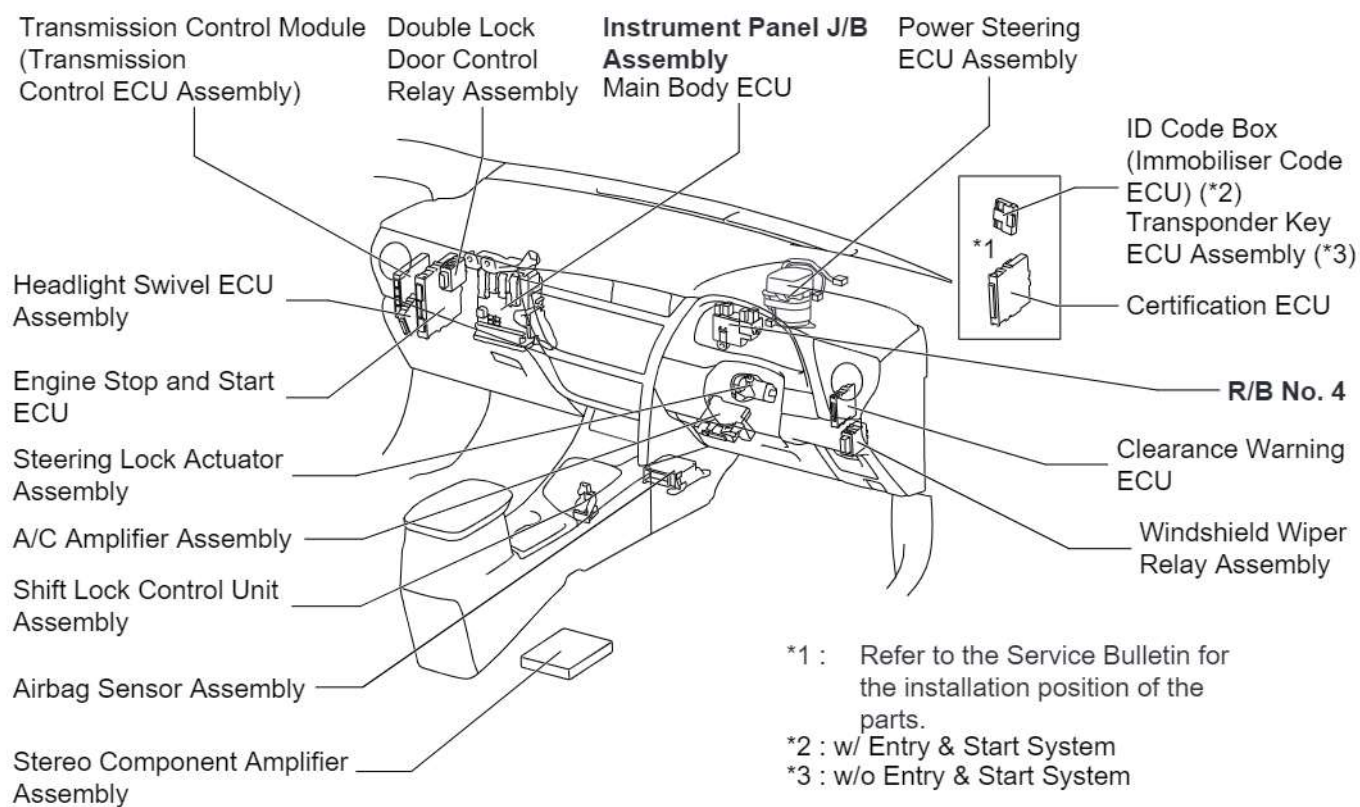


[Body SEDAN]

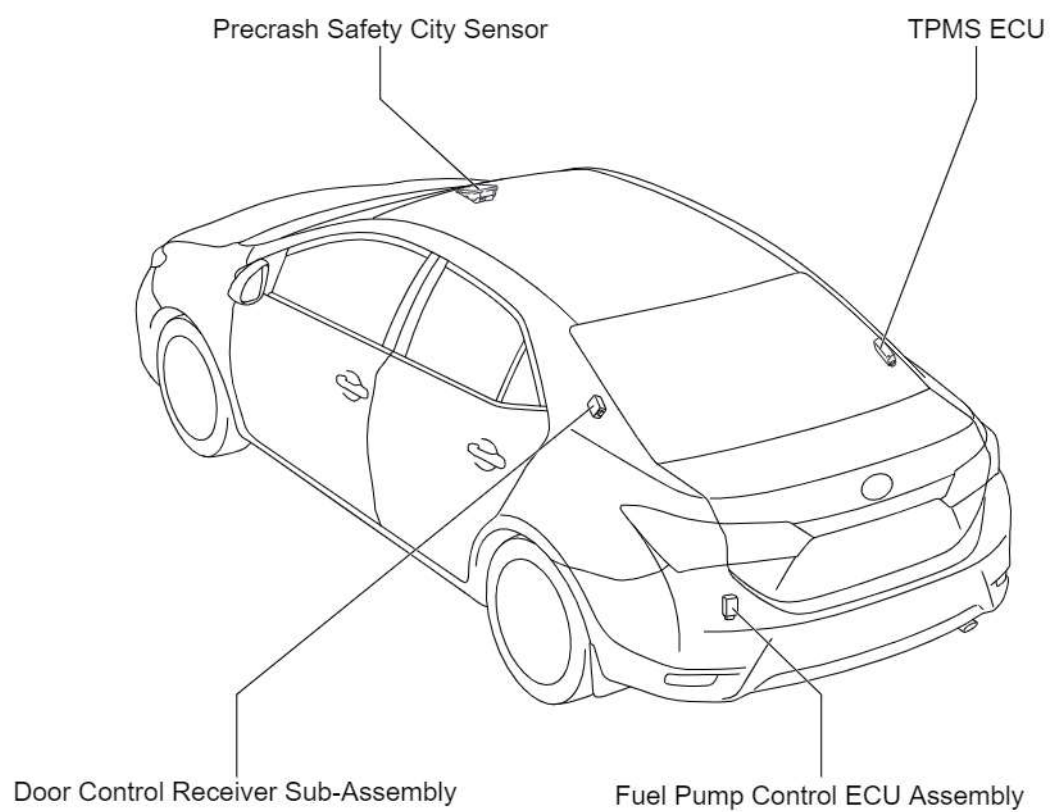

[Body W/G]

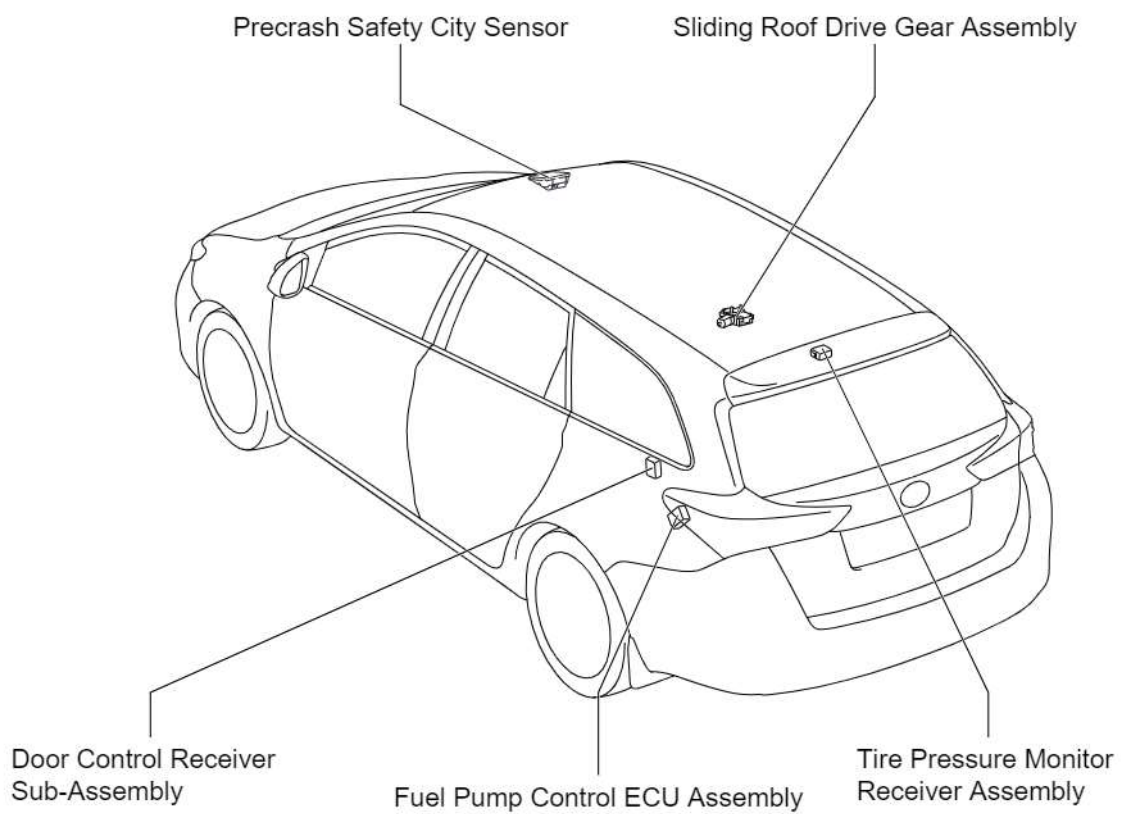

[Engine Compartment SEDAN]

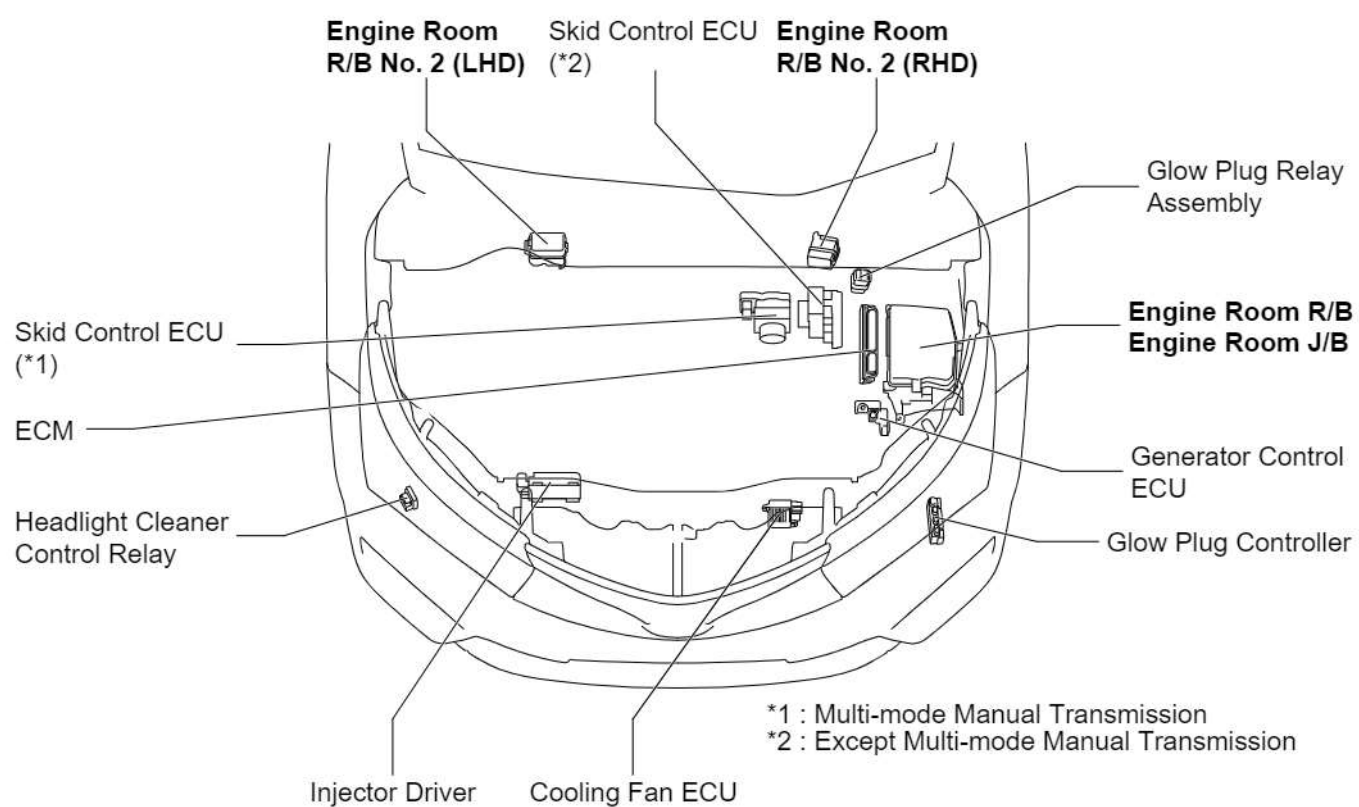

[Instrument Panel SEDAN]

*1 : Refer to the Service Bulletin
for the installation position
of the parts.

*2 : w/ Entry & Start System

*3 : w/o Entry & Start System

ID Code Box
(Immobiliser Code
ECU) (*2)

Transponder Key
ECU Assembly (*3)

Certification ECU

Power Steering ECU
Assembly

Headlight Swivel ECU
Assembly

**Instrument Panel J/B
Assembly**
Main Body ECU

Steering Lock Actuator
Assembly

R/B No. 4 Cruise Control ECU
Assembly

Transmission Control Module
(Transmission Control ECU Assembly)

Network Gateway
Computer

Windshield Wiper Relay
Assembly

Engine Stop and Start
ECU

 
Clearance Warning
ECU Assembly

Telephone Transceiver
Assembly


Shift Lock Control
Unit Assembly


A/C Amplifier Assembly

Airbag Sensor Assembly



[Instrument Panel SEDAN]

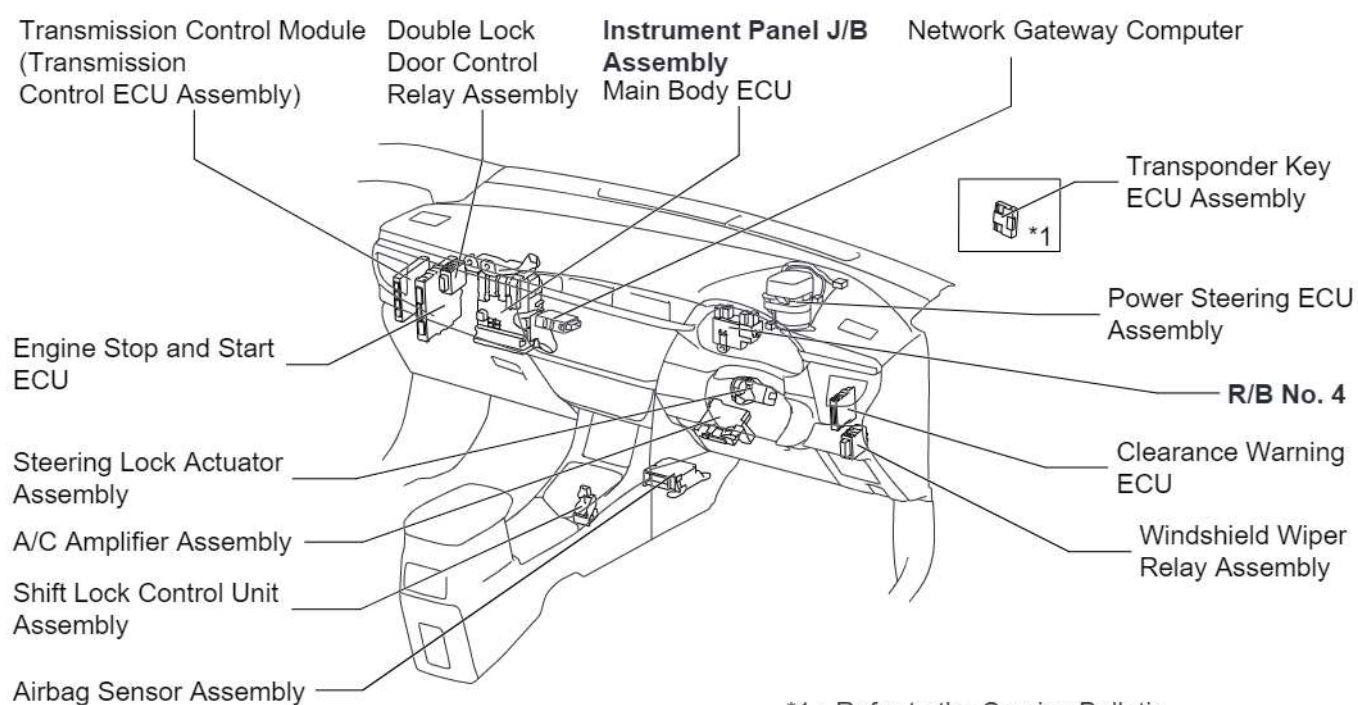

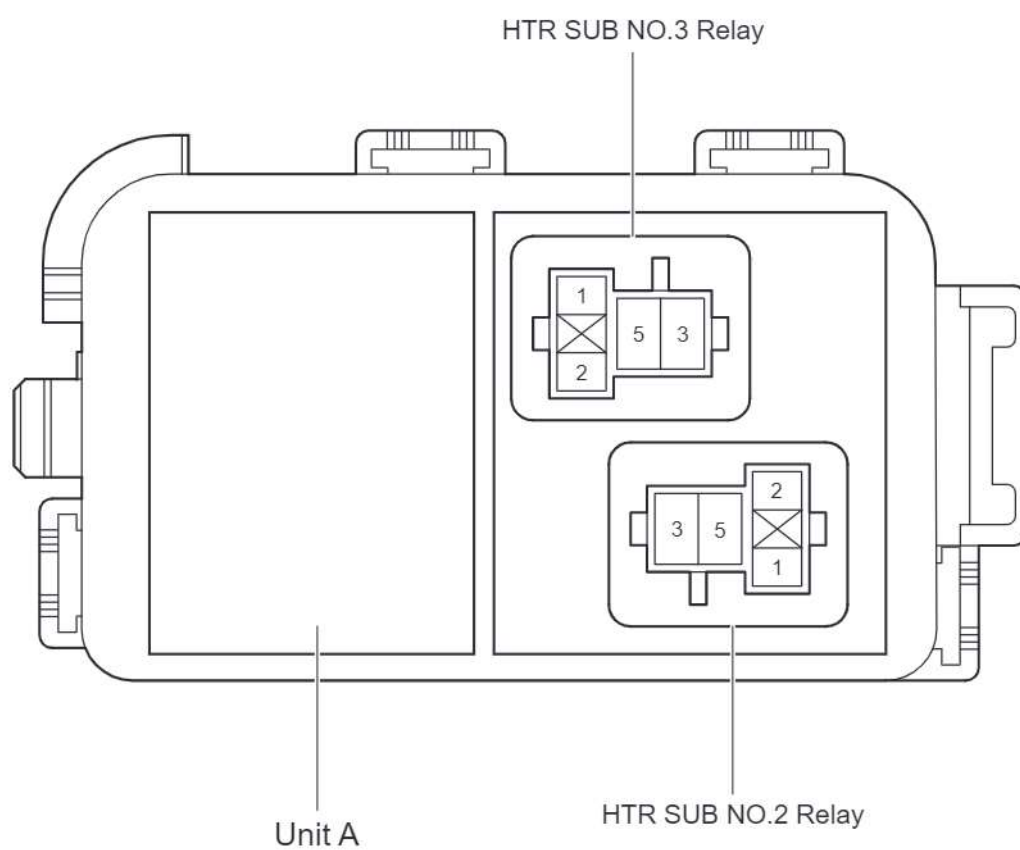

Unit A

