 
 
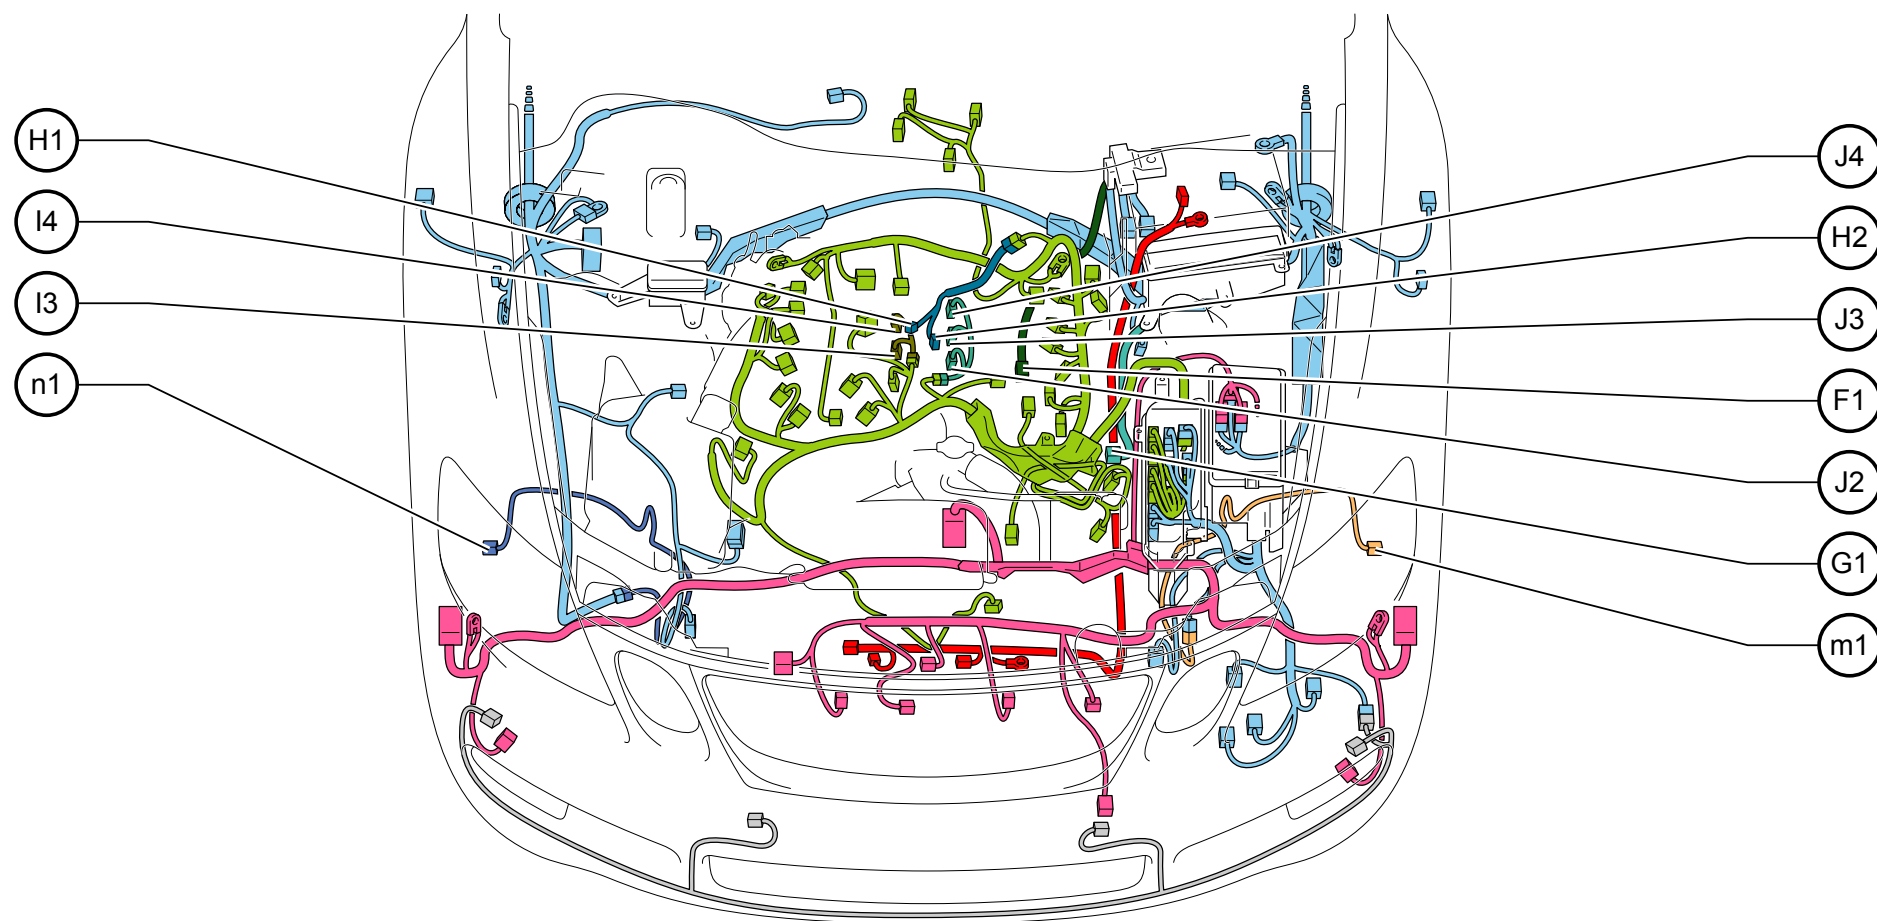 
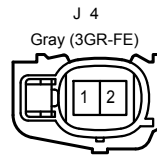 
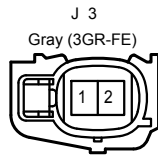 
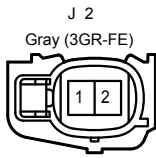 
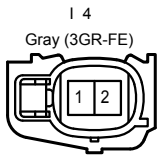 
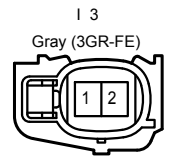 
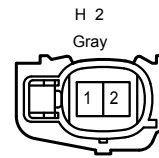 
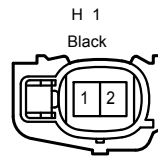 


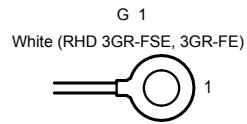


- F 1 Starter (3GR-FSE, 3GR-FE)
- G 1 Alternator (RHD 3GR-FSE, 3GR-FE)
- H 1 Knock Control Sensor (Bank 1)
- H 2 Knock Control Sensor (Bank 2)
- I 3 Fuel Injector (No.3) (3GR-FE)
- I 4 Fuel Injector (No.5) (3GR-FE)
- J 2 Fuel Injector (No.2) (3GR-FE)
- J 3 Fuel Injector (No.4) (3GR-FE)
- J 4 Fuel Injector (No.6) (3GR-FE)
- m 1 Speed Sensor (Front LH)
- n 1 Speed Sensor (Front RH)


















Position of Parts in Engine Compartment <RHD 3GR-FE>

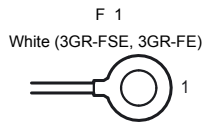











 
Position of Parts in Engine Compartment <RHD 3GR-FE>

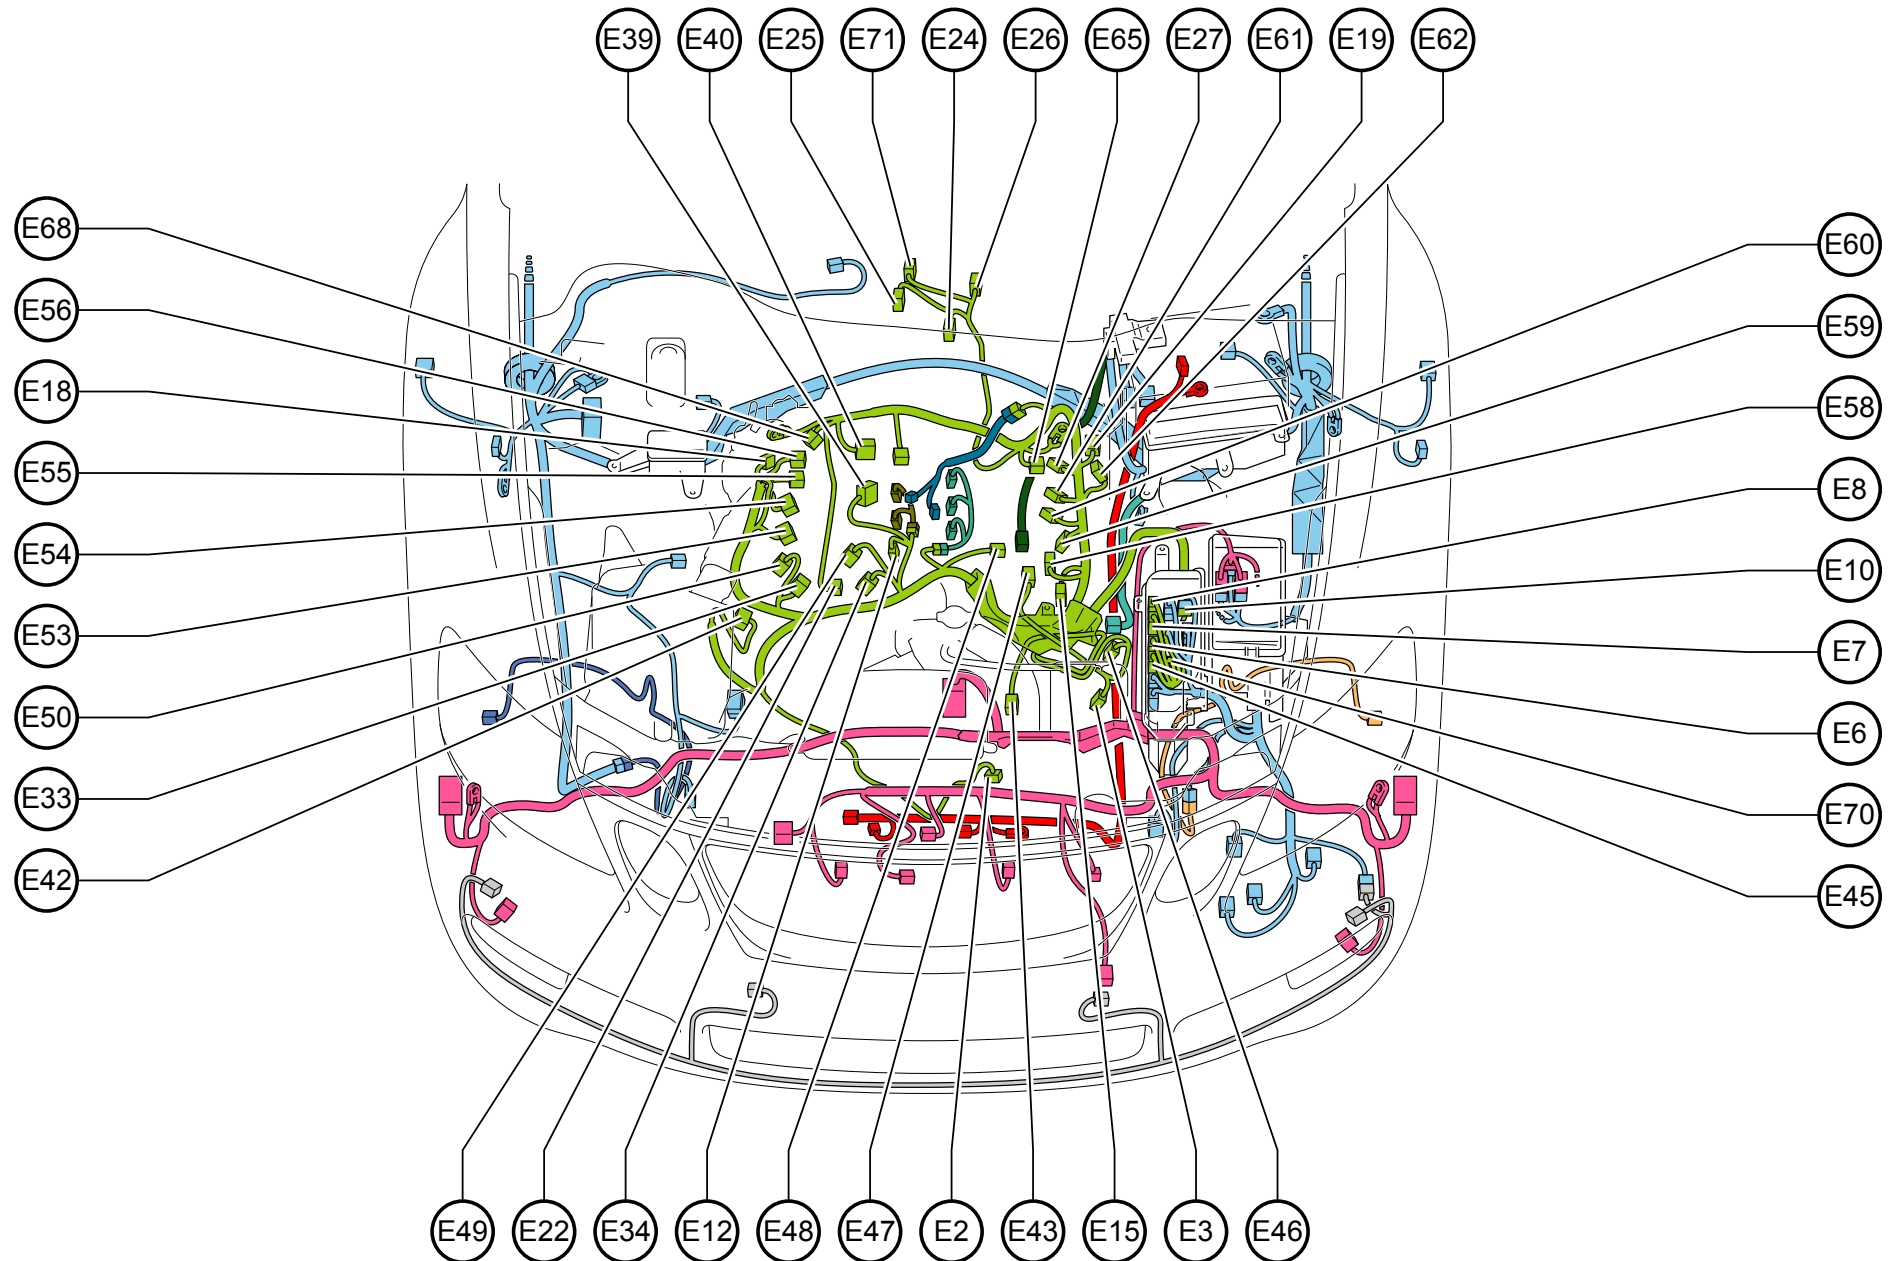


- E 2 Engine Oil Pressure SW
- E 3 Crankshaft Position Sensor (3GR-FSE, 3GR-FE)
- E 6 Engine ECU (3UZ-FE, 3GR-FE)
- E 7 Engine ECU (3UZ-FE, 3GR-FE)
- E 8 Engine ECU (3UZ-FE, 3GR-FE)
- E 10 Junction Connector
- E 12 Fuel Injector (No.1) (3GR-FE)
- E 15 Crankshaft Position Sensor No.3 (LH Intake Side) (3GR-FSE, 3GR-FE)
- E 18 VSV (EVAP)
- E 19 Noise Filter (Ignition LH)
- E 22 Engine Oil Level Sensor
- E 24 Transmission Revolution Sensor (Turbine)
- E 25 Neutral Start SW (3UZ-FE, 3GR-FE)
- E 26 ECT Solenoid
- E 27 Ignition Coil (No.6)
- E 33 Noise Filter (Ignition RH)
- E 34 Crankshaft Position Sensor No.2 (RH Intake Side) (3GR-FSE, 3GR-FE)
- E 39 Throttle Body Assembly
- E 40 Water Temp. Sensor (3GR-FSE, 3GR-FE)
- E 42 Air Flow Meter
- E 43 Alternator
- E 45 Engine ECU
- E 46 A/C Compressor
- E 47 Starter
- E 48 Camshaft Timing Oil Control Valve (LH Intake Side)
- E 49 Camshaft Timing Oil Control Valve (RH Intake Side)
- E 50 Camshaft Timing Oil Control Valve (RH Exhaust Side)
- E 53 Ignition Coil (No.1)
- E 54 Ignition Coil (No.3)
- E 55 Ignition Coil (No.5)
- E 56 Crankshaft Position Sensor No.2 (RH Exhaust Side)
- E 58 VSV (ACIS) (3GR-FSE, 3GR-FE)
- E 59 Camshaft Timing Oil Control Valve (LH Exhaust Side)
- E 60 Ignition Coil (No.2)
- E 61 Ignition Coil (No.4)
- E 62 Crankshaft Position Sensor No.2 (LH Exhaust Side)
- E 65 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- E 68 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 70 Junction Connector
- E 71 Transmission Revolution Sensor (Counter Gear)

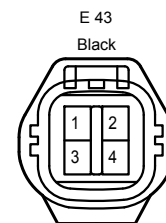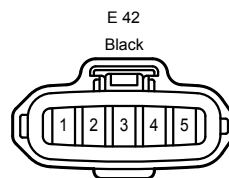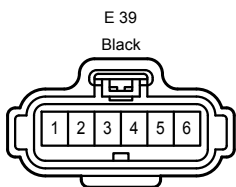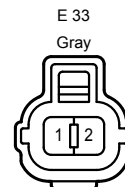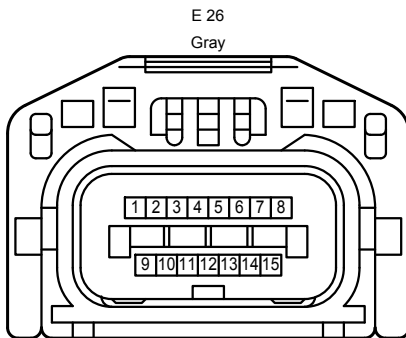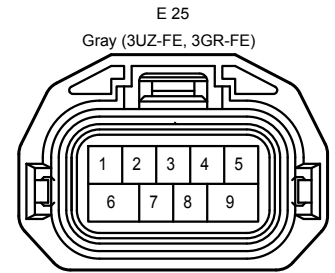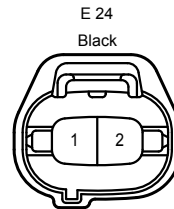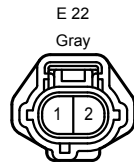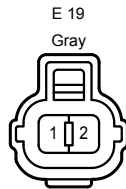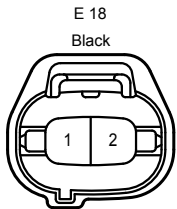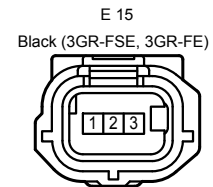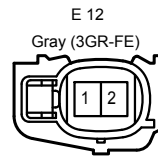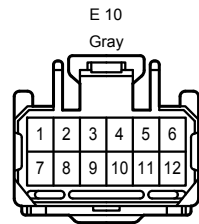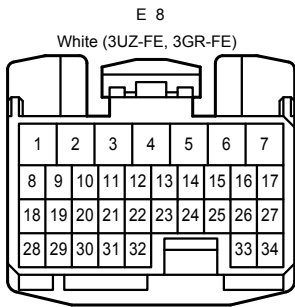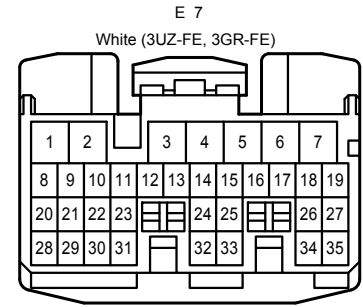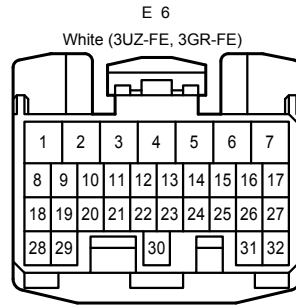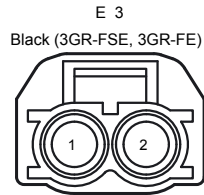                 

            Position of Parts in Engine Compartment <RHD 3GR-FE>

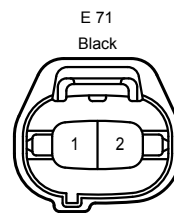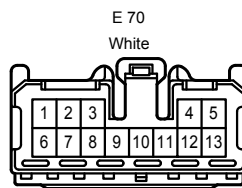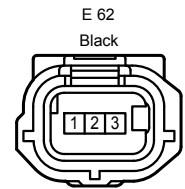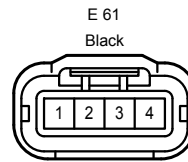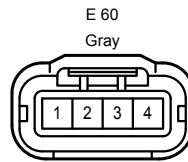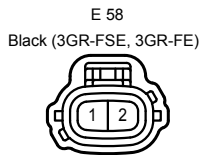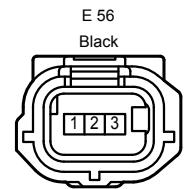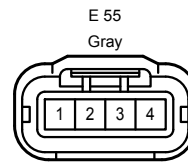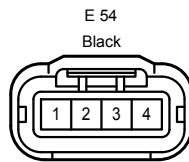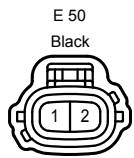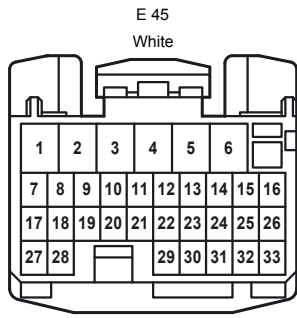


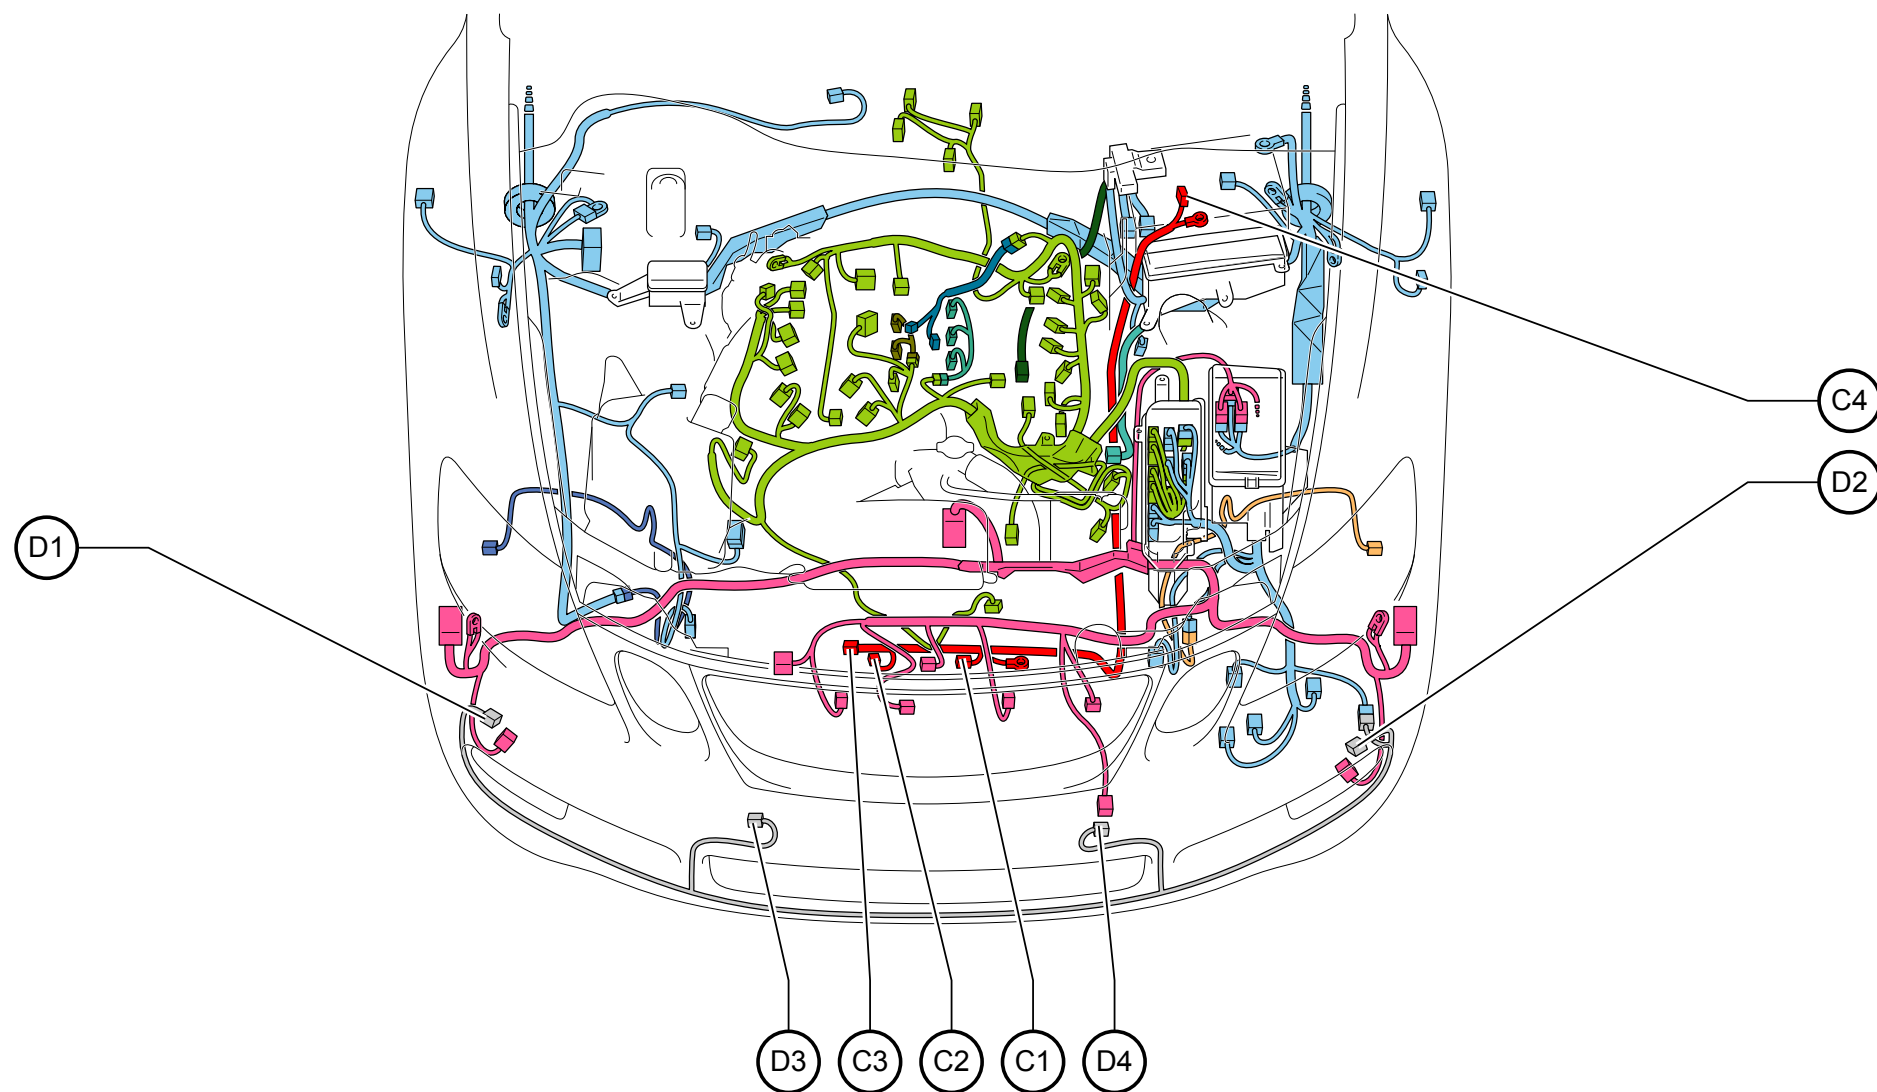


- C 1 Power Steering Motor
- C 2 Power Steering Motor
- C 3 Power Steering Torque Sensor
- C 4 Power Steering ECU

- D 1 Ultrasonic Sensor (Front Corner RH)
- D 2 Ultrasonic Sensor (Front Corner LH)
- D 3 Ultrasonic Sensor (Front Center RH)
- D 4 Ultrasonic Sensor (Front Center LH)

 
C 1
Gray

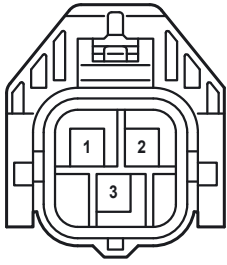


C 2
Gray

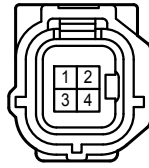 

C 3
Gray

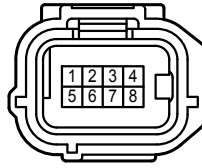 

C 4
Black

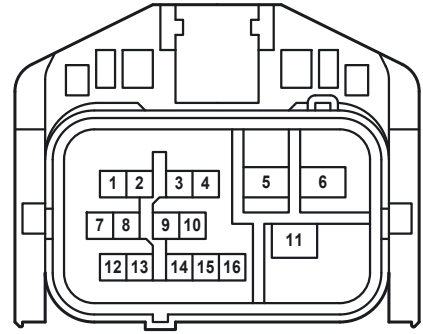 


D 1
Black




D 2
Black




 D 3
Black

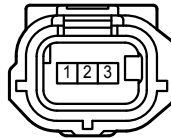

D 4
Black



















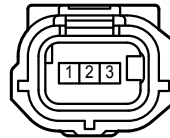 













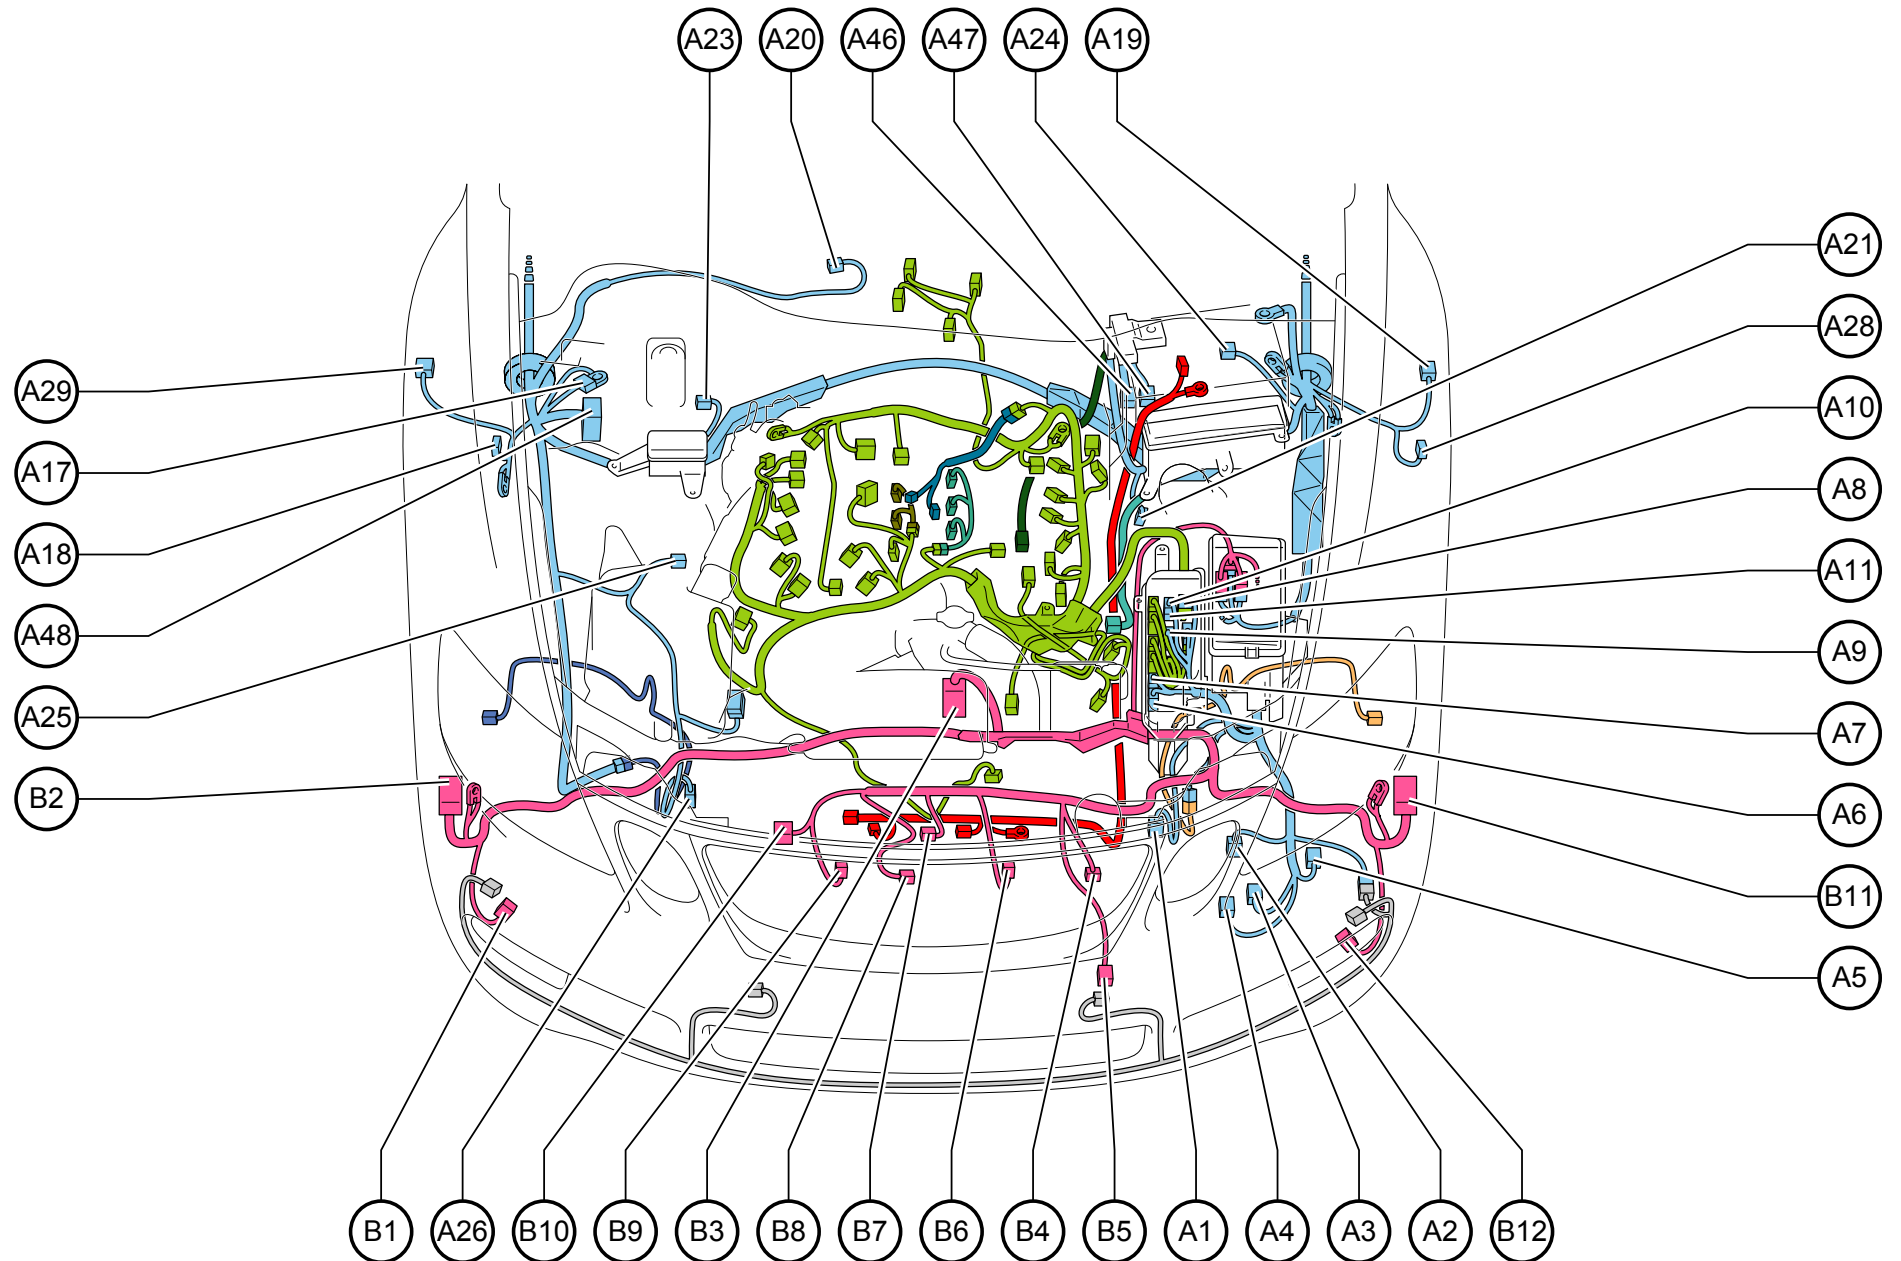 



- A 1 Airbag Sensor (Front LH)
- A 2 Windshield Washer Motor
- A 3 Headlamp Cleaner Motor
- A 4 Water Level Warning SW
- A 5 Headlamp Cleaner Control Relay
- A 6 Engine ECU
- A 7 Engine ECU
- A 8 Junction Connector
- A 9 Junction Connector
- A 10 Junction Connector
- A 11 Junction Connector
- A 17 Junction Connector
- A 18 Wireless Door Lock Buzzer
- A 19 Turn Signal Lamp (Front Side LH)
- A 20 Windshield Wiper Motor (RHD)
- A 21 Height Control Sensor (Front)
- A 23 Brake Fluid Level Warning SW
- A 24 Power Steering ECU
- A 25 Fuel Pump Resistor (3GR-FSE, 3GR-FE)
- A 26 Airbag Sensor (Front RH)
- A 28 Security Horn
- A 29 Turn Signal Lamp (Front Side RH)
- A 46 Battery Current Sensor
- A 47 Battery Thermometer Sensor
- A 48 Skid Control ECU with Actuator

- B 1 Fog Lamp (Front RH)
- B 2 Headlamp Assembly (RH)
- B 3 Cooling Fan ECU
- B 4 A/C Pressure Sensor
- B 5 Ambient Temp. Sensor
- B 6 Horn (High)
- B 7 Engine Hood Courtesy SW
- B 8 Millimeter Wave Radar Sensor
- B 9 Horn (Low)
- B 10 Smog Ventilation Sensor
- B 11 Headlamp Assembly (LH)
- B 12 Fog Lamp (Front LH)

                                Position of Parts in Engine Compartment <RHD 3GR-FE>

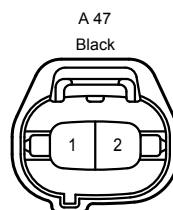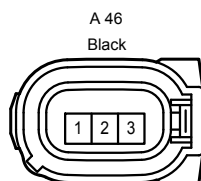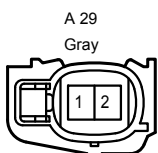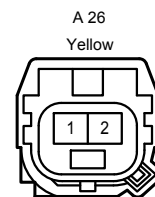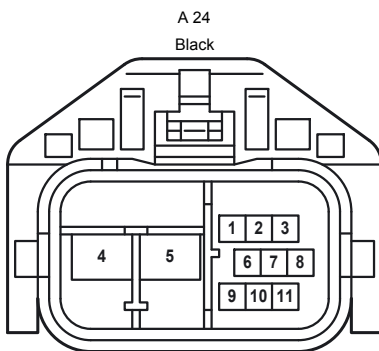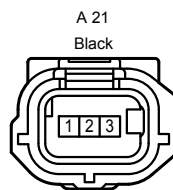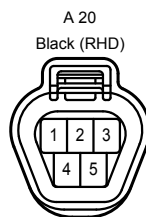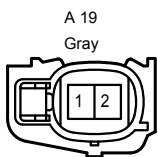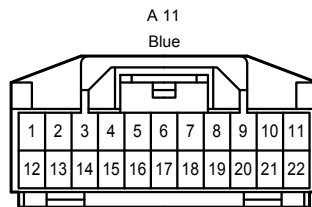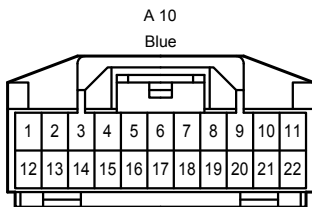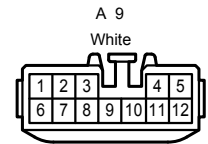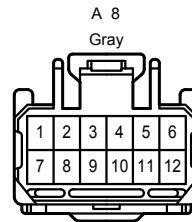
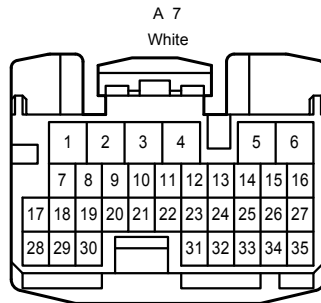
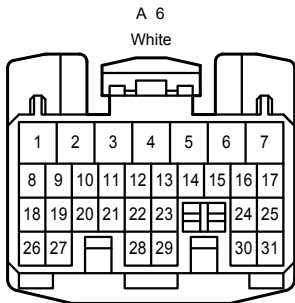
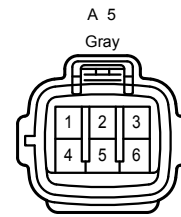
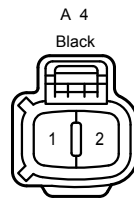
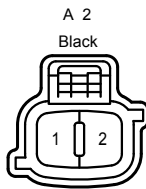
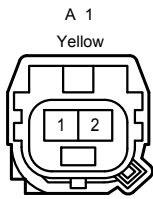


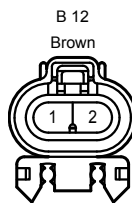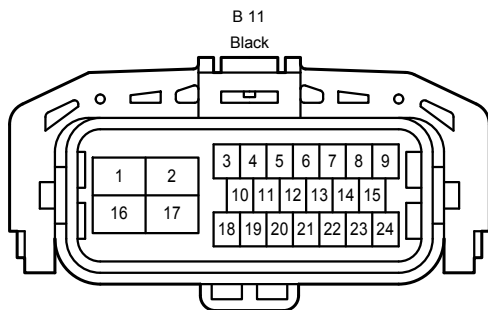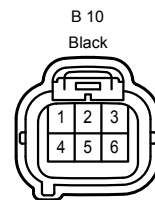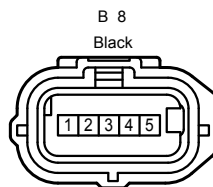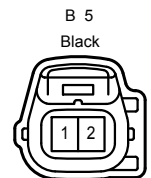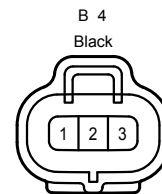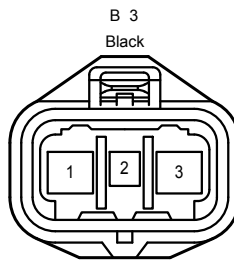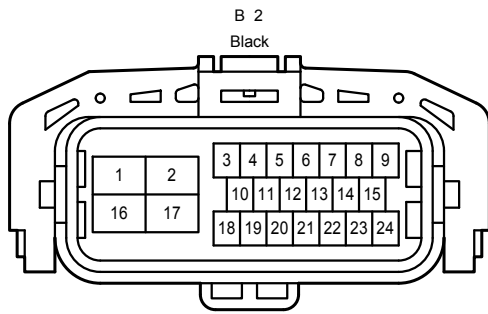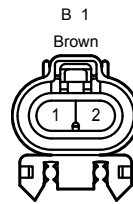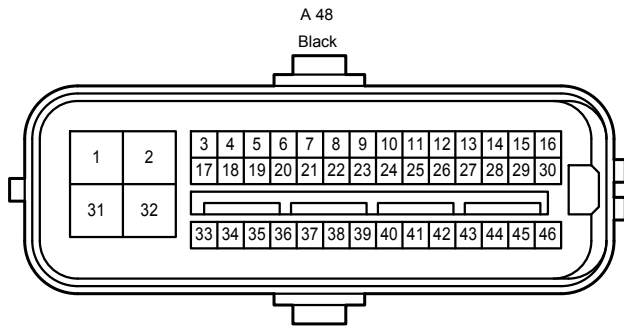

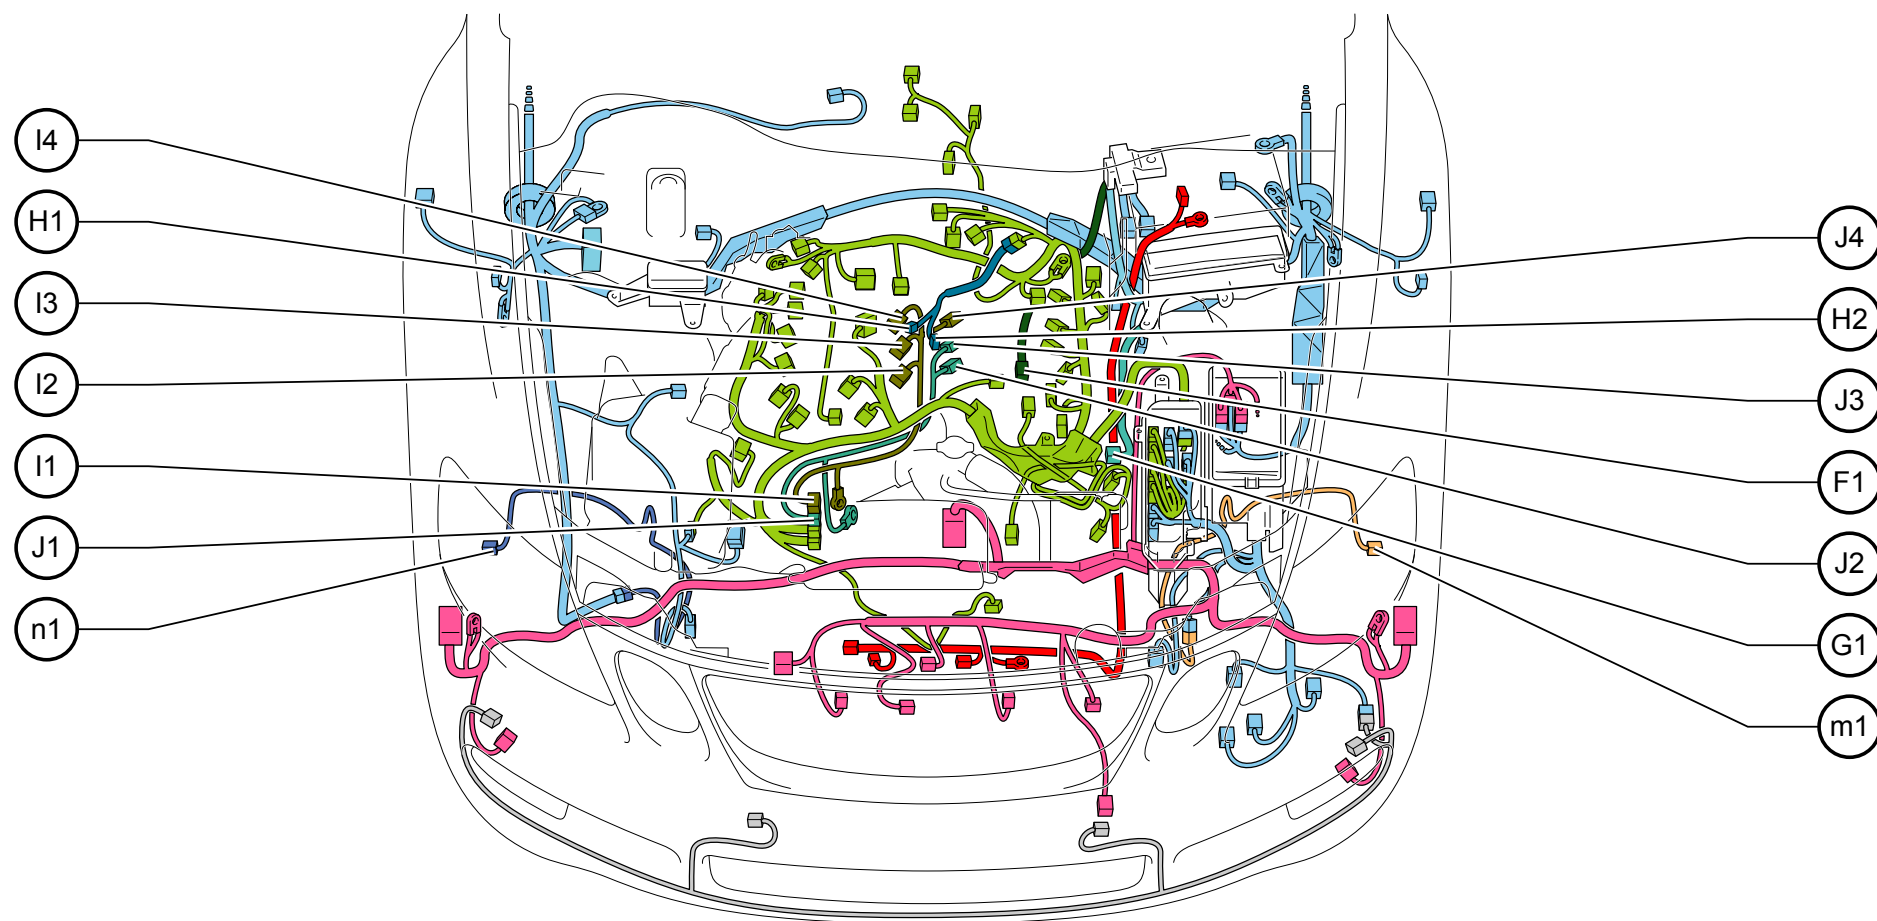


- F 1 Starter (3GR-FSE, 3GR-FE)
- G 1 Alternator (RHD 3GR-FSE, 3GR-FE)
- H 1 Knock Control Sensor (Bank 1)
- H 2 Knock Control Sensor (Bank 2)
- I 1 Injector Driver (EDU)
- I 2 Fuel Injector (No.1)
- I 3 Fuel Injector (No.3) (3GR-FSE)
- I 4 Fuel Injector (No.5) (3GR-FSE)
- J 1 Injector Driver (EDU)
- J 2 Fuel Injector (No.2) (3GR-FSE)
- J 3 Fuel Injector (No.4) (3GR-FSE)
- J 4 Fuel Injector (No.6) (3GR-FSE)
- m 1 Speed Sensor (Front LH)
- n 1 Speed Sensor (Front RH)

       Position of Parts in Engine Compartment <RHD 3GR-FSE>

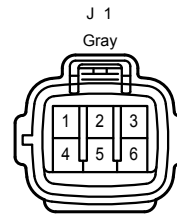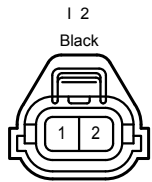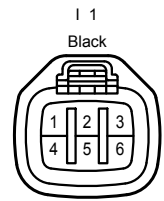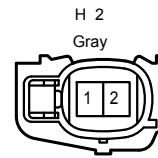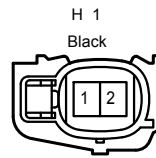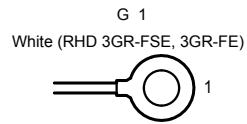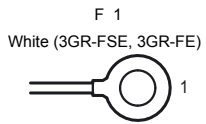

 Position of Parts in Engine Compartment <RHD 3GR-FSE>

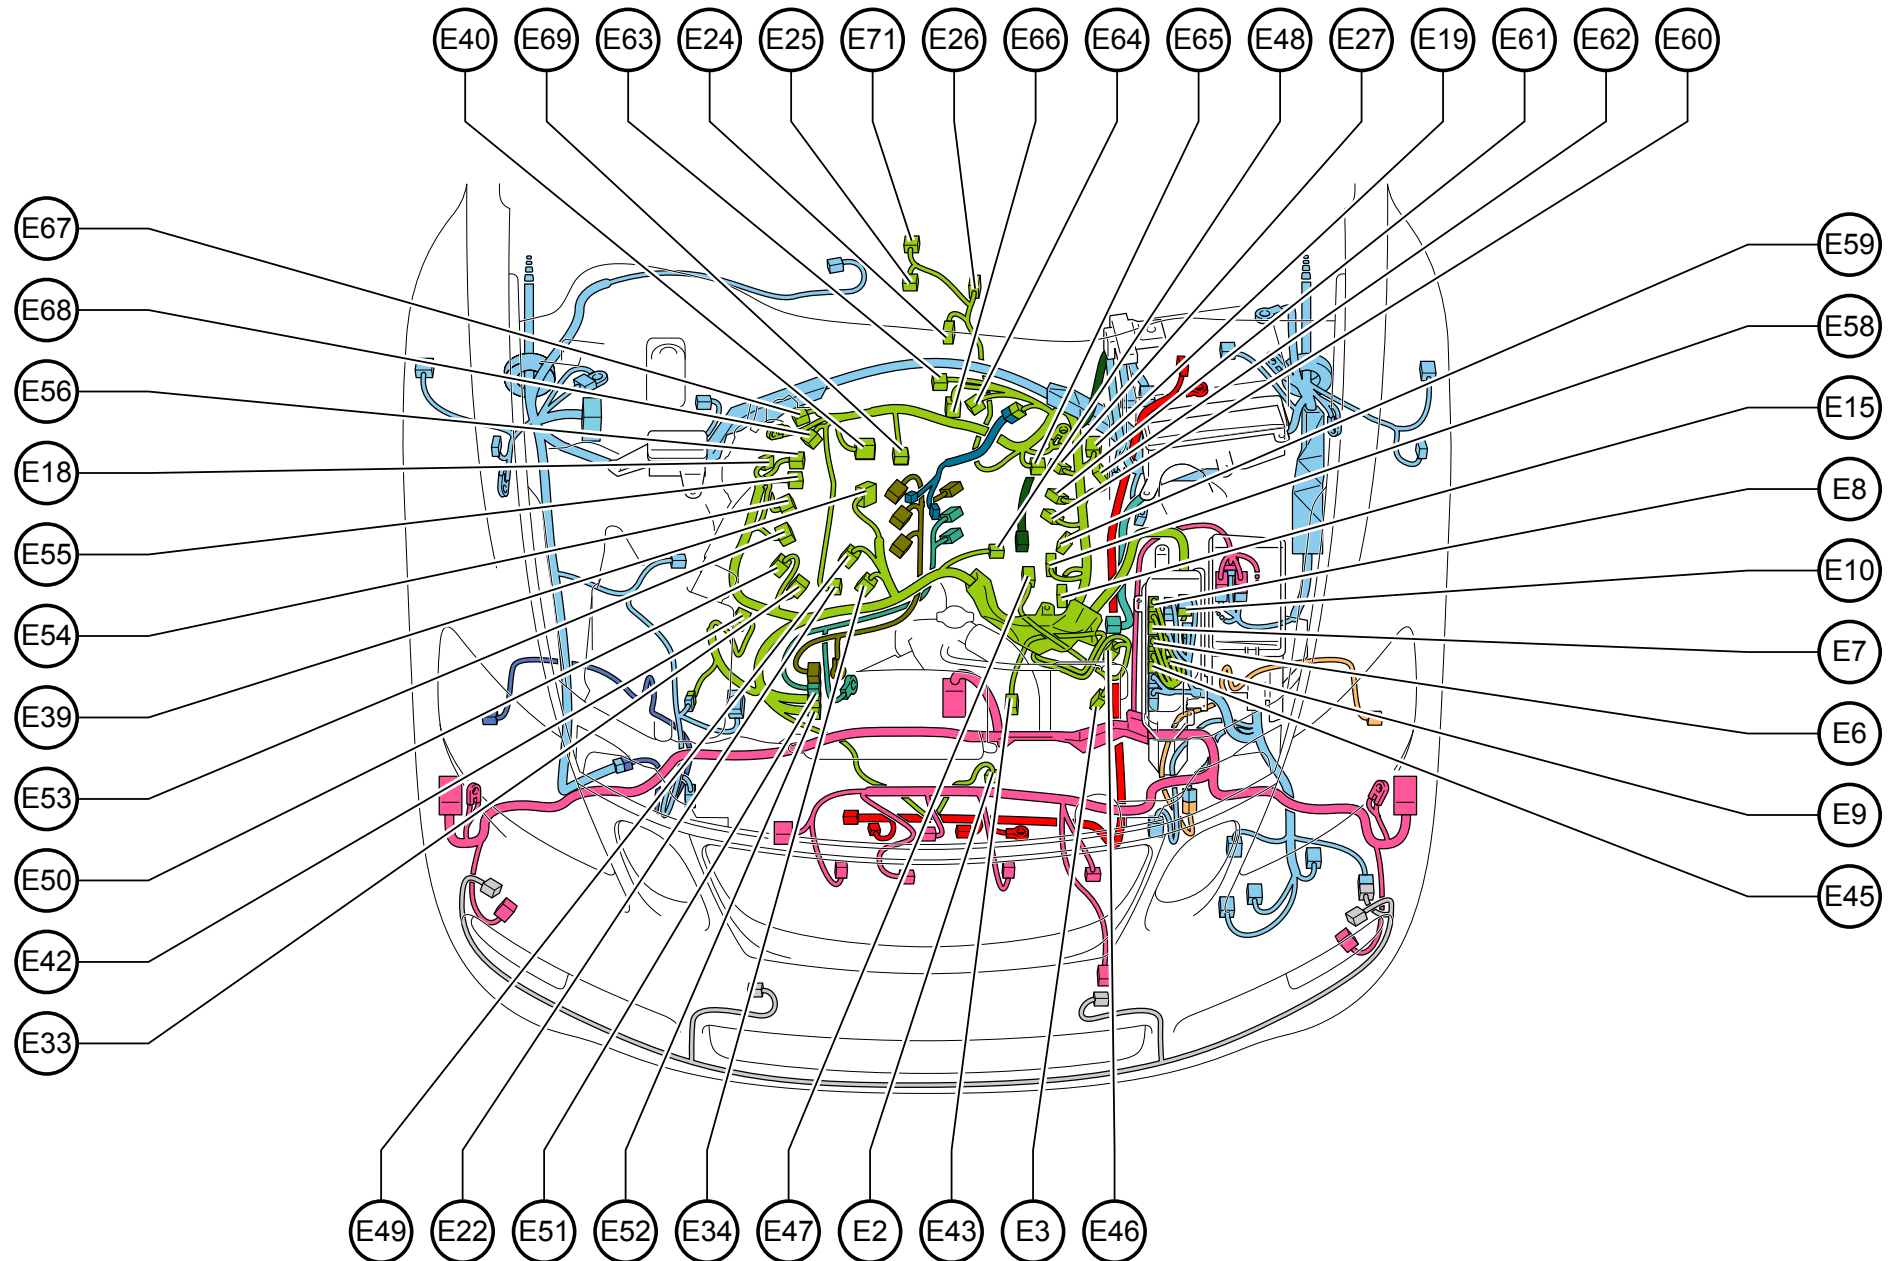

- E 2 Engine Oil Pressure SW
- E 3 Crankshaft Position Sensor (3GR-FSE, 3GR-FE)
- E 6 Engine ECU (3GR-FSE)
- E 7 Engine ECU (3GR-FSE)
- E 8 Engine ECU (3GR-FSE)
- E 9 Junction Connector
- E 10 Junction Connector
- E 15 Crankshaft Position Sensor No.3 (LH Intake Side) (3GR-FSE, 3GR-FE)
- E 18 VSV (EVAP)
- E 19 Noise Filter (Ignition LH)
- E 22 Engine Oil Level Sensor
- E 24 Transmission Revolution Sensor (Turbine)
- E 25 Neutral Start SW (3GR-FSE)
- E 26 ECT Solenoid
- E 27 Ignition Coil (No.6)
- E 33 Noise Filter (Ignition RH)
- E 34 Crankshaft Position Sensor No.2 (RH Intake Side) (3GR-FSE, 3GR-FE)
- E 39 Throttle Body Assembly
- E 40 Water Temp. Sensor (3GR-FSE, 3GR-FE)
- E 42 Air Flow Meter
- E 43 Alternator
- E 45 Engine ECU
- E 46 A/C Compressor
- E 47 Starter
- E 48 Camshaft Timing Oil Control Valve (LH Intake Side)
- E 49 Camshaft Timing Oil Control Valve (RH Intake Side)
- E 50 Camshaft Timing Oil Control Valve (RH Exhaust Side)
- E 51 Injector Driver (EDU)
- E 52 Injector Driver (EDU)
- E 53 Ignition Coil (No.1)
- E 54 Ignition Coil (No.3)
- E 55 Ignition Coil (No.5)
- E 56 Crankshaft Position Sensor No.2 (RH Exhaust Side)
- E 58 VSV (ACIS) (3GR-FSE, 3GR-FE)
- E 59 Camshaft Timing Oil Control Valve (LH Exhaust Side)
- E 60 Ignition Coil (No.2)
- E 61 Ignition Coil (No.4)
- E 62 Crankshaft Position Sensor No.2 (LH Exhaust Side)
- E 63 Swirl Control Valve Sensor
- E 64 Swirl Control Valve Actuator
- E 65 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- E 66 Fuel Pressure Sensor
- E 67 Spill Control Valve
- E 68 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 69 Combustion Heater Glow Plug
- E 71 Transmission Revolution Sensor (Counter Gear)

 
E 2

Gray




E 3

Black (3GR-FSE, 3GR-FE)

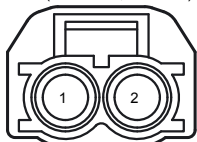


E 6

 White (3GR-FSE)

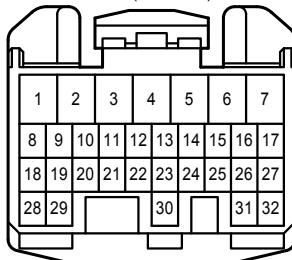


E 7

 White (3GR-FSE)

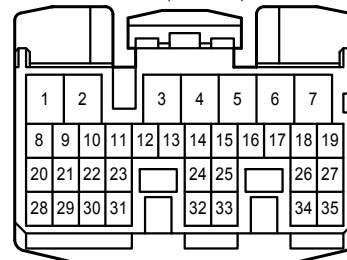


E 8

 White (3GR-FSE)

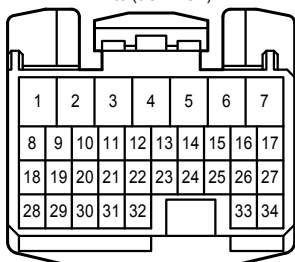


E 9

 White

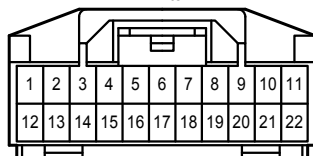


E 10

 Gray

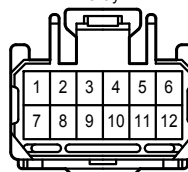


E 15

 Black (3GR-FSE, 3GR-FE)

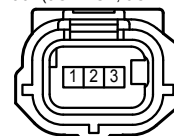

E 18

 Black

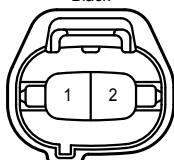

E 19

Gray



 
E 22

Gray




E 24

Black

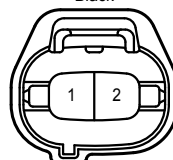


E 25

 Gray (3GR-FSE)

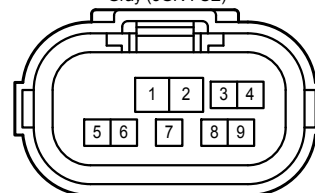


E 26

 Gray

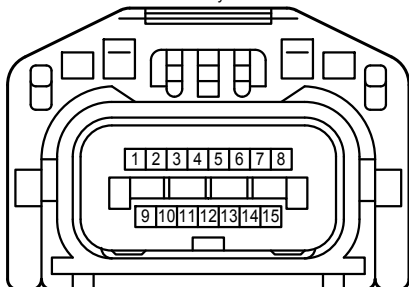

E 27

 Gray




E 33

Gray




E 34

 Black (3GR-FSE, 3GR-FE)

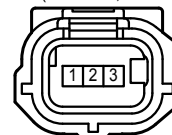

E 39

 Black

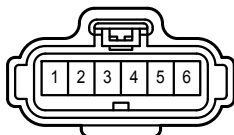

E 40

Dark Gray (3GR-FSE, 3GR-FE)



E 42

 
 
 
 
 
 
 
 
 
 
 
 
 
Black

 


E 43

Black



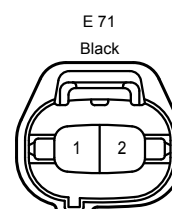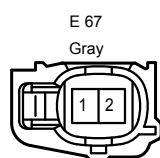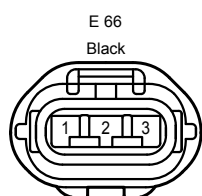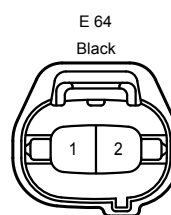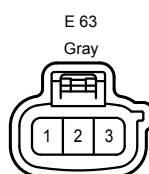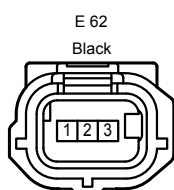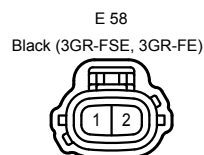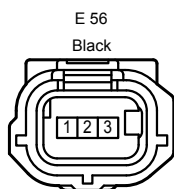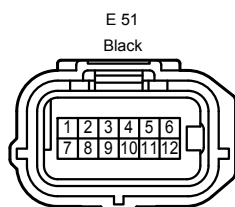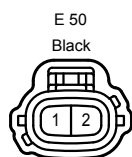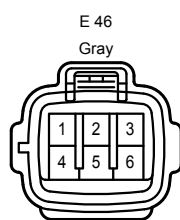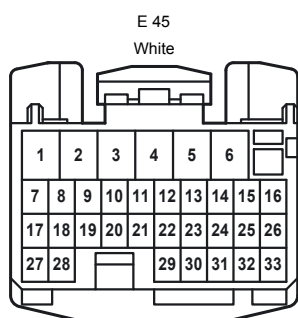


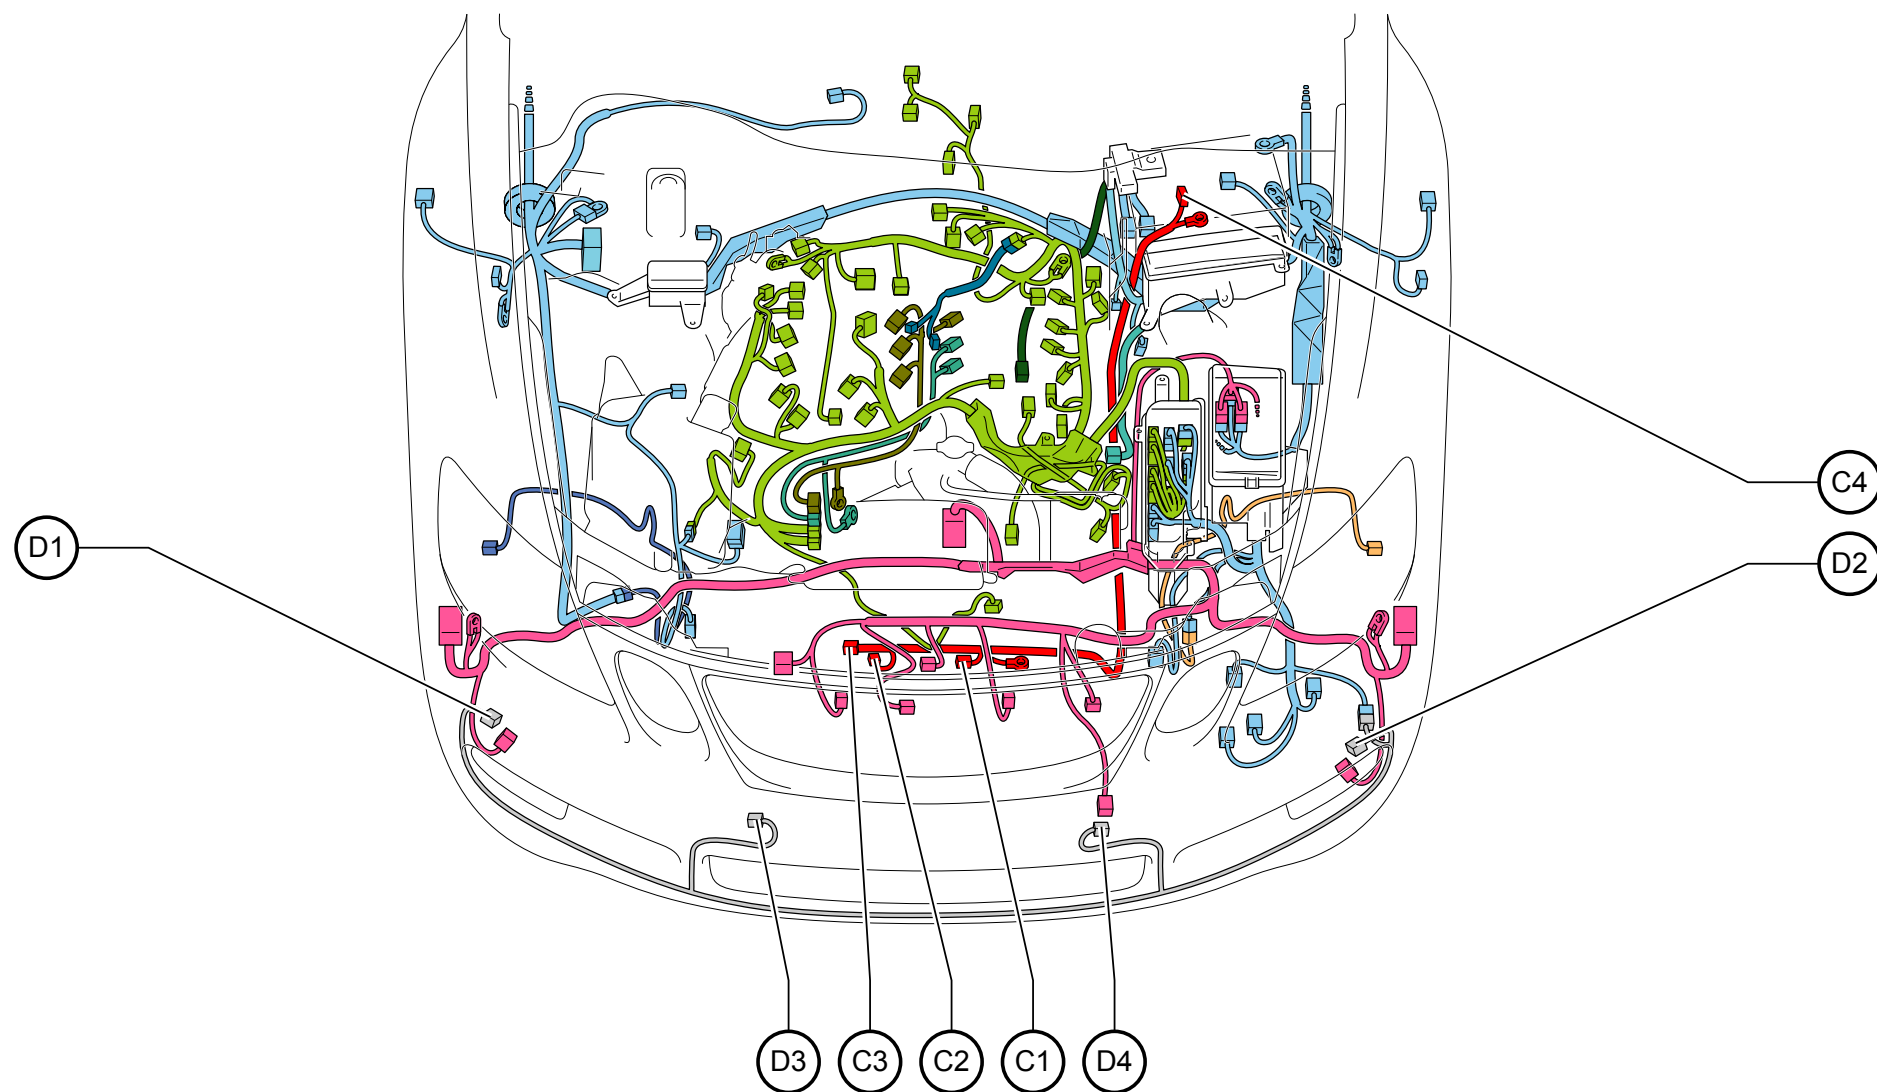


- C 1 Power Steering Motor
- C 2 Power Steering Motor
- C 3 Power Steering Torque Sensor
- C 4 Power Steering ECU

- D 1 Ultrasonic Sensor (Front Corner RH)
- D 2 Ultrasonic Sensor (Front Corner LH)
- D 3 Ultrasonic Sensor (Front Center RH)
- D 4 Ultrasonic Sensor (Front Center LH)

 
C 1
Gray

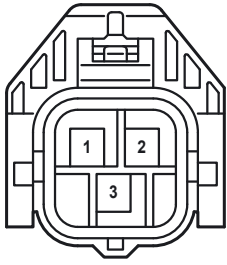


C 2
Gray

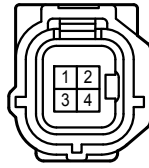 

C 3
Gray

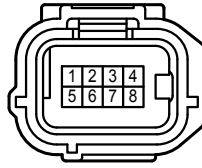 


C 4
Black

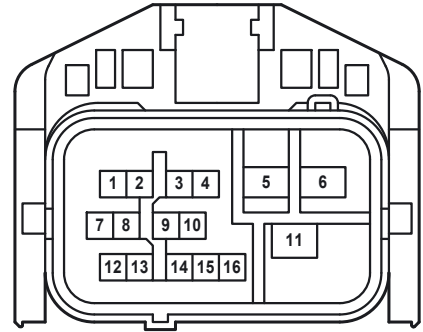 


D 1
Black



 
D 2
Black

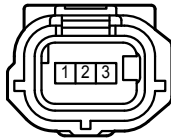


D 3
Black

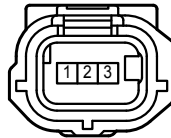 





















D 4
Black










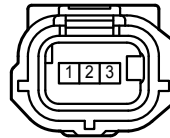 


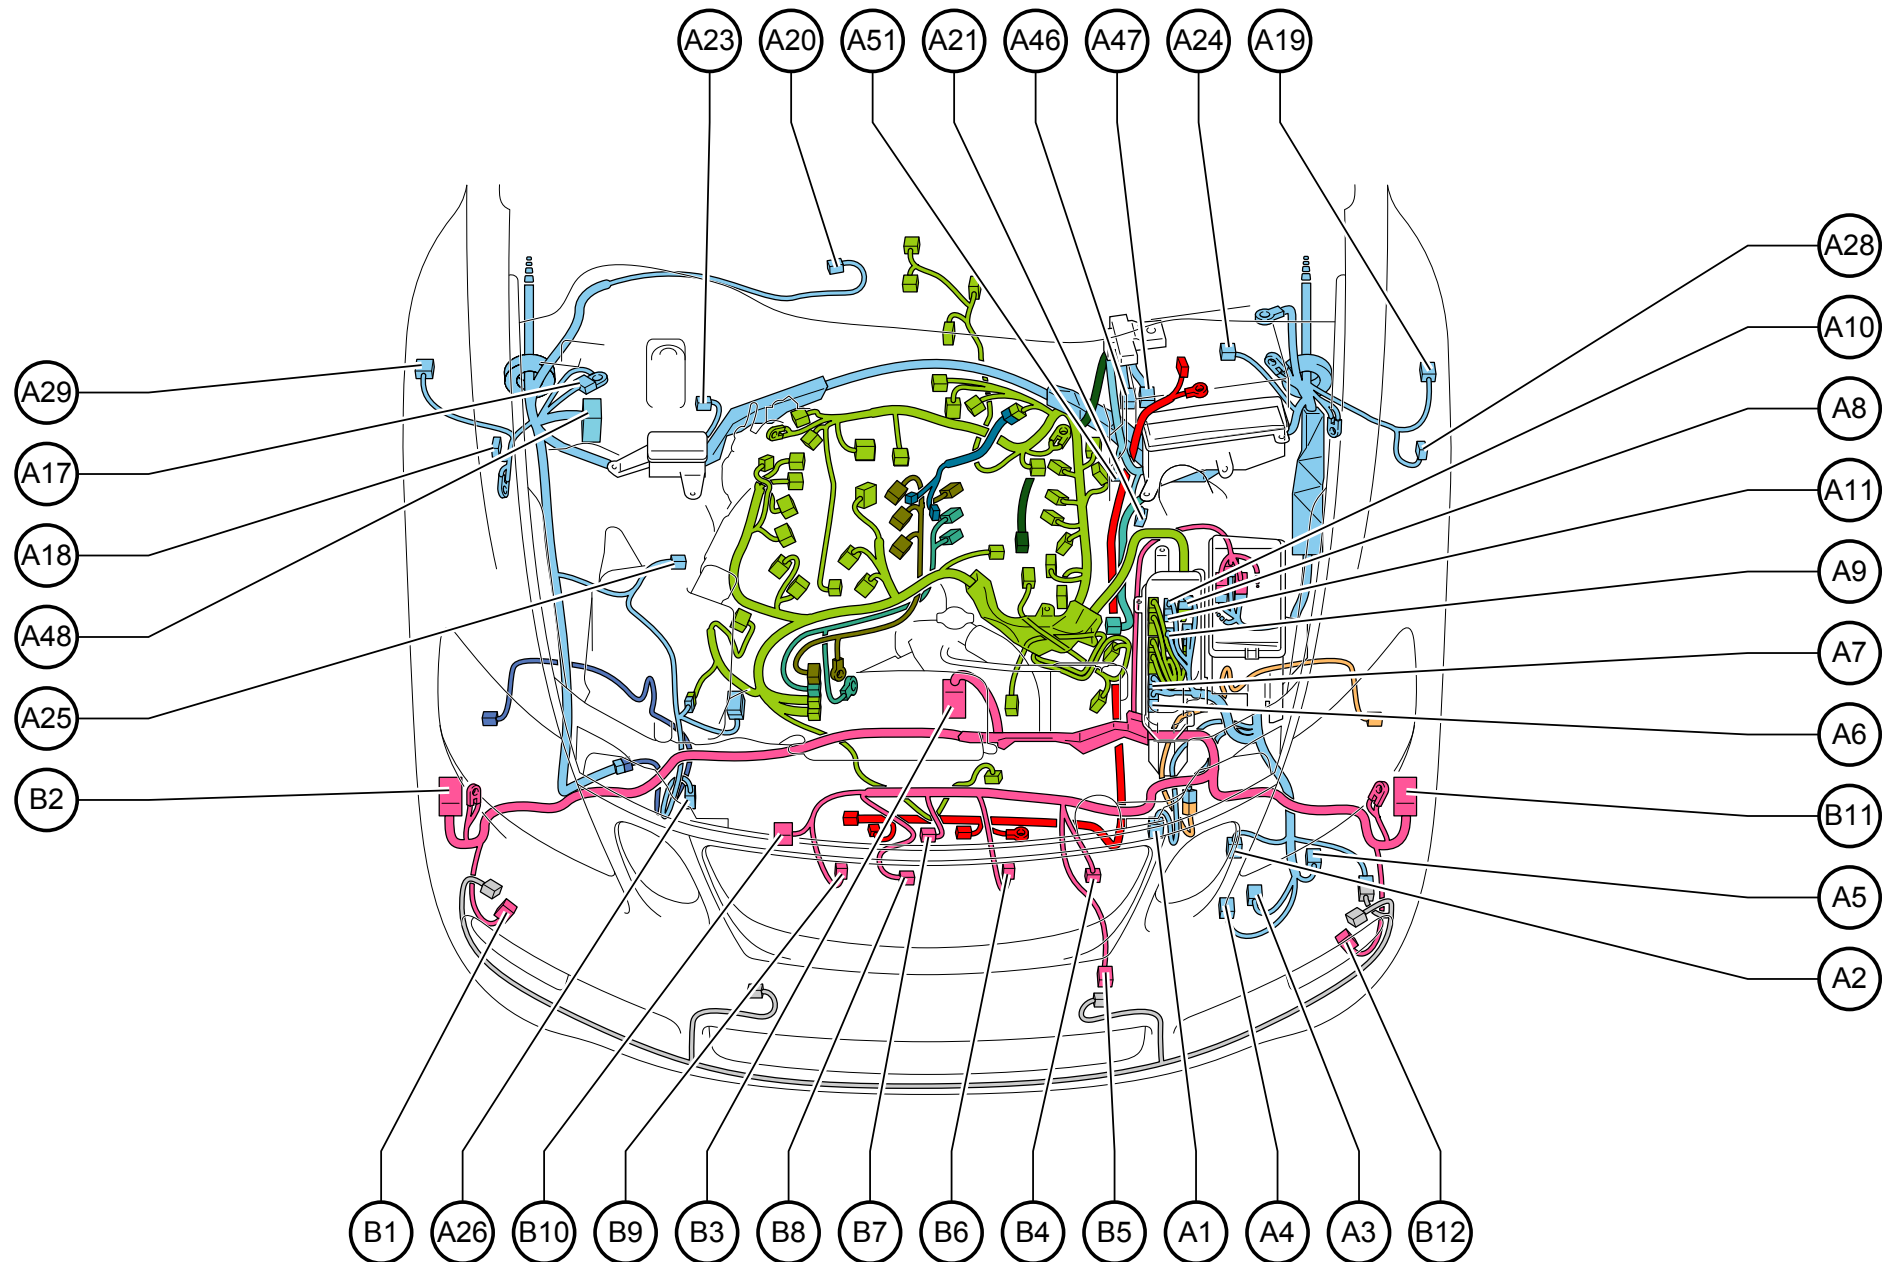 


- A 1 Airbag Sensor (Front LH)
- A 2 Windshield Washer Motor
- A 3 Headlamp Cleaner Motor
- A 4 Water Level Warning SW
- A 5 Headlamp Cleaner Control Relay
- A 6 Engine ECU
- A 7 Engine ECU
- A 8 Junction Connector
- A 9 Junction Connector
- A 10 Junction Connector
- A 11 Junction Connector
- A 17 Junction Connector
- A 18 Wireless Door Lock Buzzer
- A 19 Turn Signal Lamp (Front Side LH)
- A 20 Windshield Wiper Motor (RHD)
- A 21 Height Control Sensor (Front)
- A 23 Brake Fluid Level Warning SW
- A 24 Power Steering ECU
- A 25 Fuel Pump Resistor (3GR-FSE, 3GR-FE)
- A 26 Airbag Sensor (Front RH)
- A 28 Security Horn
- A 29 Turn Signal Lamp (Front Side RH)
- A 46 Battery Current Sensor
- A 47 Battery Thermometer Sensor
- A 48 Skid Control ECU with Actuator
- A 51 A/C Pressure Sensor (Low)

                               - B 1 Fog Lamp (Front RH)
- B 2 Headlamp Assembly (RH)
- B 3 Cooling Fan ECU
- B 4 A/C Pressure Sensor
- B 5 Ambient Temp. Sensor
- B 6 Horn (High)
- B 7 Engine Hood Courtesy SW
- B 8 Millimeter Wave Radar Sensor
- B 9 Horn (Low)
- B 10 Smog Ventilation Sensor
- B 11 Headlamp Assembly (LH)
- B 12 Fog Lamp (Front LH)

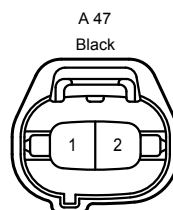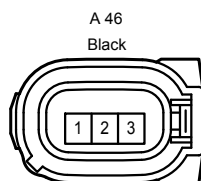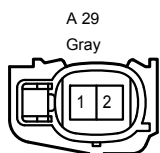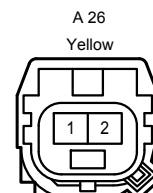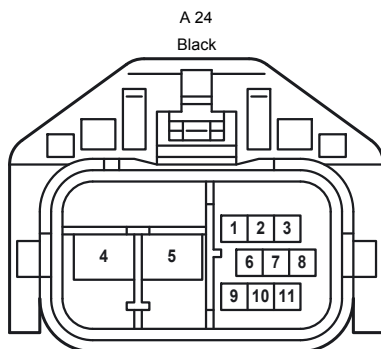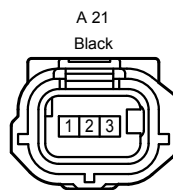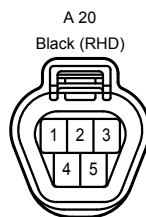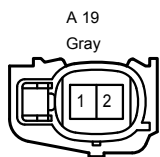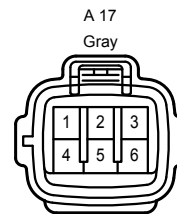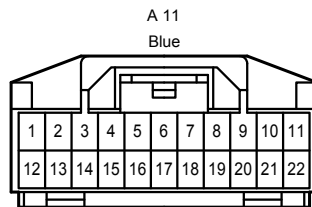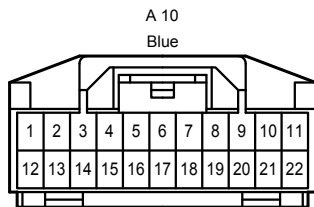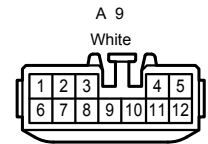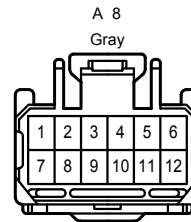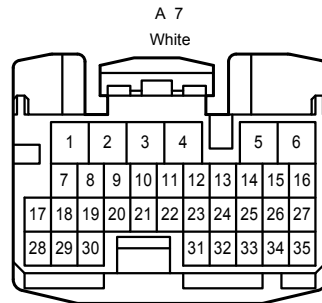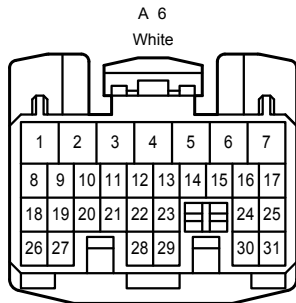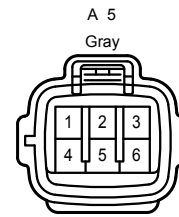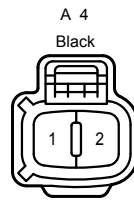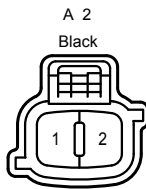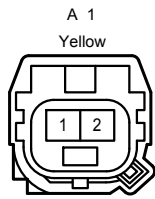

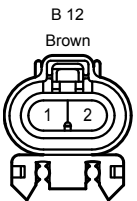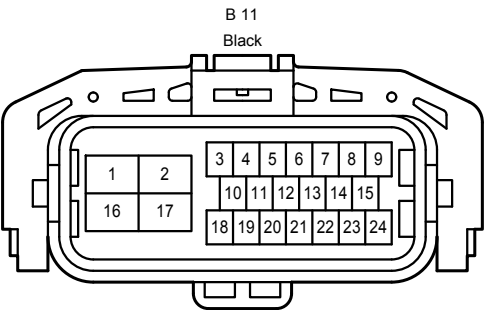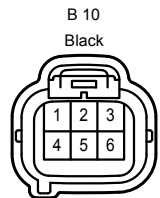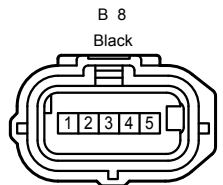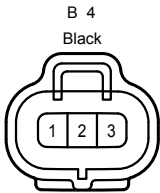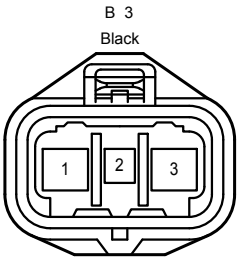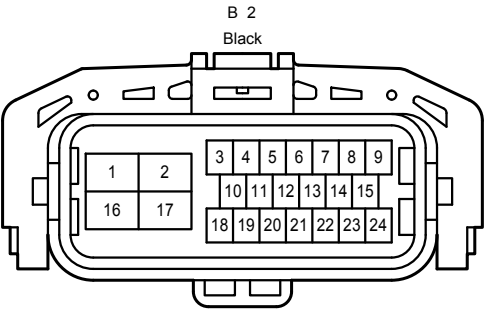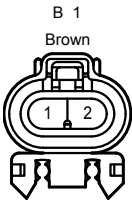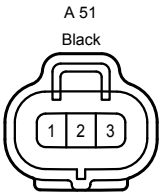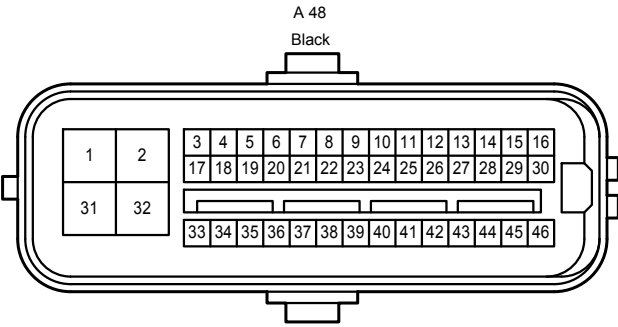

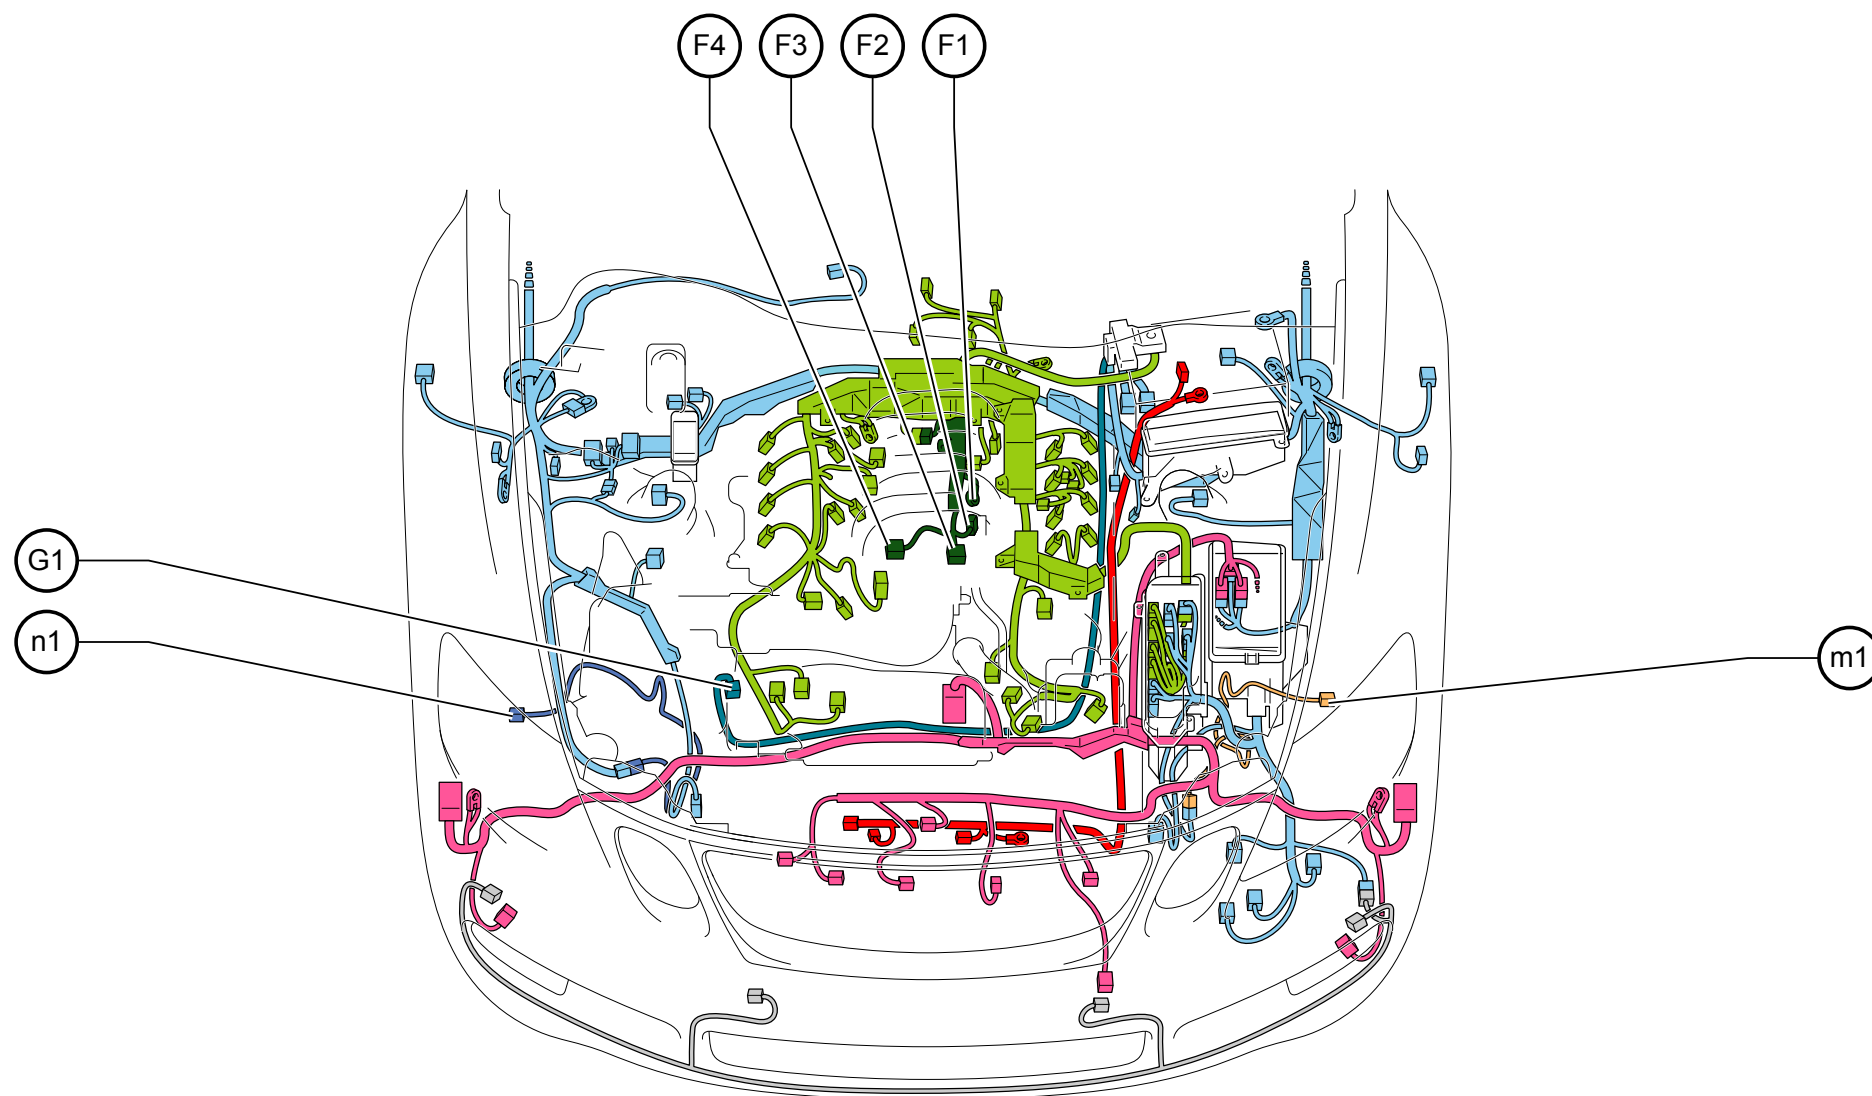







- F 1 Starter (3UZ-FE)
- F 2 Starter
- F 3 Knock Control Sensor (Bank 1)
- F 4 Knock Control Sensor (Bank 2)

- G 1 Alternator (3UZ-FE)


- m 1 Speed Sensor (Front LH)

- n 1 Speed Sensor (Front RH)

      Position of Parts in Engine Compartment <RHD 3UZ-FE>

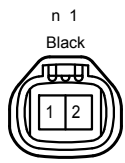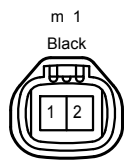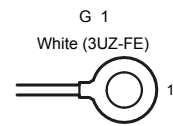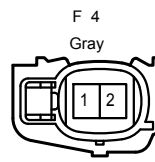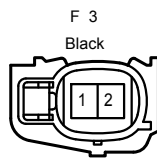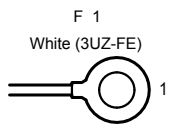

 Position of Parts in Engine Compartment <RHD 3UZ-FE>

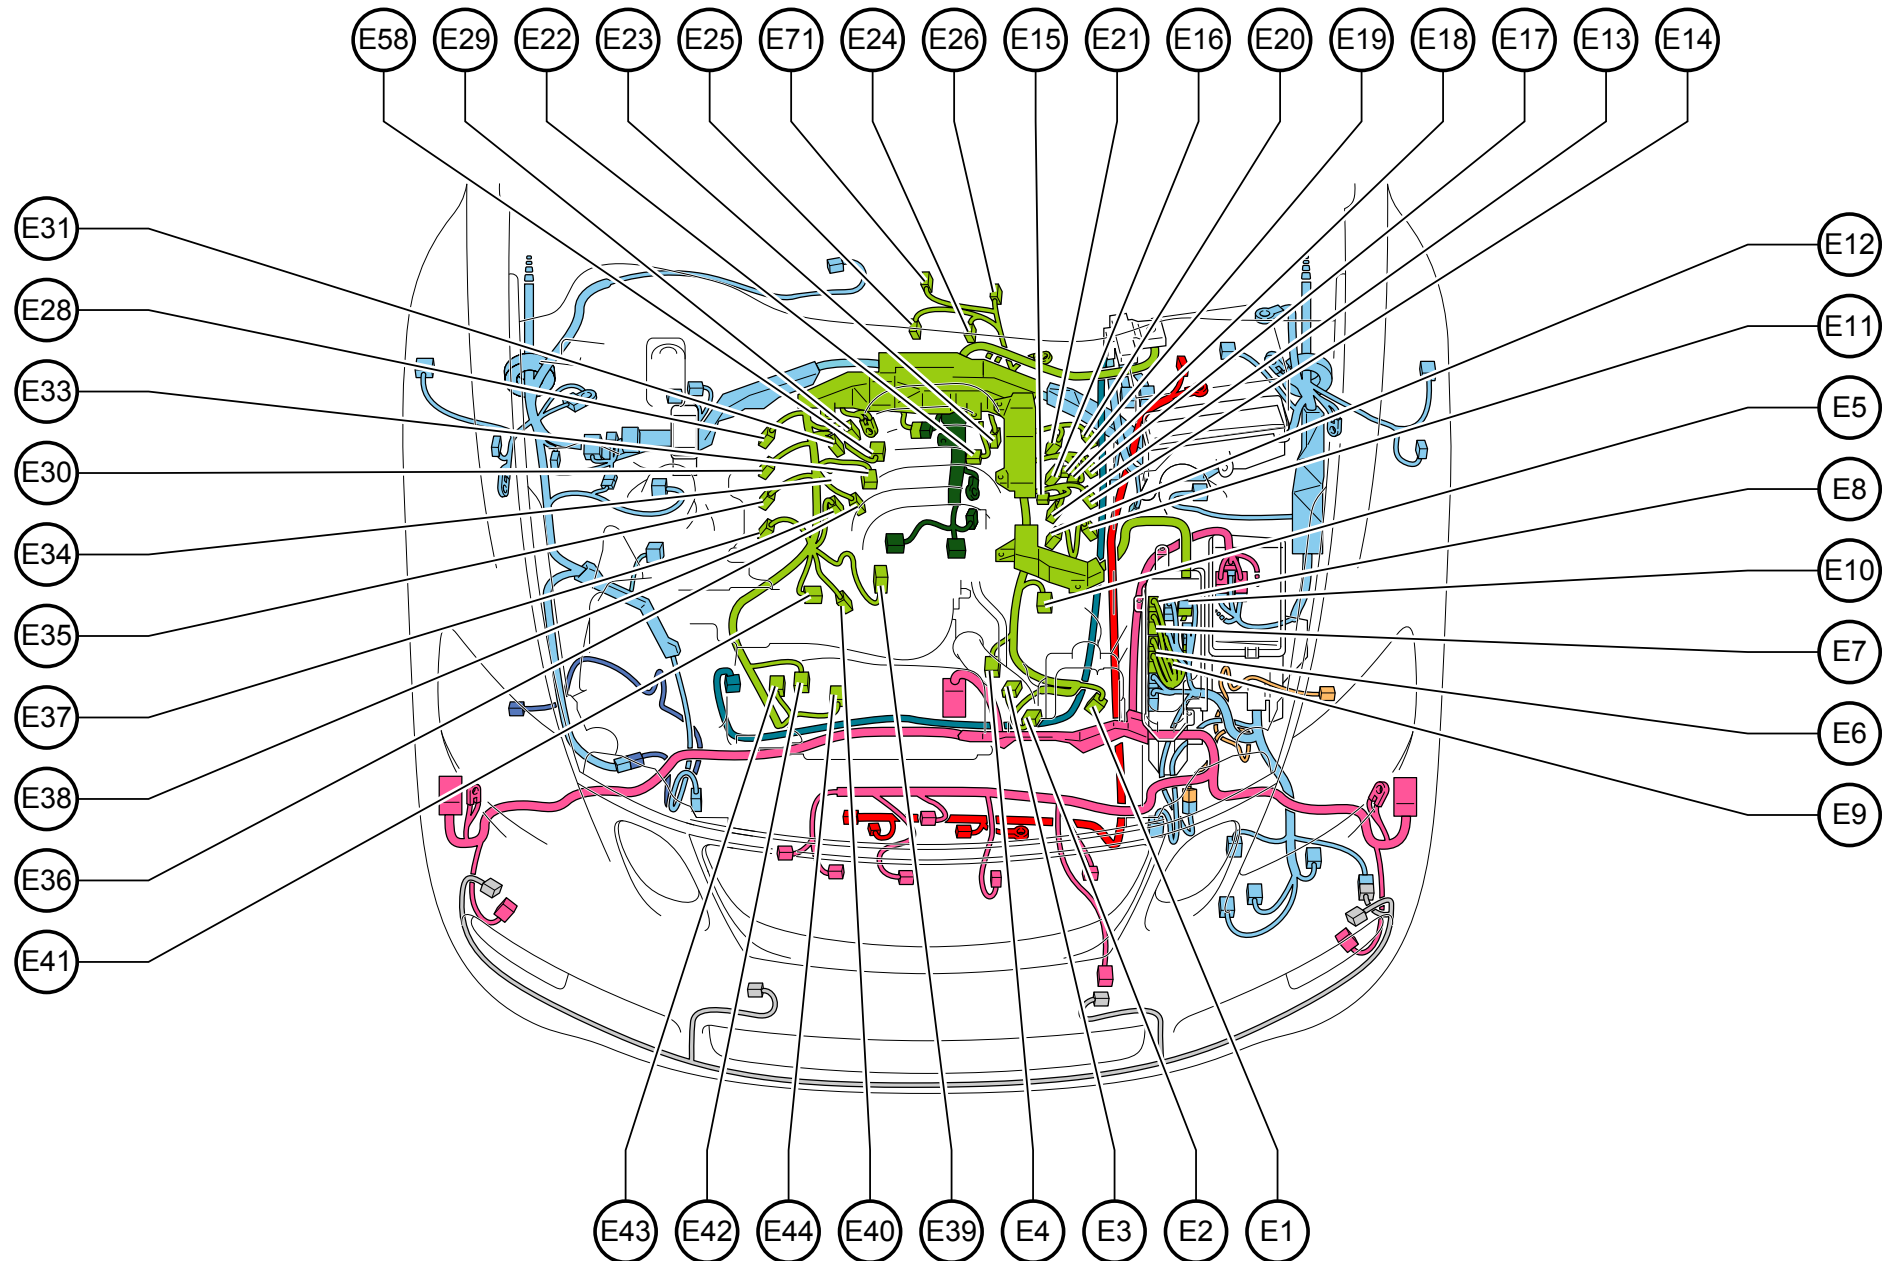


- E 1 A/C Compressor
- E 2 Engine Oil Pressure SW
- E 3 Crankshaft Position Sensor (3UZ-FE)
- E 4 Camshaft Position Sensor
- E 5 Camshaft Timing Oil Control Valve (LH)
- E 6 Engine ECU (3UZ-FE, 3GR-FE)
- E 7 Engine ECU (3UZ-FE, 3GR-FE)
- E 8 Engine ECU (3UZ-FE, 3GR-FE)
- E 9 Junction Connector
- E 10 Junction Connector
- E 11 Ignition Coil (No.1)
- E 12 Fuel Injector (No.1) (3UZ-FE)
- E 13 Fuel Injector (No.3)
- E 14 Ignition Coil (No.3)
- E 15 Crankshaft Position Sensor No.3 (LH Intake Side) (3UZ-FE)
- E 16 Fuel Injector (No.5)
- E 17 Ignition Coil (No.5)
- E 18 VSV (EVAP)
- E 19 Noise Filter (Ignition LH)
- E 20 Ignition Coil (No.7)
- E 21 Fuel Injector (No.7)
- E 22 Engine Oil Level Sensor
- E 23 Heated Oxygen Sensor (Bank 1 Sensor 1)
- E 24 Transmission Revolution Sensor (Turbine)
- E 25 Neutral Start SW (3UZ-FE, 3GR-FE)
- E 26 ECT Solenoid
- E 28 Ignition Coil (No.8)
- E 29 Fuel Injector (No.8)
- E 30 Ignition Coil (No.6)
- E 31 Fuel Injector (No.6)
- E 33 Noise Filter (Ignition RH)
- E 34 Crankshaft Position Sensor No.2 (RH Intake Side) (3UZ-FE)
- E 35 Ignition Coil (No.4)
- E 36 Fuel Injector (No.4)
- E 37 Ignition Coil (No.2)
- E 38 Fuel Injector (No.2)
- E 39 Throttle Body Assembly
- E 40 Water Temp. Sensor (3UZ-FE)
- E 41 Camshaft Timing Oil Control Valve (RH)
- E 42 Air Flow Meter
- E 43 Alternator
- E 44 Heated Oxygen Sensor (Bank 2 Sensor 1)
- E 58 VSV (ACIS) (3UZ-FE)
- E 71 Transmission Revolution Sensor (Counter Gear)

Position of Parts in Engine Compartment <RHD 3UZ-FE>

E 1

 Black

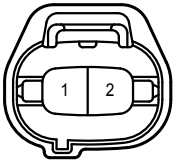

E 2

Gray



E 3

Dark Gray (3UZ-FE)



E 4

Dark Gray



 
E 5

Black




E 6

White (3UZ-FE, 3GR-FE)

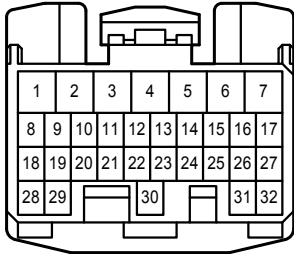


E 7

 White (3UZ-FE, 3GR-FE)

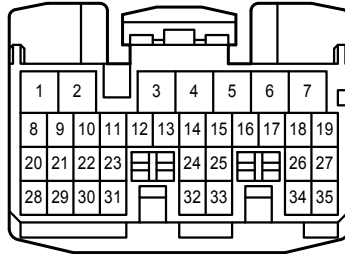


E 8

 White (3UZ-FE, 3GR-FE)

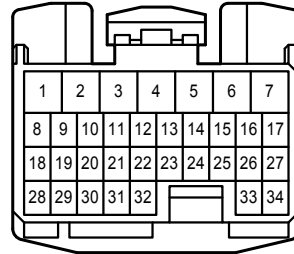


E 9

 White

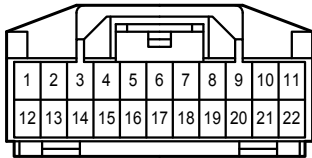


E 10

 Gray

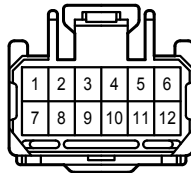

E 11

 Black



E 12

Blue (3UZ-FE)



 
E 13

Blue



E 14

Black



E 15

Dark Gray (3UZ-FE)



 
E 16

Blue




E 17

Black



E 18

 Black

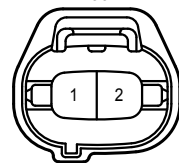


E 19

Gray



E 20

 Black



E 21

Blue



E 22

Gray



 
E 23

Dark Gray




E 24

Black

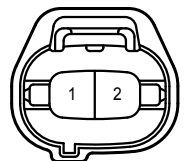


E 25

 Gray (3UZ-FE, 3GR-FE)

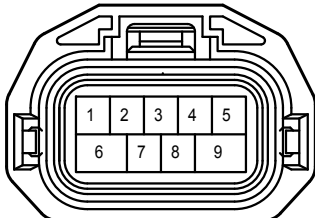


E 26

 Gray

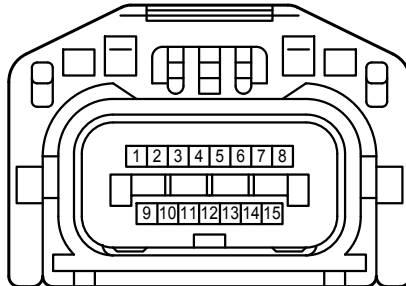

E 28









 
Black




E 29

          Blue



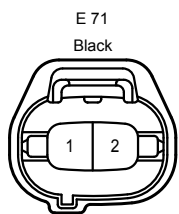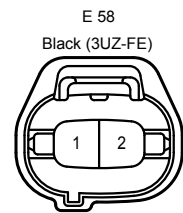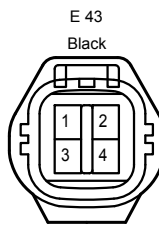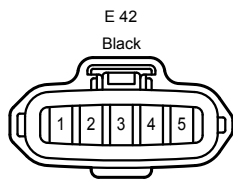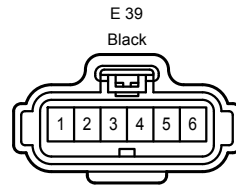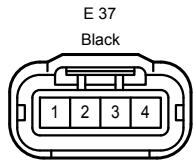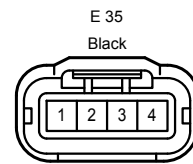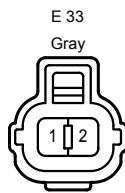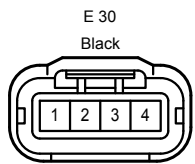


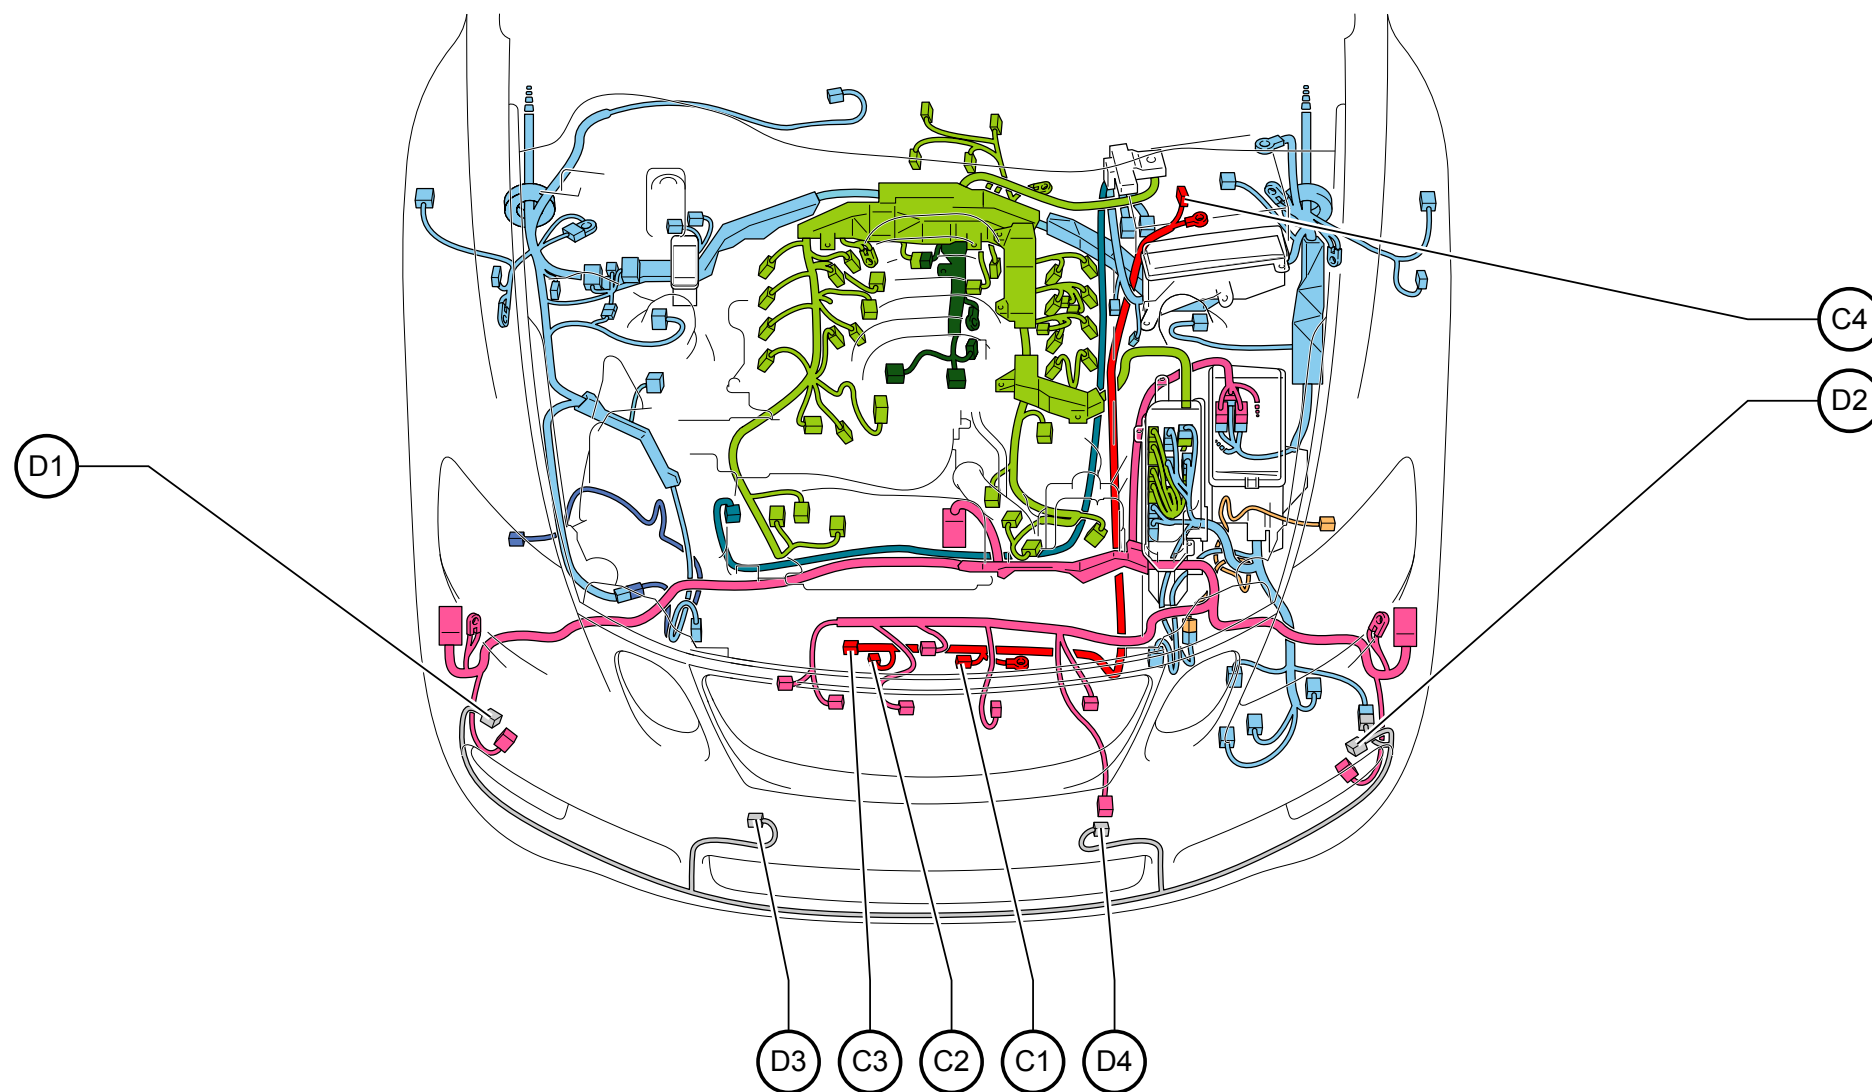


- C 1 Power Steering Motor
- C 2 Power Steering Motor
- C 3 Power Steering Torque Sensor
- C 4 Power Steering ECU

- D 1 Ultrasonic Sensor (Front Corner RH)
- D 2 Ultrasonic Sensor (Front Corner LH)
- D 3 Ultrasonic Sensor (Front Center RH)
- D 4 Ultrasonic Sensor (Front Center LH)

 
C 1
Gray

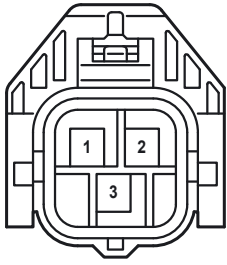


C 2
Gray

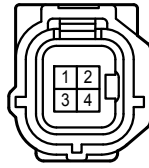 

C 3
Gray

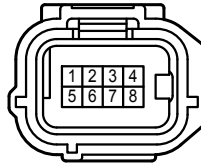 


C 4
Black

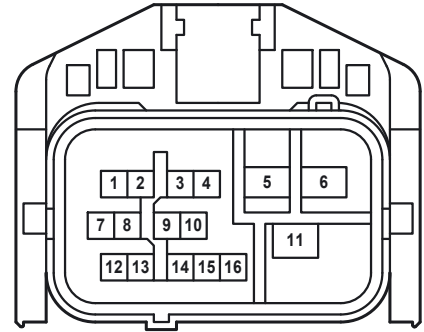 


D 1
Black



 
D 2
Black

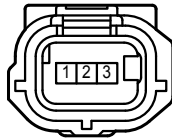


D 3
Black

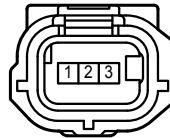 

D 4
Black




















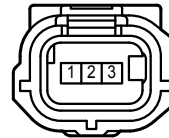 


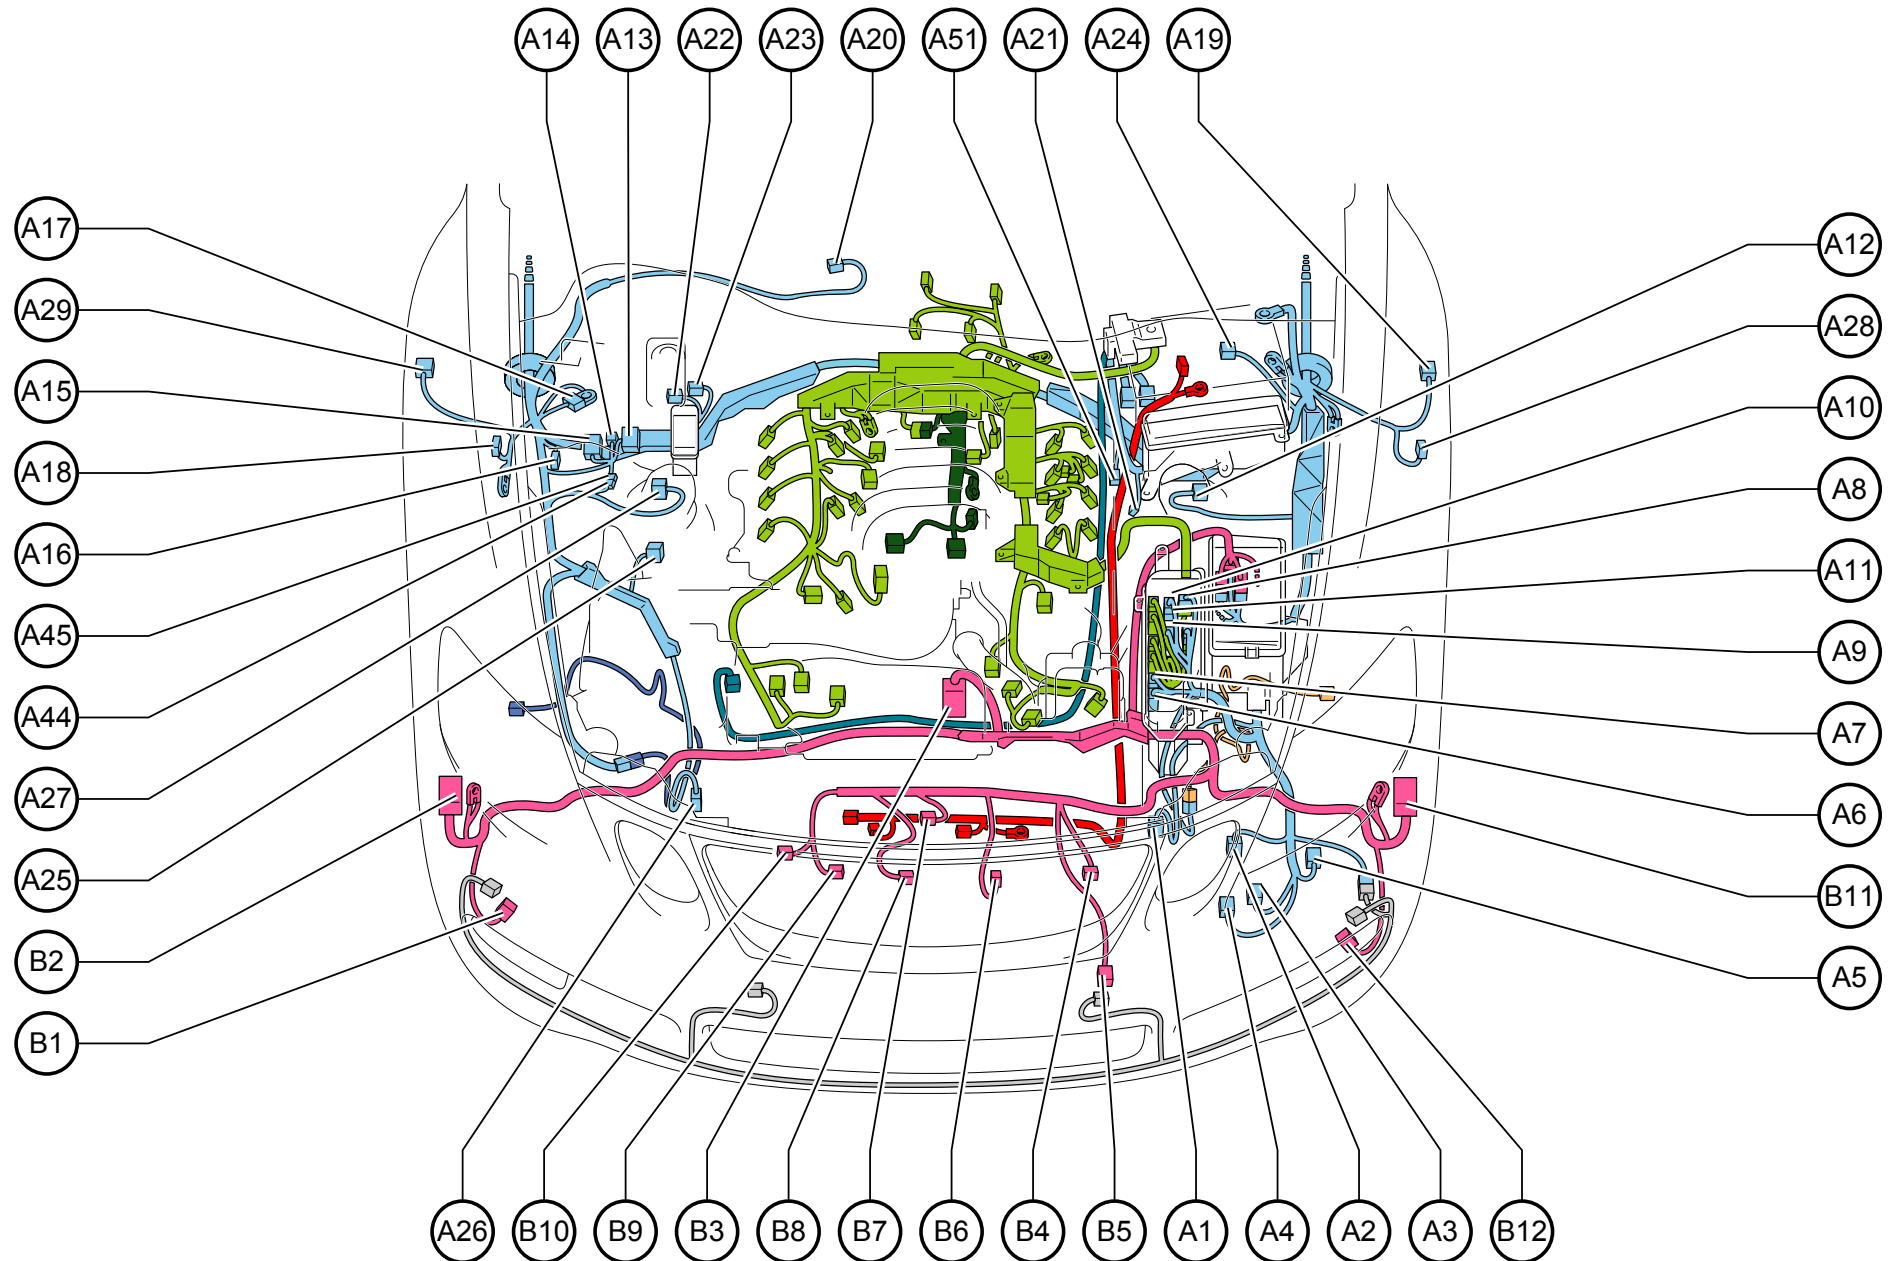 

- A 1 Airbag Sensor (Front LH)
- A 2 Windshield Washer Motor
- A 3 Headlamp Cleaner Motor
- A 4 Water Level Warning SW
- A 5 Headlamp Cleaner Control Relay
- A 6 Engine ECU
- A 7 Engine ECU
- A 8 Junction Connector
- A 9 Junction Connector
- A 10 Junction Connector
- A 11 Junction Connector
- A 12 Absorber Control Actuator (Front LH)
- A 13 Skid Control ECU
- A 14 Skid Control ECU
- A 15 Skid Control ECU
- A 16 Brake Actuator
- A 17 Junction Connector
- A 18 Wireless Door Lock Buzzer
- A 19 Turn Signal Lamp (Front Side LH)
- A 20 Windshield Wiper Motor (RHD)
- A 21 Height Control Sensor (Front)
- A 22 Brake Stroke Simulator Cylinder
- A 23 Brake Fluid Level Warning SW
- A 24 Power Steering ECU
- A 25 Fuel Pump Resistor (3UZ-FE)
- A 26 Airbag Sensor (Front RH)
- A 27 Absorber Control Actuator (Front RH)
- A 28 Security Horn
- A 29 Turn Signal Lamp (Front Side RH)
- A 44 Short Connector (Brake Stroke Simulator Cylinder)
- A 45 Short Connector (Brake Stroke Simulator Cylinder)
- A 51 A/C Pressure Sensor (Low)

- B 1 Fog Lamp (Front RH)
- B 2 Headlamp Assembly (RH)
- B 3 Cooling Fan ECU
- B 4 A/C Pressure Sensor
- B 5 Ambient Temp. Sensor
- B 6 Horn (High)
- B 7 Engine Hood Courtesy SW
- B 8 Millimeter Wave Radar Sensor
- B 9 Horn (Low)
- B 10 Smog Ventilation Sensor
- B 11 Headlamp Assembly (LH)
- B 12 Fog Lamp (Front LH)

                    Position of Parts in Engine Compartment <RHD 3UZ-FE>

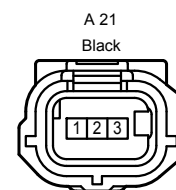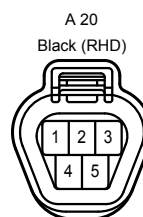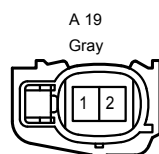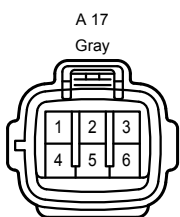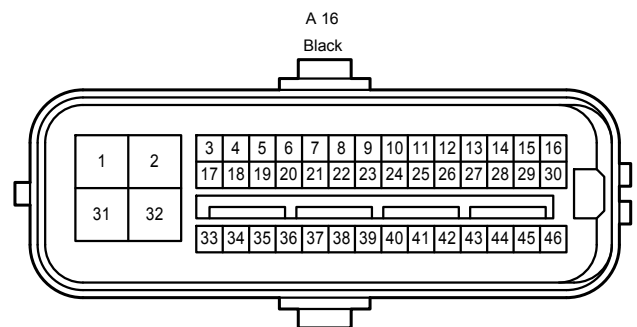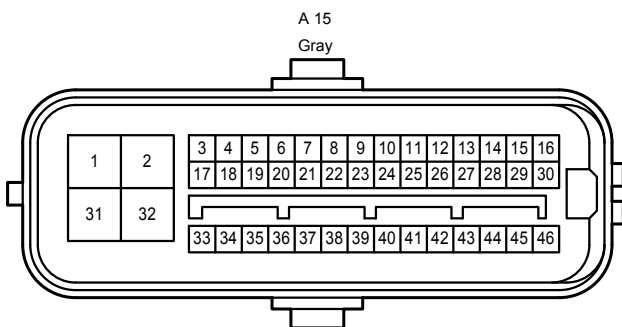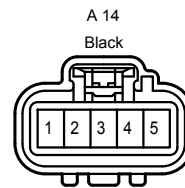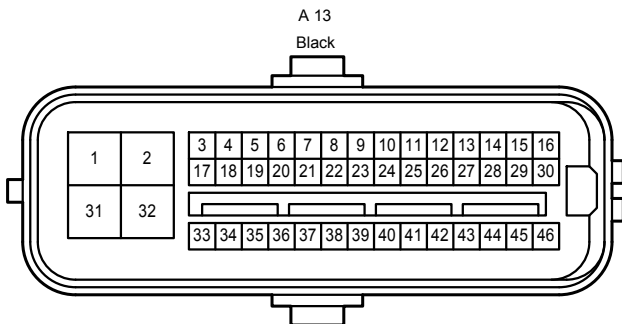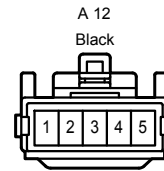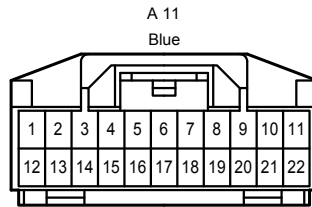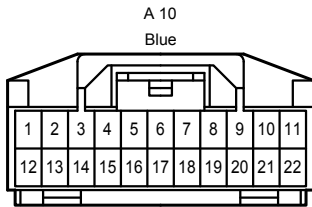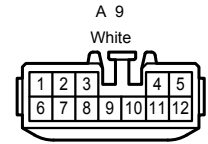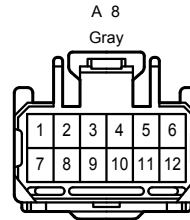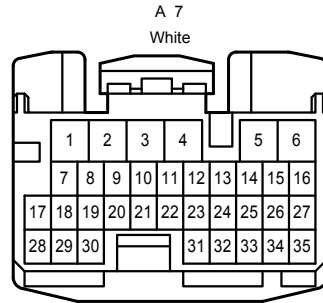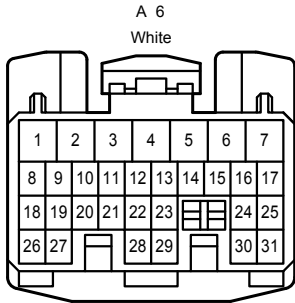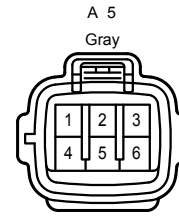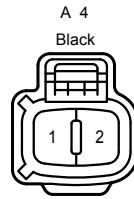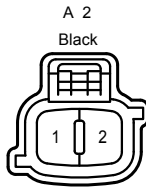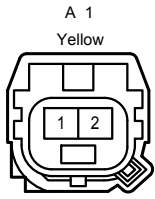

Position of Parts in Engine Compartment <RHD 3UZ-FE>

