



GROUND POINT


*1 : TMC MADE
 *2 : TMM MADE
 *3 : W/ POWER WINDOW
 *4 : W/O POWER WINDOW
 *5 : AIR CONDITIONING (PUSH CONTROL SW TYPE)
 *6 : AIR CONDITIONING (LEVER CONTROL SW TYPE)

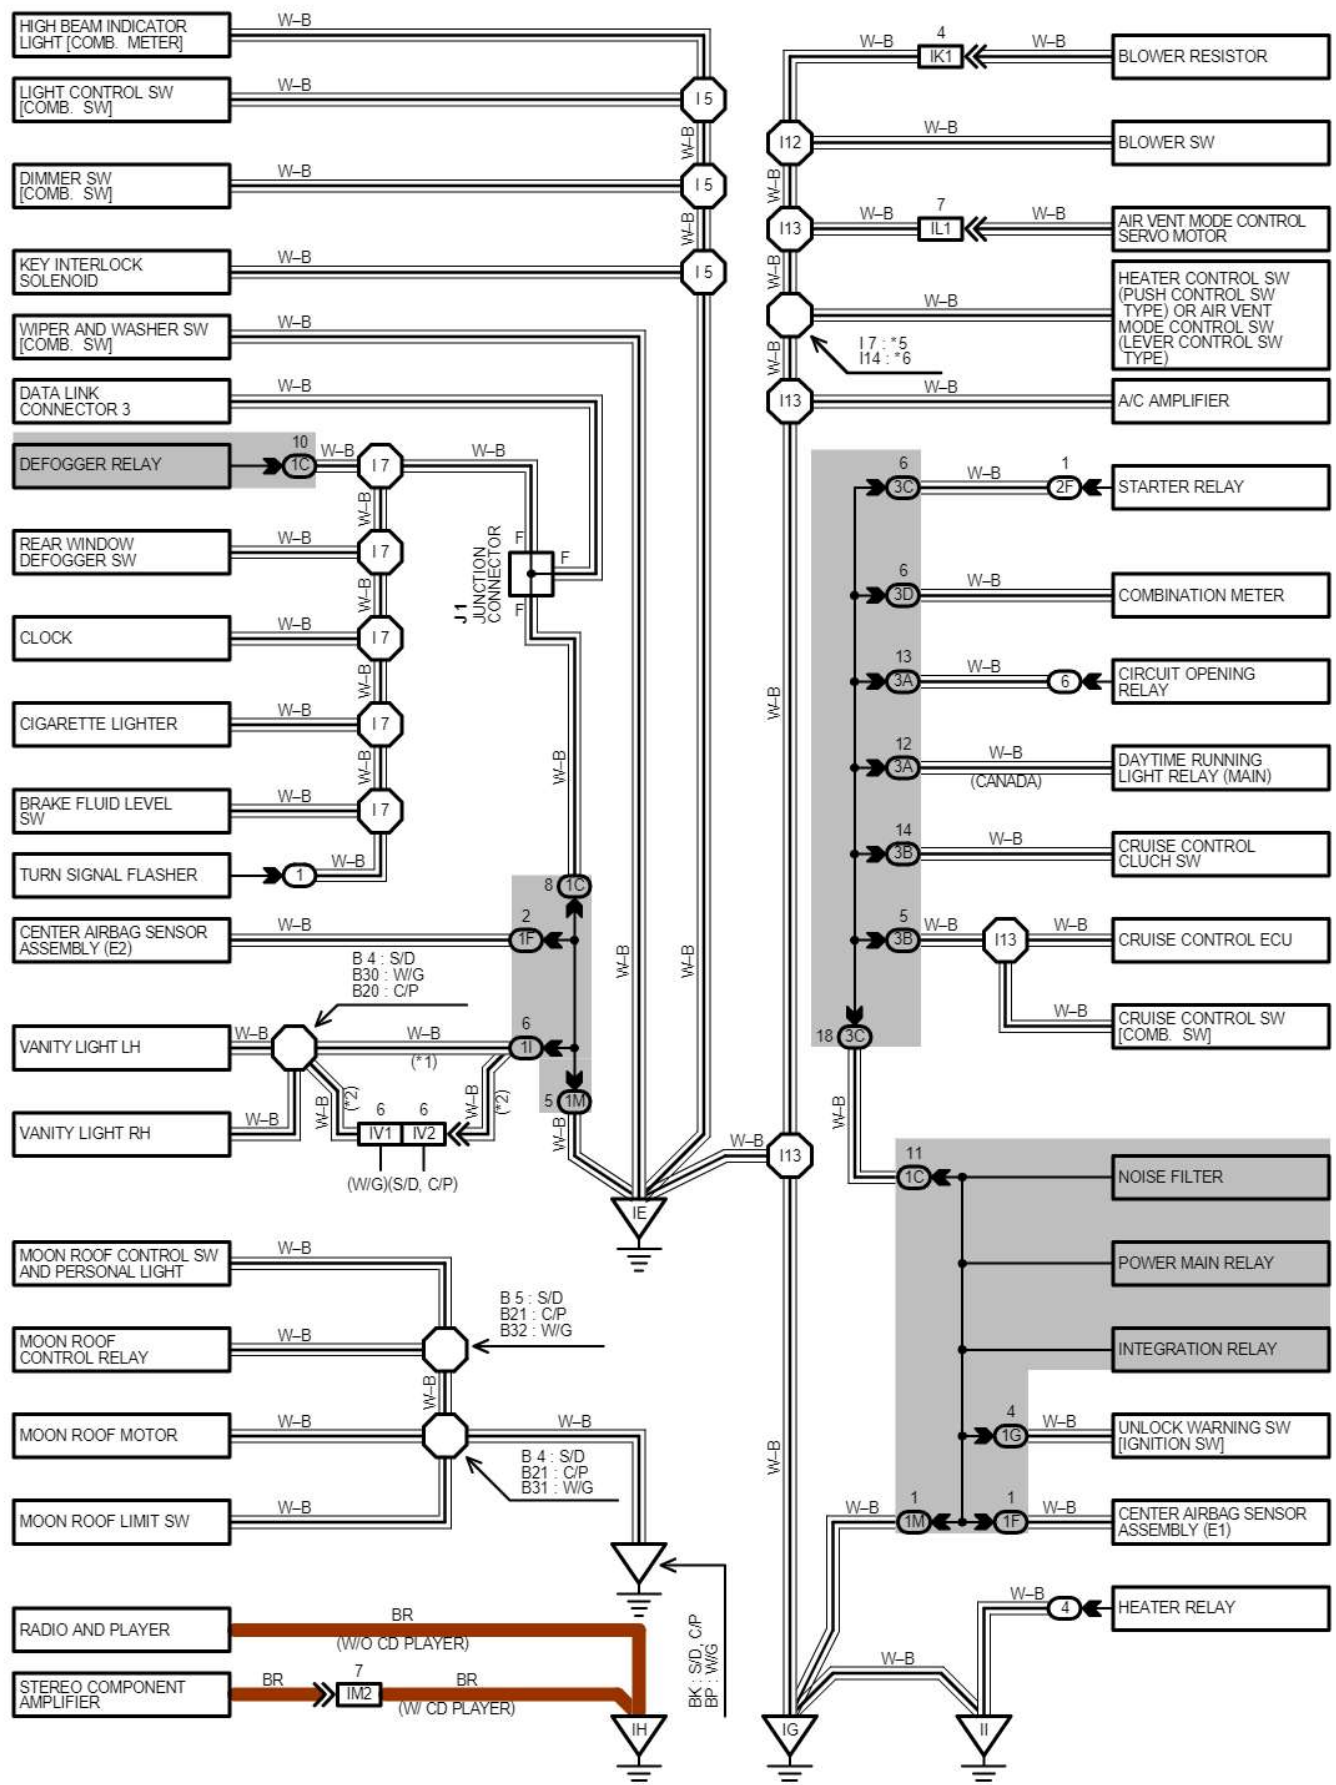



GROUND POINT

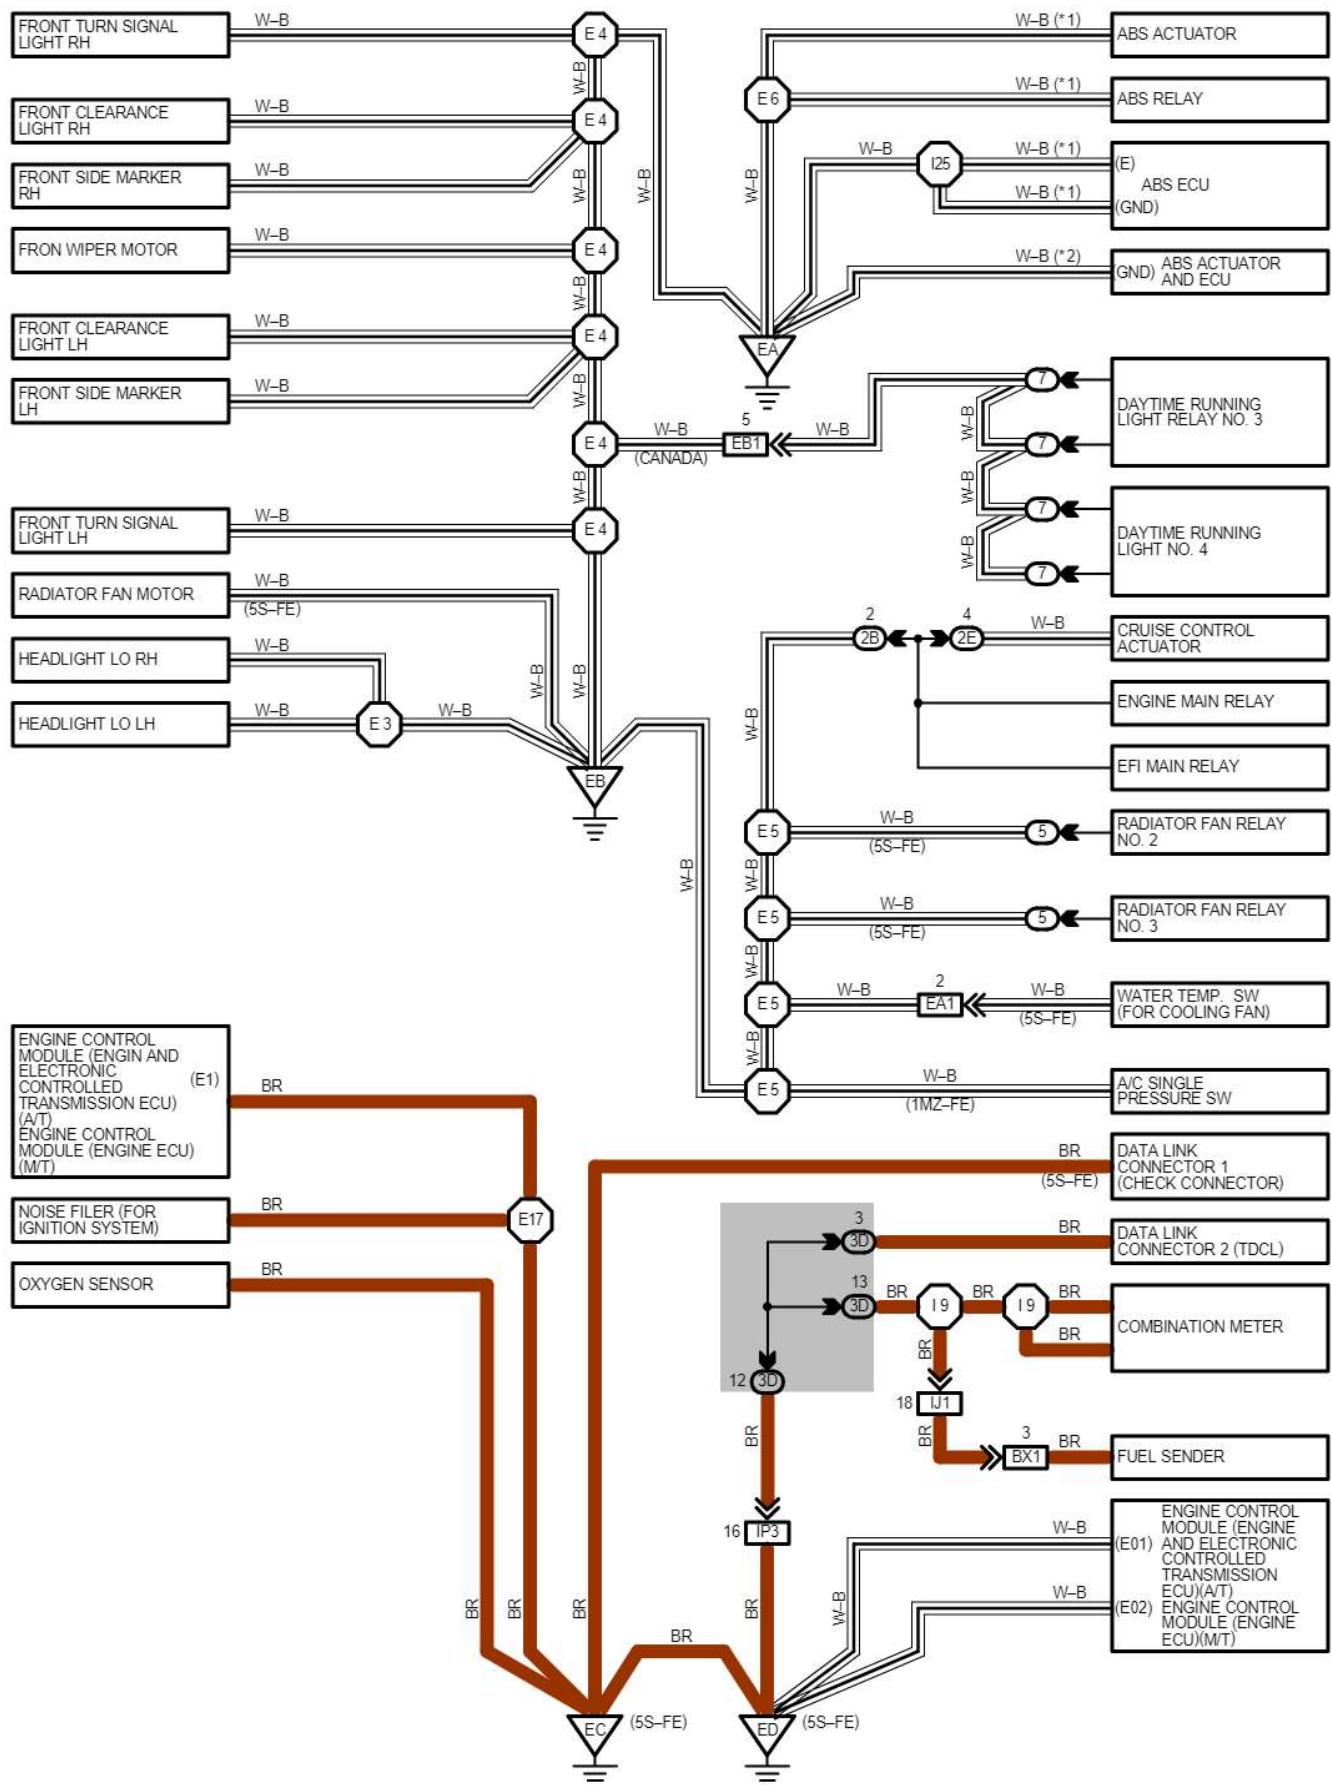

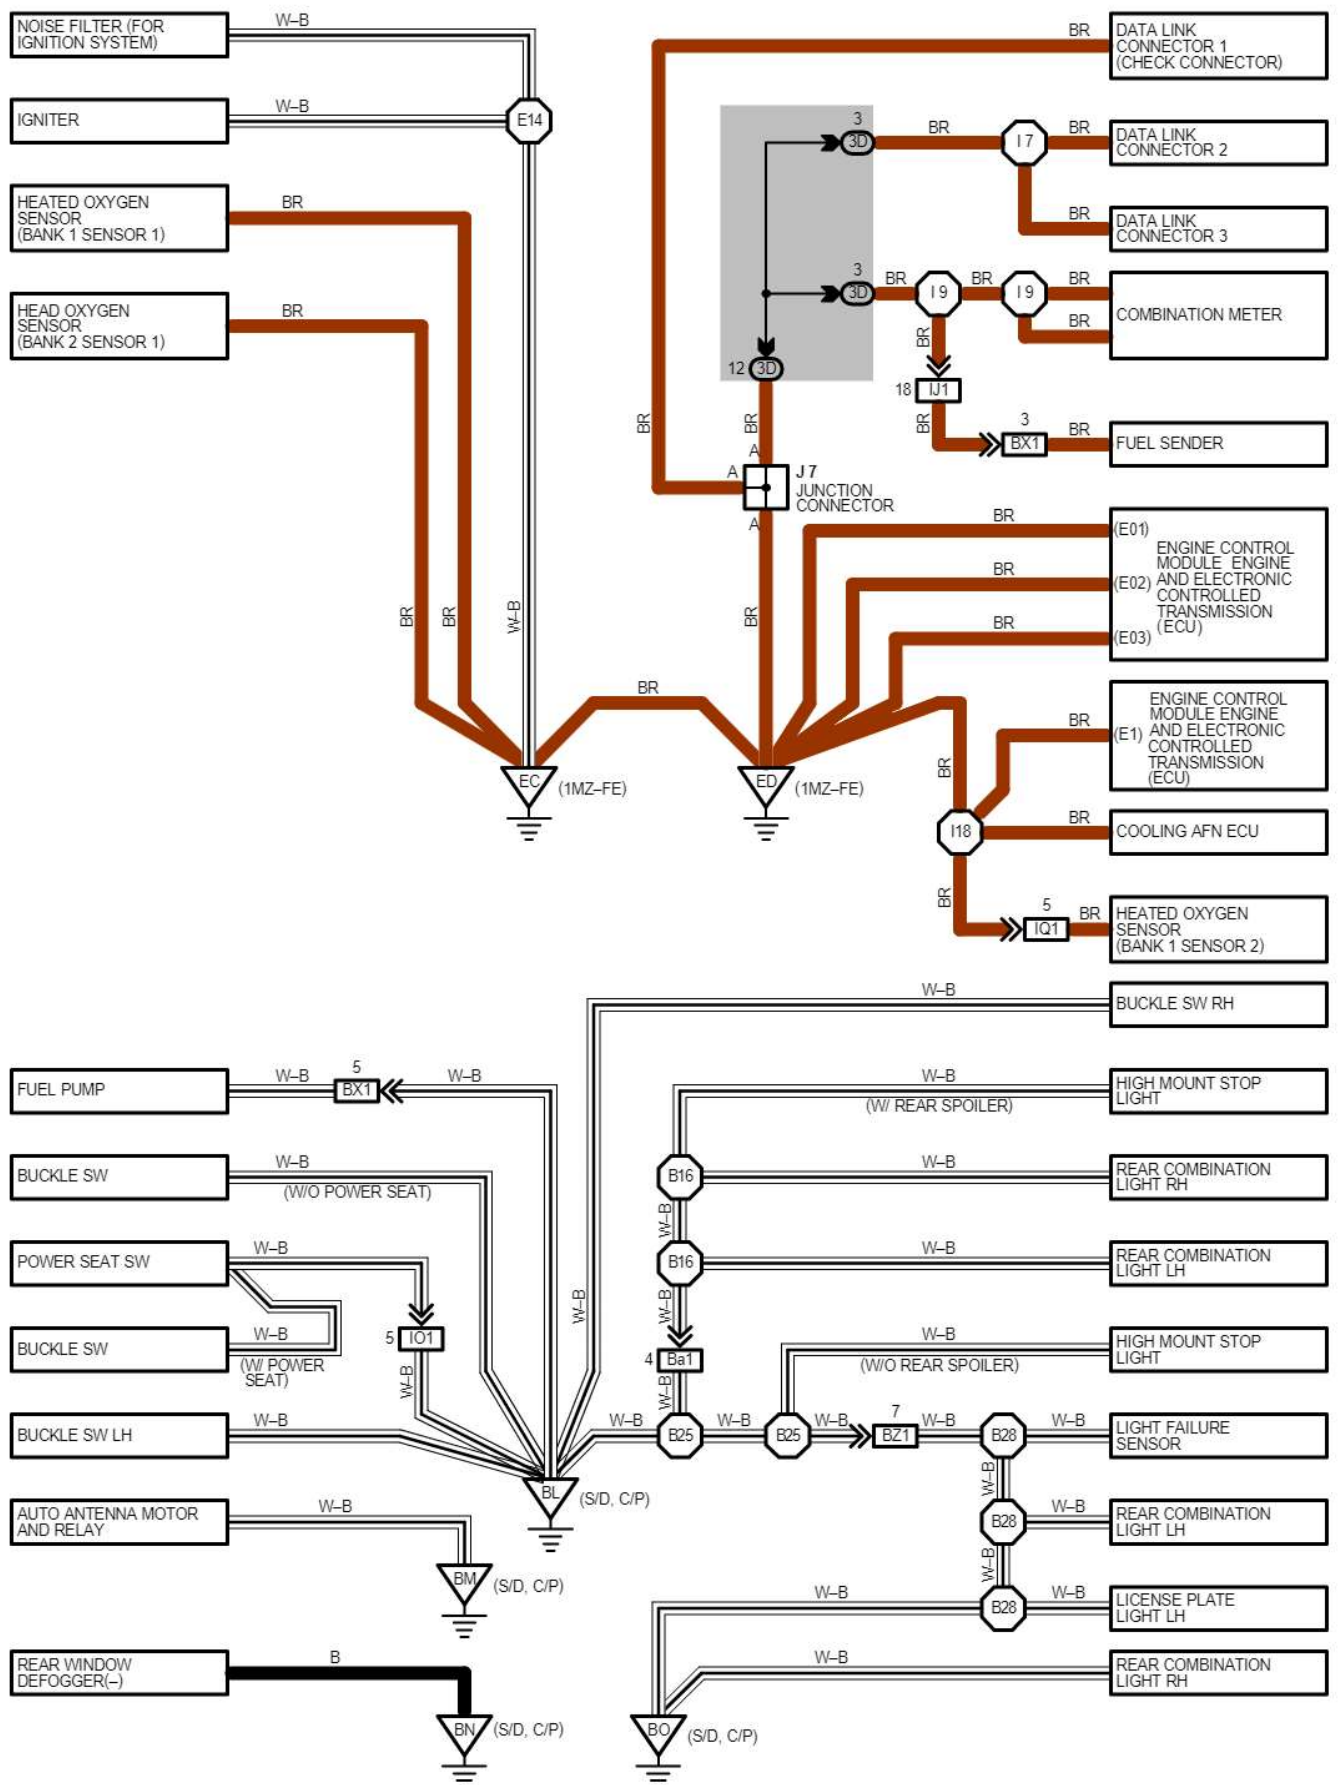

cardiagn.com

GROUND POINT

*1 : TMC MADE
*2 : TMM MADE

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J 1	33	J 5	36 (W/G)		
J 2	33	J 7	33		

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	25	R/B NO. 1 (LEFT KICK PANEL)
4	25	R/B NO. 4 (RIGHT KICK PANEL)
5	26	R/B NO. 5 (ENGINE COMPARTMENT LEFT)
6	26	R/B NO. 6 (BEHIND GLOVE BOX)
7	27	R/B NO. 7 (NEAR THE BATTERY)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (INSTRUMENT PANEL LEFT)
1F		
1G		
1I	20 (*1)	ROOF WIRE AND J/B NO. 1 (INSTRUMENT PANEL) TMC MADE
	20 (*2)	COWL WIRE AND J/B NO. 1 (INSTRUMENT PANEL) TMM MADE
1M	20	COWL WIRE AND J/B NO. 1 (INSTRUMENT PANEL LEFT)
2B	22	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (ENGINE COMPARTMENT LEFT)
2E		
2F	22	COWL WIRE AND J/B NO. 2 (ENGINE COMPARTMENT LEFT)
3A	24	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		
3C		
3D		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	38 (1MZ-FE)	ENGINE ROOM MAIN WIRE AND ENGINE ROOM NO. 3 WIRE
EB1	38 (1MZ-FE)	ENGINE ROOM MAIN WIRE AND RELAY WIRE
	40 (5S-FE)	
IH2	42	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE
IJ1	42	FLOOR NO. 1 WIRE AND COWL WIRE
IK1	42	COWL WIRE AND A/C SUB WIRE
IL1	42	COWL WIRE AND SERVO MOTOR SUB WIRE
IM2	42	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE
IO1	42	FLOOR NO. 1 WIRE AND SEAT WIRE
IP3	44	ENGINE WIRE AND COWL WIRE
IQ1	44	ENGINE WIRE AND INSTRUMENT PANEL WIRE
IT1	44	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE
IV1	44	ROOF WIRE AND COWL WIRE
IV2	44	ROOF WIRE AND COWL WIRE MADE IN USA
BX1	46 (S/D)	FUEL GAUGE WIRE AND FLOOR NO. 1 WIRE
	48 (C/P)	
	50 (W/G)	
BZ1	46 (S/D)	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE
	48 (C/P)	
Ba1	46 (S/D)	FLOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 2 WIRE
	48 (C/P)	
Bb1	50 (W/G)	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE
Bc1	50 (W/G)	BACK DOOR NO. 1 WIRE AND FLOOR NO. 1 WIRE
Bd3	50 (W/G)	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE



: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	38 (1MZ-FE)	FRONT RIGHT FENDER
	40 (5S-FE)	
EB	38 (1MZ-FE)	FRONT LEFT FENDER
	40 (5S-FE)	
EC	38 (1MZ-FE)	INTAKE MANIFOLD RH
	40 (5S-FE)	
ED	38 (1MZ-FE)	INTAKE MANIFOLD LH
	40 (5S-FE)	
IE	42	LEFT KICK PANEL
IF		
IG	42	INSTRUMENT PANEL BRACE LH
IH	42	INSTRUMENT PANEL BRACE RH
II	42	RIGHT KICK PANEL
IJ		
BK	46 (S/D)	ROOF LEFT
	48 (C/P)	
BL	46 (S/D)	UNDER THE LEFT QUARTER PILLAR
	48 (C/P)	
	50 (W/G)	
BM	46 (S/D)	
	48 (C/P)	
BN	46 (S/D)	UNDER THE RIGHT QUARTER PILLAR
	48 (C/P)	
BO	46 (S/D)	LEFT QUARTER PILLAR
	48 (C/P)	
BP	50 (W/G)	BACK PANEL CENTER
BQ	50 (W/G)	LOWER BACK PANEL CENTER
BR	50 (W/G)	BACK DOOR CENTER
BS	50 (W/G)	BACK DOOR RIGHT



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 3	38 (1MZ-FE)	ENGINE ROOM MAIN WIRE	B 2	46 (S/D)	FRONT DOOR LH WIRE
	40 (5S-FE)			50 (W/G)	
E 4	38 (1MZ-FE)		B 4	46 (S/D)	ROOF WIRE
	40 (5S-FE)				
E 5	38 (1MZ-FE)		B11	46 (S/D)	FRONT DOOR RH WIRE
	40 (5S-FE)			50 (W/G)	
E 6	38 (1MZ-FE)		B16	46 (S/D)	LUGGAGE ROOM NO. 2 WIRE
	40 (5S-FE)		B18	48 (C/P)	FRONT DOOR LH WIRE
E14	38 (1MZ-FE)	ENGINE WIRE	B21	48 (C/P)	ROOF WIRE
E17	40 (5S-FE)		B25	48 (C/P)	FLOOR NO. 1 WIRE
I 5	44	COWL WIRE	B26		
I 7			B27	48 (C/P)	FRONT DOOR RH WIRE
I 9			B28	48 (C/P)	LUGGAGE ROOM NO. 1 WIRE
I13			B30	50 (W/G)	ROOF WIRE
I14					
I18	44	ENGINE WIRE	B32		
B 1	46 (S/D)	FRONT DOOR LH WIRE	B38	50 (W/G)	BACK DOOR NO. 2 WIRE
	50 (W/G)				

