 


Chevrolet Trax 2013 fuse box diagram

Engine compartment

Main fuse block

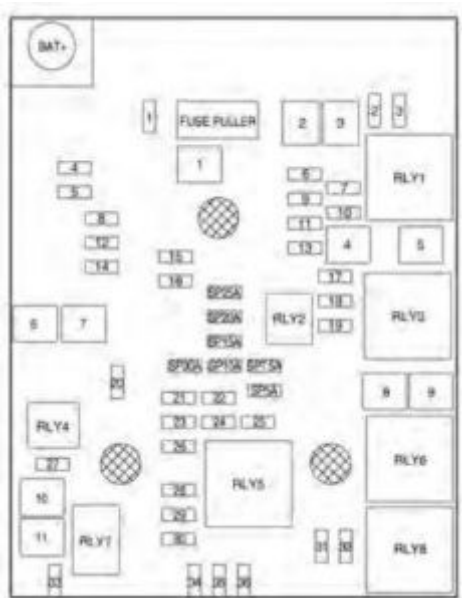

Chevrolet Trax – fuse box –

engine compartment (main box)

Mini fuses	Circuit
1	SUNROOF
2	OSRVM SW
3	CANISTER VENT SOLENOID
4	—
5	EBCM VALVE
6	IBS
7	—
8	TCM B+
9	BCM RVC
10	HDLP LEVELING LH/RH FSCM R/C
11	REAR WIPER
12	RR WDW DEFOG
13	—


14	OSRVM HEAT
15	FSCM B+
16	HEATED SEAT MODULE
17	TCM R/C
18	ECM R/C
19	FUEL PUMP
20	—
21	Gasoline: FAN RLY (AUX BEC)
	Diesel: Fan3 Relay 85
22	COLD START PUMP
23	Gasoline: IGNITION COIL/INJECTOR COIL
	Diesel: ECM PT IGN-2
24	WASHER PUMP
25	—
26	. Gasoline: CANISTER PURGE, SOL/WATER VALVE, SOL/TURBO WASTEGATE, SOL/TURBO BYPASS SOL/O2, SENSOR PRE/POST
	Diesel: VARIABLE SWIRL SOL
27	—
28	Gasoline: NOT USED
	Diesel: ECM PT IGN-3
29	Gasoline: ECM PT IGN-1 /IGN-2
	Diesel: ECM PT IGN-1
30	Gasoline: MAF SENSOR
	Diesel: O2 SENSOR
31	HIGH BEAM LH
32	HIGH BEAM RH
33	ECM B+
34	HORN

35	A/C CLUTCH		
36	FRONT FOG LAMP		
J-case fuse		Circuit	
1	EBCM PUMP		
2	FRT WIPER		
3	BLOWER		
4	IEC R/C		
5	—		
6	Gasoline: NOT USED		
	Diesel: FUEL HEATER		
7	—		
8	COOL FAN LOW/MID		
9	COOL FAN HIGH		
10	Gasoline: EVP		
	Diesel: GLOW PLUG		
11	STARTER SOL		
U-Micro Relays		Circuit	
2	FUEL PUMP		
4	SPARE		
HC-Micro Relays		Circuit	
7	STARTER		

Mini Relays		Circuit
1	RUN CRANK	
3	COOL FAN MID	
5	PT RELAY	
8	COOL FAN LOW	

HC-Mini Relays	Circuit
6	COOL FAN HIGH

 Auxiliary fuse block

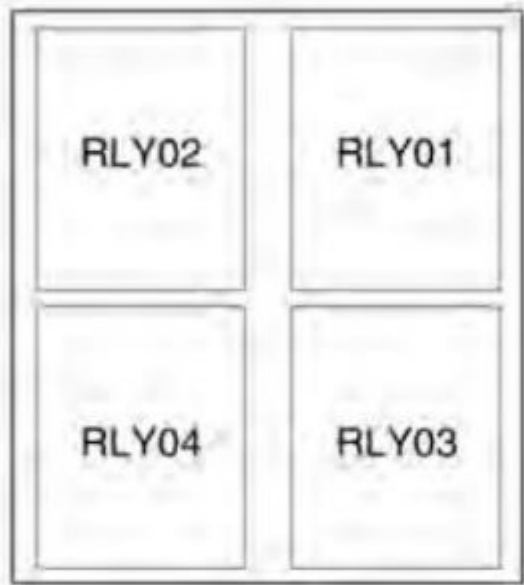

Chevrolet Trax – fuse box – engine compartment (auxiliary box)

Relays	Circuit
01	ELECTRIC VACUUM PUMP RELAY
02	COOLING FAN CTRL 1 RELAY
03	COOLING FAN CTRL 2 RELAY

Instrument panel fuse block

Interior fuse block is located on the underside of the driver's side instrument panel



Chevrolet Trax – fuse box –

instrument panel

Relays	Circuit
01	ACCY/RAP RELAY
02	L/GATE RELAY
03	SPARE RELAY
04	BLOWER RELAY
05	LOGISTIC MODE RELAY

Mini fuses	Circuit
F1	BCM 1
F2	BCM 2
F3	BCM 3
F4	BCM 4
F5	BCM 5
F6	BCM 6
F7	BCM 7
F8	BCM 8
F9	DLIS
F10	SDMB+

F11	DLC
F12	HVAC MDL
F13	L/GATE RLY
F14	UPA MDL
F15	ISRVM
F16	SPARE
F17	PWR WNDWSW DR
F18	RAIN SNSR
F19	BCM RVC
F20	SWC BKLT
F21	AC APO
F22	CIGAR LTR/DC APO
F23	SPARE
F24	SPARE
F25	SPARE
F26	SDM RC/AOS DISPLY
F27	IPC/CMPS MDL
F28	HDLP SW/DC CVT/CLTCH SW
F29	SPARE
F30	SPARE
F31	IPC B+
F32	RDO/CHIME/AUX JACK
F33	DISPLY/FACE PLATE
F34	ONSTAR UHP/DAB

S/B Fuses	Circuit
S/B01	PTC 1

S/B02	PTC 2
S/B03	PWR WNDW MTR FRT
S/B04	PWR WNDW MTR REAR
S/B05	LOGISTIC MODE RLY
S/B06	SPARE
S/B07	PWR WNDW FRT
S/B08	PWR WNDW REAR


Main Connector	Circuit
J01	IEC MAIN PWR CONNECTOR

Circuit breaker	Circuit
CB1	SPARE

Midi fuses	Circuit
M01	SPARE

Rear compartment fuse block

 It is located in the left side of rear compartment.

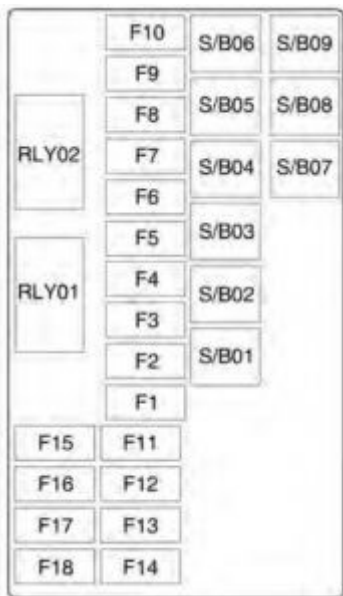

Chevrolet Trax – fuse box – rear compartment

Relays	Circuit
RLY01	IGN RELAY
RLY02	RUN RELAY

Main fuses	Circuit
F1	PWR LUM SW DR
F2	PWR LUM SW PASS
F3	AMPLIFIER
F4	TRLR SOCKET
F5	AWD MDL
F6	AOS MDL
F7	SPARE
F8	TRLR PARK LP
F9	SPARE
F10	SPARE
F11	TRLR MDL

F12	NAV DOCK
F13	HTD STR WHL
F14	TRLR SOCKET
F15	EVP SW
F16	WATER IN FUEL SENSOR
F17	ISRVM/RVC
F18	SPARE

S/B Fuses	Circuit
S/B01	PWR SEAT SW DR/ MEMORY MDL
S/B02	PWR SEAT SW PASS
S/B03	TRLR MDL
S/B04	ACDCINV
S/B05	BATT+
S/B06	HDLP WASH
S/B07	SPARE
S/B08	SPARE
S/B09	SPARE