


Cadillac DTS 2008 – 2011 fuse box diagram

Underhood Fuse Block

The underhood fuse block is located on the passenger's side of the engine compartment. Remove the fuse cover and secondary service cover to access the fuse block.

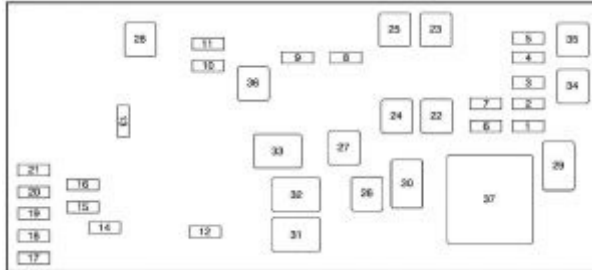

Cadillac DTS – fuse box – engine compartment


Fuses	Usage
F1	Engine Control Module (ECM), Crank
F2	Fuel Injectors Odd
F3	Fuel Injectors Even
F4	Air Conditioning Clutch
F5	Air Injection Reactor (AIR) Solenoid
F6	Oxygen Sensor
F7	Emission Device
F8	Transmission, Ignition 1
F9	Engine Control Module (ECM), Powertrain Control Module (PCM)
F10	Climate Control System, Instrument Panel Cluster Ignition 1
F11	Airbag System
F12	Horn
F13	Windshield Wiper
F14	Fog Lamps
F15	Right High-Beam Headlamp
F16	Left High-Beam Headlamp
F17	Left Low-Beam Headlamp

F18	Right Low-Beam Headlamp
F19	Windshield Washer Pump Motor
F20	Left Front Cornering Lamp
F21	Right Front Cornering Lamp
F22	Air Pump (J-Case)
F23	Antilock Brake System (ABS) (J-Case)
F24	Starter (J-Case)
F25	Antilock Brake System (ABS) Motor (J-Case)
F26	Cooling Fan 2 (J-Case)
F27	Cooling Fan 1 (J-Case)
F28	Windshield Washer Heater (J-Case)

Relays	Usage
29	Powertrain
30	Starter
31	Cooling Fan 2
32	Cooling Fan 3
33	Cooling Fan 1
34	Air Conditioning Clutch
35	Air Injection Reactor (AIR) Solenoid
36	Ignition
37	Air Pump

Rear Underseat Fuse Block

The rear fuse block is located under the rear seat on the driver's side. The rear seat cushion must be removed to access the rear fuse block.

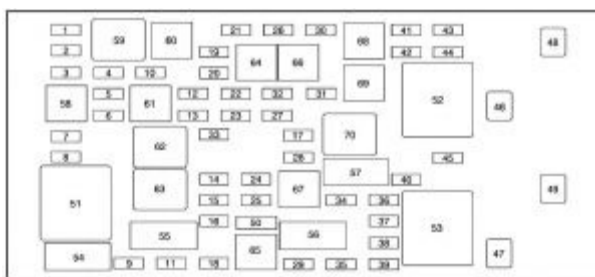

Cadillac DTS – fuse box – rear underseat fuse block

Fuses	Usage
1	Fuel Pump
2	Left Park Lamp
3	Run 3 – Rear Blower
4	Right Park Lamp
5	Engine Control Module (ECM)/Transmission Control Module (TCM)
6	Memory Module
7	Right Park Lamp (optional)
8	Steering Wheel Illumination
9	Front Heated/Cooled Seat Module
10	Run 2 – Heated/Cooled Seats, Heated Washer Fluid
11	Rear Heated Seat Module
12	RPA Module
13	PASS-Key® III System
14	Unlock/Lock Module
15	Magnetic Ride Control
16	Daytime Running Lamps (DRL) (optional)
17	Sunroof
18	Body Control Module (BCM) Dim
19	Body Control Module (BCM)
20	Run 1-Heated Steering Wheel
21	Ignition Switch
22	Driver Door Module

23	Rear Lumbar
24	Electronic Leveling Control Module
25	Body Control Module (Left Turn Signal)
26	Cigarette Lighter, Auxiliary Power Outlet
27	Navigation
28	Retained Accessory Power 1 (RAP)
29	Passenger Door Module
30	Sensing and Diagnostic Module
31	Accessory Power Outlets
32	Body Control Module (BCM) (Inadvertent)
33	Retained Accessory Power 2 (RAP)
34	Canister Vent Solenoid
35	Body Control Module (Courtesy)
36	Body Control Module (Right Turn Signal)
37	Trunk Release
38	Amplifier, Radio
39	Body Control Module (CHMSL)
40	Body Control Module
41	Stoplamp (optional)
42	OnStar® Module
43	Body Modules
44	Radio
45	Door Unlatch (optional)
46	Rear Defogger (J-Case)
47	Electronic Leveling Control Compressor (J-Case)
48	Blower (J-Case) (optional)
49	Blower (J-Case) (optional)

Resistor	Usage
50	Terminating Resistor

Relay	Usage
51	Front Blower (optional)
52	Rear Defogger
53	Electronic Leveling Control Compressor
58	Park Lamps
59	Fuel Pump
60	License Plate Lamp (optional)
61	Right Park Lamp (optional)
62	Unlock
63	Lock
64	Run
65	Daytime Running Lamps (DRL) (optional)
66	Door Unlatch (optional)
67	Trunk Release
68	Stoplamp (optional)
69	Overhead Lamps (optional)
70	Retained Accessory Power (RAP)

Circuit Breakers	Usage
54	Right Front Seat
55	Left Front Power Seat
56	Power Windows
57	Power Tilt Steering Wheel

