


Dodge Sprinter 2008 – 2009 fuse box diagram

Main fuses box

The fuses box is in the footwell on the lefthand side of the vehicle.

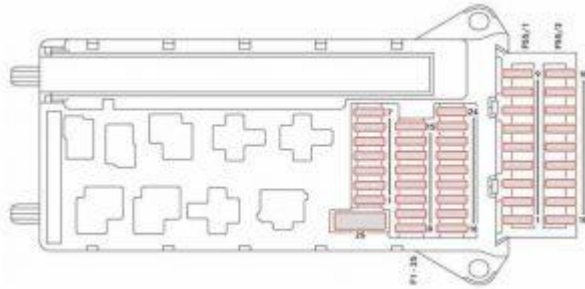

Dodge Sprinter – fuse box – main fuse

box

Number	Consumer	Amp.
1	Horn	15
2	Electric steering ESTL (electronic ignition switch EIS)	25
3	Terminal 30 Z, vehicle with gasoline engine/electronic ignition switch EIS/ instrument cluster	10
4	Light switch/center console switch unit	5
5	Windshield wipers	30
6	Fuel pump	15
7	MRM (jacket tube module)	5
8	Terminal 87 (2)	20

9	Termina 87 (3)	20
10	Terminal 87 (4)	10
11	Terminal 15 R vehicle	15
12	Airbag control unit	10
13	Cigarette lighter/glove box lighting/radio*	15
14	Diagnostic socket/light switch/instrument cluster	5
15	Front heating system*	5
16	Terminal 87 (1)	10
17	Airbag control unit	10
18	Terminal 15 vehicle, brake lamp switch	7,5
19	Interior lights	7,5
20	Power window passenger's side/terminal 30/2 signal acquisition and actuation module	25
21	Engine control unit	5
22	Antilock brake system (ABS)	5
23	Starter motor	25

24	Diesel engine components	10
25	12V socket on the bottom of the center console	25


Fuse block F55/1

Number	Consumer	Amp.
1	Control panel, left door	25
2	Diagnostic socket	10
3	Brake system (valves)	25
4	Brake system (delivery pump)	40
5	Terminal 87 (5)	7,5
		10
6	Terminal 87 (6)	7,5
		10
7	Headlamp cleaning system*	30
8	Anti-theft alarm system (ATA)*/siren*	15
9	Auxiliary indication module*	10

Fuse block F55/2

Number	Consumer	Amp.
10	Radio*	15
11	Telephone*	7,5
12	Front blowers/auxiliary heating* blower speed 1	30
13	Pre-wiring mounting slot (center console)*	7,5
14	Seat heating*/center console switch unit	30
15	Non MB-body electrics	10
16	Heater, rear heating-/air conditioning system, front/CD-player*	10
17	Motion detector*/convenience interior lighting*	10
18	Air conditioning in the rear*	7,5

Preliminary fuse box in the battery recess in the driver's footwell F59

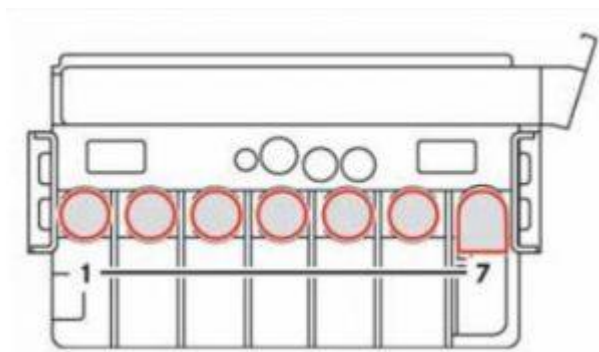


Dodge Sprinter – fuse box – preliminary
fuse box in the battery recess in the drivers footwell F59

Number	Consumer	Amp.
1	Pre-glow relay/secondary air pump	80
		40
2	Engine fan air conditioning system – cab chassis/crewcab	60
		40
3	Signal acquisition and actuation module SAM/fuse and relay block SRB	80
4	Auxiliary battery*/retarder*	150
5	Terminal 30 fuse boxes, signal acquisition and actuation module SAM/fuse and relay block SRB	150
6	Connecting point in driver's seat base	Bridge
7	Heater booster (PTC)	150

Fuse box in the driver's seat

The fuse box is located in the base of the driver's seat on the outboard side.

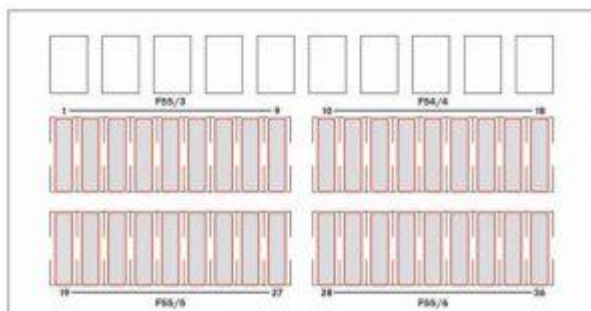

seat

Dodge Sprinter – fuse box – in the driver's

Fuse block F55/3

Number	Consumer	Amp.
1	Mirror adjustment*/rear window heating*	5
2	Rear window wiper*	30
3	Rear view camera*/telephone*/pre-wiring mounting slot (roof)*	5
4	Operating speed governor (ADR)*/PTO/trailer connection unit AAG*	7,5
5	Electronic transmission control ETC, control unit	10
6	Unassigned	—
7	Electronic selector level module ESM	10
8	Terminal 15 body builder, drop side/3-way tipper	10
9	Roof ventilator*/siren*	15

Fuse block F55/4

Number	Consumer	Amp
10	Terminal 30, tapping wire body builder	25
11	Terminal 15, tapping wire body builder	15
12	D+, tapping wire body builder	10

13	Air conditioning in the rear*	30
14	Trailer socket*	20
15	Trailer recognition device*	25
16	Tire pressure monitoring system (TPMS)*/Parktronic system (PTS)*	7,5
17	PSM control unit*	25
18	PSM control unit*	25

Fuse block F55/5

Number	Consumer	Amp.
19	Overhead control panel*/siding sunroof*	5
		25
20	Clearance lamps*	7,5
21	Rear window heating* 1	30
		15
22	Rear window heating* 2	15
23	12V socket* rear left, load/passenger compartment	15
24	12V socket, driver's seat base	15

25	12V sockett rear right, load/passenger compartment	15
26	Auxiliary heating *	25
27	Heater booster*	25

Fuse block F55/6

Numbe r	Consumer	Amp.
28	Unassigned	—
29	Unassigned	—
30	Brake booster*	30
31	Blower unit rear heating*/electric sliding door*, left/electronic closing aid* (sliding door, left)	30
		15
32	Unassigned	—
33	Electric sliding door*, right/electric, closing aid* (sliding door, left*)	30
		15
34	Unassigned	—
35	Unassigned	—
36	Unassigned	—

