


Suzuki Grand Vitara 2010 fuse box diagram

Main Fuse / Primary Fuse

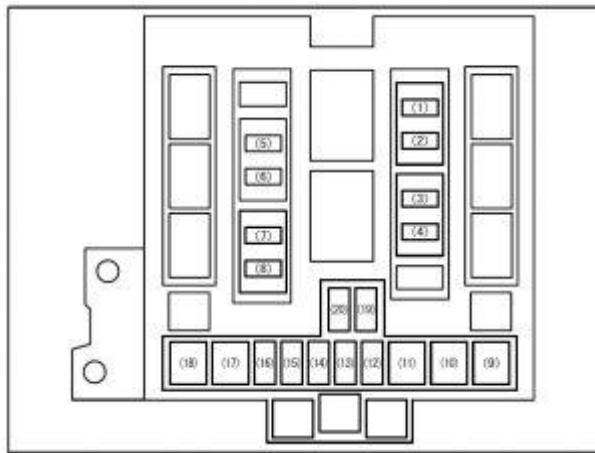

Suzuki Grand Vitara – fuse box diagram –

main fuse box

No.	A	Name	Circuit Protected
1	15	CPRSR	A/C compressor fuse
2	20	O2 HTR	O2 sensor heater fuse
3	15	THR MOT	Throttle motor fuse
4	20	AT	Automatic transmission fuse
5	25	RR DEF	Rear defogger fuse
6	15	HORN	Horn fuse
7	20	FR FOG	Front fog light fuse
8	20	MRR HTR	Mirror heater fuse
9	40	FR BLW	Front blower motor fuse

10	30	ABS 2	ABS actuator fuse
11	50	ABS 1	ABS actuator fuse
12	20	FI	Main fuse
13	—	—	—
14	10	H/L L	Head light high beam fuse, left
15	10	H/L R	Head light high beam fuse, right
16	10	H/L	Head light fuse
17	40	ST	Starter motor fuse
18	40	IGN	Ignition fuse
19	15	H/L LO L	Head light low beam fuse, left
20	15	H/L LO R	Head light low beam fuse, right

Primary fuse	Individual fuse
60A LAMP	Head light, Accessory, Dome light, Sunroof, Hazard light, Door lock, Rear fog light, Stop lamp, Tail light
50A IGN 2	Wiper/Washer, Power window, Seat heater

I	10	BACK	Back lamp fuse
J	10	ABS/ESP	ABS or ESP controller fuse
K	15	A/B	Air bag fuse
L	15	RADIO	Radio fuse
M	15	HAZ	Hazard light fuse
N	7,5	ST SIG	Starter signal fuse
O	10	ECM	Engine control module fuse
P	25	S/R	Sun roof motor fuse
Q	25	B/U	Back up fuse
R	10	TAIL	Tail light fuse
S	20	D/L	Door lock actuator fuse
T	15	ACC	Radio, Remote door mirror fuse
U	10	METER	Meter fuse
V	20	IG COIL	Ignition coil fuse
W	—	—	—

X	30	P/W	Power window fuse
---	----	-----	-------------------