


Pontiac Trans Sport 1995 fuse box diagram

Instrument Panel Fuse Block

Fuse Panel (3.1L V6)

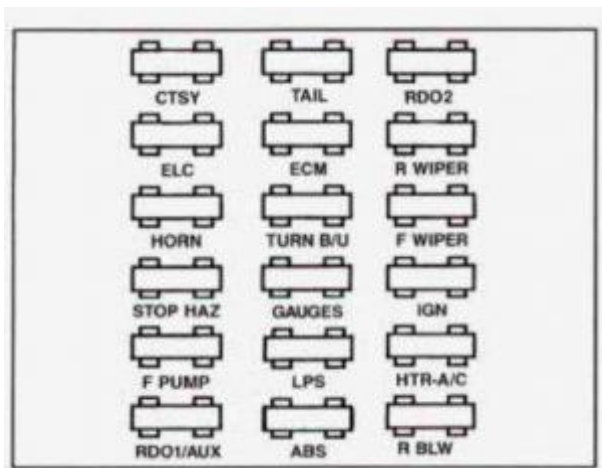

Pontiac Trans Sport – fuse box –


instrument panel engine 3.1L V6)

The instrument panel fuse block is in the glovebox.

Fuses	Usage
CTSY	Dome Lamps, Courtesy Lamps, Power Door Lock Switches, Glove Box Lamp, Power Mirrors, Power Sliding Delay Lock Module
ELC	Auto Level Control, Underhood Lamp
HORN	Horns, Horn Relay, Safety Belt Buzze
STOP HAZ	FrontRear Turn Lamps, Front Sidemarker Lamps, Rear Stop Lamps, Instrument Cluster Turn Indicator Lamps, Cruise Brake Switch
F PUMP	Fuel Pump, Oil Pressure SenderFuel Pump Switch
RDOIO/AU X	Radio, Front Cigar Lighter, Accessory Power Outlet

TAIL	Front Park Lamps, Rear Taillamps, Front Sidemarker Lamps, License Plate Lamp, Radio, HeatNentIAC Control Head, Power Sliding Door
ECM	Throttle Body Fuel Injection, Fuel Pump Relay, Elec. Vac. Reg. Valve, Elec. Control Module, Elec. Spark Control Module
TURN B/U	FrontRear Turn Lamps, Front Sidemarker Lamps, Cluster Turn Telltale, Back-up Lamps
GAUGES	Cluster, Anti-Lock Brake System Lamp Module, Elec. Level Control Sensor
LPS	Cluster, Radio, Wiper Switch, Headlamp Switch, Rear Blower Switch, HeatNentIAC Control Head, Door Switch Illumination, Front/Rear Ashtray Illumination Bulbs
ABS	Anti-Lock Brake System
RDO2	Radio
R WIPER	Rear Wipermasher Motors; Overhead Console Compass
F WIPER	Front Wipermasher Motor
IGN	A/C Compressor, A/C Solenoid Box, Compressor Relay, Temp. Door Motor, Low Blower Relay; HealNent/AC Control Head; Cruise Module; Cooling Fan Relay; Rear Defogger Relay; Key Chime; Daytime Running Lamps Module; Vehicle Speed Sensor Buffer and Generator Charge Discrete, Transaxle Converter Clutch Switch
HTR-NC	FrontIRear Blower Motors, High Blower Relay
R BLW	Rear Blower, Rear HeatNent/AC

Fuse Panel (3800 V6)

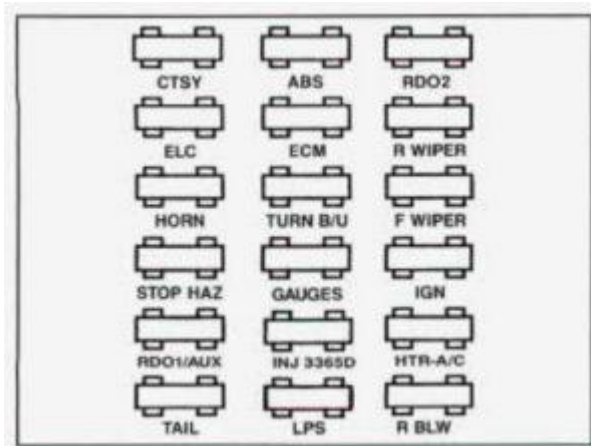

Pontiac Trans Sport – fuse box –


instrument panel (engine 3800 V6)

The instrument panel fuse block is in the glovebox.

Fuses	Usage
CTSY	Dome Lamps, Courtesy Lamps, Power Door Lock Switches, Glove Box Lamp, Power Mirrors, Power Sliding Delay Lock Module
ELC	Auto Level Control, Underhood Lamp
HORN	Horns, Horn Relay, Safety Belt Buzzer
STOP HAZ	FrontRear Turn Lamps, Front Sidemarkers Lamps, Rear Stop Lamps, Instrument Cluster Turn Indicator Lamps
RDO1O/AUX	Radio, Front Cigar Lighter, Accessory Power Outlet
TAIL	Front Park Lamps, Rear Taillamps, Front Sidemarkers Lamps, License Plate Lamp, Radio, HeatNentlAC Control Head, Power Sliding Door
ABS	Anti-Lock Brake System
ECM	Mass Air Flow Sensor, Electronic Control Module

TURN B/U	FrontRear Turn Lamps, Front Sidemarker Lamps, Cluster Turn Telltale, Back-up Lamps
GAUGES	Cluster, Anti-Lock Brake System Lamp Module, Elec. Level Control Sensor
INJ 3365D	Injector 3365 Fuse – Remote Location
LPS	Cluster, Radio, Wiper Switch, Headlamp Switch, Rear Blower Switch, HeatNentIAC Control Head, Door Switch Illumination, FrontRear Ashtray Illumination Bulbs
RDO2	Radio
R WIPER	Rear Wipermasher Motors; Overhead Console Compass
F WIPER	Front Wipermasher Motor
IGN	A/C Solenoid Box, Temp. Door Motor, Low Blower Relay; HeatNentIAC Control Head; Cooling Fan Relay; Rear Defogger Relay; Key Chime; Daytime Running Lamps Module; Transaxle Converter Clutch Solenoid and Generator Charge Discrete
HTR-NC	Front/Rear Blower Motors, High Blower Relay
R BLW	Rear Blower, Rear HeatNentIAC

Circuit Breakermelay Panel

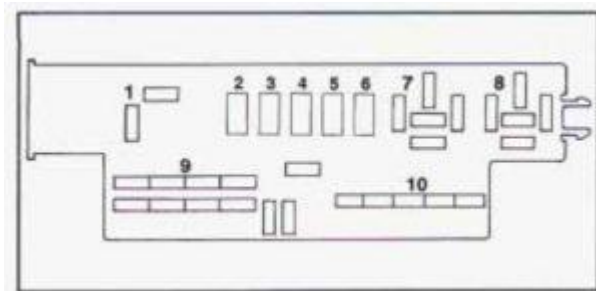

Pontiac Trans Sport – fuse box – engine

compartment

Circuit breakers and relays are located in the circuit breaker/relay panel. This is located behind the panel under the glove box, near the passenger's door.

Circuit Breakers	Usage
1	Hazard Flashers
2	With 3800 V6 engine only: Canister Purge Solenoid, A/C Clutch Control Relay, Cruise Control
3	Not Used
4	Power Windows Circuit Breaker
5	Power Seat/Power Sliding Door Motor Circuit Breaker
6	Rear Defogger Circuit Breaker
7	Air Conditioning Blower Relay
8	Horn Relay
9	Chime Module
10	Defogger Timer Relay