


Dodge Durango 2009 fuse box diagram

Interior Fuses

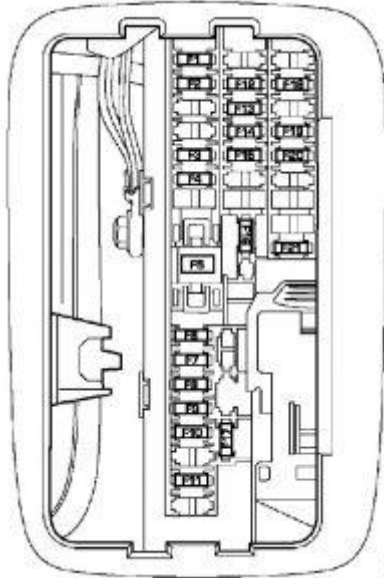

⁸¹ Dodge Durango – fuse box – interior box

Cavity	Mini fuse	Description
F1	15	Instrument Cluster Battery Feed
F2	10	Spare
F3	10	Ignition Run/Start for Controller (NGC), Integrated Power Module (IPM), AC Relay and Fuel Pump Relay
F4	10	Door Node and Non-Memory Power Mirror Switch Battery Feed
F5	10	Airbags (two Fuses in Yellow Holder)
F6	10	Ignition Run/ Start Unlock

F7	25	Radio Battery Feed
F8	10	Ignition Run/Start fro Cluster/Transfer Case/Seat Sw. Back lighting
F9	10	Satellite Digital Audio Receiver (SDAR)/Digital Video Disc (DVD) Battery Feed
F10	10	Spare
F11	10	Heated Mirrors
F12	20	Cluster Battery Feed
F13	10	Ignition Run HVAC Module/ Heated Rear Glass (EBL) Relay
F14	10	ABS Module Ignition Run
F15	15	Battery Feed Blue Tooth, Compass/Trip Computer (CMTC), Sentry Key Diagnostics
F16	20	Reconfigurable Power Outlets
F17	20	Ignition Run / Rear Park Assist / Second Row Heated Seats
F18	20	Cigar Lighter Ignition
F19	10	Spare Fuse
F20	25	Heating & Air Conditioning w/ATC Only Battery Feed
F21	25	Amplifier Battery Feed

Underhood Fuses (Power Distribution Center)

Cavity	Cartridge Fuse / Relay	Mini Fuse	Description
1	30		Starter
2	30		Front Wiper
3	40		Brake Batt
4	30		JB Feed Acc #2
5	40		Power Seats
6	30		Run Remote Relay Feed
7	40		Blower Motor Relay Feed
8	40		JB Feed Acc Delay
9	Spare		
10	30		ASD
11	40		Power Liftgate (If Equipped)
12	40		JB Feed / Heated Rear Glass (EBL)/ T Case Brake
13	30		JB Feed RR
14	40		ESP Pump

15	50		JB Feed
16		10	Spare
17		Spare	
18		20	Fuel Pump
19		20	Next Generation Controller (NGC)
20		25	115v Power Inverter
21		20	ABS Batt
22		20	Next Generation Controller (NGC) Batt
23		20	Trailer Tow
24		15	A/C Clutch
25		15	Stop Lamp Switch
26		Spare	
27		20	Run/Start Relay Feed
28		Spare	
29	Relay		Run Start

30	Relay		Run Remote
31	Spare		
32	Relay		Starter
33	Relay		Electronic Automatic Transaxle (EATX)
34	Relay		AC Clutch
35	Relay		Fuel Pump Rly
36	Spare		
37	Spare		Stop Lamp Switch
38	Spare		
39	Relay		Blower Motor
40	Relay		Auto Shut Down (ASD) Rly

Underhood Fuses (Integrated Power Module)

Cavity	Cartridge Fuse / Relay	Ampere rating [A]	Description
1	Relay		Wiper On/Off Rly
2	Relay		Wiper Hi/Lo Rly
3	Relay		Horn Rly

4	Relay		Rear Wiper Rly
5	Relay		Lt Trailer-Tow Stop/Turn Rly
6	Relay		Rt Trailer-Tow Stop/Turn Rly
7	Relay		Park Lamps Rly
8		10	Lt Park Lamps
9		10	Trailer-Tow Park Lamps
10		10	Rt Park Lamps
11	Relay		Radiator Fan Hi Rly
12		20	Front Control Module (FCM) Batt #4
13		20	Front Control Module (FCM) Batt #2
14		20	Adjustable Pedal
15		20	Ft Fog Lamps
16		20	Horn
17		20	Rear Wiper
18		20	Front Control Module (FCM) Batt #1

19		20	Lt Trailer-Tow Stop/Turn
20		20	Front Control Module (FCM) Batt #3
21		20	Rt Trailer-Tow Stop/Turn
22	30		Front Control Module (FCM) Batt #5
23	40		Radiator Fan
24	Relay		Radiator Fan Lo Rly
25	Relay		Ft Fog Lamps Rly
26	Relay		Adjustable Pedal Rly
27		30	Ignition Off Draw (IOD) #1
28		30	Ignition Off Draw (IOD) #2
29			Spare
30			Spare