

Citroen DS4 (from 2011) – fuse box diagram

Year of production: 2011, 2012, 2013, 2014, 2015, 2016

Fuse box in passengers compartment

The fusebox is placed in the lower dashboard (left-hand side).

Relay	Ampere rating [A]	Functions
R1	—	Not used
R2	—	12 V socket in boot

Fuse	Ampere rating [A]	Functions
F3	20	Parking lamps, trailer hazard warning lamps
F4	20	Interior lighting, trailer interface
F5	30	Front one-touch electric windows
F6	—	Not used
F8	3	Alarm siren, alarm ECU
F11	20	12 V trailer socket
F12	—	Not used
F13	30	Hi-Fi amplifier
	10	Cigar lighter
F14	10	12 V socket in boot
F16	3	Lighting for the large multifunctional storage unit, rear map reading lamps, glove box illumination
F17	3	Sun visor illumination, front map reading lamps
F22	20	Trailer signalling
F28	15	Audio system, radio (after-market)
F30	20	Rear wiper
F32	10	Hi-Fi amplifier

Fuse	ampere rating [A]	Functions
F36	15	Rear 12 V socket
F37	—	Not used

Fuse box in engine compartment

The fusebox is place in the engine compartment near the battery (left-hand side)

Fuse	Ampere rating [A]	Functions
F19	30	Windscreen wipers slow/fast speed
F20	15	Front and rear screenwash pump
F21	20	Headlamp wash pump
F22	15	Horn
F23	15	Right-hand main beam headlamp
F24	15	Left-hand main beam headlamp
F27	5	Left-hand dipped headlamp
F28	5	Right-hand dipped headlamp

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.