


[Back](#)[Print](#)

1997-2007 Alfa Romeo 156 Fuse Box Diagram

Fuse and Relays in The Main Fusebox

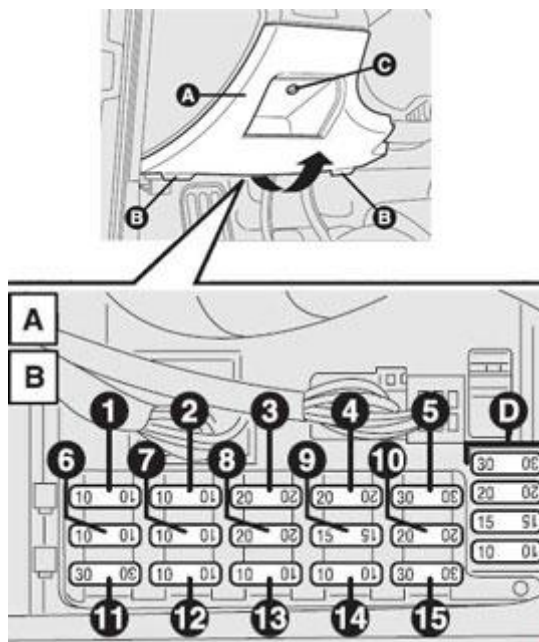


To gain access to them, remove the panel (A) releasing the tabs (B) in the direction of the arrow below and remove the screw (C).

 10A	 10A	 20A	 20A	 30A
 10A	 10A	 20A	 15A	 20A
 20A	 10A	 10A	 10A	 30A

No.	A	Description
1	10	Right main-beam headlamp
2	10	Left main-beam headlamp Main-beam headlamp warning light
3	20	Door locking system Boot light
4	20	Right dipped-beam headlamp/Xenon lamps (optional)
	10	Headlamp aiming device
5	30	Front power windows
6	10	Right front side light

		Left rear side light Right number plate light Right rear fog guard
7	10	Left front side light Right rear side light Left number plate light Left rear fog guard
8	20	Left dipped-beam headlamp/Xenon lamps (optional)
9	15	Cigar lighter Odour sensor Climate control system
10	20	Windscreen wiper Windscreen washer Rearscreen wiper Rain sensor (optional)
11	20	Horns
12	10	Car interior and glovebox lights Instrument cluster Sound system Diagnosis socket Electronic alarm system
13	10	Cruise Control (optional) Reversing lights Sound system Car interior and glovebox lights GSM Box for Connect Navigator-electronic warning system Wing mirror adjustment Remote control
14	10	Direction indicators Hazard warning lights
15	30	Rearscreen heating Wing mirror defrosting Rearscreen heating warning light
D	-	Spare
Relay		
A	Dipped beam light relay	
B	Relay for sunroof, seat heater, rear window power control, seat electric adjustment	


Fuses Above The Main Fusebox

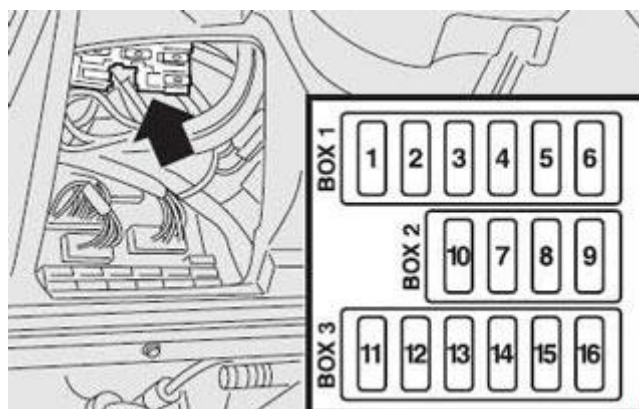

No.	A	Description
1	7,5	Services switched off with starting
2*	10	Air bag system
3	10	Controls lighting Stop lights
4	20	Left rear power window
5	20	Right rear power window
6	10	Rear control lighting from sidelights
7	30	Boot electric opening
8	30	Seat heating Sunroof Seat electrical adjustment
9	25	HI-FI BOSE system
10	20	Supplementary electrical socket in the boot (Sportwagon versions)
11*	10	ABS system
12	7,5	Battery power supply for Alfa Romeo CODE Injection system
13	7,5	Alfa Romeo CODE system Electronic ignition and injection system
14	15	Electronic ignition and injection system
15	15	Electronic ignition and injection system
16	15	Fog lamps

* Specific components and values depending on the version/market.


Fuses and Relays Accessible From The Glovebox

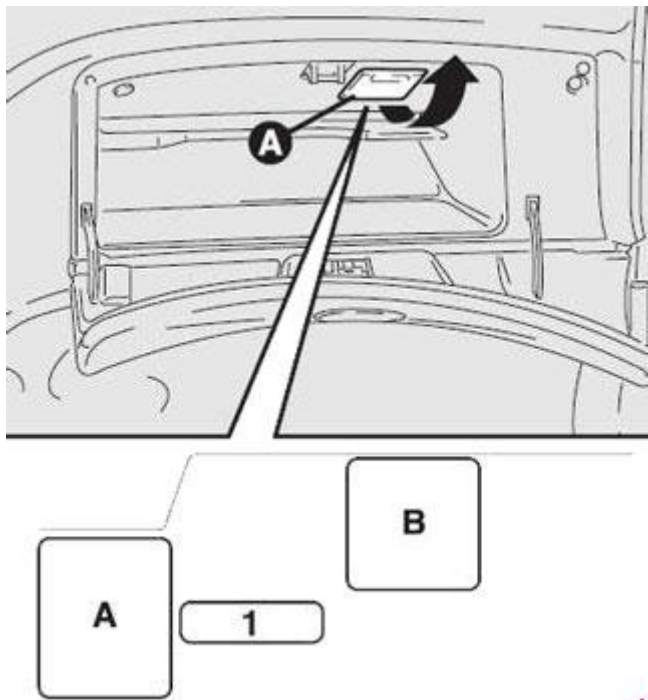

To gain access to the fuses remove (A) the pressure-fitted lid.

No.	A	Description
1	20	Headlamp washer
Relay		
A		Fog light relay (where required)
B		Headlamp washer timer (where required)


Engine Compartment Fuse Box

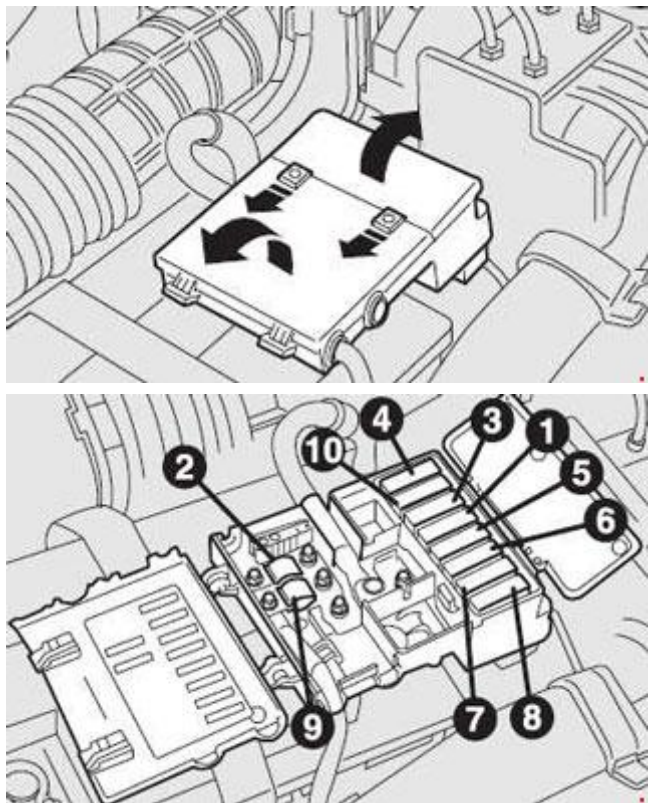

No.	A	Description
-----	---	-------------

1	40	Passenger compartment fan (petrol versions)
	80	General service supply (diesel versions)
2	30	(+15) key-controlled service supply (ignition switch)
3	70	General service supply
4	40	Passenger compartment fan (diesel versions)
	80	General service supply (petrol versions)
5	30	Electronic ignition and injection system
6	40	Engine cooling radiator fan (First speed; 2.5 V6 24V versions)
	50	Engine cooling radiator fan (First speed; T.SPARK and JTS versions)
	60	Engine cooling radiator fan (First speed; diesel versions)
7	30	Engine cooling radiator fan (Second speed; T.SPARK and JTS versions) Selespeed gearbox
	40	Engine cooling radiator fan (Second speed; diesel versions)
		Engine cooling radiator fan (Second speed; 2.5 V6 24V versions) Automatic gearbox
8	70	Glow plugs and resistances on fuel oil filter (diesel versions)
	20	Automatic gearbox (2.5 V6 24V version) Selespeed gearbox (2.0 JTS version)
9	60	ABS system
10	70	Additional heater (diesel version only)
	30	Oil pump supply (Selespeed versions only)

Relays in Engine Bay

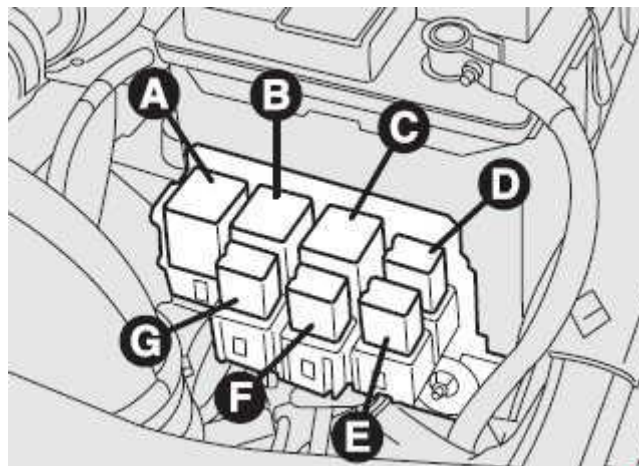


No.	Description
A	Engine radiator cooling fan 2 nd speed relay (T.SPARK versions)
B	Engine radiator cooling fan 1 st speed relay
C	Fuel pump relay
D	Electronic injection relay
E	Climate control compressor relay
F	Timing variator relay (1.6 T.SPARK only) Engine radiator fan 2 nd speed relay (only 2.5 V6 24V, JTD and JTD 16V Multijet versions).

G	Fuel oil heater relay (only Diesel versions)
---	--

For Diesel versions

For Diesel versions, depending on the options installed, there is a second bracket fastened to the engine compartment rear bulkhead

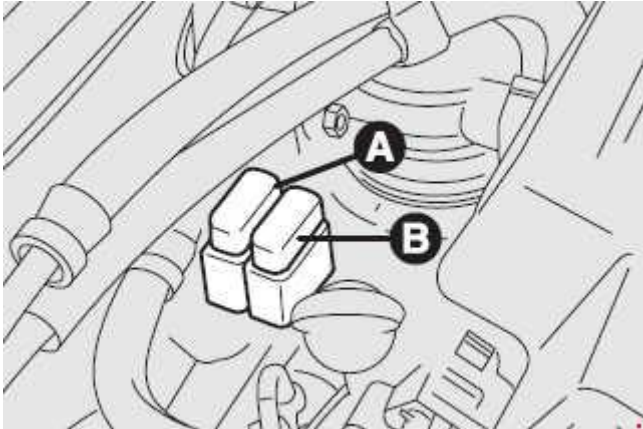

No.	A	Description
A	30	Additional passenger compartment heater 2nd level relay
B	30	Additional passenger compartment heater 1st level relay

For JTD 20v Multijet version

