

Chrysler Crossfire STR 2004 – 2007 fuse box diagram

Engine Compartment Fuses

The engine compartment fuses are located under the hood on the driver's side, between the brake master cylinder and the left front fender.

Cavity	Fuse	Circuits
1	5 Amp Beige	Garage Door Opening Signal, TPM and Seat Heater
2	5 Amp Beige	Occupant Restraint Controller Passenger Airbag Off
3	5 Amp Beige	Indicator, Safety Restraint System and Indicator, Passenger Airbag Off
4	7.5 Amp Brown	Heated Mirror
5	15 Amp Blue	Radio (Coupe)
	25 Amp White	Roof Control Module (Roadster)
6	5 Amp Beige	Exterior Mirror Adjustment, Left And Right (Coupe)
	40 Amp Orange	Roof Hydraulic Unit (Roadster)
7	5 Amp Beige	Electronic Transmission Control (Park/Reversing Lock), Photochromatic Rearview Mirror and BCM
8	15 Amp Blue	Radio


9	10 Amp Red	Roof Light, Horn, Anti-Theft Alarm, Liftgate Light and Tire Pressure Control
10	5 Amp Beige	Speed Control
11	15 Amp Blue	Ignition Coil 6 Cyl.
12	10 Amp Red	Heated Washer Nozzles
13	10 Amp Red	Charge Air Cooler Circulation Pump
14	10 Amp Red	Diagnostic Socket
15	5 Amp Beige	Residual Engine Heat Utilization
16	—	Spare
17	40 Amp Orange	Electronic Stability Program
18	40 Amp Orange	Electronic Stability Program
19	40 Amp Orange	Power Window
20	10 Amp Red	Wiper Motor
21	30 Amp Green	Seat Adjustment Right Side
22	30 Amp Green	Seat Adjustment Left Side

23	15 Amp Blue	Sound Booster (Amplifier)
24	30 Amp Green	Seat Heater
25	20 Amp Yellow	Pneumatic Control Unit, Rear Window Defroster
26	20 Amp Yellow	Central Locking
30	—	Spare (Coupe)
	15 Amp Blue	Radio (Roadster)
31	15 Amp Blue	Cigar Lighter, Glove Compartment Light
32	15 Amp Blue	Wiper, Washer Pump, Headlight Flasher
33	5 Amp Beige	Climate Control
34	—	Spare (Coupe)
	30 Amp Green	Climate Control (Roadster)
35	15 Amp Blue	Radio Frequency Remote Control, Hazard Warning Flasher, Instrument Cluster, Climate Control
36	30 Amp Green	Climate Control (Coupe)
	5 Amp Beige	Exterior Mirror Adjustment (Roadster)

37	5 Amp Beige	Circulating Air, Instrument Cluster, Radio Frequency Remote Control, Climate Control
----	-------------	--

Relay Control Module Fuses

The relay control module fuses are located in the Control Module Box next to the battery in the engine compartment.

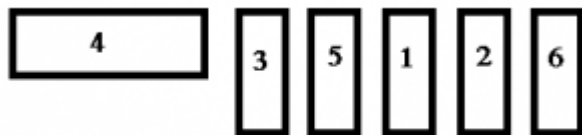


Chrysler Corssfire – fuse box – relay control module fuse

Cavity	Fuse	Circuits
1	15 Amp Blue	Traction System
2	15 Amp Blue	Engine Control 2
3	15 Amp Blue	Engine Control 1
4	40 Amp Orange	Air Pump
5	15 Amp Blue	Fuel Pump
6	15 Amp Blue	Horn

Interior Fuses

The fuse access door is located on the end of the instrument panel on the driver's side behind the trim panel cover.

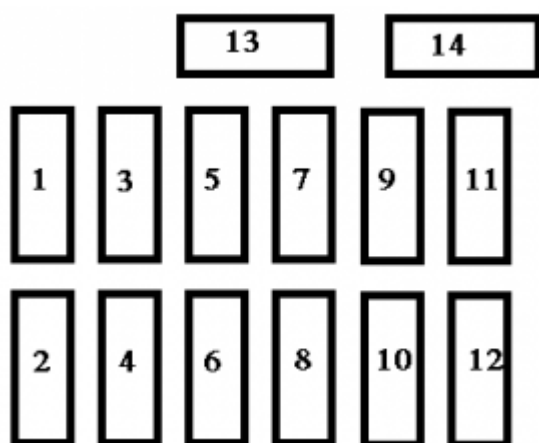

Chrysler Corssfire – fuse box – interior

fuse box

Cavity	Fuse	Circuits
1	—	Not Assigned
2	15 Amp Blue	Brake Lamp/Speed Control
3	7.5 Amp Brown	Right High Beam, High Beam Indicator Light
4	15 Amp Blue	Reverse/Turn signal Light
5	7.5 Amp Brown	Left High Beam
6	15 Amp Blue	Right Low Beam
7	7.5 Amp Brown	Right Parking/Tail Light Side Marker
8	15 Amp Blue	Left Low Beam
9	15 Amp Blue	Fog Light
10	7.5 Amp Brown	Left Parking/Tail Light Side Marker

11	7.5 Amp Brown	License Plate/Instrument Cluster Lighting/Symbol Lighting
12	—	Not Used – Spare Fuse
13	—	Not Used – Spare Fuse
14	—	Not Used – Spare Fuse