


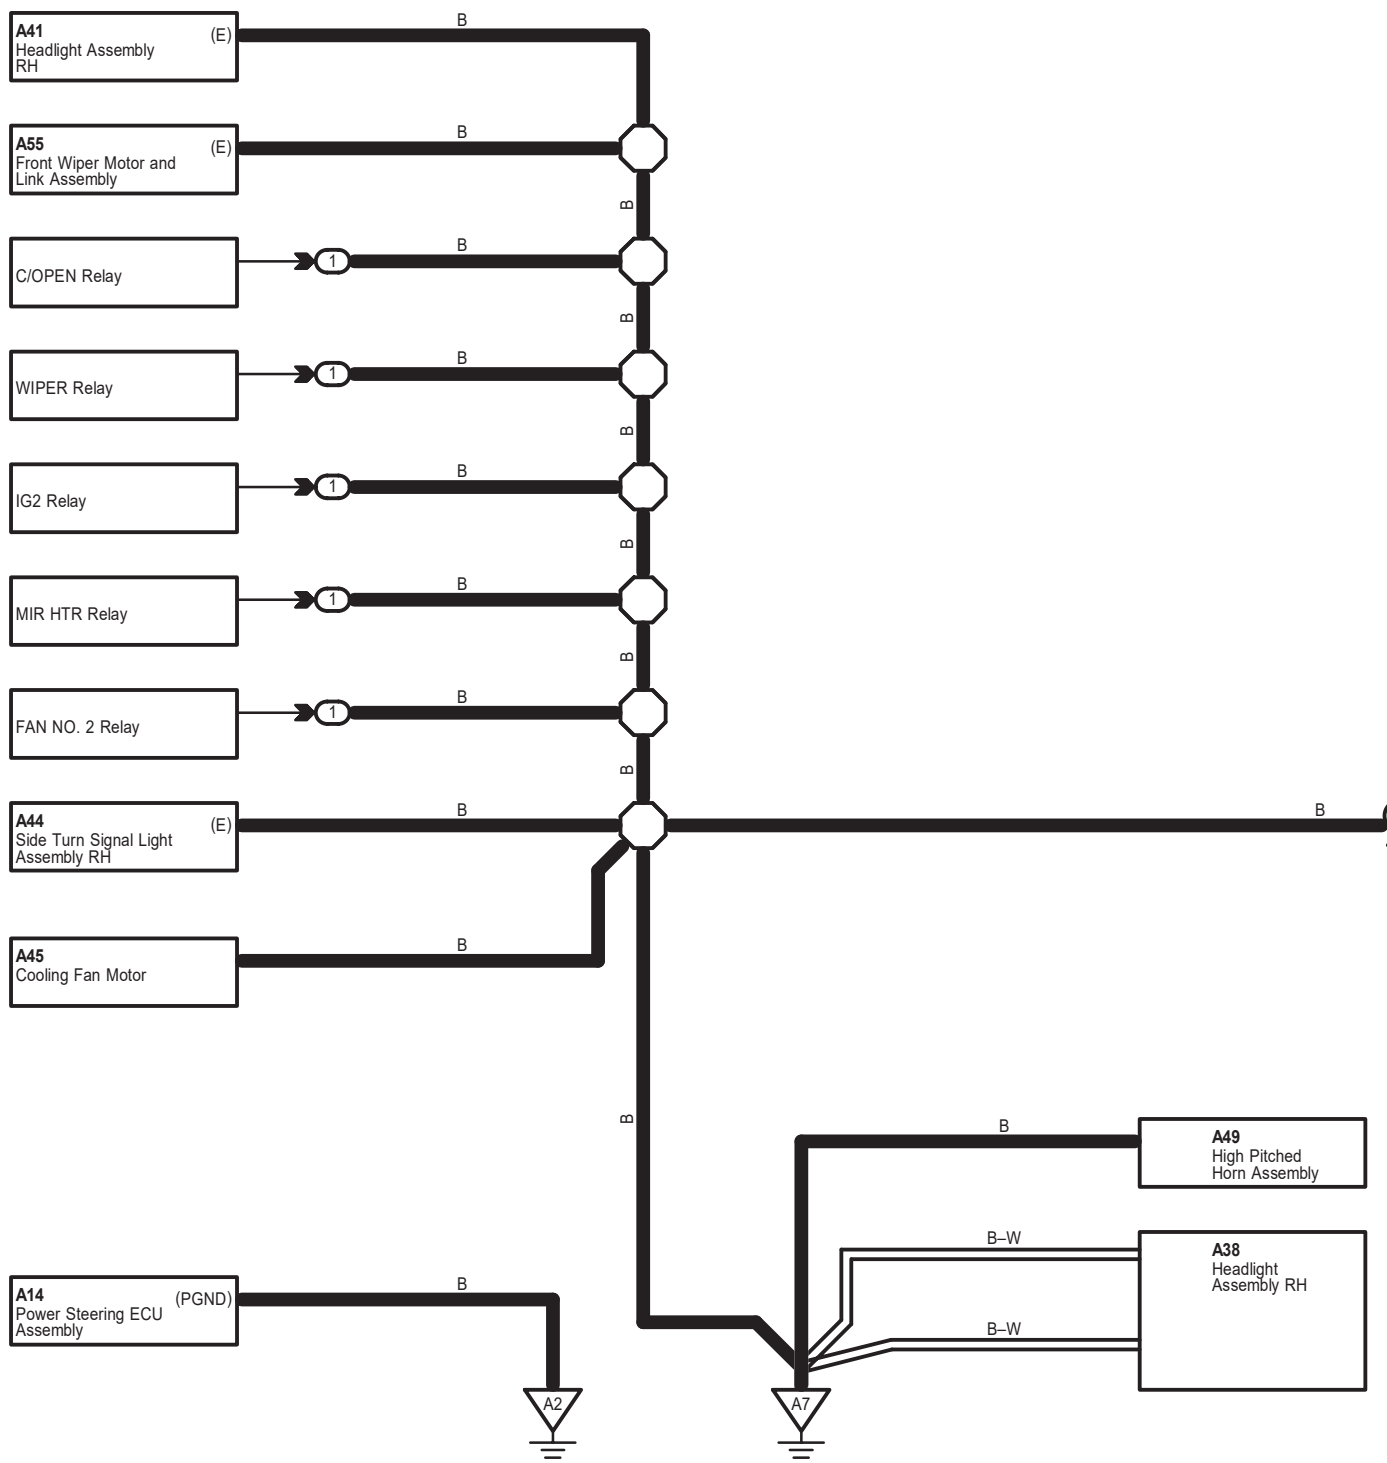



I GROUND POINT

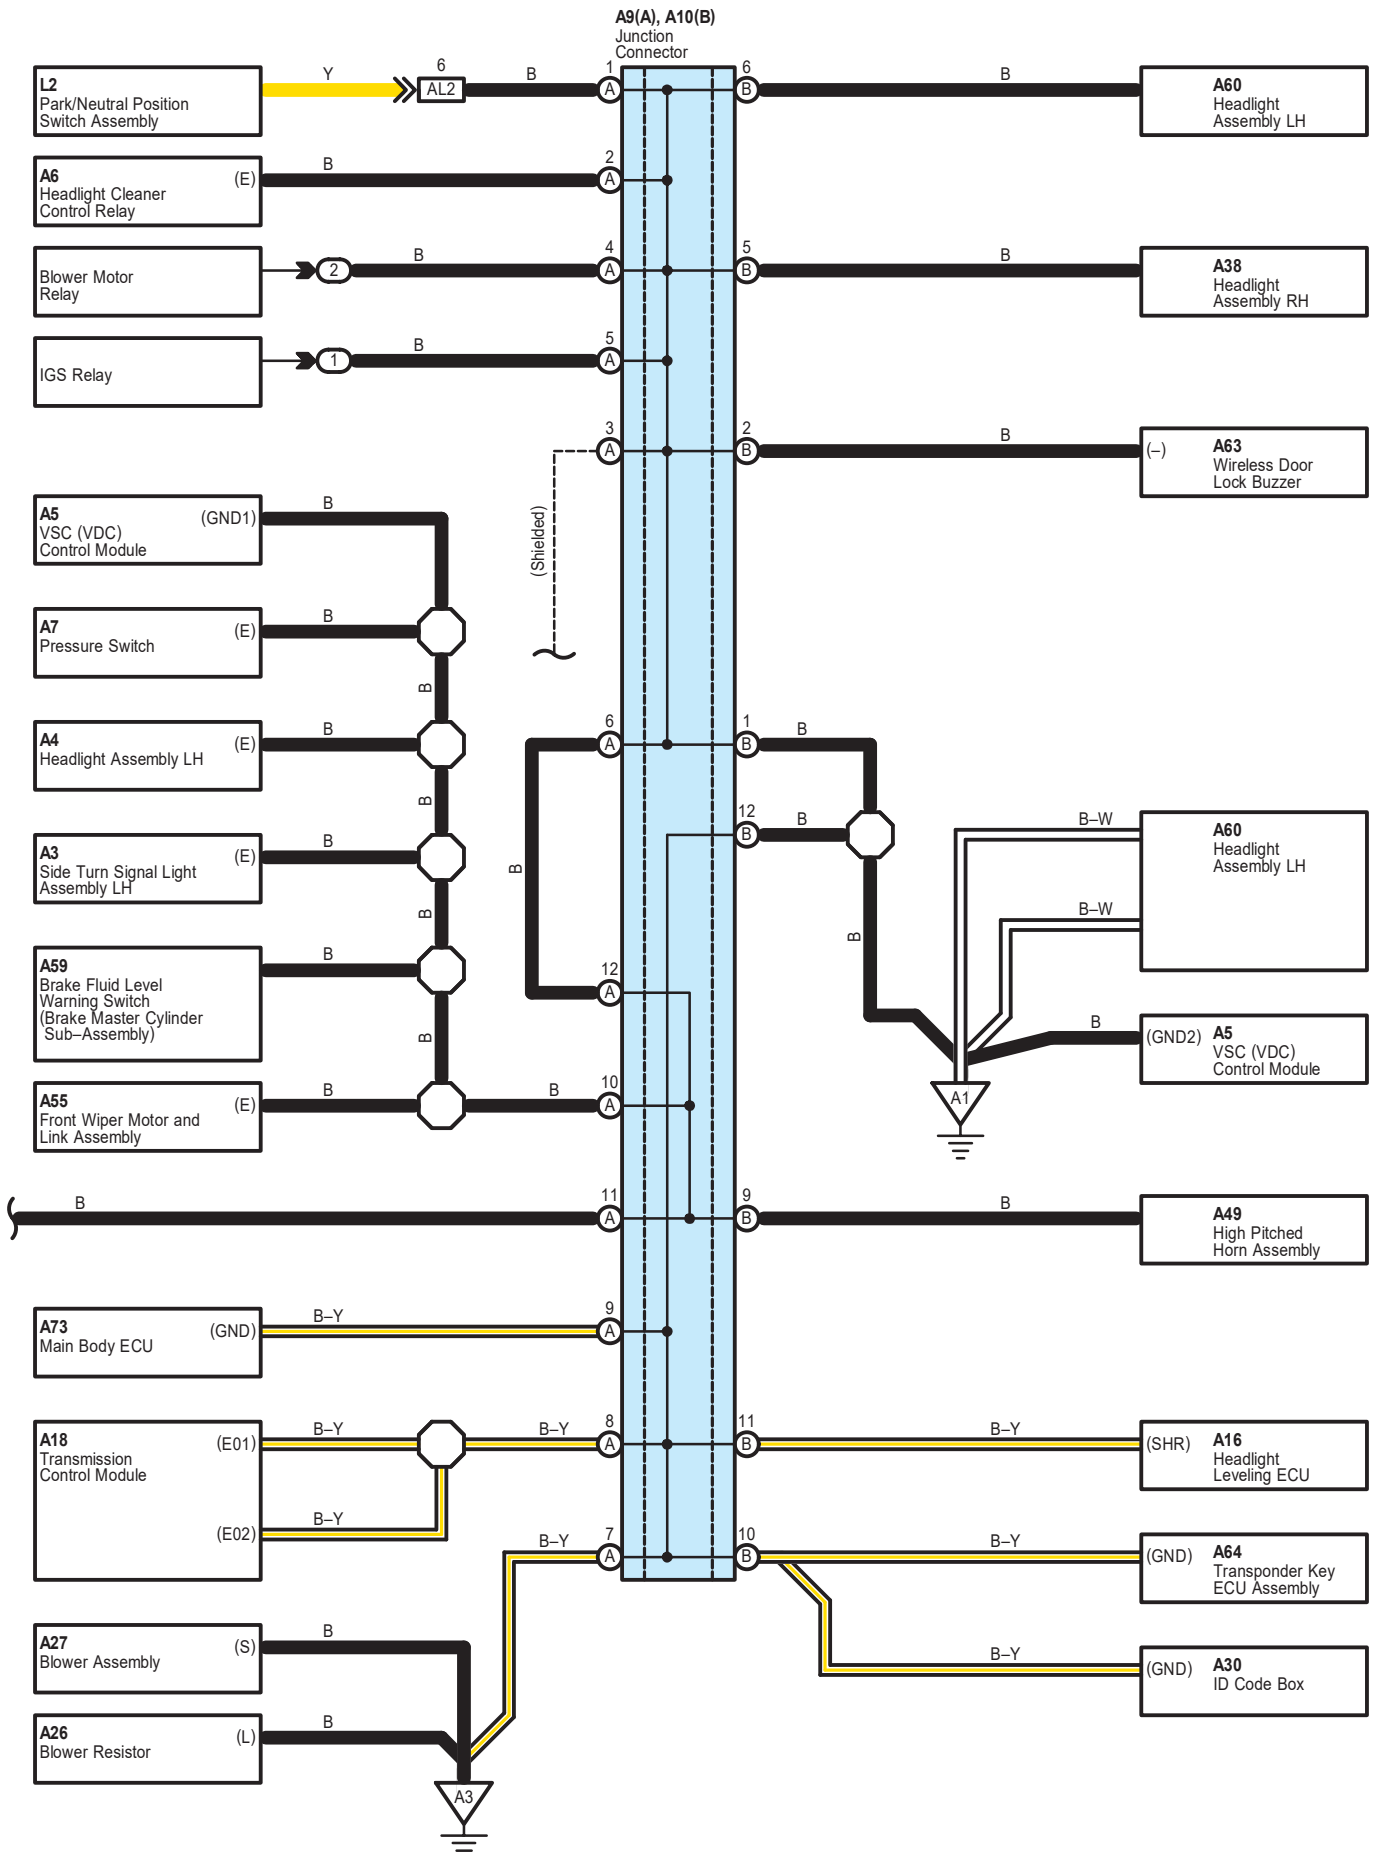

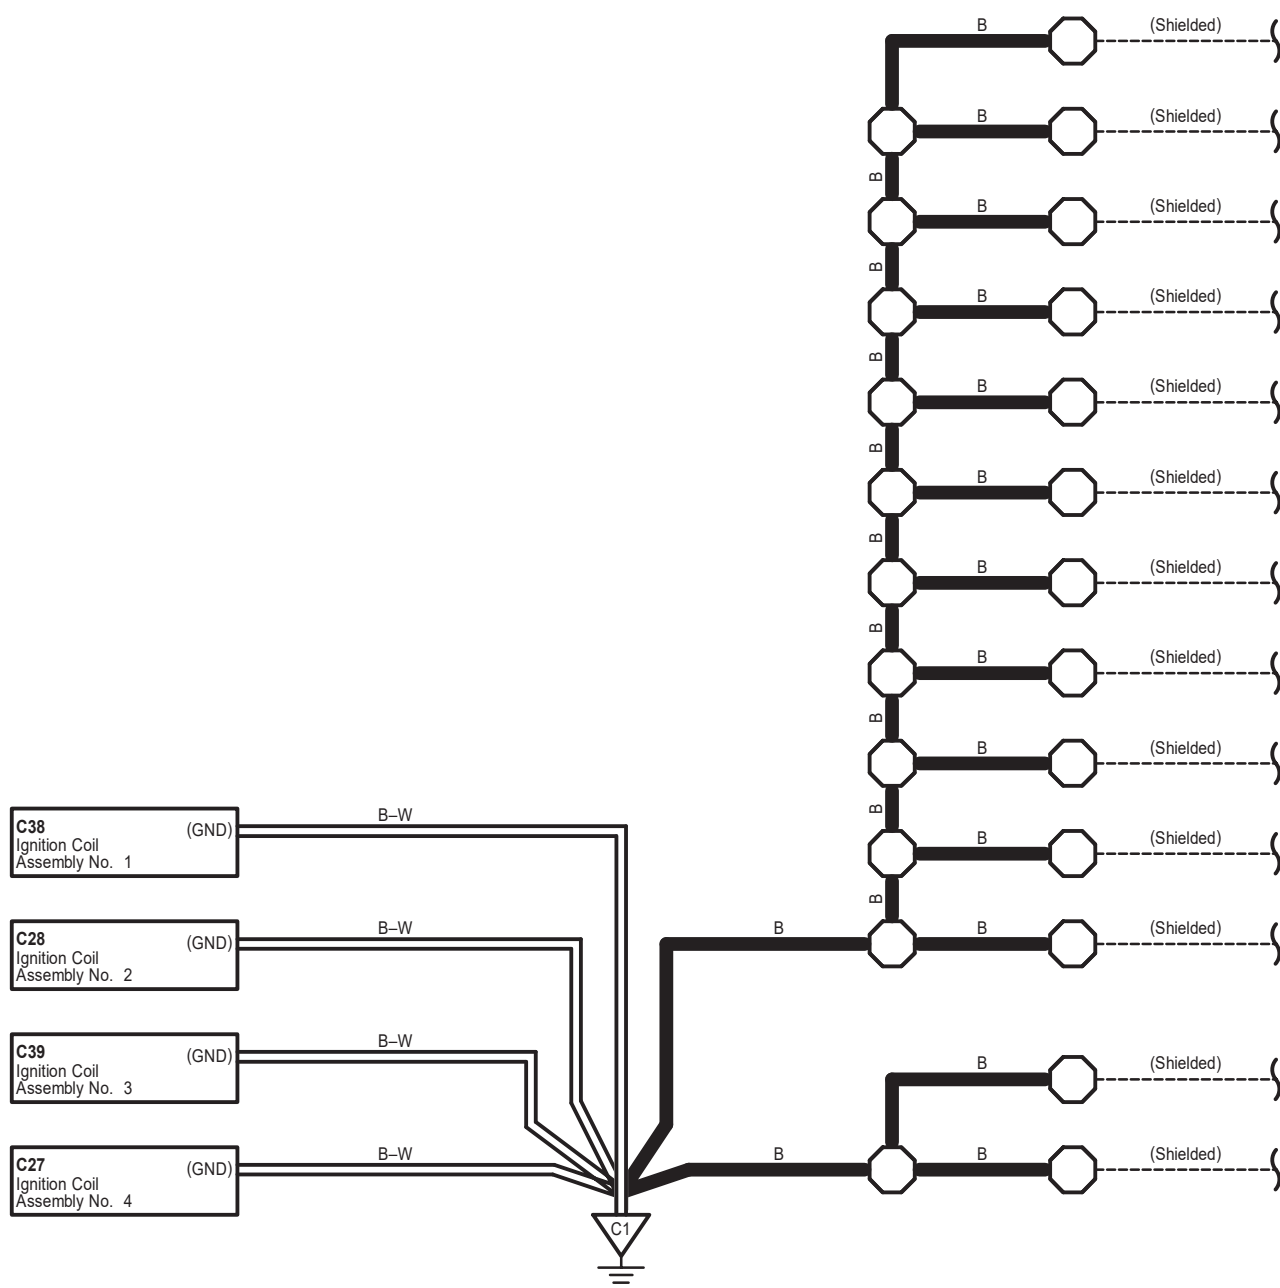



I GROUND POINT

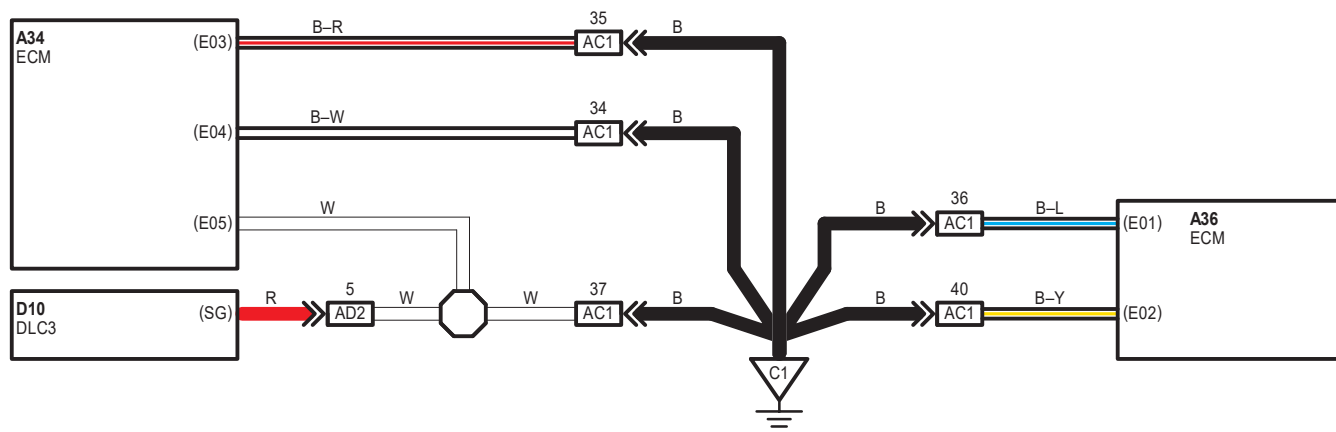

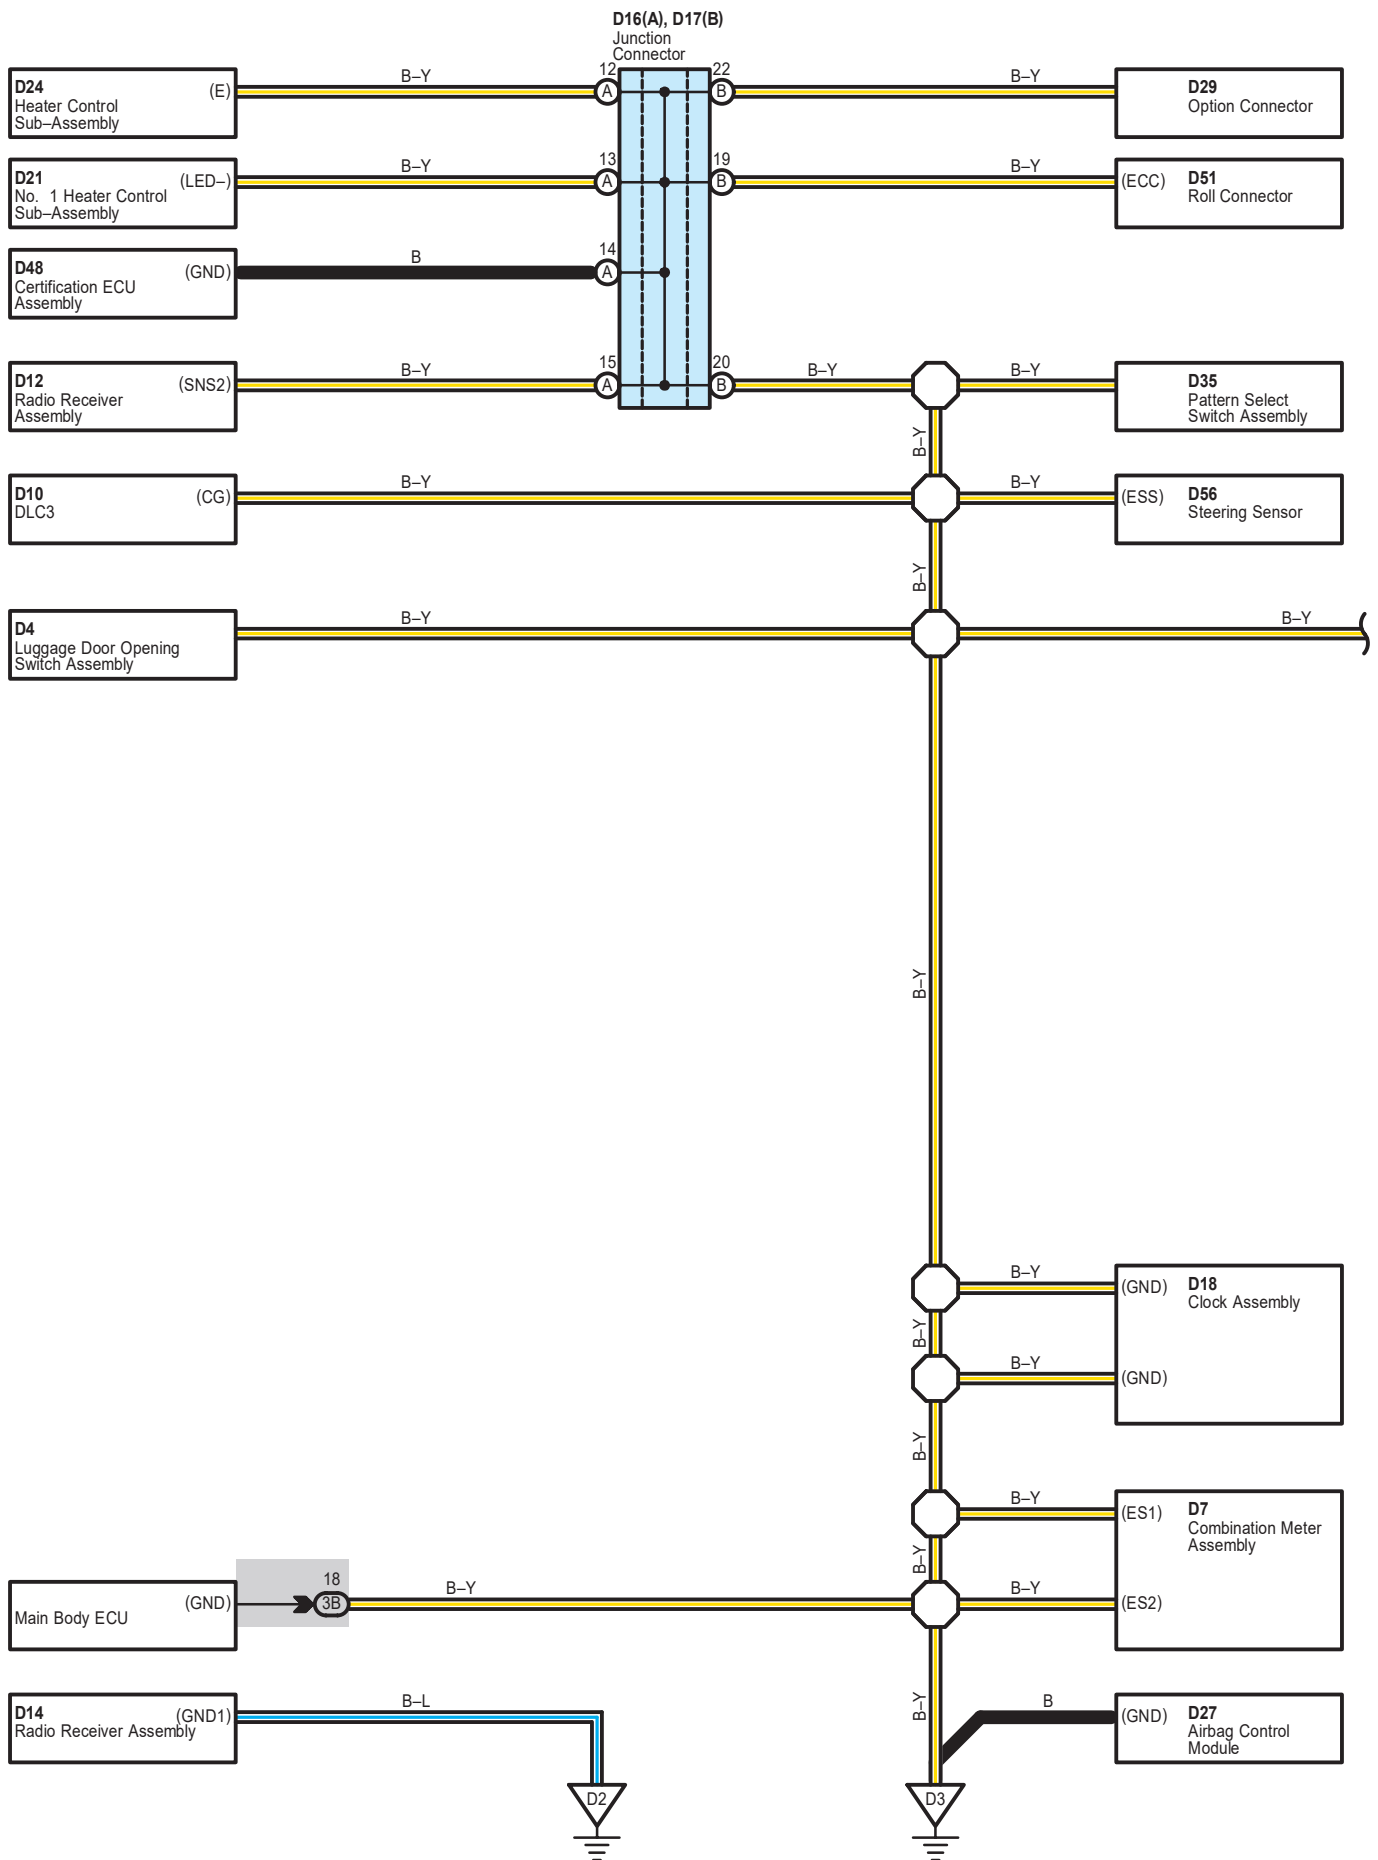


I GROUND POINT

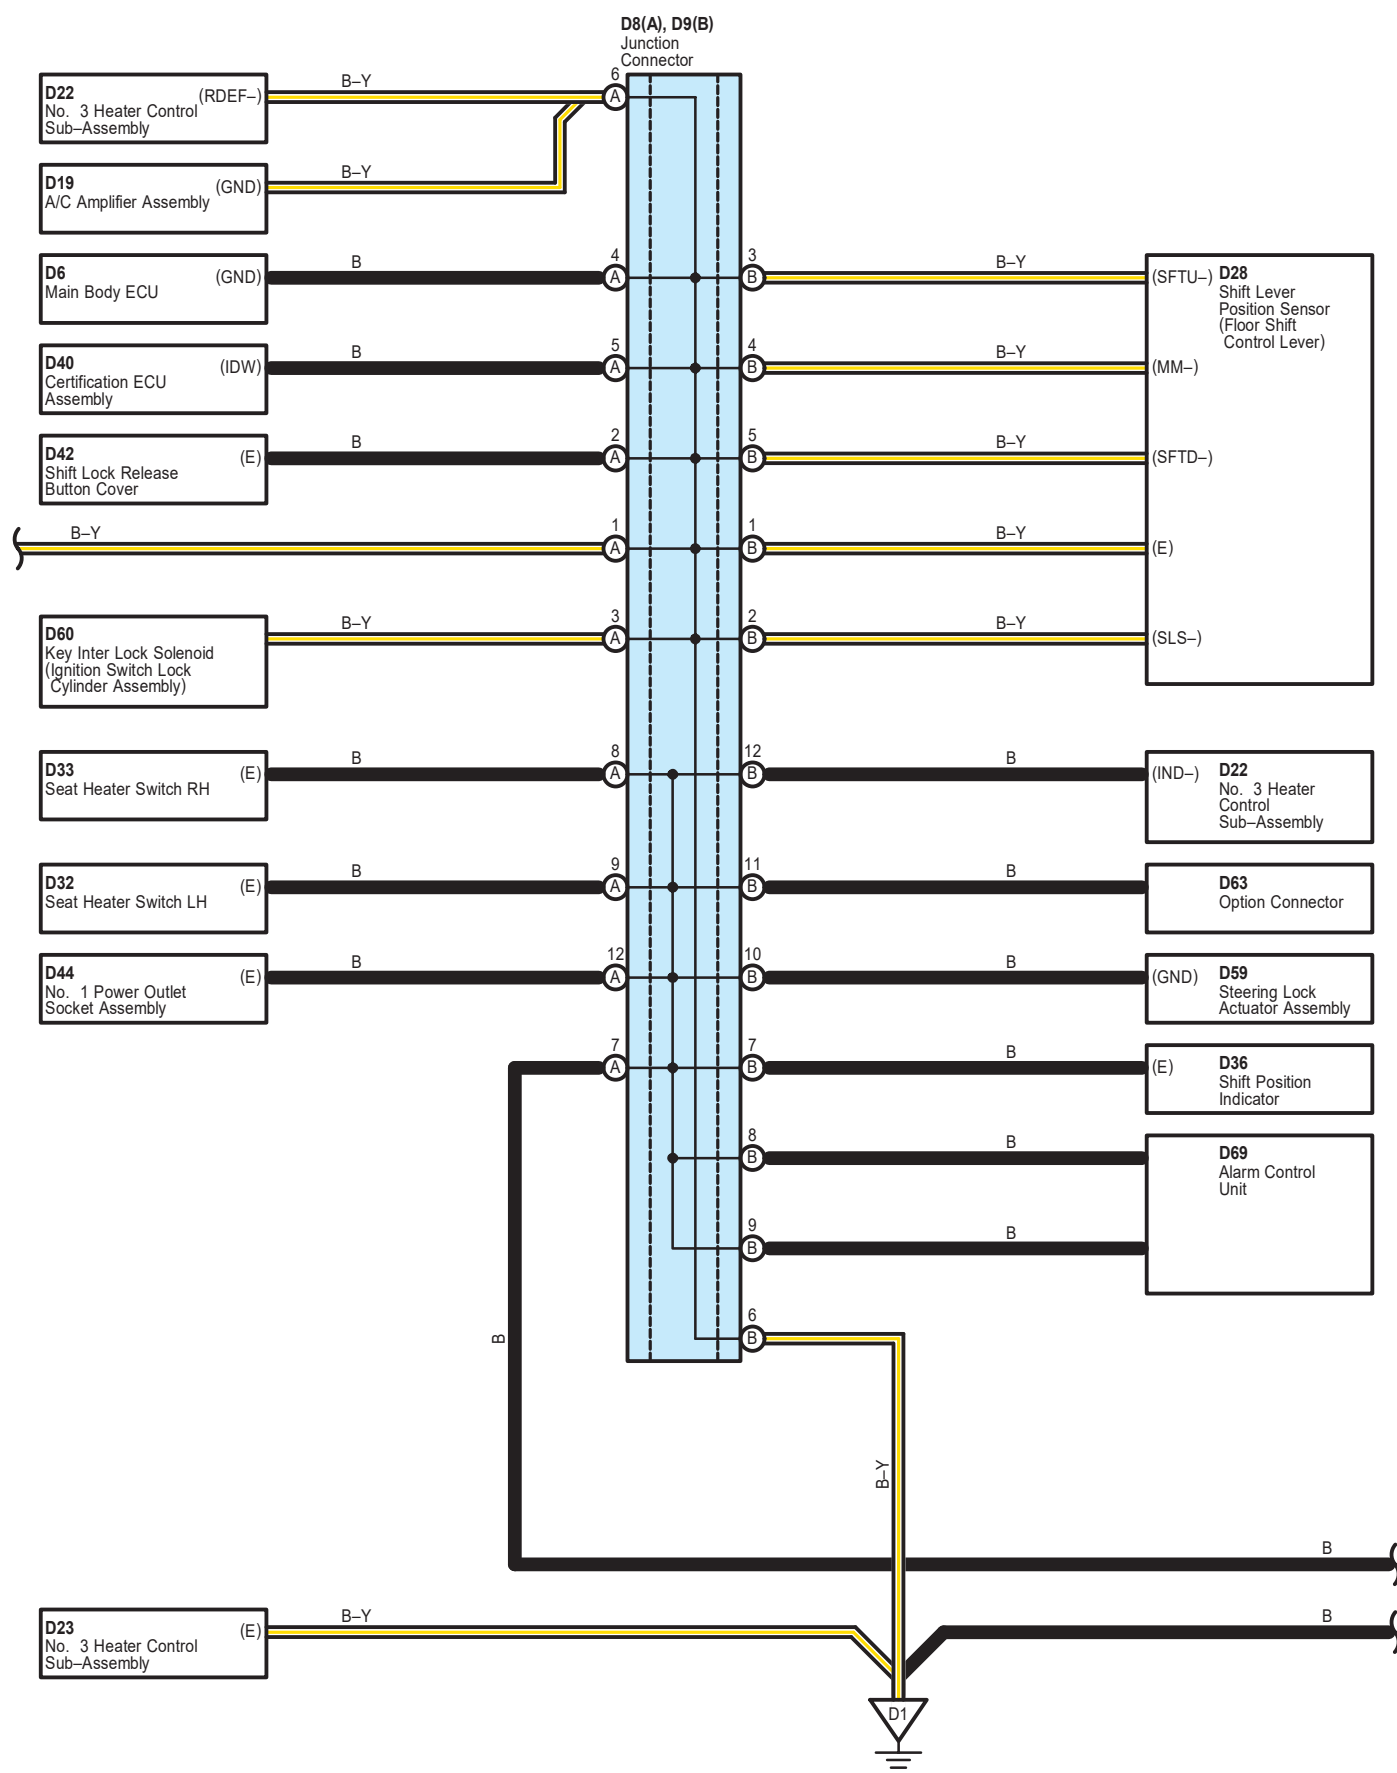

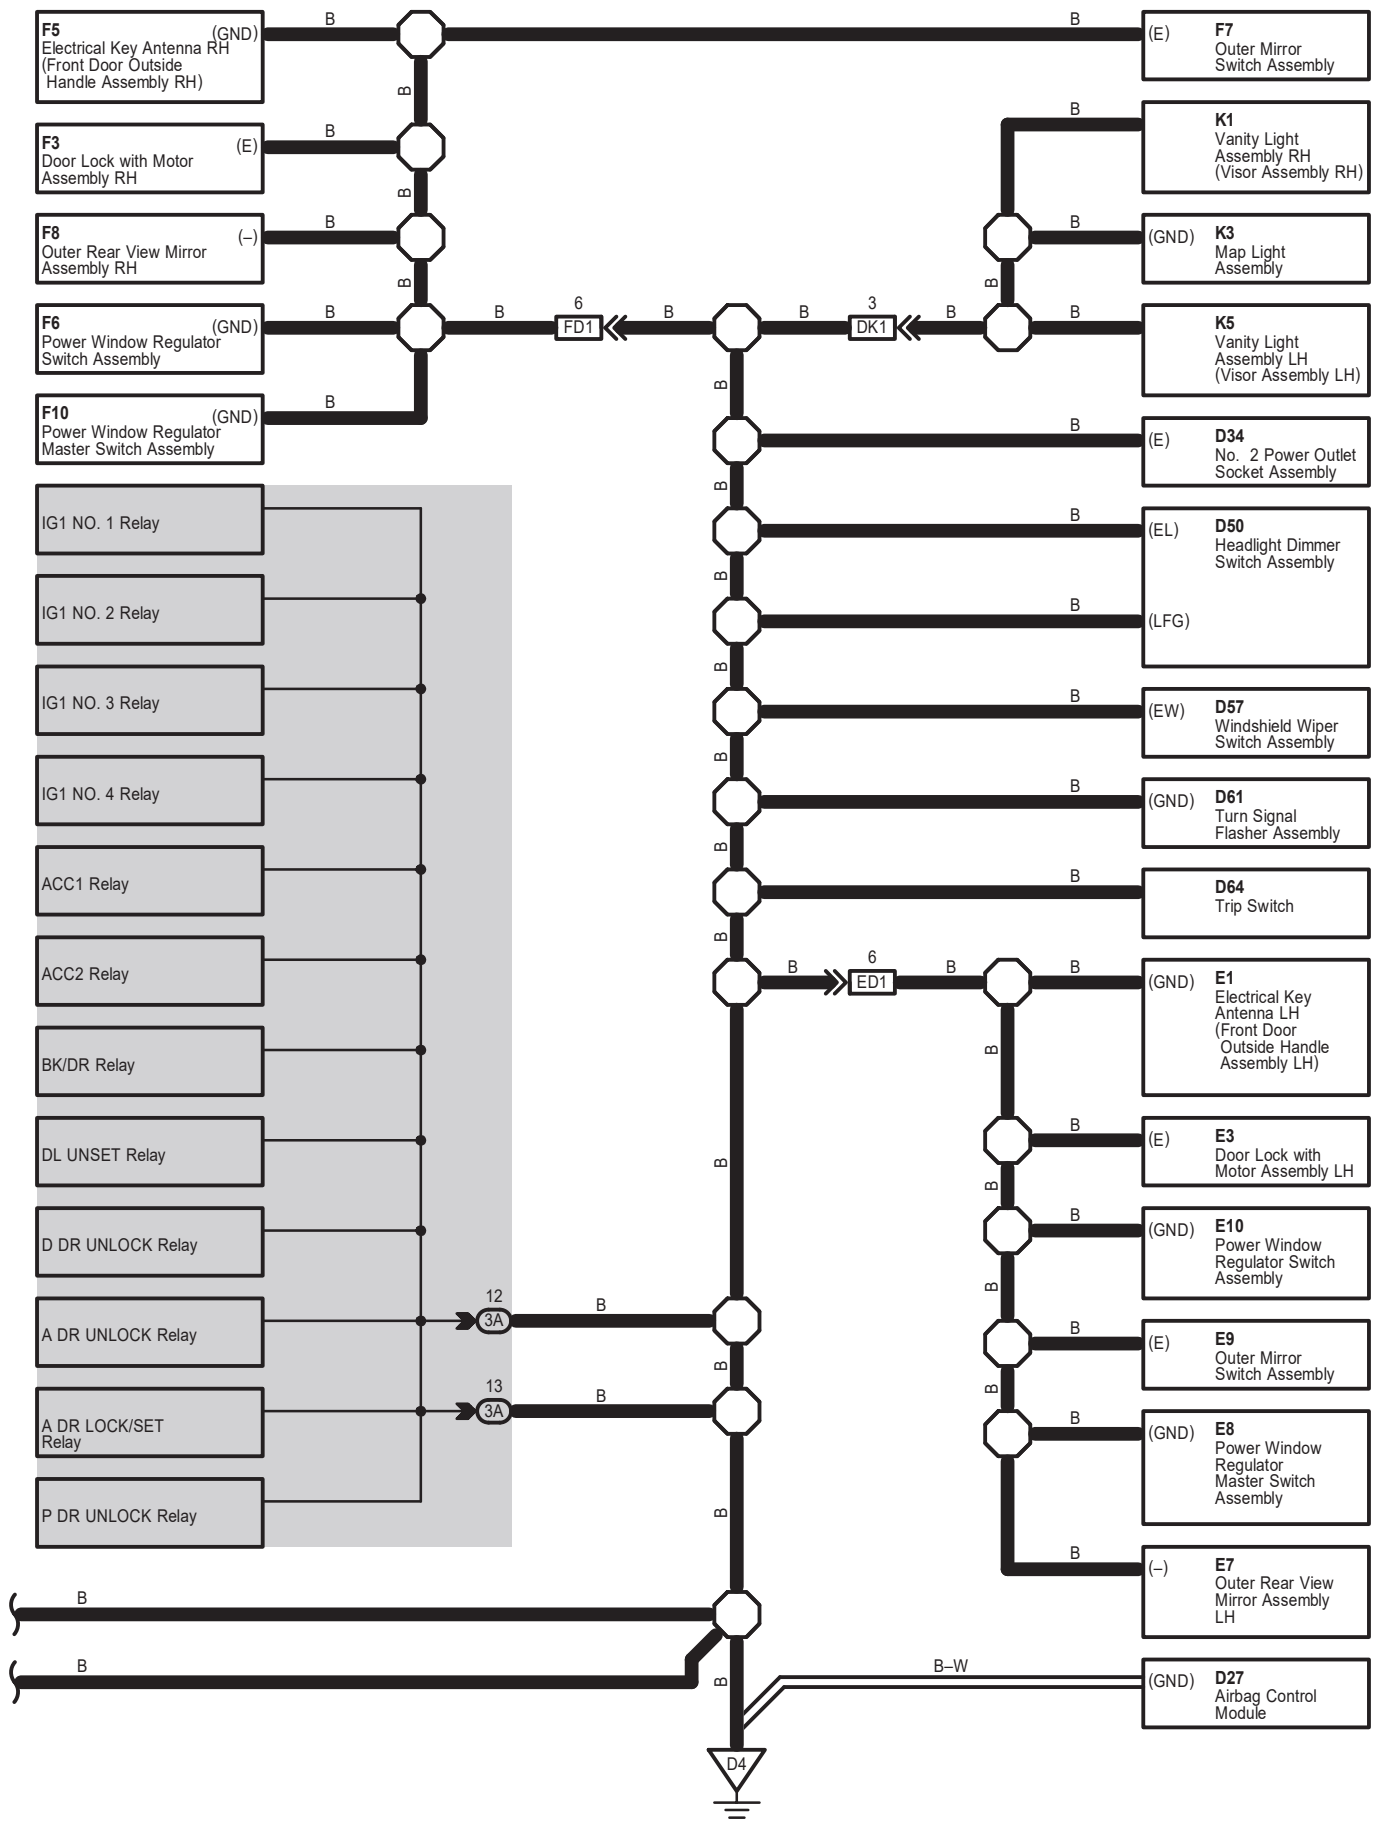

I GROUND POINT

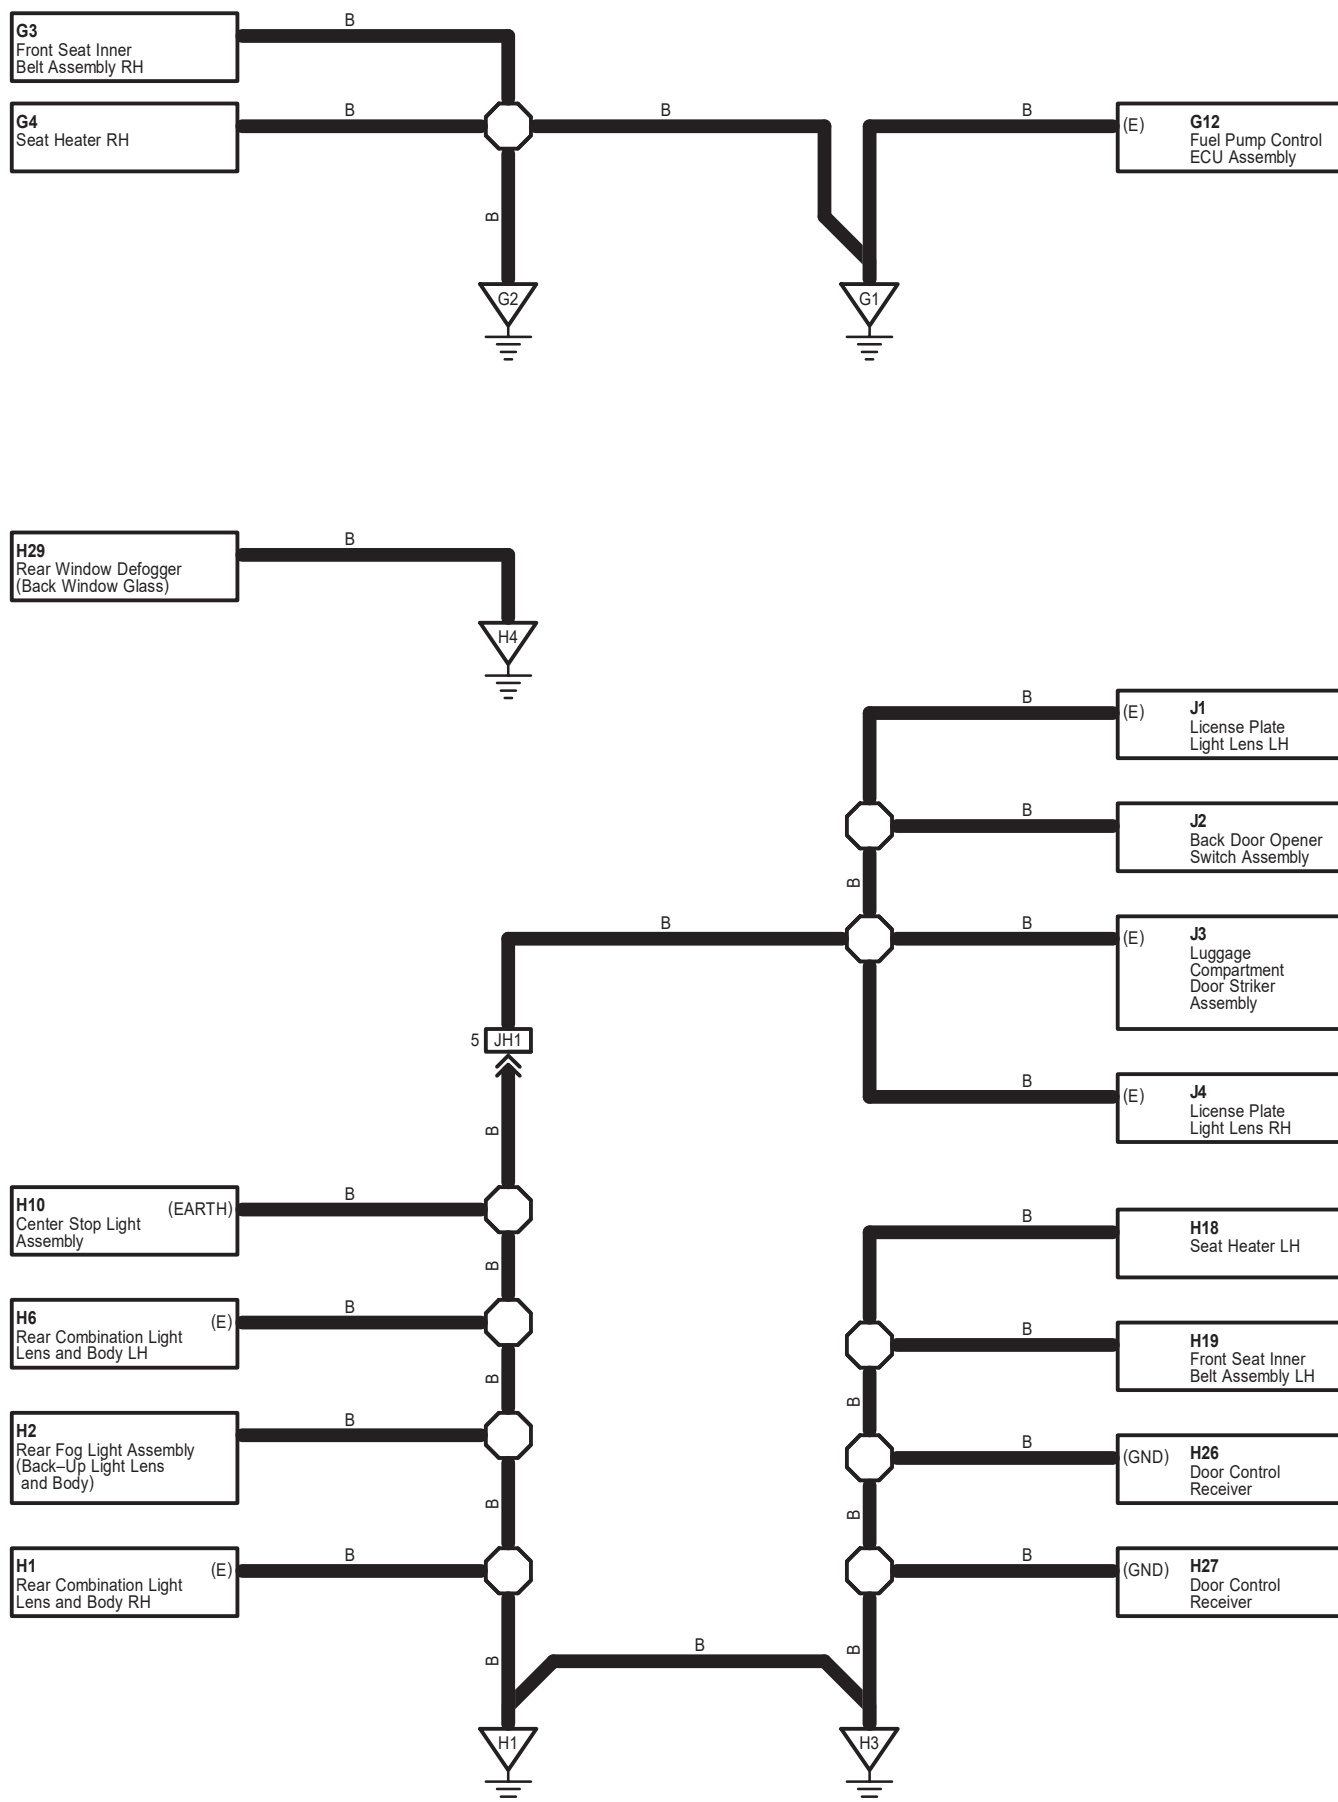

 : **Parts Location**

Code		See Page	Code		See Page	Code		See Page
A9	A	42 (LHD)	D8	A	40 (LHD)	D16	A	40 (LHD)
		50 (RHD)			48 (RHD)			48 (RHD)
A10	B	42 (LHD)	D9	B	40 (LHD)	D17	B	40 (LHD)
		50 (RHD)			48 (RHD)			48 (RHD)

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)
2	25	R/B No. 2 (Behind Glove Box)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
	58 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	
AL2	54 (LHD)	Engine Room Main Wire and Transmission Wire (Dash Panel)
	58 (RHD)	
DK1	55 (LHD)	Instrument Panel Wire and Roof Wire (Front Body Inner Pillar RH)
	59 (RHD)	
ED1	55 (LHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
FD1	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
JH1	56 (LHD)	Luggage Room Wire and No. 2 Floor Wire (Quarter Panel LH)
	60 (RHD)	

 : **Ground Points**

Code	See Page	Ground Points Location
A1	54 (LHD)	Front Fender Apron LH
	58 (RHD)	
A2	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
A3	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	
A7	54 (LHD)	Front Fender Apron RH
	58 (RHD)	
C1	54 (LHD)	Engine Unit
	58 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D2	55 (LHD)	Instrument Panel Brace LH
	59 (RHD)	Instrument Panel Brace RH
D3	55 (LHD)	Instrument Panel Brace LH
	59 (RHD)	
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
G1	56 (LHD)	Quarter Wheel House Panel RH
	60 (RHD)	
G2	56 (LHD)	
	60 (RHD)	

I GROUND POINT



: Ground Points

Code	See Page	Ground Points Location
H1	56 (LHD)	Lower Back Panel
	60 (RHD)	
H3	56 (LHD)	Quarter Wheel House Panel LH
	60 (RHD)	
H4	56 (LHD)	Upper Back Panel
	60 (RHD)	

