


AIR BAG SENSOR FRONT LH (From February, 2004) COMPONENTS

600UN-01

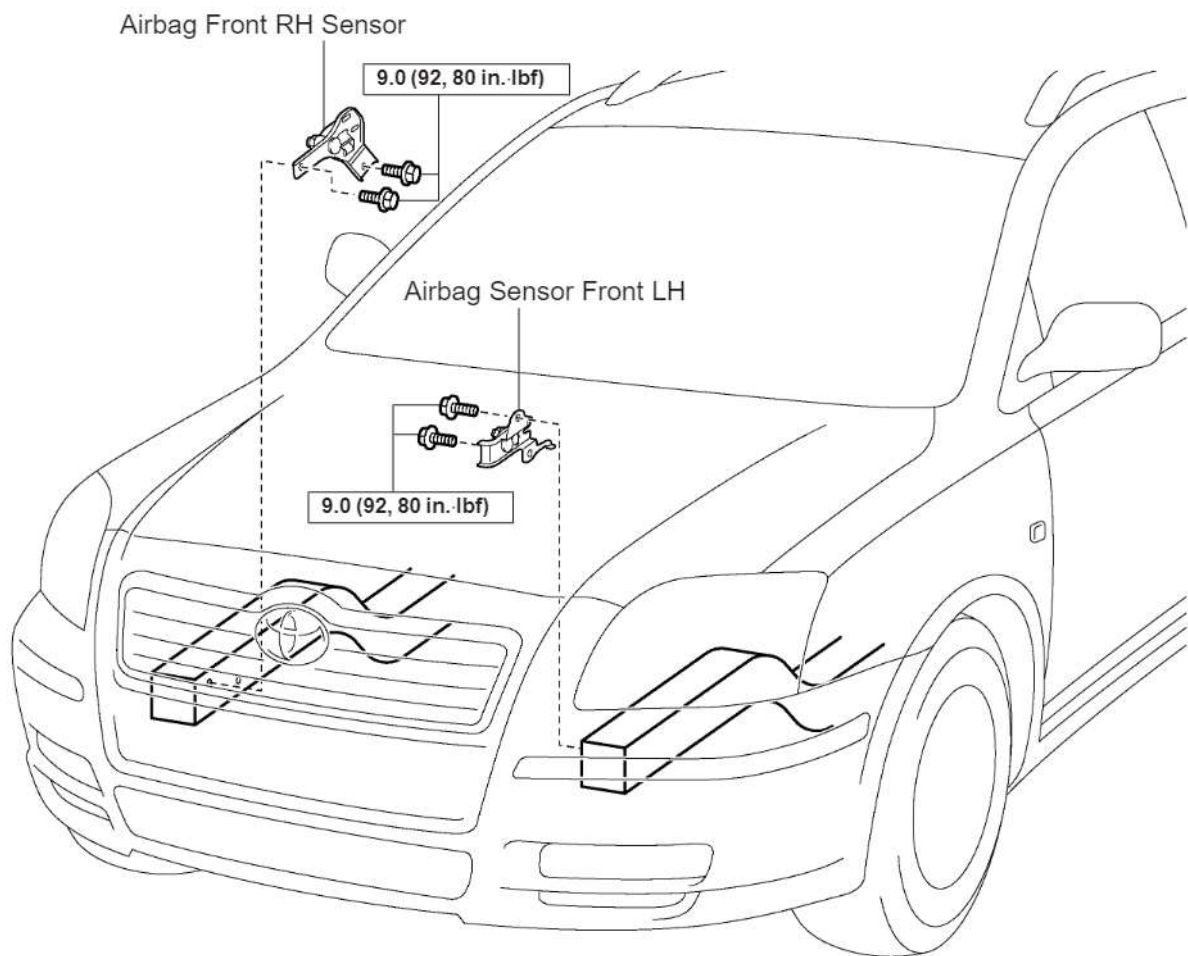

N·m (kgf·cm, ft·lbf) : Specified torque

C

H42698

REPLACEMENT


HINT:

Use the same procedures for the RH side and LH side.

1. **PRECAUTION (SEE PUB. NO. RM1018E, PAGE 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

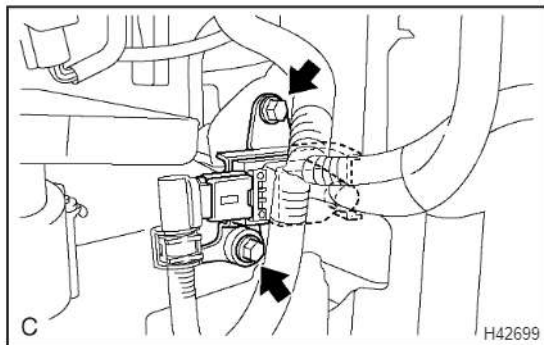

3. REMOVE AIR BAG SENSOR FRONT LH

- (a) Disconnect the connector from the airbag sensor front LH.
- (b) Remove the 2 bolts and the airbag sensor front LH.

4. INSTALL AIR BAG SENSOR FRONT LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (–) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the airbag sensor front LH with the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)

NOTICE:


- If the airbag sensor front LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the airbag sensor front LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Check that there is no looseness in the installation parts of the airbag sensor front LH.
 - (e) Connect the connector to the airbag sensor front LH.

5. CONNECT BATTERY NEGATIVE TERMINAL

6. INSPECT SRS WARNING LIGHT (SEE PUB. NO. RM1018E, PAGE 05-1184)

SIDE AIR BAG SENSOR ASSY LH (From February, 2004) **COMPONENTS**

600UO-01

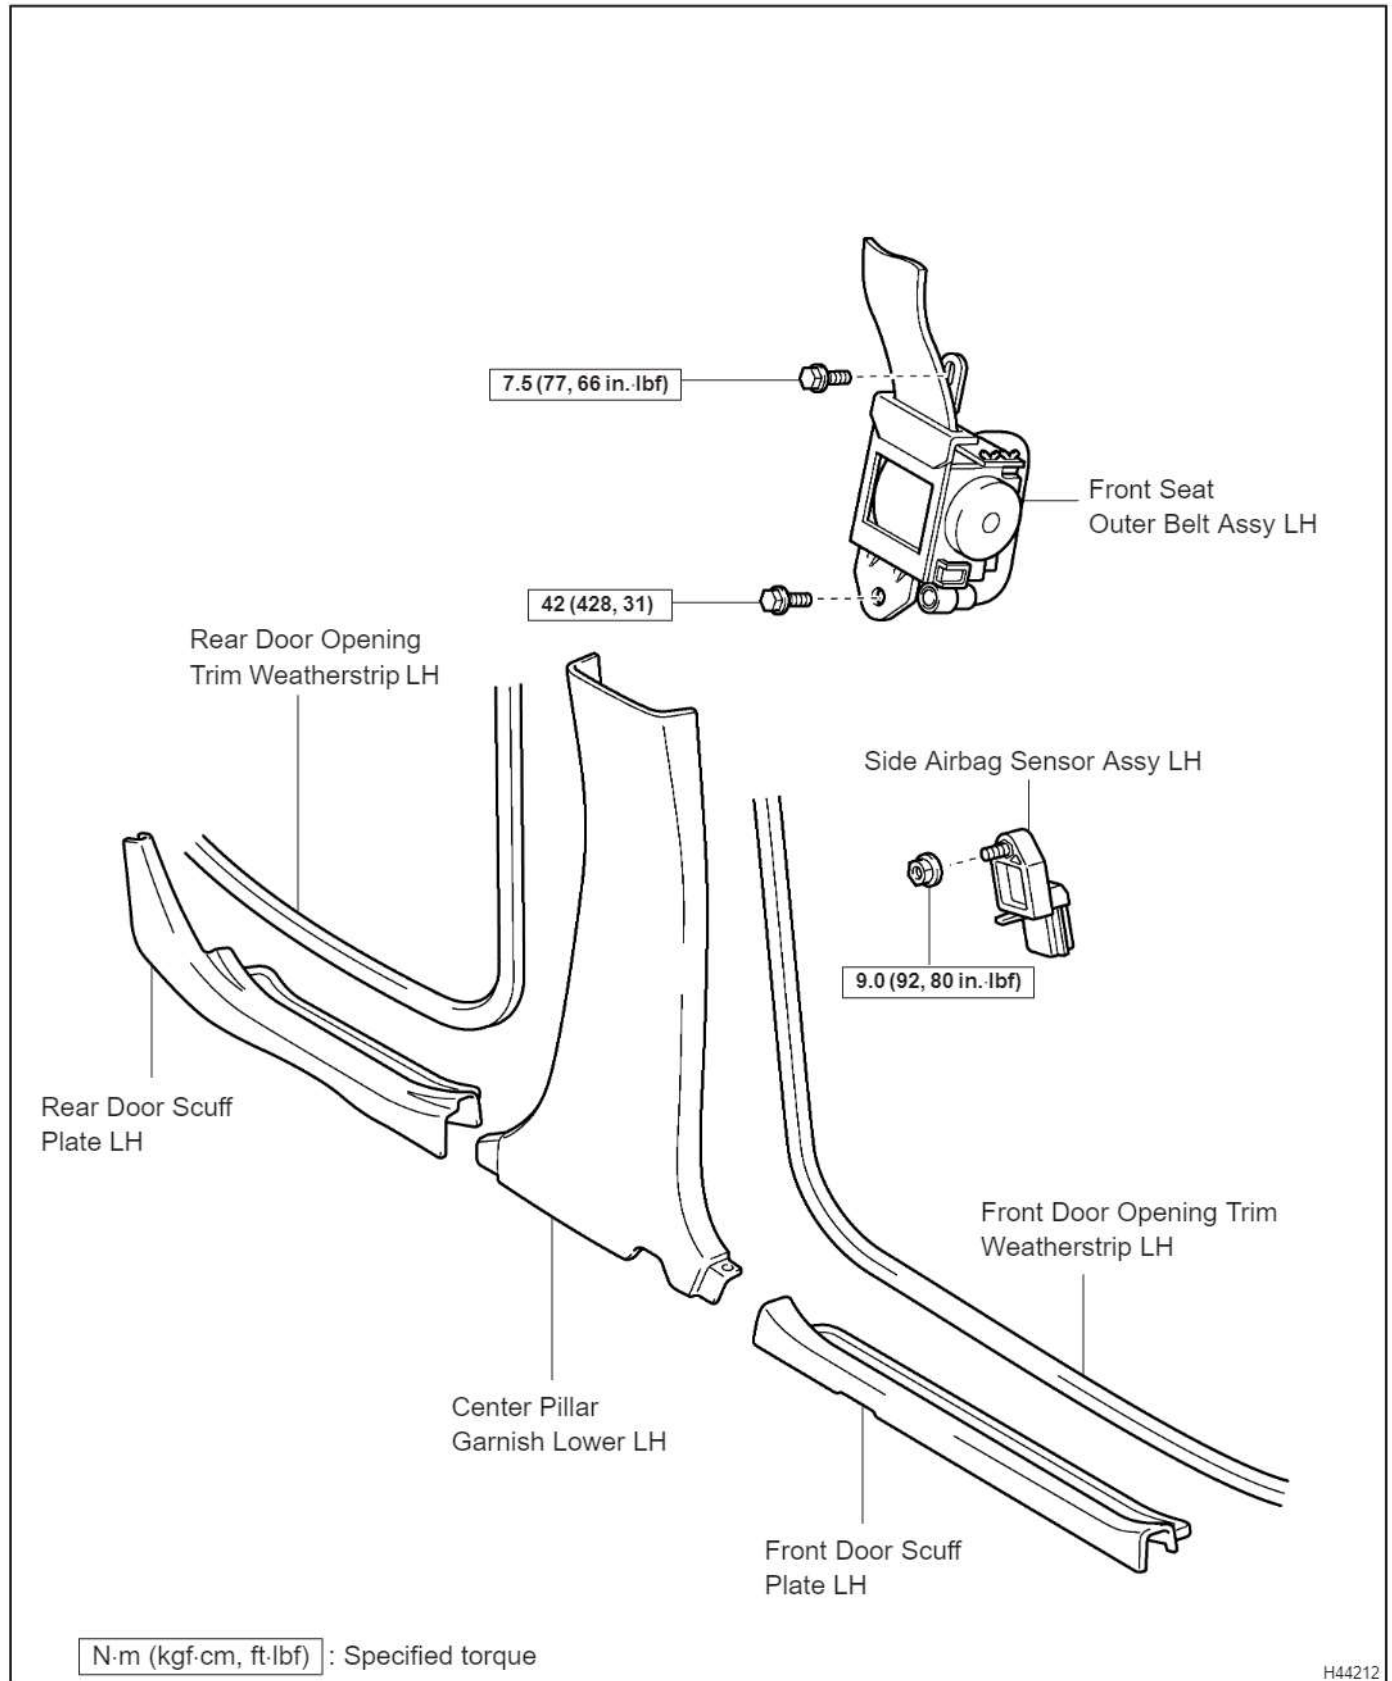

H44212

REPLACEMENT

HINT:


Use the same procedures for the RH side and LH side.

1. **PRECAUTION (SEE PUB. NO. RM1018E, PAGE 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

3. **REMOVE FRONT DOOR SCUFF PLATE LH (SEE PUB. NO. RM1018E, PAGE 76-36)**
4. **REMOVE REAR DOOR SCUFF PLATE LH (SEE PUB. NO. RM1018E, PAGE 76-36)**
5. **REMOVE FRONT DOOR WEATHERSTRIP LH (SEE PUB. NO. RM1018E, PAGE 76-36)**
6. **REMOVE REAR DOOR WEATHERSTRIP LH (SEE PUB. NO. RM1018E, PAGE 76-36)**
7. **REMOVE CENTER PILLAR GARNISH LOWER LH (SEE PUB. NO. RM1018E, PAGE 76-36)**
8. **REMOVE FRONT SEAT OUTER BELT ASSY LH (SEE PUB. NO. RM1018E, PAGE 61-7)**

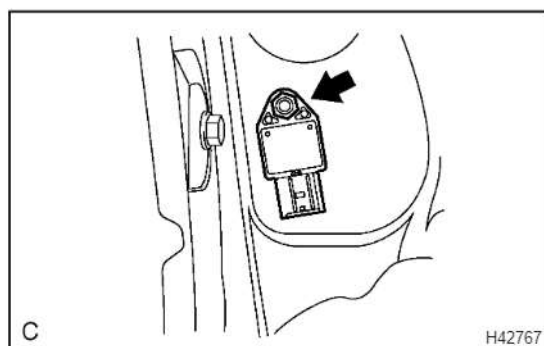

9. REMOVE SIDE AIR BAG SENSOR ASSY LH

- (a) Disconnect the connector from the side airbag sensor assy LH.
- (b) Remove the nut and the side airbag sensor assy LH.

10. INSTALL SIDE AIR BAG SENSOR ASSY LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the side airbag sensor assy LH with the nut.

Torque: 9.0 N·m (92 kgf·cm, 80 in.-lbf)


NOTICE:

- If the side airbag sensor assy LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the side airbag sensor assy LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Check that there is no looseness in the installation parts of the side airbag sensor assy LH.
 - (e) Connect the connector to the side airbag sensor assy LH.
11. **INSTALL FRONT SEAT OUTER BELT ASSY LH (SEE PUB. NO. RM1018E, PAGE 61-7)**
 12. **CONNECT BATTERY NEGATIVE TERMINAL**
 13. **INSPECT SRS WARNING LIGHT (SEE PUB. NO. RM1018E, PAGE 05-1184)**

AIR BAG SENSOR REAR LH (From February, 2004)

COMPONENTS

600K7-02

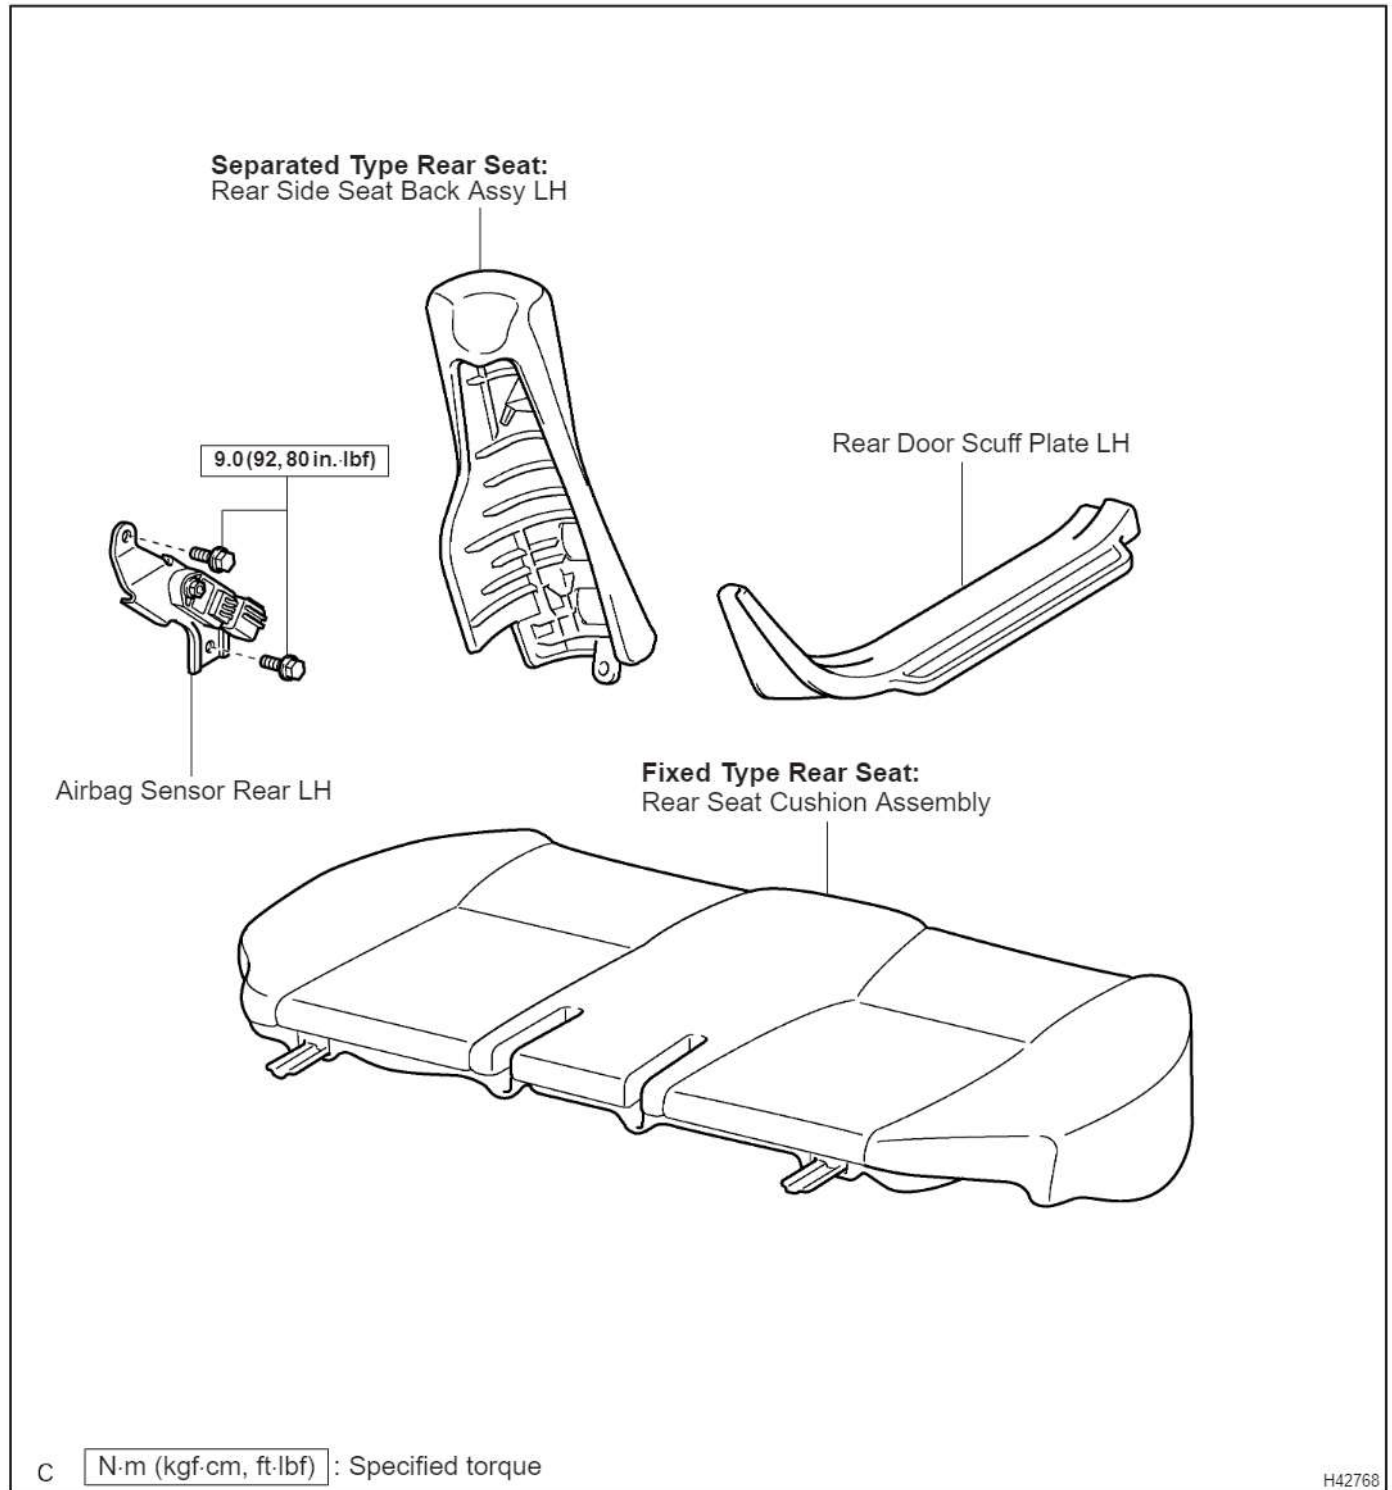

REPLACEMENT

HINT:


Use the same procedures for the RH side and LH side.

1. **PRECAUTION (SEE PUB. NO. RM1018E, PAGE 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

3. **REMOVE REAR DOOR SCUFF PLATE LH (SEE PUB. NO. RM1018E, PAGE 73-36)**
4. **REMOVE REAR SEAT CUSHION ASSEMBLY (FIXED TYPE REAR SEAT) (SEE PUB. NO. RM1018E, PAGE 72-33)**
5. **REMOVE REAR SIDE SEAT BACK ASSY LH (SEPARATED TYPE REAR SEAT) (SEE PUB. NO. RM1018E, PAGE 72-27)**

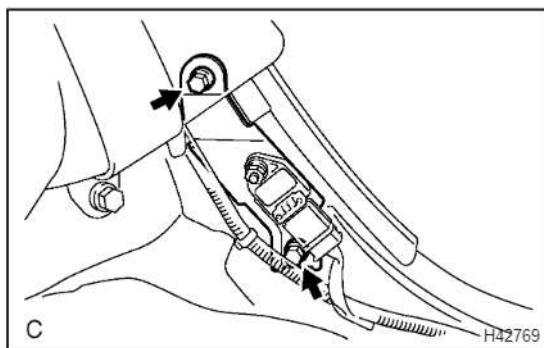

6. **REMOVE AIR BAG SENSOR REAR LH**

- (a) Disconnect the connector from the airbag sensor rear LH.
- (b) Remove the 2 bolts and the airbag sensor rear LH.

7. **INSTALL AIR BAG SENSOR REAR LH**

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (–) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the airbag sensor rear LH with the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 ft·lbf)

NOTICE:

- If the airbag sensor rear LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the airbag sensor rear LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Check that there is no looseness in the installation parts of the airbag sensor rear LH.
 - (e) Connect the connector to the airbag sensor rear LH.
8. **CONNECT BATTERY NEGATIVE TERMINAL**
 9. **INSPECT SRS WARNING LIGHT (SEE PUB. NO. RM1018E, PAGE 05-1184)**