

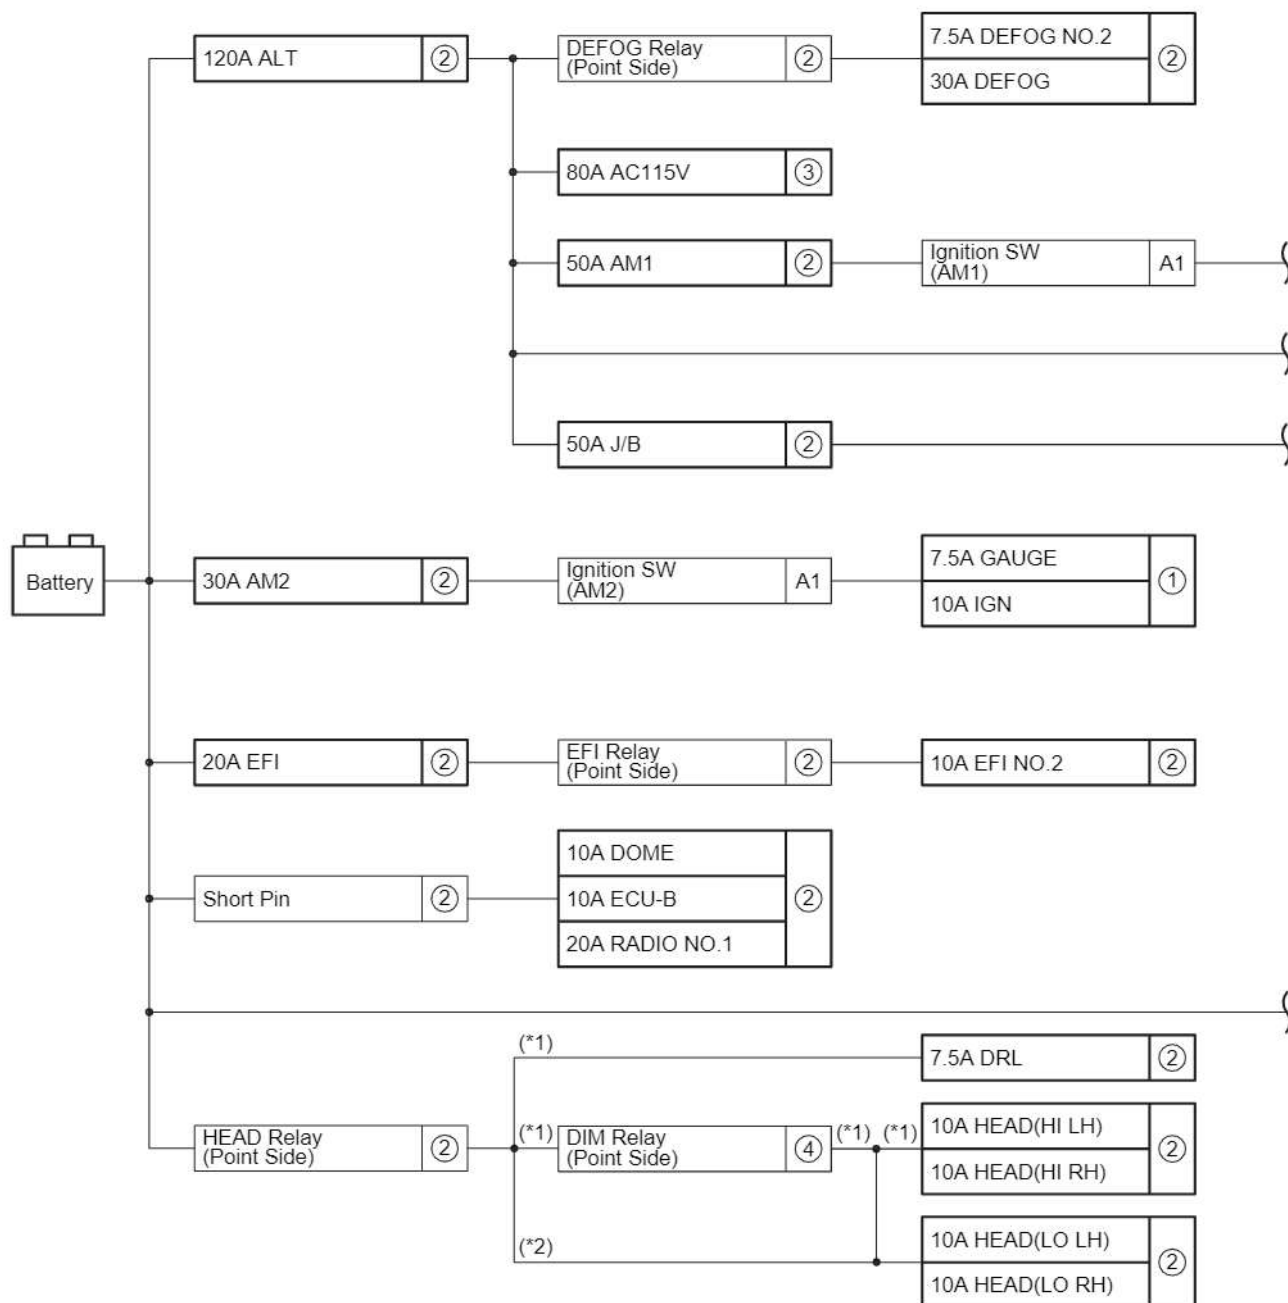


J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

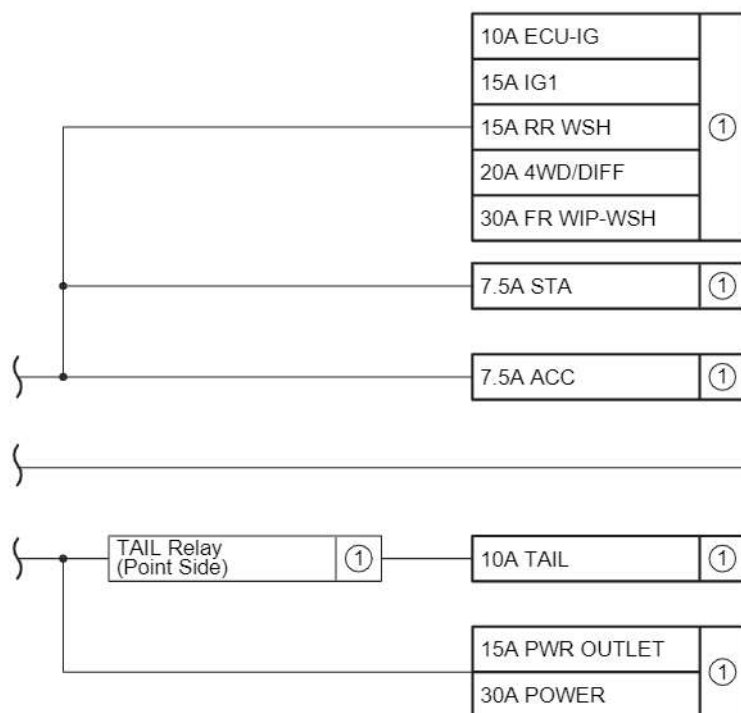


Example

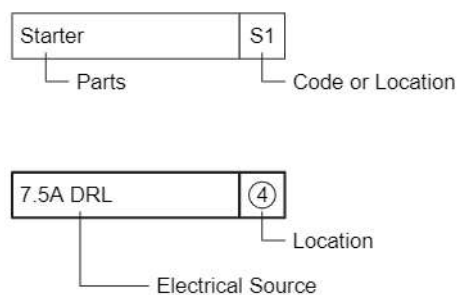

7.5A OBD	②
10A STOP	
15A AUX LP	
15A OFFROAD LP	
15A TOWING TAIL	

- * 1:w/ Daytime Running Light
* 2:w/o Daytime Running Light

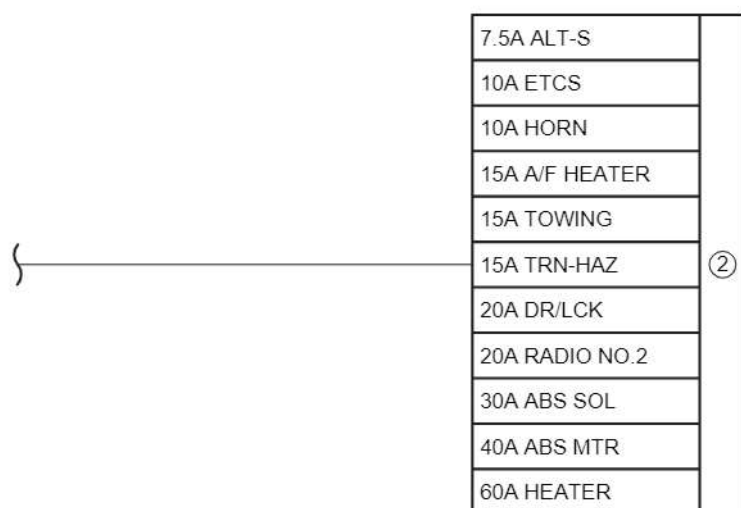

[LOCATION]

- ① : Driver Side J/B (See Page 24)
② : Engine Room R/B No.2 (See Page 22)
③ : Engine Room R/B No.3 (See Page 23)
④ : Engine Room R/B No.4 (See Page 23)

J POWER SOURCE (Current Flow Chart)

Driver Side J/B (See Page 24)

Fuse		System	Page
7.5A	ACC	Accessory Meter	230
		Audio System	236
		Clock	228
		Door Lock Control	150
		Headlight	94
		Interior Light	108
		Light Auto Turn Off System	100
		Power Outlet (12V)	218
		Power Window	146
		Rear Wiper and Washer	142
		Remote Control Mirror	212
		Seat Belt Warning	130
		Shift Lock	210
		Taillight and Illumination	118
		Wireless Door Lock Control	158
7.5A	GAUGE	ABS, TRAC, VSC and Auto LSD	186
		Accessory Meter	230
		Air Conditioning	250
		Charging	68
		Combination Meter	242
		Cruise Control	176
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control	70
		Interior Light	108
		Power Outlet (115V)	214
		Rear Differential Lock	200
		Rear Window Defogger	224
		Seat Belt Warning	130
		SRS	203
		4WD	196
7.5A	STA	Cruise Control	176
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control	70
		Starting	60
10A	ECU-IG	ABS, TRAC, VSC and Auto LSD	186
		Cruise Control	176
		Door Lock Control	150
		Headlight	94
		Interior Light	108
		Light Auto Turn Off System	100
		Power Outlet (115V)	214
		Power Window	146
		Rear Wiper and Washer	142

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	ECU-IG	Seat Belt Warning	130
		Shift Lock	210
		Taillight and Illumination	118
		Wireless Door Lock Control	158
10A	IGN	ABS, TRAC, VSC and Auto LSD	186
		Cruise Control	176
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control	70
		Seat Belt Warning	130
		SRS	203
10A	TAIL	Clock	228
		Combination Meter	242
		Engine Control	70
		Taillight and Illumination	118
15A	IG1	ABS, TRAC, VSC and Auto LSD	186
		Accessory Meter	230
		Air Conditioning	250
		Back-Up Light	126
		Charging	68
		Combination Meter	242
		Cruise Control	176
		Electric Tension Reducer	222
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control	70
		Power Outlet (115V)	214
		Rear Differential Lock	200
		Rear Window Defogger	224
		Seat Belt Warning	130
		SRS	203
		Starting	60
		Stop Light	124
		TOYOTA Parking Assist (Clearance Sonar)	234
		Turn Signal and Hazard Warning Light	104
		4WD	196
15A	PWR OUTLET	Power Outlet (12V)	218
15A	RR WSH	Rear Wiper and Washer	142
20A	4WD/DIFF	Rear Differential Lock	200
		4WD	196
30A	FR WIP-WSH	Front Wiper and Washer	138
30A	POWER	Door Lock Control	150
		Interior Light	108
		Power Window	146
		Rear Wiper and Washer	142

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Engine Room R/B No.2 (See Page 22)

Fuse		System	Page
7.5A	ALT-S	Charging	68
7.5A	DEFOG NO.2	Engine Control Rear Window Defogger	70 224
7.5A	DRL	Headlight	94
7.5A	OBD	Data Link Connector 3	86
10A	DOME	ABS, TRAC, VSC and Auto LSD	186
		Accessory Meter	230
		Air Conditioning	250
		Clock	228
		Combination Meter	242
		Cruise Control	176
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control	70
		Interior Light	108
		Key Reminder	128
		Power Outlet (115V)	214
		Rear Differential Lock	200
		Rear Window Defogger	224
		Seat Belt Warning	130
		Wireless Door Lock Control	158
10A	ECU-B	ABS, TRAC, VSC and Auto LSD	186
		Air Conditioning	250
		Door Lock Control	150
		Headlight	94
		Interior Light	108
		Key Reminder	128
		Light Auto Turn Off System	100
		Power Window	146
		Rear Wiper and Washer	142
		Seat Belt Warning	130
		SRS	203
		Taillight and Illumination	118
		Wireless Door Lock Control	158
10A	EFI NO.2	Electronically Controlled Transmission and A/T Indicator	166
		Engine Control	70
10A	ETCS	Cruise Control	176
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control	70
10A	HEAD(HI LH)	Headlight	94
10A	HEAD(HI RH)	Headlight	94
10A	HEAD(LO LH)	Headlight	94
10A	HEAD(LO RH)	Headlight	94

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	HORN	Horn	220
		Wireless Door Lock Control	158
10A	STOP	ABS, TRAC, VSC and Auto LSD	186
		Cruise Control	176
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control	70
		Shift Lock	210
		Stop Light	124
15A	A/F HEATER	Engine Control	70
15A	TRN-HAZ	Turn Signal and Hazard Warning Light	104
20A	DR/LCK	Door Lock Control	150
		Wireless Door Lock Control	158
20A	EFI	Cruise Control	176
		Electronically Controlled Transmission and A/T Indicator	166
		Engine Control	70
20A	RADIO NO.1	Audio System	236
20A	RADIO NO.2	Audio System	236
30A	ABS SOL	ABS, TRAC, VSC and Auto LSD	186
30A	AM2	Engine Control	70
		Ignition	64
		Starting	60
30A	DEFOG	Rear Window Defogger	224
40A	ABS MTR	ABS, TRAC, VSC and Auto LSD	186
50A	AM1	Starting	60
50A	J/B	Clock	228
		Combination Meter	242
		Engine Control	70
		Light Auto Turn Off System	100
		Taillight and Illumination	118
		Wireless Door Lock Control	158
60A	HEATER	Air Conditioning	250
120A	ALT	Charging	68
		Engine Control	70
		Rear Window Defogger	224
		Starting	60

Engine Room R/B No.3 (See Page 23)

Fuse		System	Page
80A	AC115V	Power Outlet (115V)	214

* These are the page numbers of the first page on which the related system is shown.