


Chevrolet Camaro 2010 – 2015 fuse box diagrams

Passenger compartment fuse box

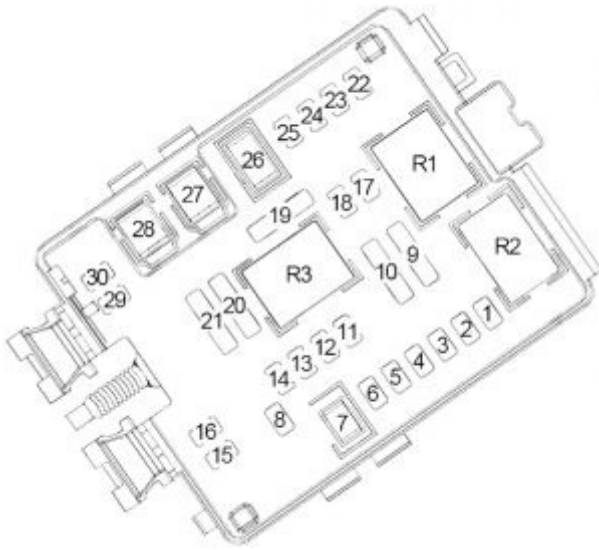

Chevrolet Camaro – fuse box diagram – passenger

compartment

No.	A	Protected Component
1	5	Ignition Switch
2	7.5	Data Link Connector
3	10	Inflatable Restraint Sensing and Diagnostic Module
4	10	Instrument Cluster, Auxiliary Gauge Module
5	15	HVAC Control Module
6	20	Body Control Module
7	25	Circuit Breaker: Seat Adjuster Switch (Passenger)
8	30	Fuse: "13", "14"
9	–	–
10	–	–
11	–	–
12	–	–
13	10	Multimedia Player Interface Module, Radio/HVAC Controls, Head-Up Display
14	7.5	Telematics Communication Interface Control Module, Mobile Telephone Control Module

15	30	Body Control Module
16	30	Body Control Module
17	20	Power Outlet – Center Console
18	20	Power Outlet – Center Console Compartment
19	2	Steering Wheel Controls Switch (Left/Right)
20	–	–
21	–	–
22	–	–
23	10	Rear Compartment Lid Release Relay
24	5	Passenger Presence Detection Module
25	20	Body Control Module
26	25	Circuit Breaker: Seat Adjuster Switch (Driver)
27	30	Body Control Module
28	40	'12-'15: Blower Motor Control Module
29	25	Body Control Module
30	20	Body Control Module
Relay		
R1	Power Outlet	
R2	–	
R3	Rear Compartment Lid Release	

Engine Compartment Fuse Box



Chevrolet Camaro – fuse box diagram – engine compartment

No.	A	Protected Component
1	10	A/C Compressor Clutch Relay
2	15	Transmission Control Module (Control Solenoid Valve Assembly)
3	10	Intercooler Coolant Pump
4	15	Headlamp Washer Pump Relay
5	15	Engine Control Module
6	30	Windshield Wiper Relay, Windshield Wiper Speed Control Relay
7	10	Camshaft Position (CMP) Actuator Solenoid Valve (3.6L), Evaporative Emission (EVAP) Purge Solenoid Valve (3.6L), Heated Oxygen Sensors
8	10	Heated Oxygen Sensors
9	20	3.6L: Engine Control Module
	20	6.2L (SS): Fuel Injector: 2, 4, 6, 8, Ignition Coil: 2, 4, 6, 8
10	20	3.6L: Engine Control Module
	20	6.2L (SS): Fuel Injector: 1, 3, 5, 7, Ignition Coil: 1, 3, 5, 7
11	10	Cooling Fan Speed Control Relay, Cooling Fan High Speed Relay, Cooling fan Low Speed Relay
12	30	Starter Relay
13	–	–

14	7.5	Fuel Pump Control Module, Mass Air Flow/Intake Air Temperature Sensor, Reverse Inhibit Solenoid Actuator, Skip Shift Solenoid Actuator, Valve Lifter Oil Manifold Assembly (6.2L (SS – L99)), Vehicle Speed Sensor
15	5	Instrument Cluster
16	5	HVAC Control Module
17	5	Inflatable Restraint Sensing and Diagnostic Module
18	10	Passenger Air Bag Disable Indicator, Inside Rearview Mirror
19	20	Transmission Control Module (Control Solenoid Valve Assembly)
20	15	Engine Control Module
21	10	'13-: Charge Air Cooler Coolant Pump
22	20	Brake Booster Pump Motor Relay
23	–	–
24	–	–
25	30	Convertible: Power Window (Rear)
26	30	Power Window
27	40	Rear Window Defogger
28	–	–
29	–	–
30	–	–
31	7.5	Outside Rearview Mirror Switch
32	10	Evaporative Emission (EVAP) Vent Solenoid Valve
33	20	Body Control Module
34	25	Sunroof Control Module
35	25	Seat Heating Control Module
36	–	–
37	–	–
38	15	Windshield Washer Pump
39	5	Headlamp Leveling Control Module


40	25	ABS Valve – Electronic Brake Control Module (EBCM)
41	30	Cooling Fan High Speed Relay
42	40	'10-'11: Blower Motor Control Module
43	40	ABS Pump – Electronic Brake Control Module (EBCM)
44	30	Cooling Fan Low Speed Relay
45	–	–
46	20	Headlamp Ballast (Left)
47	20	Headlamp Ballast (Right)
48	–	–
49	–	–
50	15	Front Fog Lamp
51	15	Horn
52	–	–
53	–	–
54	–	–
55	10	Right Headlamp (High Beam)
56	10	Left Headlamp (High Beam)
57	–	–
58	–	–
59	–	–
60	–	–
61	7.5	Door Mirror Defogger
62	–	–
63	–	–
64	–	–
65	–	–
66	7.5	Security Siren Relay

67	–	–
68	–	–
69	–	–
70	–	–
71	–	–
Relay		
R1	Air Conditioning Compressor Clutch	
R2	Starter (HC)	
R3	Headlamp Washer Pump	
R4	Front Wiper (On/Off)	
R5	Front Wiper (Speed)	
R6	–	
R7	Engine Control Module (ECM)	
R8	Brake Booster Pump Motor	
R9	Cooling Fan High Speed (HC)	
R10	–	
R11	–	
R12	–	
R13	Cooling Fan Low Speed (HC)	
R14	Cooling Fan Speed Control	
R15	Headlamp (Low Beam)	
R16	Rear Window Defogger	
R17	–	
Relay (Non-Serviceable)		
R18	Front Fog Lamp	
R19	Headlamp (High Beam)	
R20	Horn	

R21	Windshield Washer Pump
R22	Security Siren


Luggage Compartment Fuse Box

'10-'11:

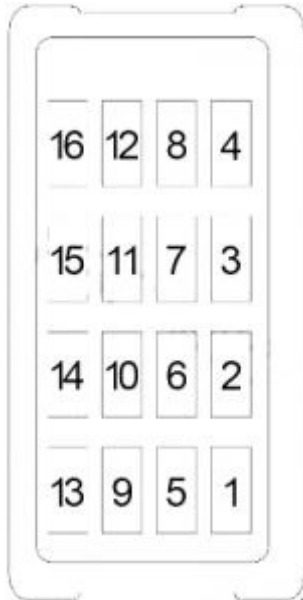

Chevrolet Camaro – fuse box diagram – luggage compartment

'12-'15:

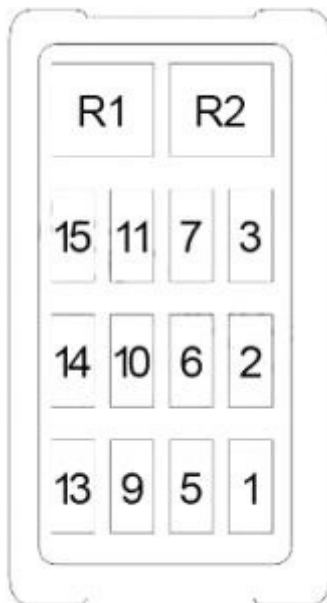

Chevrolet Camaro – fuse box diagram – luggage compartment

No.	A	Protected Component
1	7.5	Garage Door Opener, Parking Assist Control Module, Inside Rearview Mirror
2	30	Audio Amplifier
3	20	Radio
4	–	–

5	30	Convertible: Folding Top Control Module
6	10	Convertible: Folding Top Control Module
7	–	–
8	–	–
9	30	Electronic Suspension Control Module
10	10	Exhaust Flow Control Valve Relay Battery Voltage Supply
11	–	–
12	–	–
13	20	Engine Control Module
14	5	Body Control Module
15	20	Fuel Pump Control Module
16	–	–
Relay		
R1	–	
R2	Exhaust Valve Flow Control	