


Chevrolet Express 2002 fuse box diagram

Instrument Panel Fuse Block

The fuse block access door is on the driver's side of the instrument panel below the hood release lever.

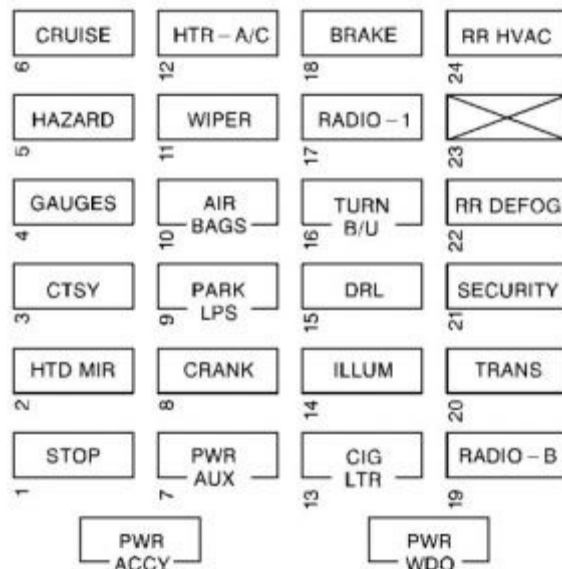


Chevrolet Express – fuse box – instrument panel

Fuse position	Fuse name	Circuit protected
1	STOP	Center High Mounted Stop Lamp, Stoplamps
2	HTD MIR	Electric Heated Mirrors
3	CTSY	Courtesy Lamps, Dome/RDG Lamps, Vanity Mirrors, Power Mirrors
4	GAUGES	IP Cluster, DRL Relay, DRL Module, HDLP Switch, Keyless Entry Illumination, Low Coolant Module, CHIME Module, DRAB Module
5	Hazard	Hazard Lamps/CHIME Module
6	CRUISE	Cruise Control
7	PWR AUX	Auxiliary Power Outlet, DLC
8	Crank	—
9	PARK LPS	License Plate Lamp, Parking Lamps, Taillamps, Front Sidemarkers, Glove Box Ashtray
10	AIR BAGS	Air Bags
11	WIPER	Wiper Motor, Washer Pump
12	HTR-A/C	A/C, A/C Blower, High Blower Relay, HTD Mirror
13	CIG LTR	Cigarette Lighter
14	ILLUM	Instrument Panel Cluster, HVAC Controls, RR HVAC Controls, Instrument Panel Switches, Radio Illumination, Door Switch Illumination

15	DRL	Daytime Running Lamp Relay
16	TURN B/U	Front Turn, RR Turn, Back-up Lamps, BTSI Solenoid
17	RADIO- 1	Radio (Ign, Accy), Upfitter Provision Relay
18	BRAKE	4WAL PCM, ABS, Cruise Control
19	RADIO-B	Radio (Battery), Power Antenna
20	TRANS	PRNDL, Automatic Transmission
21	SECURITY	Passlock
22	RR DEFOG	Rear Window Defog
23	Not Used	—
24	RR HVAC	RR HVAC Controls, HIGH, MED, LOW Relays
A	PWR ACCY	Power Door Lock, Six-Way Power Seat, Keyless Entry Illumination Module
B	PWR WDO	Power Windows

Engine Compartment Fuse Relay Center

The fuse block is on the driver's side of the engine compartment at the rear.

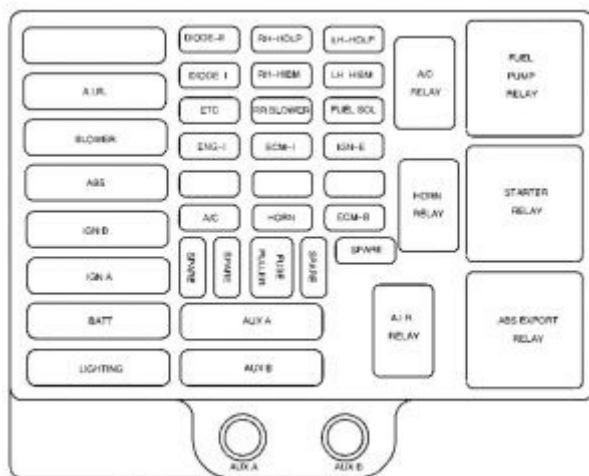

Chevrolet Express – fuse box – engine

compartment

Fuse name	Circuit protected
SPARE	Spare Fuse
A.I.R.	Air Pump
BLOWER	Front Blower Motor
ABS	Electronic Brake Control Module
IGN-B	Ignition Switch
IGN-A	Starter Relay, Ignition Switch
BATT	Instrument Panel Fuse Block
LIGHTING	Instrument Panel Fuse Block, Headlamp Switch
RH-HDLP	Right-hand Headlamp (Export Only)
LH-HDLP	Left-hand Headlamp (Export only)

RH-HIBM	Right-hand High-beam Headlamp (Export Only)
LH-HIBM	Left-hand High-beam Headlamp (Export only)
ETC	Electronic Throttle Control
RR BLOWER	Rear Auxiliary Blower
FUEL SOL	Fuel Solenoid
ENG-I	Heated O2 Sensors, Mass Air Flow Sensor, Evap Canister Purge Valve, Crankshaft Position Sensor, Secondary Air Injection Relay (Diesel), Water in Fuel Sensor (Diesel), Fuel Heater (Diesel), Glowplug Relay (Diesel), Wastegate Solenoid (Diesel)
ECM-I	Ignition Coil, Crankshaft Position Sensor, VCM, Fuel Injectors, Coil Driver
IGN-E	Air Conditioning Clutch Relay
SPARE	Spare Fuse
SPARE	Spare Fuse
SPARE	Spare Fuse
A/C	Air Conditioning Clutch Relay
HORN	Horn Relay, Underhood Lamp(s)
ECM-B	Fuel Pump Relay, VCM, PCM, Fuel Pump and Engine Oil Pressure Switch
SPARE	Spare Fuse
SPARE	Spare Fuse
AUX A	Upfitter Provisions
AUX B	Upfitter Provisions
A/C RELAY	Air Conditioning
HORN RELAY	Horn
A.I.R. RELAY	Air
FUEL PUMP RELAY	Fuel Pump
STARTER RELAY	Starter
ABS EXPORT RELAY	ABS Export