



Headlight (w/o Daytime Running Light)

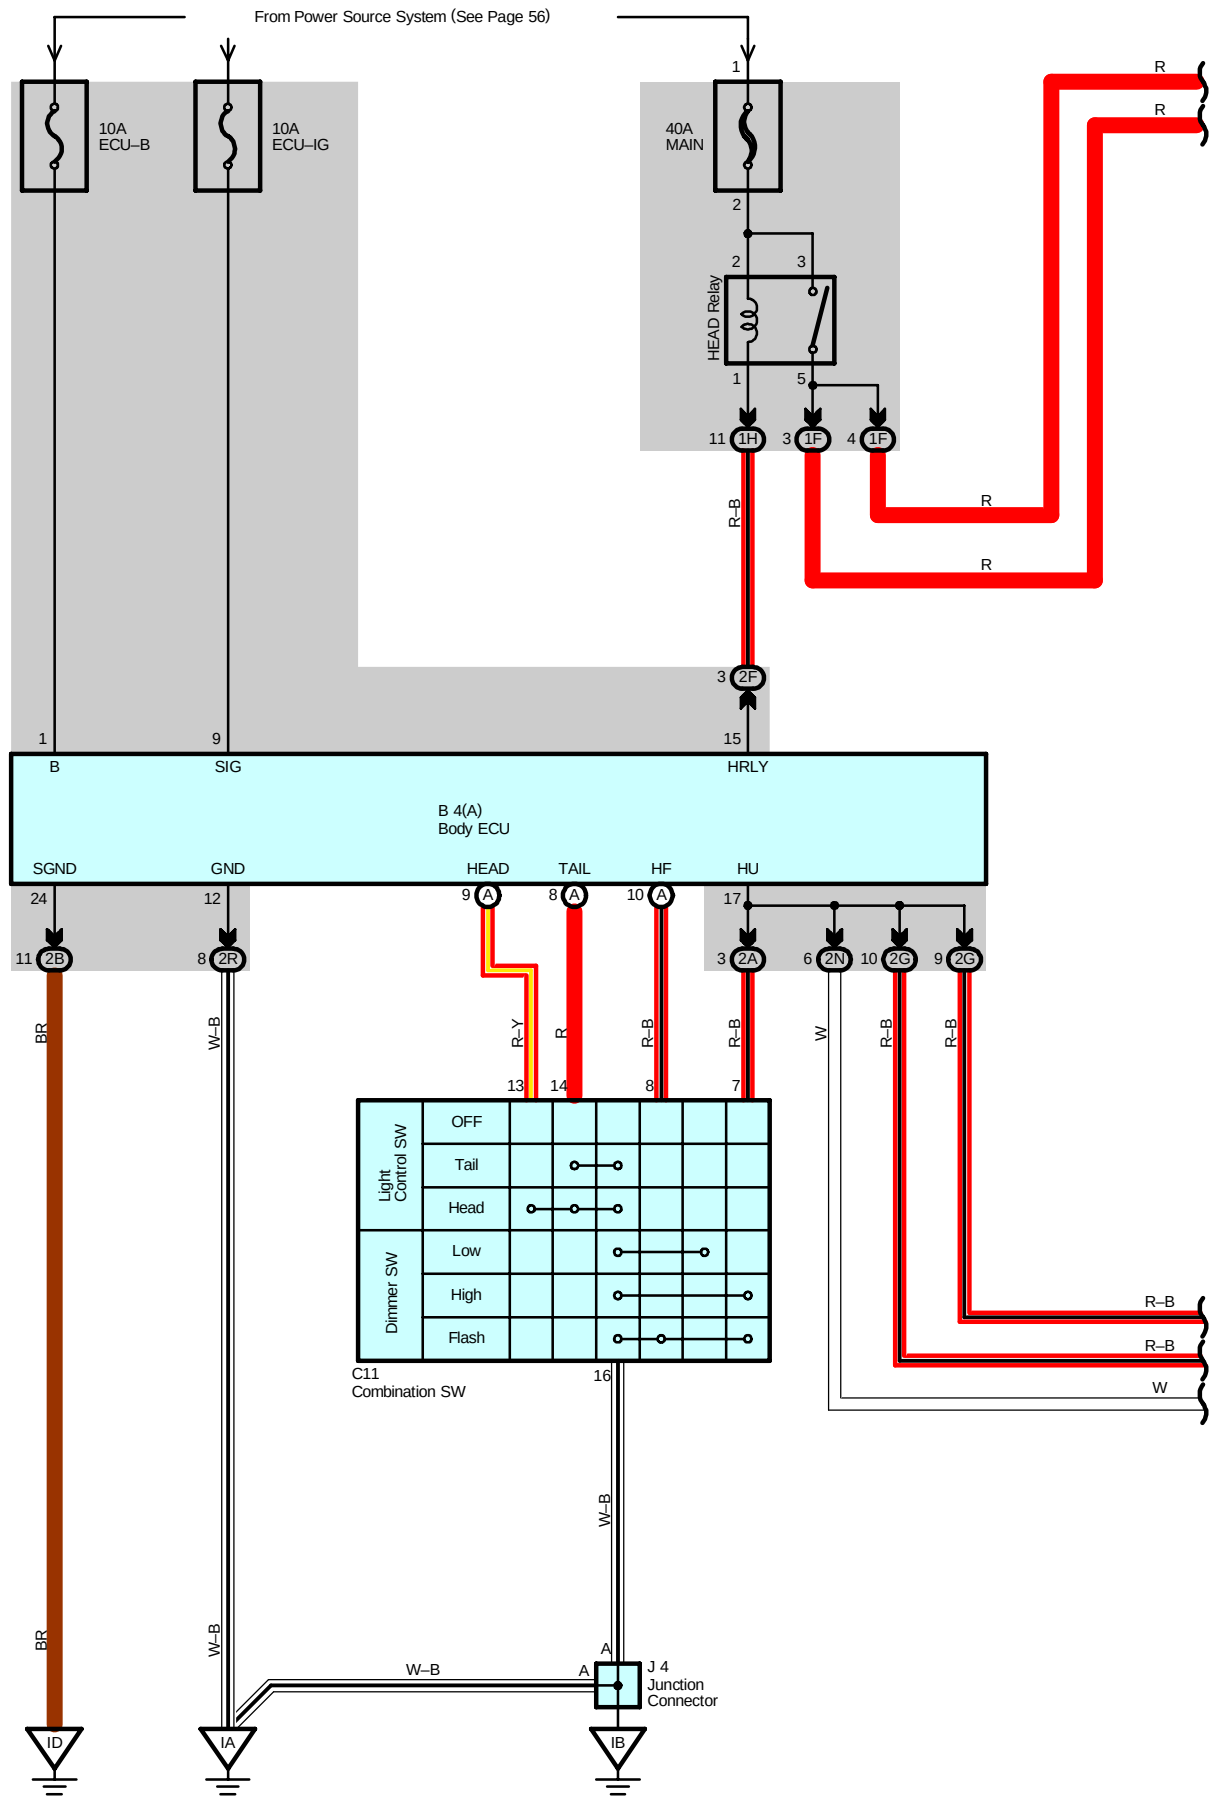

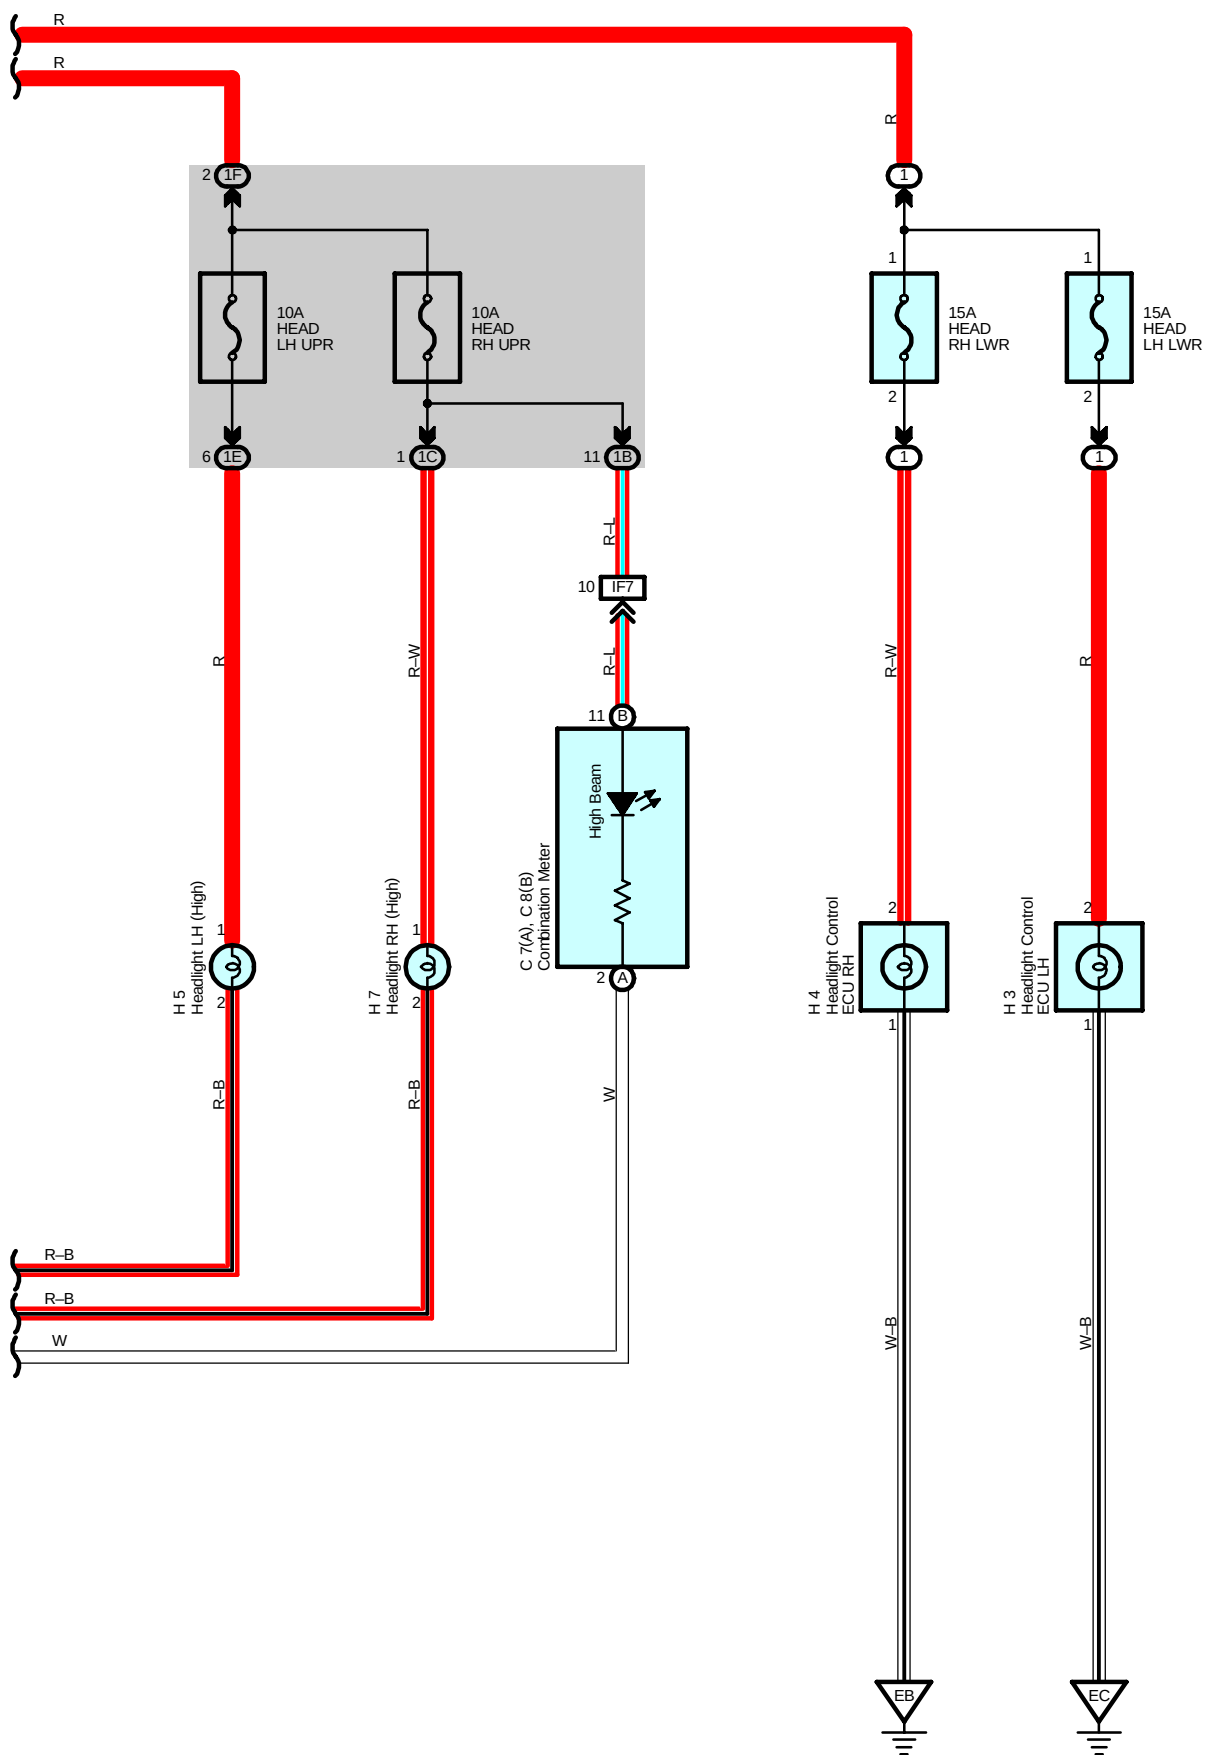

Headlight (w/o Daytime Running Light)

Service Hints

Body ECU

- 9–Ground : Approx. 12 volts with ignition SW at ON or ST position
- 12, 24–Ground : Always continuity
- 1–Ground : Always approx. 12 volts

: Parts Location

Code		See Page	Code		See Page	Code		See Page
B4	A	38	C11	38		H5	36	
C7	A	38	H3	36		H7	36	
C8	B	38	H4	36		J4	39	

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1F		
1H		
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2B		
2F	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2G		
2N	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2R		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF7	46	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)

: Ground Points

Code	See Page	Ground Points Location
EB	44	Right Fender
EC	44	Left Fender
IA	46	Instrument Panel Reinforcement LH
IB	46	Instrument Panel Brace LH
ID	46	Instrument Panel Brace RH