




Interior Light

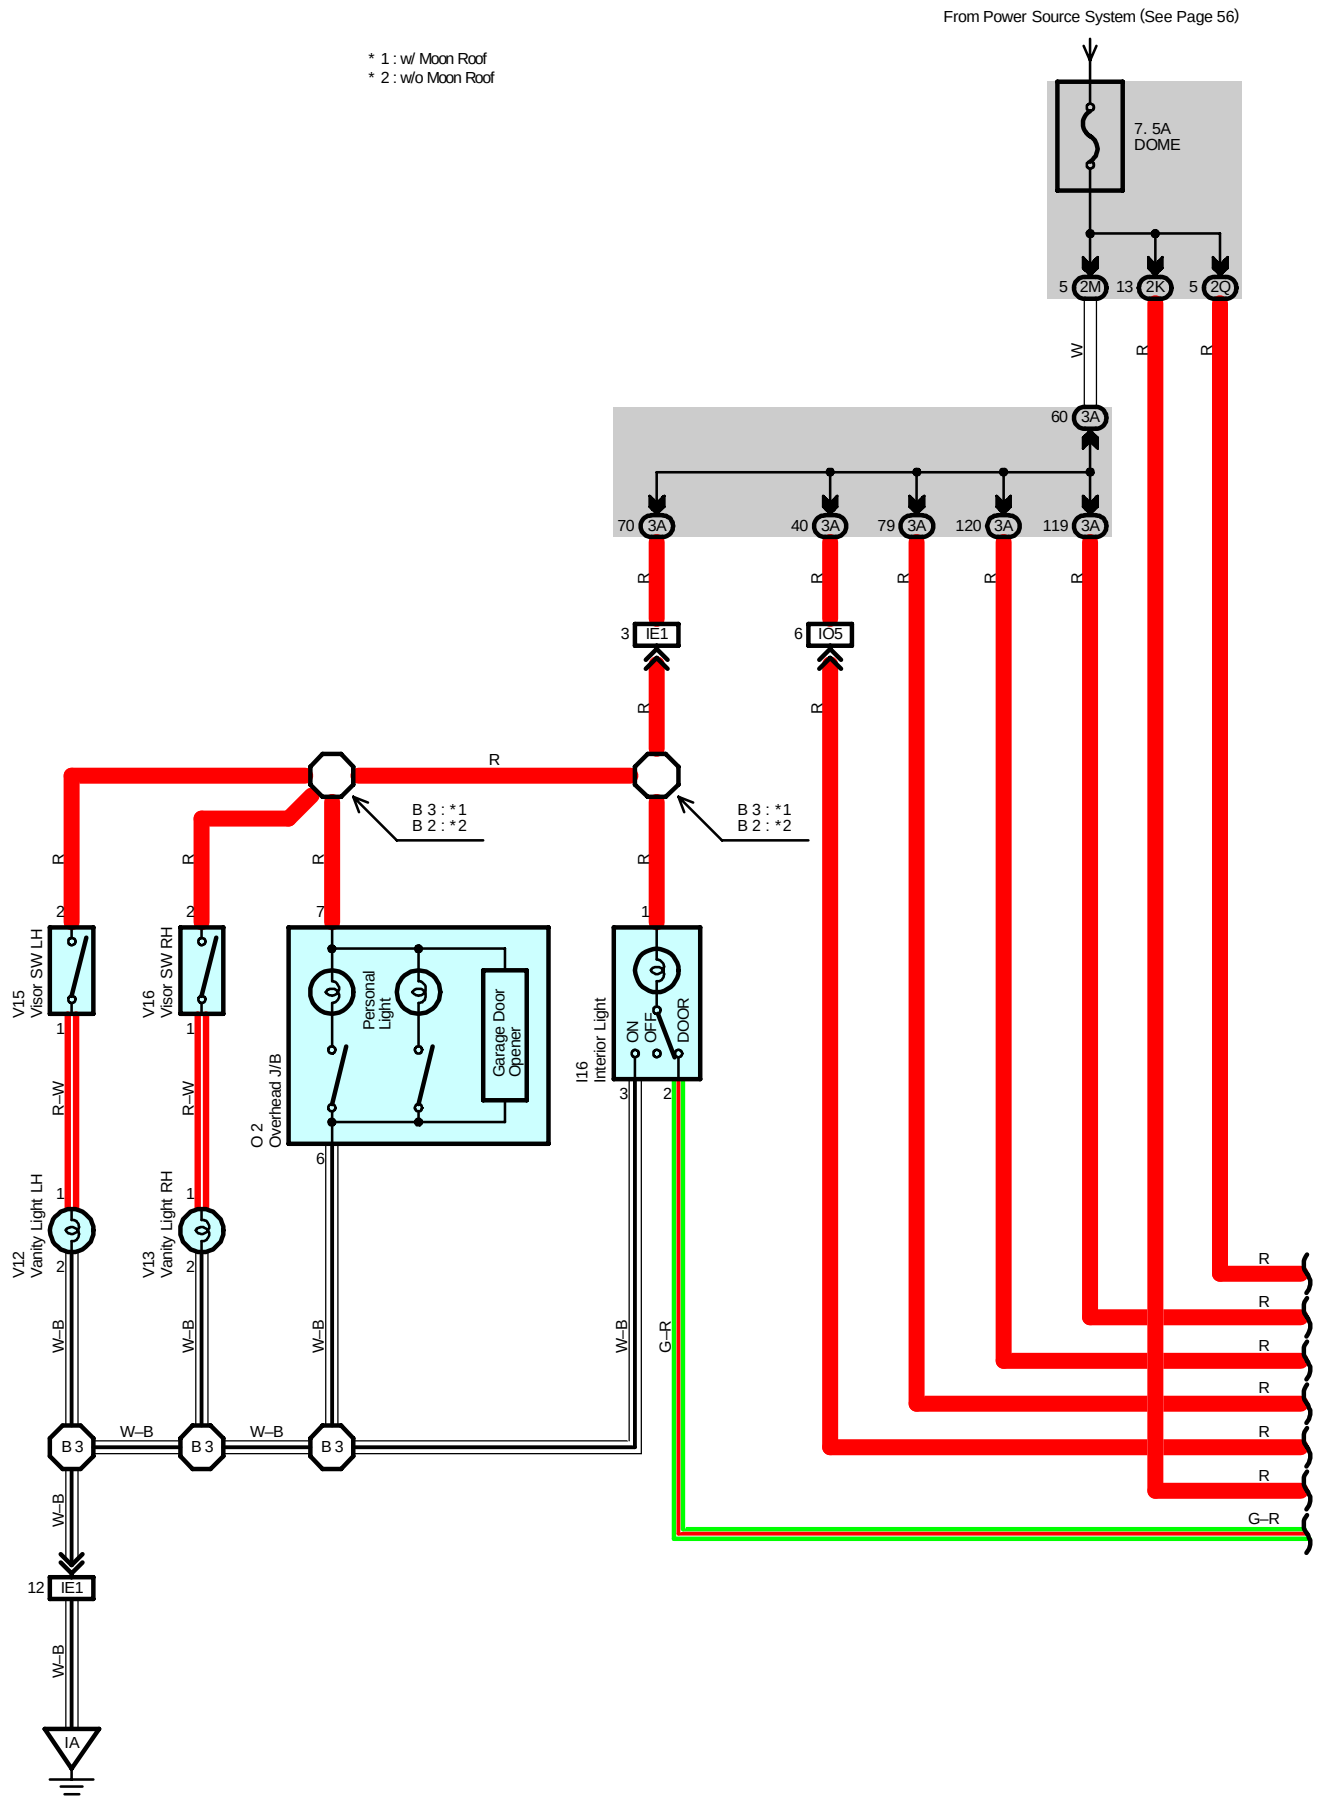

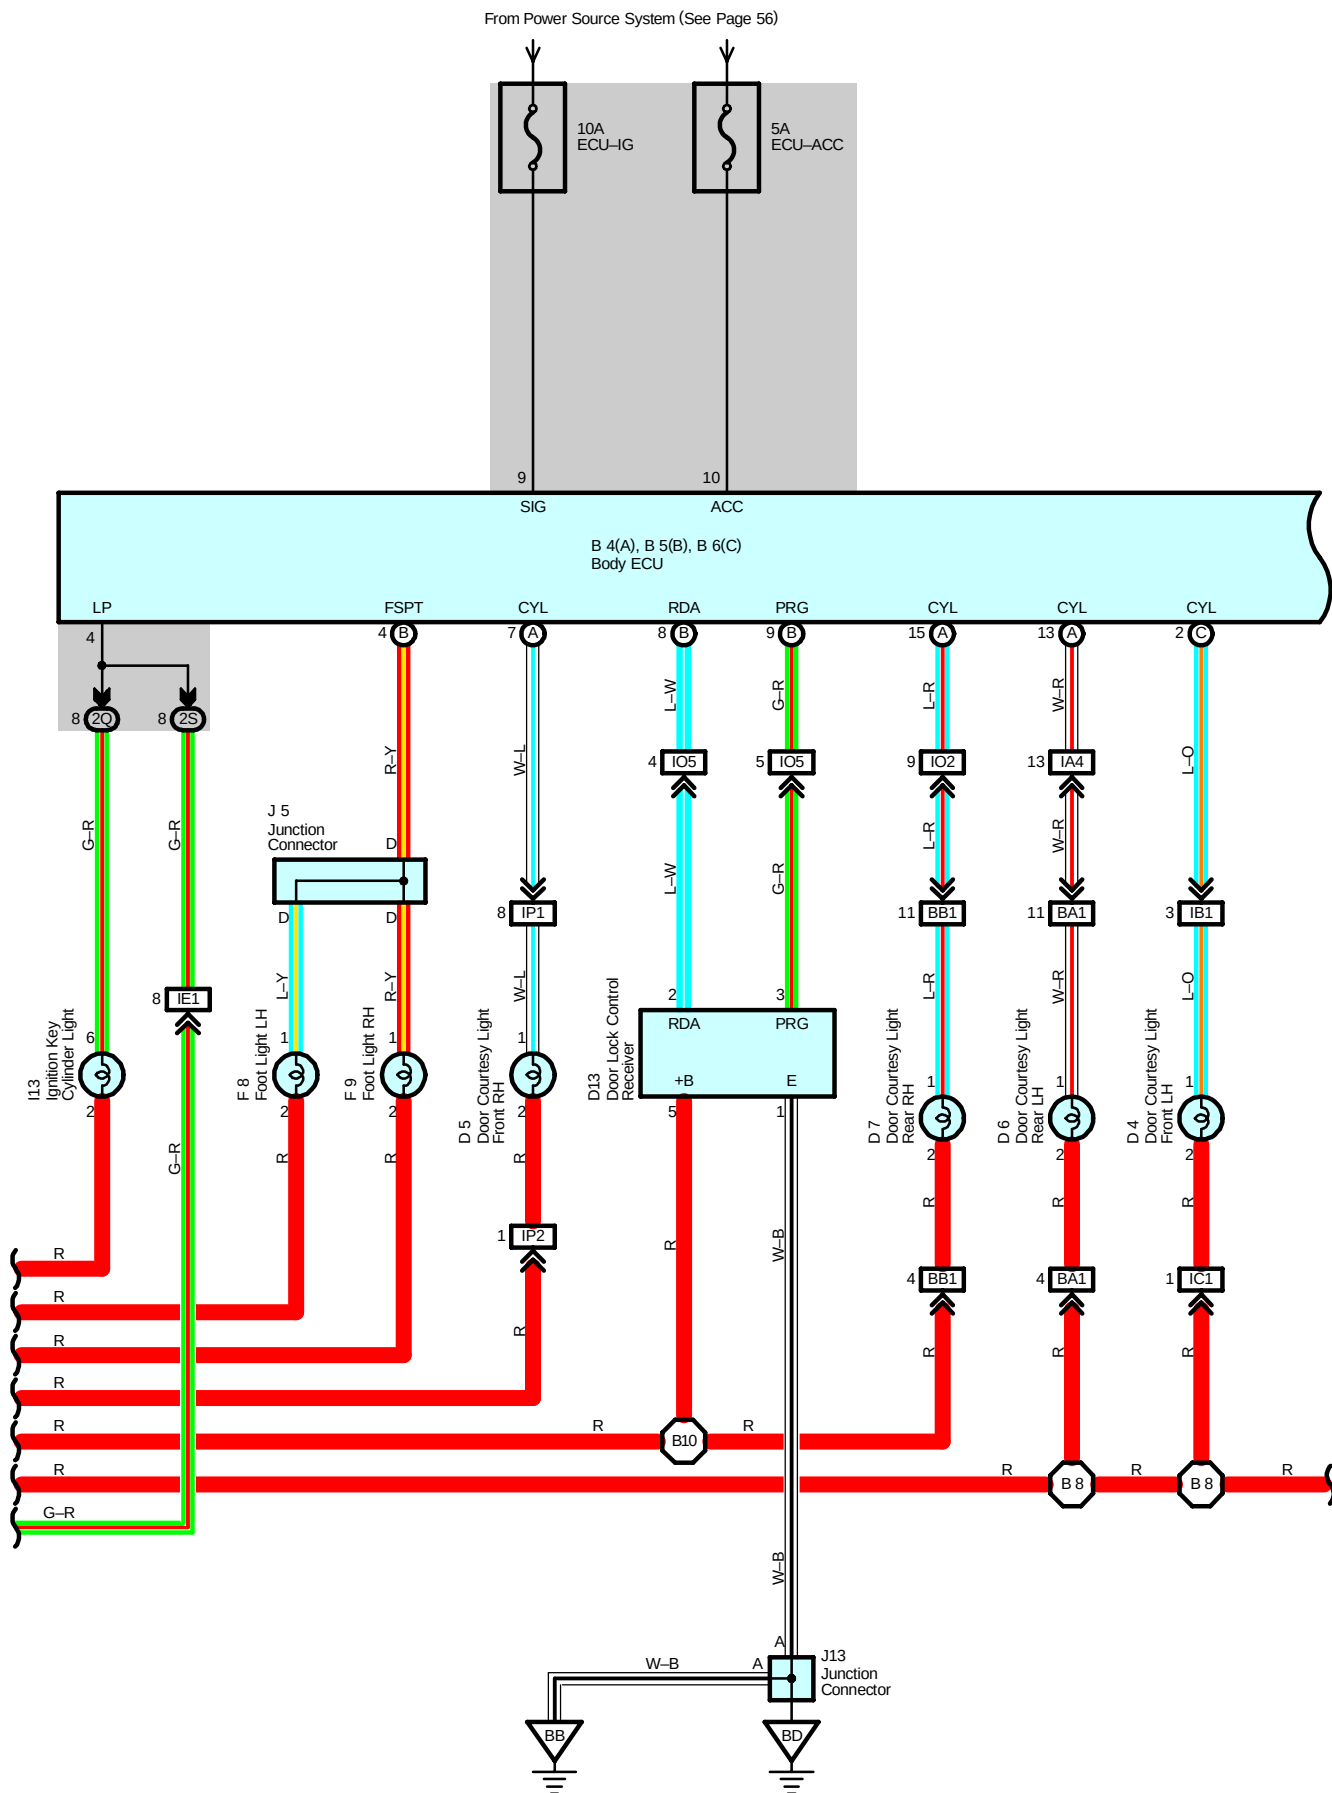

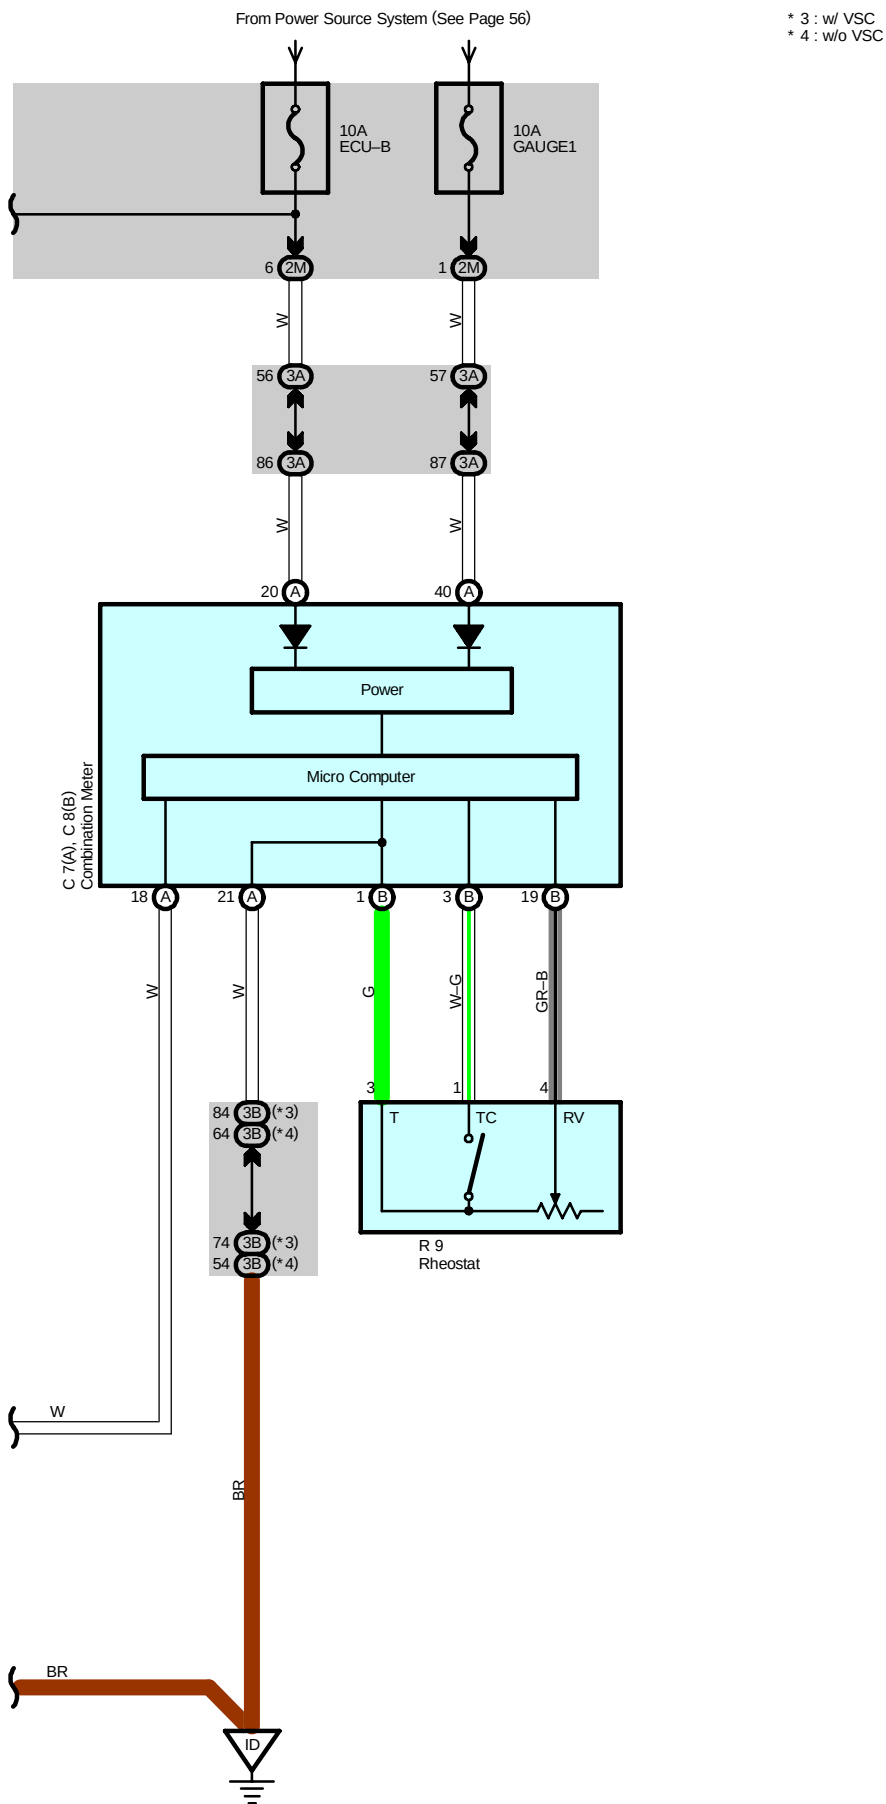

Interior Light

Service Hints

Body ECU

- 9-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 12, 24-Ground : Always continuity
- 1-Ground : Always approx. 12 volts

D8, D9, D10, D11 Door Courtesy SW Front LH, RH, Rear LH, RH

- 1-Ground : Closed with each of the door

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B4	A 38	D8	40	J13	40
B5	B 38	D9	40	L5	40
B6	C 38	D10	40	L6	40
C7	A 38	D11	40	N4	41
C8	B 38	D13	40	O2	41
D3	40	F8	39	R9	39
D4	40	F9	39	V12	41
D5	40	I13	39	V13	41
D6	40	I16	40	V15	41
D7	40	J5	39	V16	41

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2K	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2Q		
2R		
2S		
3A	34 (w/ VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (w/o VSC)	
3B	34 (w/ VSC)	
	35 (w/o VSC)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IA4		
IB1	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	46	Front Door LH Wire and Floor No.1 Wire (Left Kick Panel)
IE1	46	Instrument Panel Wire and Roof Wire (Lower Part of Front Pillar LH)
IO2	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IO5		
IP1	48	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IP2		
BA1	50	Rear Door No.2 Wire and Floor No.1 Wire (Left Center Pillar)
BB1	50	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)

▽ : Ground Points

Code	See Page	Ground Points Location
IA	46	Instrument Panel Reinforcement LH
ID	46	Instrument Panel Brace RH
BB	50	Under the Front Passenger's Seat
BD	50	Front Side of Rear Quarter Wheel House RH



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	50	Roof Wire	B10	50	Floor No.2 Wire
B3			B14	50	Floor No.1 Wire
B8	50	Floor No.1 Wire	B17		