



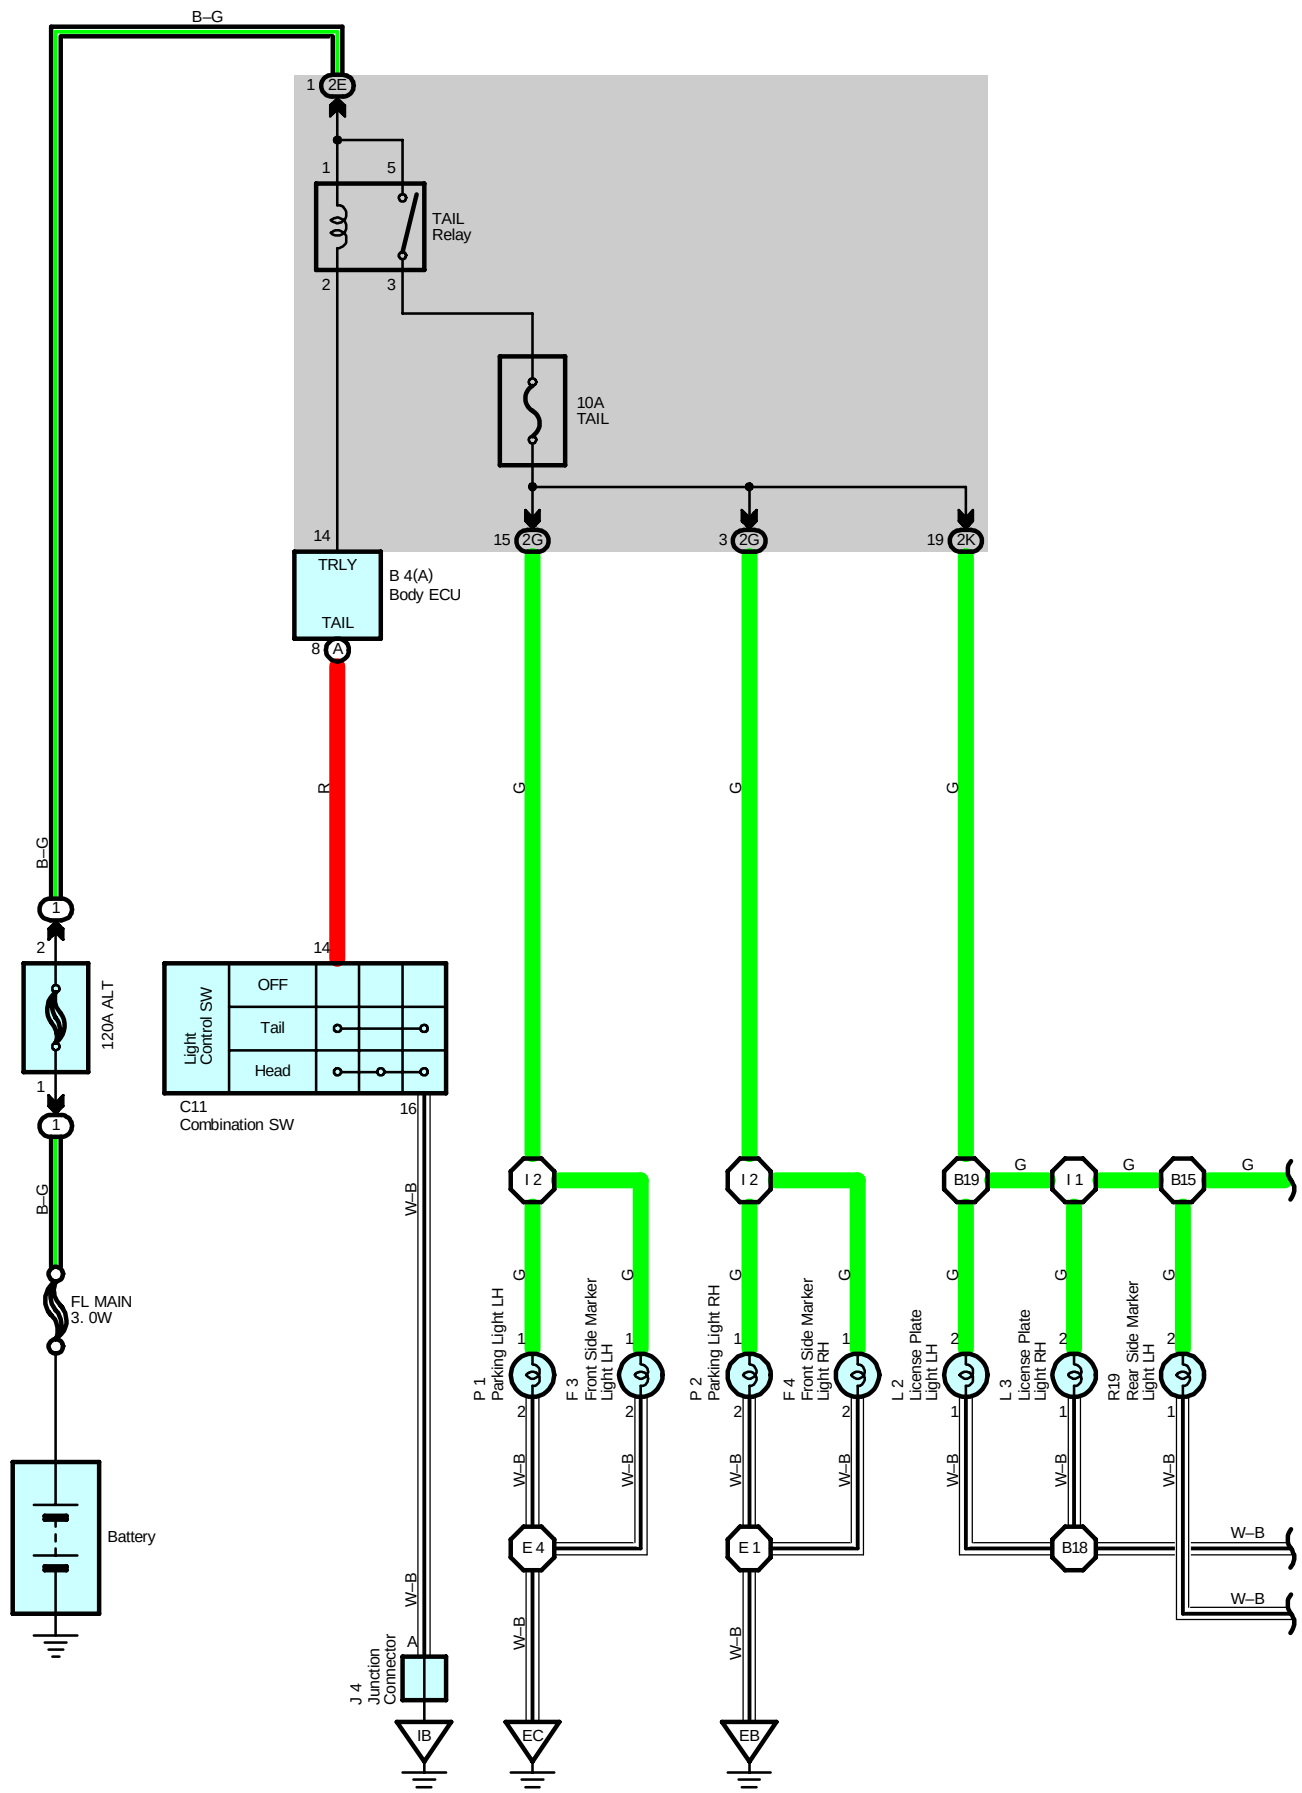

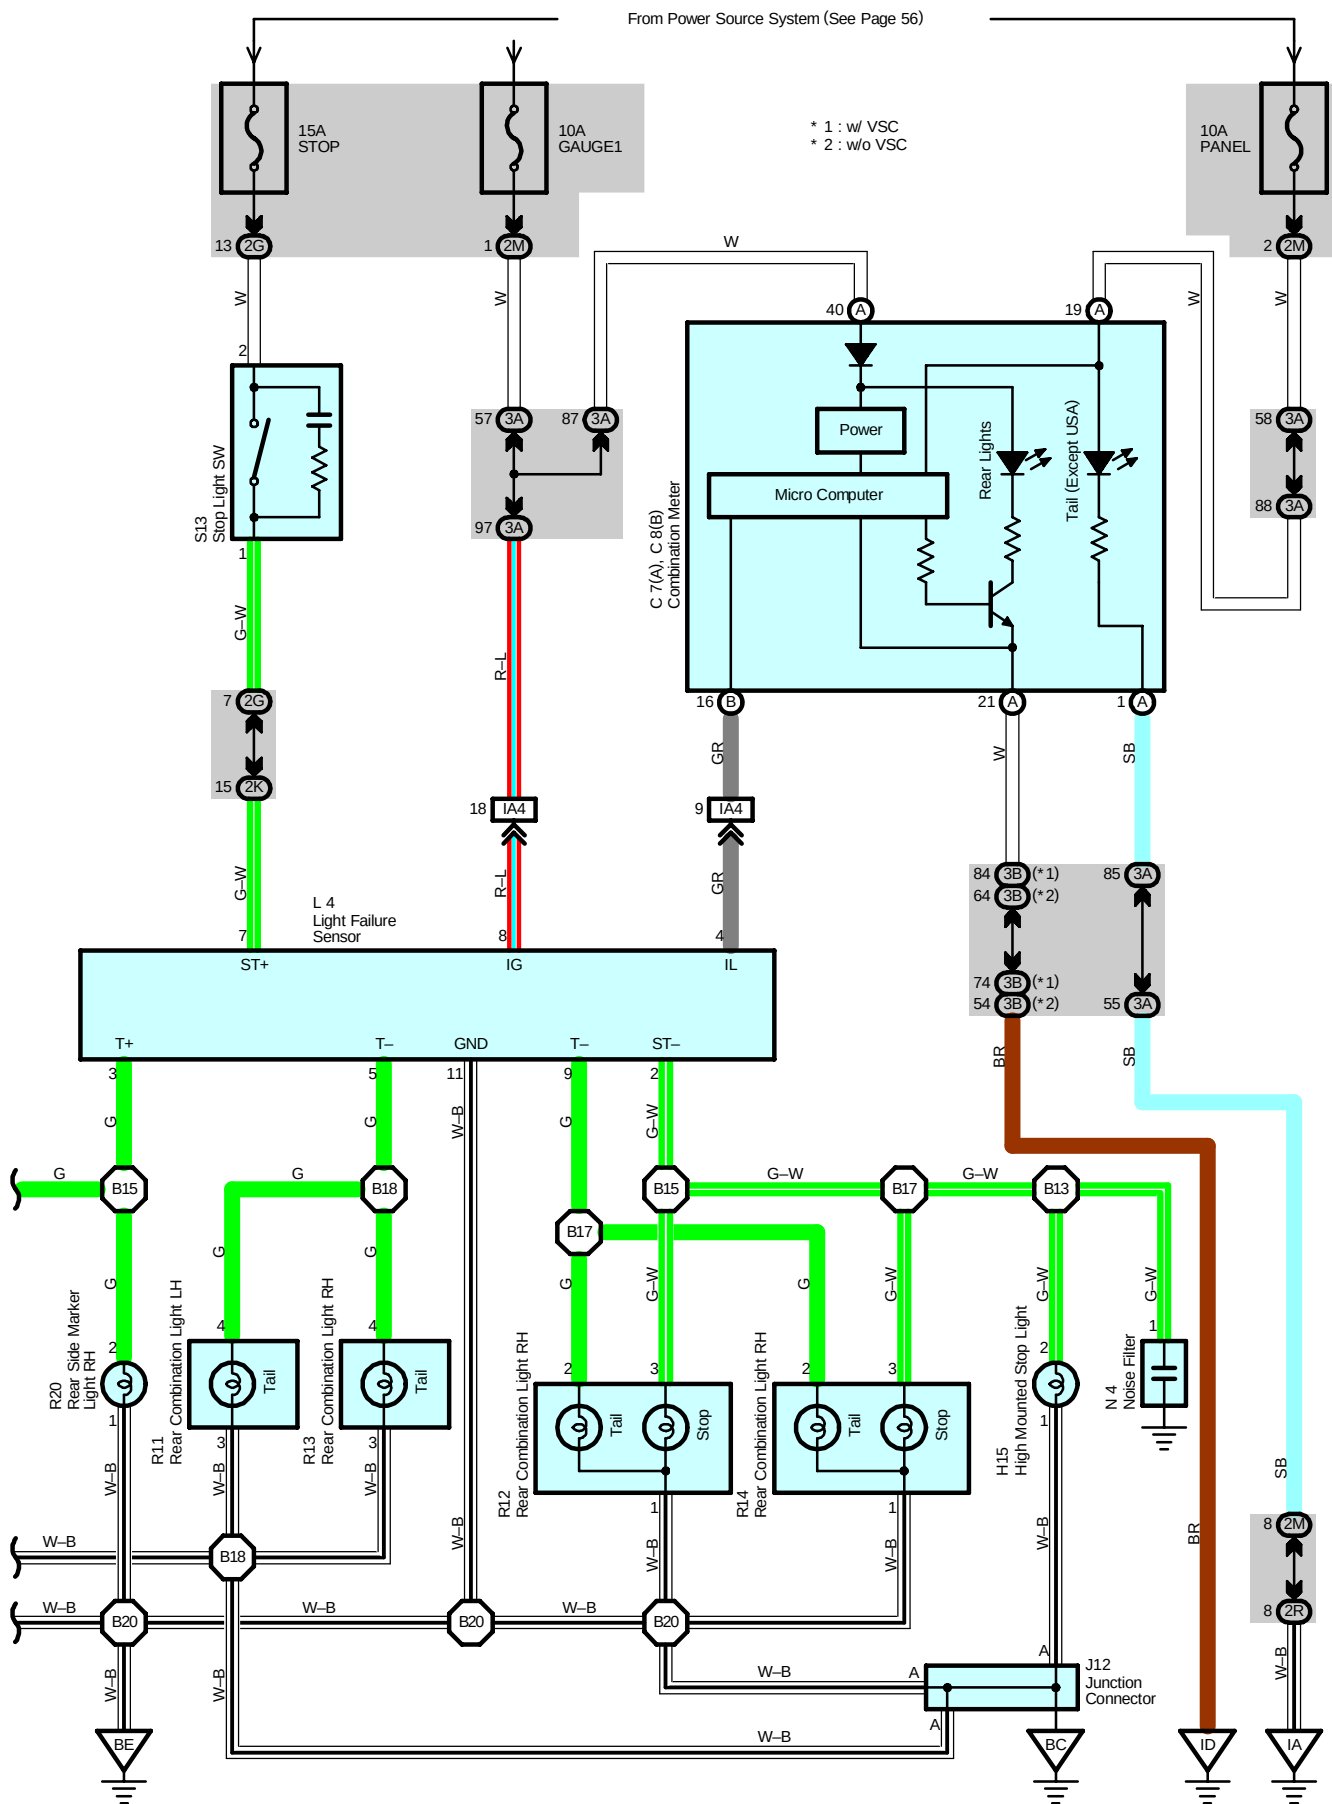

# Taillight and Stop Light

## System Outline

### Taillight Disconnection Warning

If any of the taillights are disconnected when the light control SW is at TAIL or HEAD while the ignition SW is ON, the light failure sensor detects the voltage difference, and blinks the rear lights warning light to warn the driver.

### Stop Light Disconnection Warning

If any of the stop lights are disconnected when the brake pedal is depressed while the ignition SW is ON, the light failure sensor detects the voltage difference, and blinks the rear lights warning light to warn the driver.

## Service Hints

### TAIL Relay

5-3 : Closed with the light control SW at TAIL or HEAD position

### L4 Light Failure Sensor

7-Ground : Approx. 12 volts with stop light SW on

3-Ground : Approx. 12 volts with the light control SW at TAIL or HEAD position

8-Ground : Approx. 12 volts with the ignition SW at ON or ST position

11-Ground : Always continuity

### S13 Stop Light SW

1-2 : Closed with brake pedal depressed

## ○ : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| B4   | A 38     | J12  | 40       | R12  | 41       |
| C7   | A 38     | L2   | 40       | R13  | 41       |
| C8   | B 38     | L3   | 40       | R14  | 41       |
| C11  | 38       | L4   | 40       | R19  | 41       |
| F3   | 36       | N4   | 41       | R20  | 41       |
| F4   | 36       | P1   | 37       | S13  | 39       |
| H15  | 40       | P2   | 37       |      |          |
| J4   | 39       | R11  | 41       |      |          |

## ○ : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location)       |
|------|----------|-------------------------------------------|
| 1    | 22       | Engine Room R/B (Engine Compartment Left) |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page     | Junction Block and Wire Harness (Connector Location)                     |
|------|--------------|--------------------------------------------------------------------------|
| 2E   | 28           | Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)           |
| 2G   |              |                                                                          |
| 2K   | 28           | Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)                 |
| 2M   | 29           | Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)           |
| 2R   |              |                                                                          |
| 3A   | 34 (w/ VSC)  | Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH) |
|      | 35 (w/o VSC) |                                                                          |
| 3B   | 34 (w/ VSC)  |                                                                          |
|      | 35 (w/o VSC) |                                                                          |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)  |
|------|----------|-------------------------------------------------------------|
| IA4  | 46       | Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel) |

**: Ground Points**

| Code | See Page | Ground Points Location                    |
|------|----------|-------------------------------------------|
| EB   | 44       | Right Fender                              |
| EC   | 44       | Left Fender                               |
| IA   | 46       | Instrument Panel Reinforcement LH         |
| IB   | 46       | Instrument Panel Brace LH                 |
| ID   | 46       | Instrument Panel Brace RH                 |
| BC   | 50       | Front Side of Rear Quarter Wheel House LH |
| BE   | 50       | Lower Back Panel Center                   |

**: Splice Points**

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| E1   | 44       | Engine Room Main Wire           | B15  | 50       | Floor No.1 Wire                 |
| E4   |          |                                 | B17  |          |                                 |
| I1   | 48       | Floor No.1 Wire                 | B18  |          |                                 |
| I2   | 48       | Engine Room Main Wire           | B19  |          |                                 |
| B13  | 50       | Floor No.1 Wire                 | B20  |          |                                 |