



* 1 : w/ LEXUS Navigation System
 * 2 : w/o LEXUS Navigation System

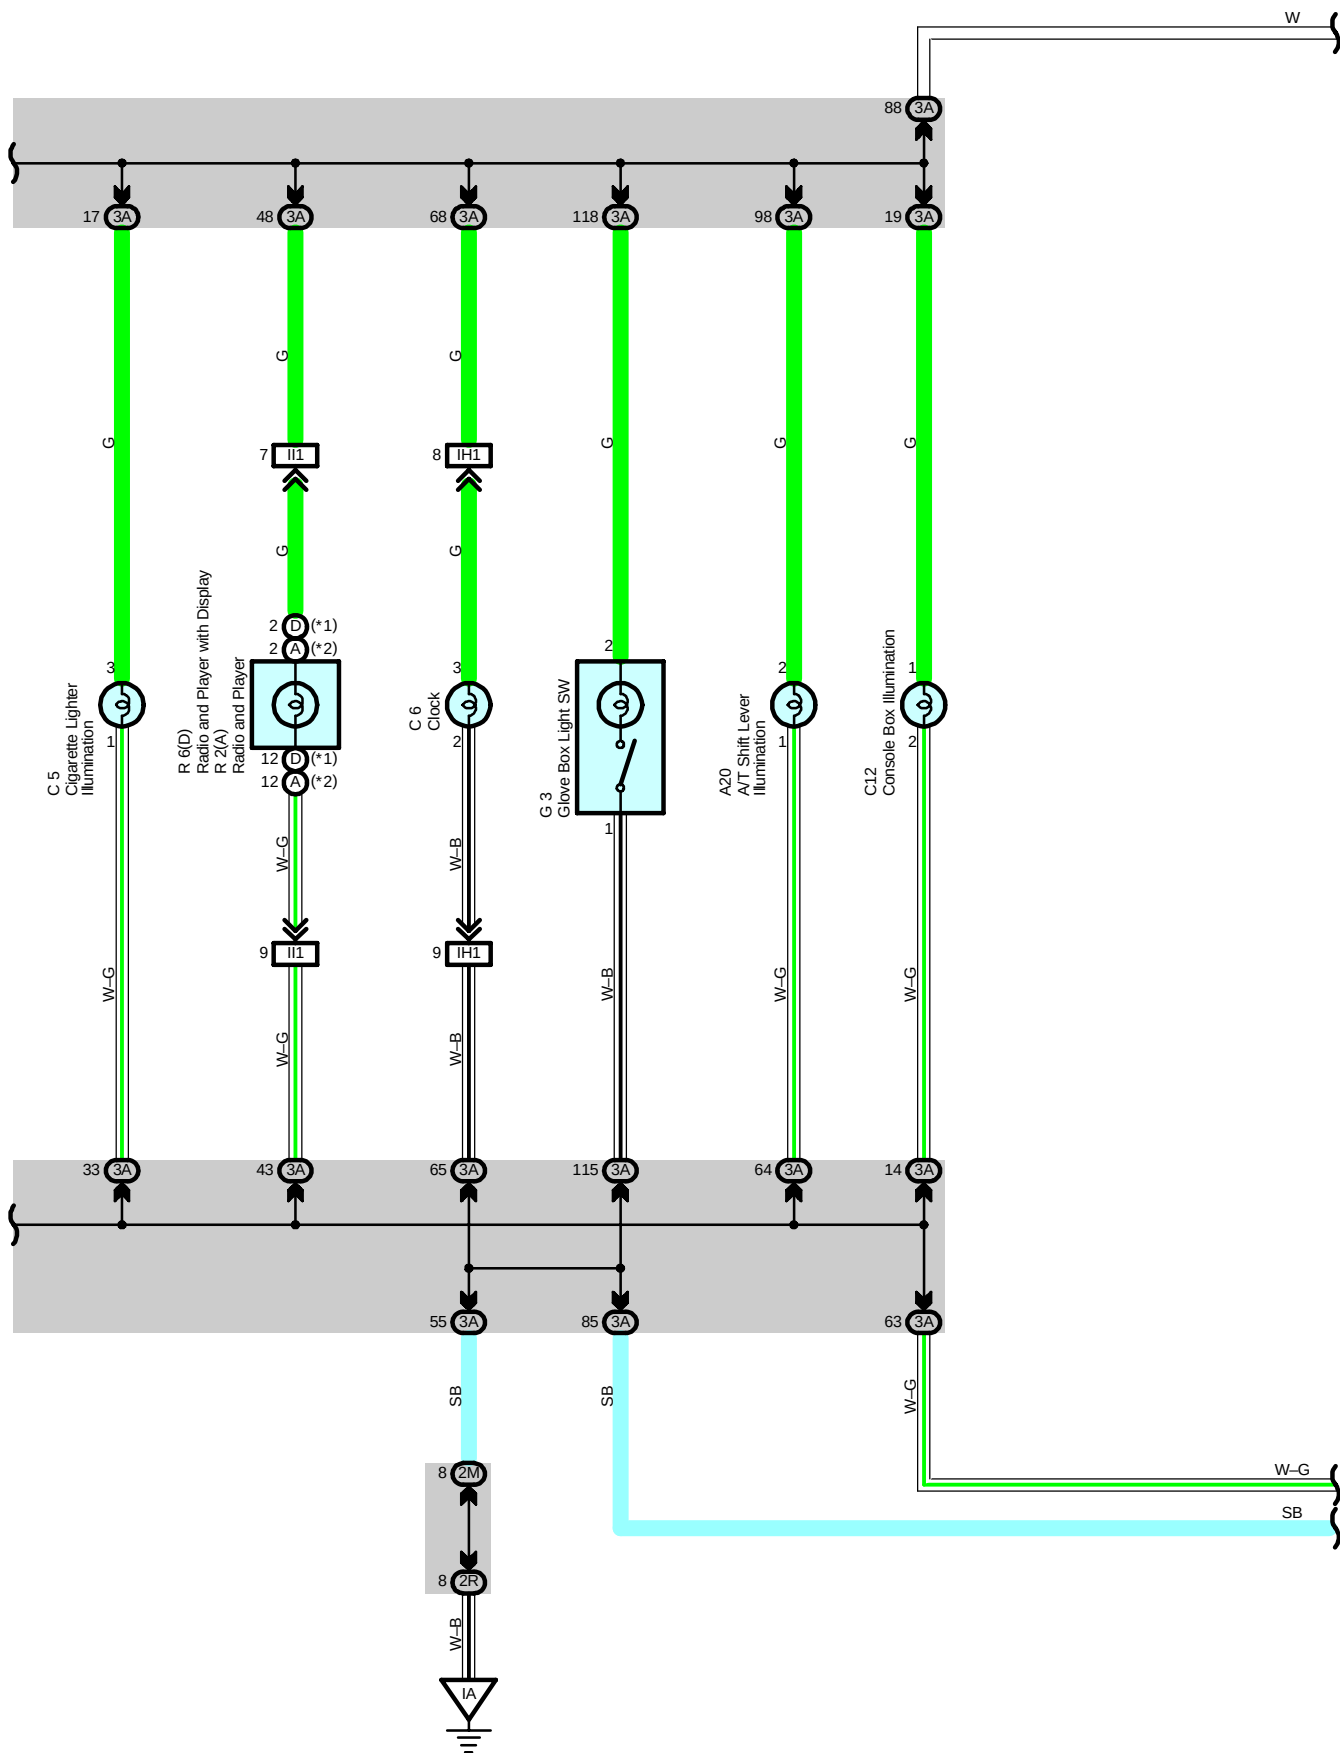

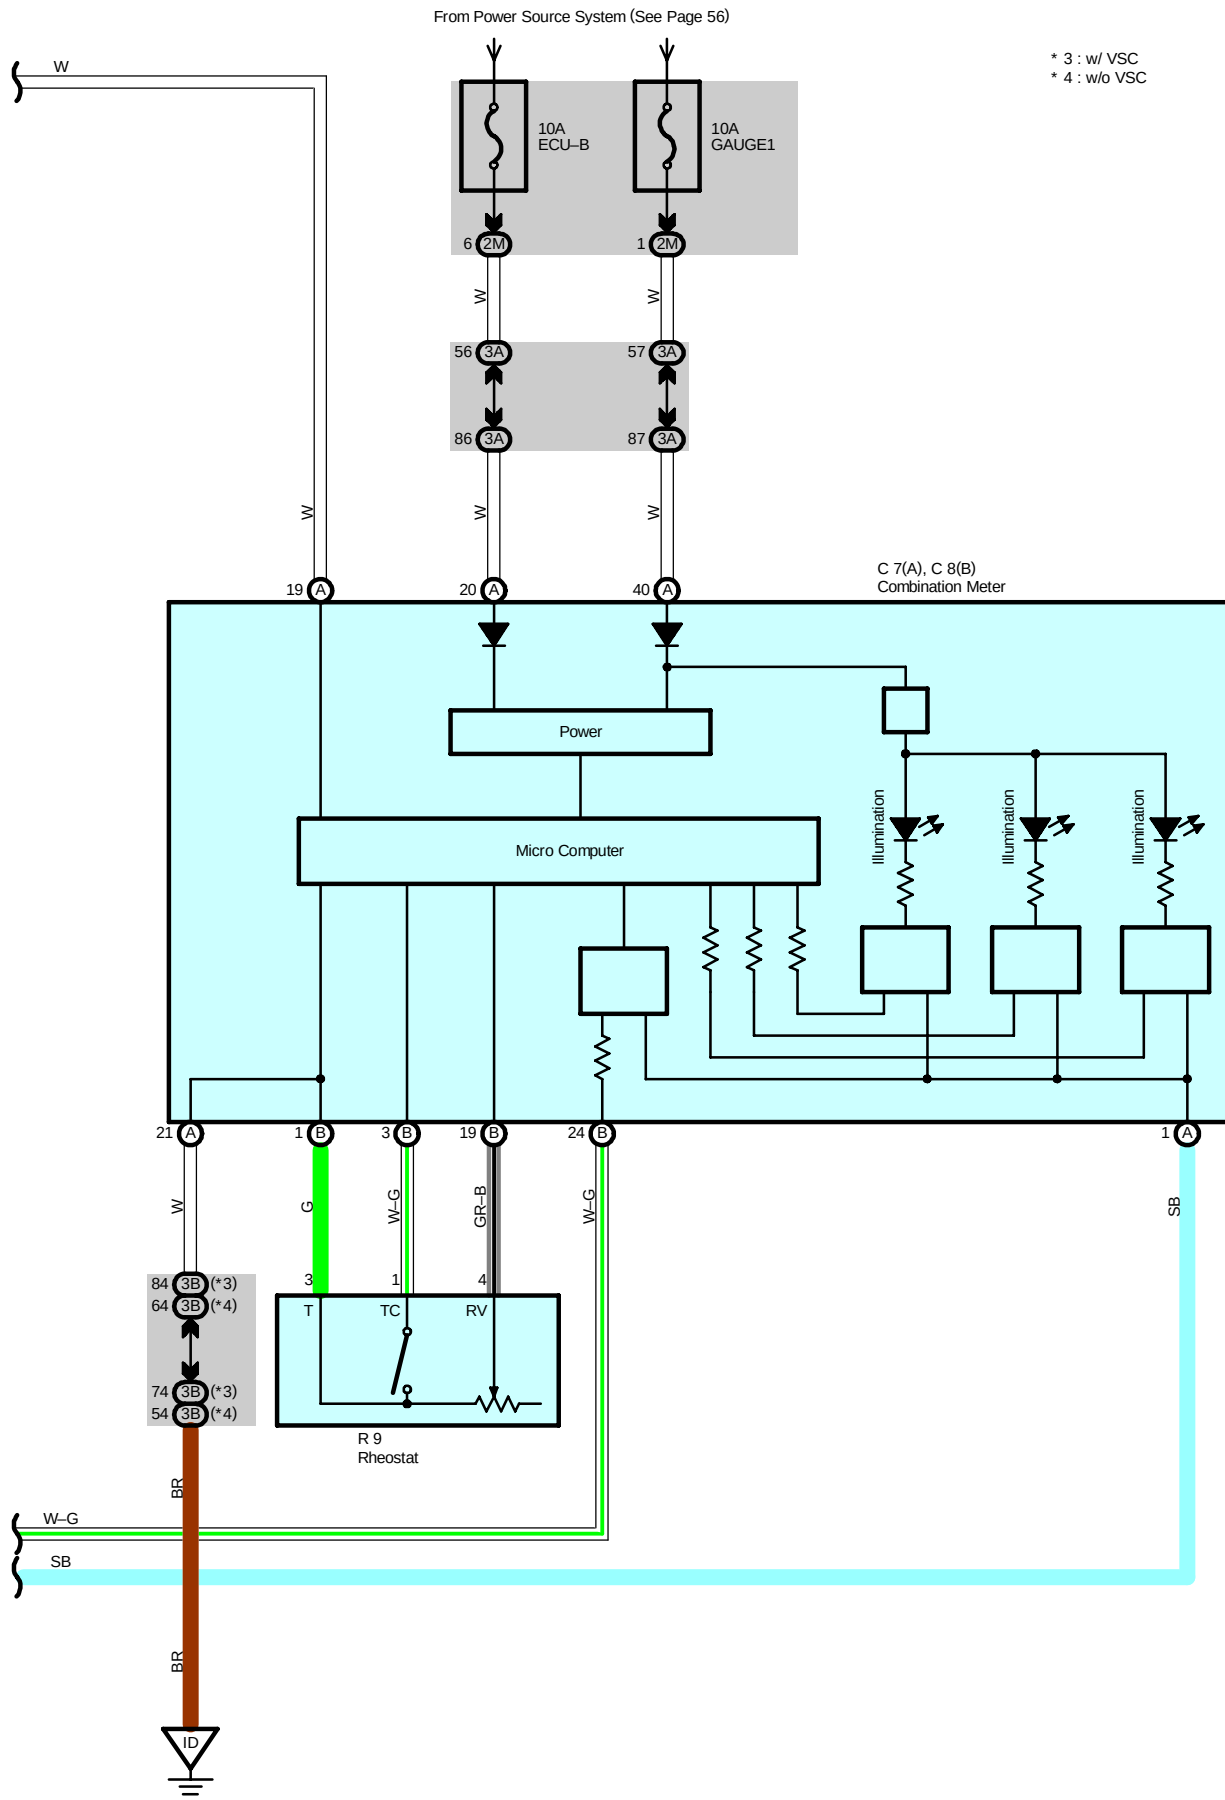

Service Hints

TAIL Relay

5-3 : Closed with the light control SW at TAIL or HEAD position

C11 Combination SW

14-16 : Closed with the light control SW at TAIL or HEAD position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A14	38	C8 B	38	R2 A	39
A20	38	C11	38	R6 D	39
A23	38	C12	38	R7	39
B4 A	38	G3	39	R8	39
C5	38	H13	39	R9	39
C6	38	J3	39		
C7 A	38	J4	39		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2R		
3A	34 (w/ VSC) 35 (w/o VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
3B	34 (w/ VSC)	
	35 (w/o VSC)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	48	Instrument Panel Wire and Instrument Panel No.4 Wire (Behind the A/C Control Assembly)
II1	48	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the A/C Control Assembly)

▽ : Ground Points

Code	See Page	Ground Points Location
IA	46	Instrument Panel Reinforcement LH
IB	46	Instrument Panel Brace LH
ID	46	Instrument Panel Brace RH