


Turn Signal and Hazard Warning Light

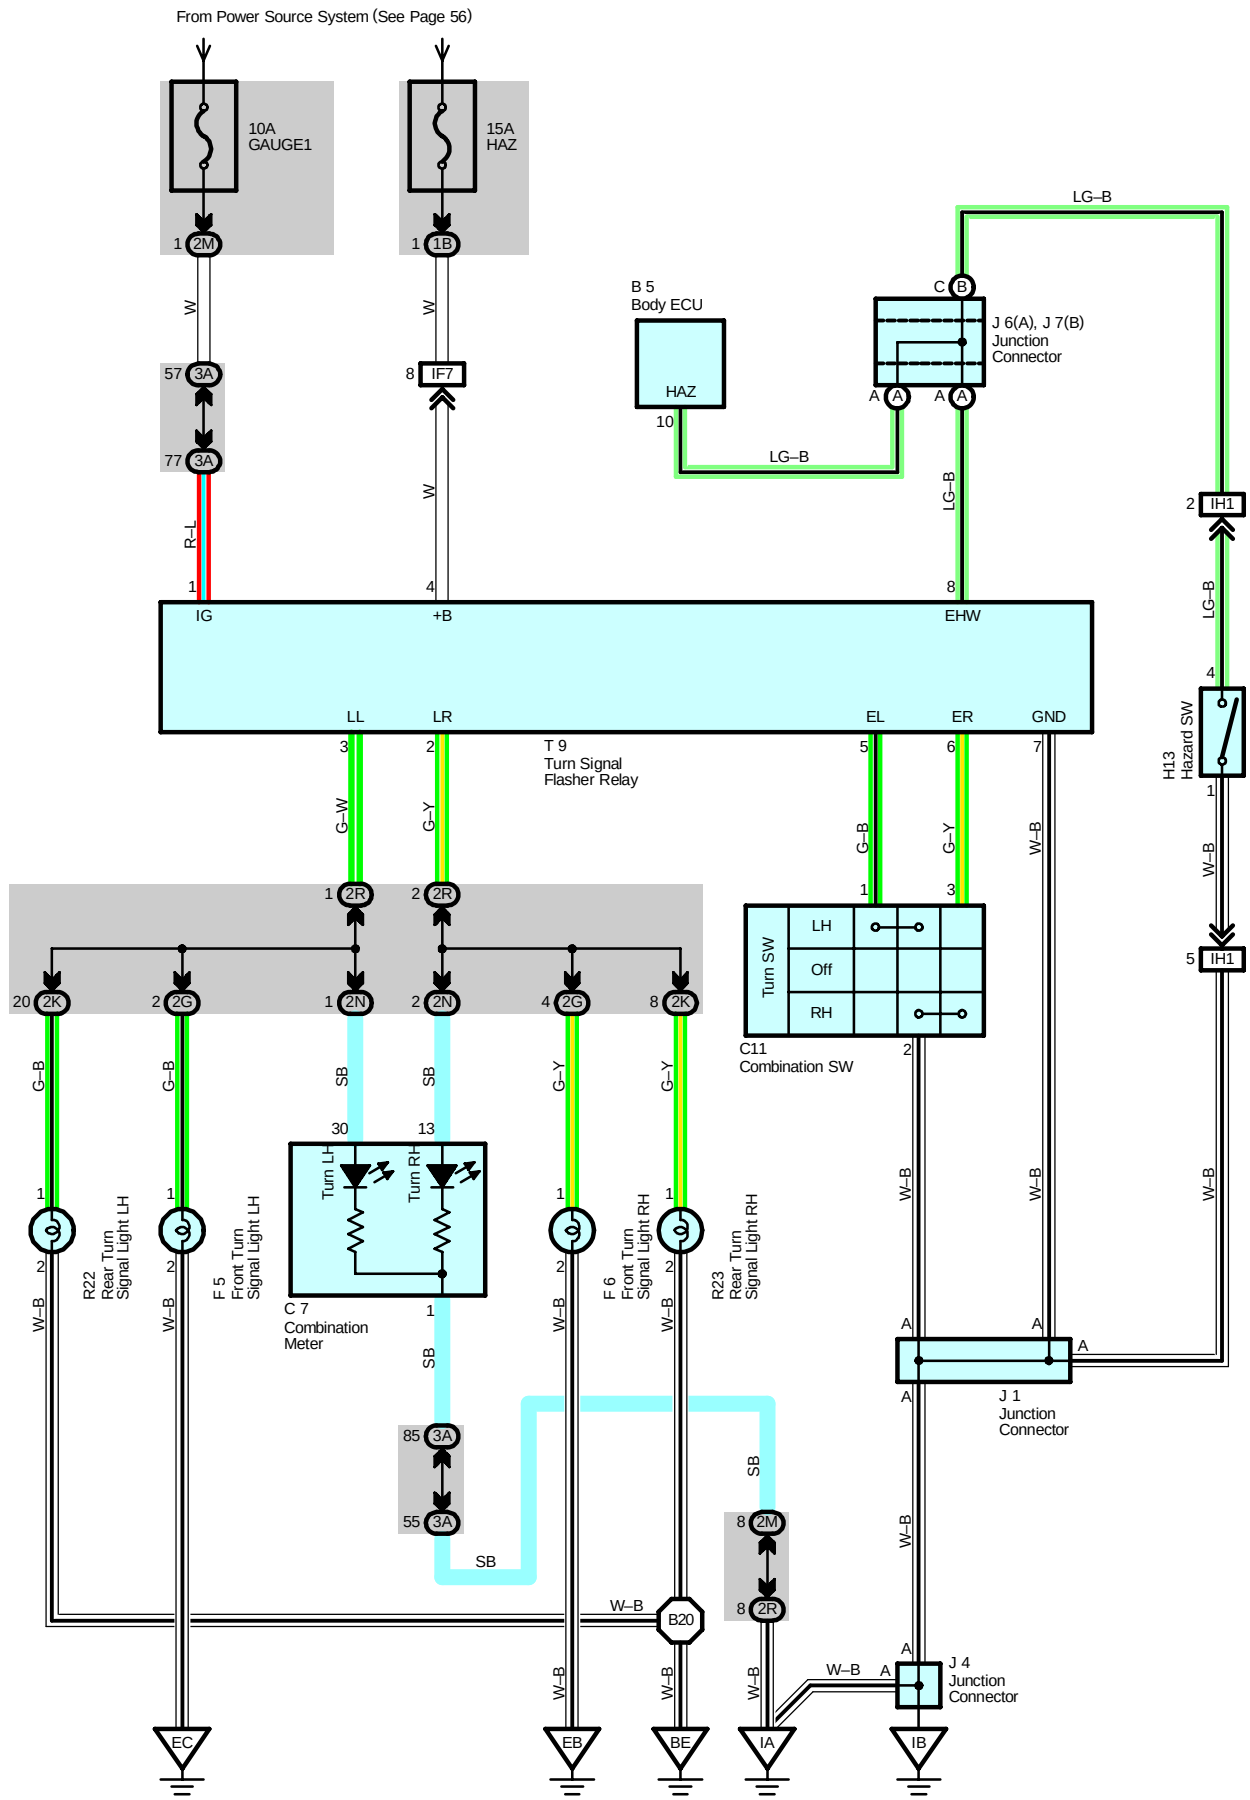

Service Hints

T9 Turn Signal Flasher Relay

1-Ground : Approx. 12 volts with ignition SW at ON or ST position

4-Ground : Always approx. 12 volts

7-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B5	38	H13	39	R22	41
C7	38	J1	39	R23	41
C11	38	J4	39	T9	39
F5	36	J6	A		
F6	36	J7	B		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2K	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2N		
2R		
3A	34 (w/ VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (w/o VSC)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF7	46	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IH1	48	Instrument Panel Wire and Instrument Panel No.4 Wire (Behind the A/C Control Assembly)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	44	Right Fender
EC	44	Left Fender
IA	46	Instrument Panel Reinforcement LH
IB	46	Instrument Panel Brace LH
BE	50	Lower Back Panel Center

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B20	50	Floor No.1 Wire			