


Back-Up Light

From Power Source System (See Page 56)

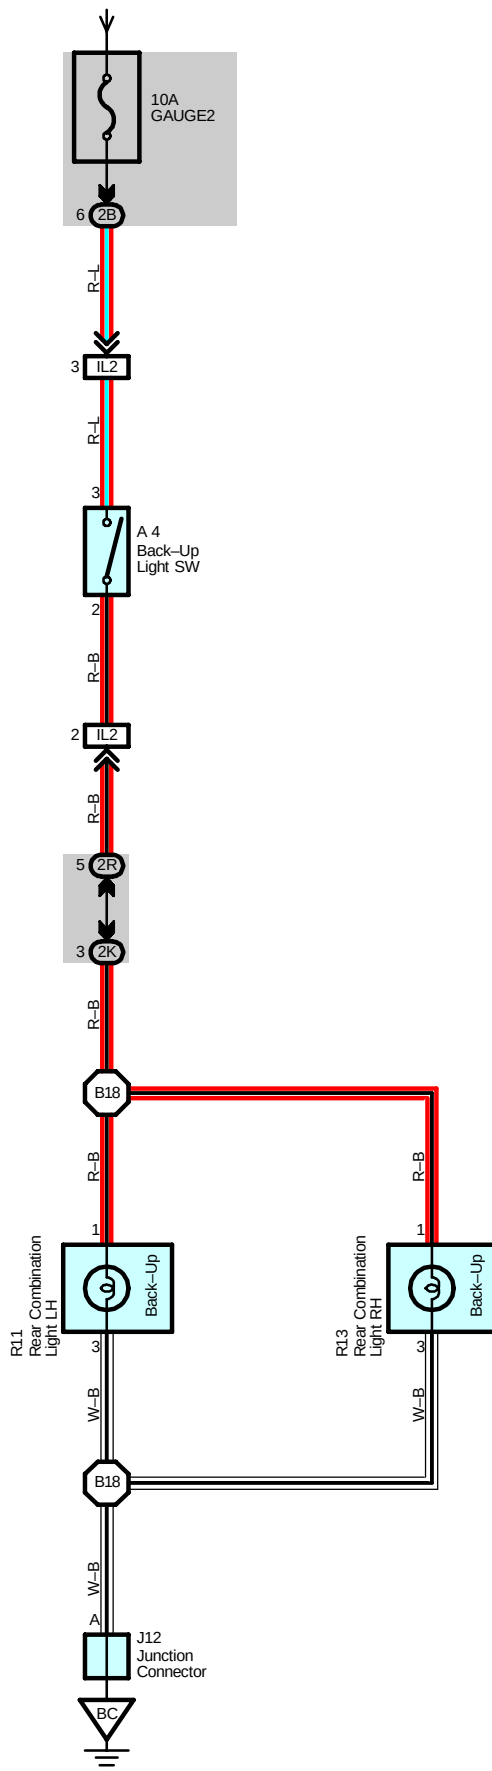

Service Hints

A4 Back-Up Light SW

3-2 : Closed with the shift lever at R position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	36	R11	41		
J12	40	R13	41		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2K	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2R	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL2	48	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

: Ground Points

Code	See Page	Ground Points Location
BC	50	Front Side of Rear Quarter Wheel House LH

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B18	50	Floor No.1 Wire			