


Fog Light

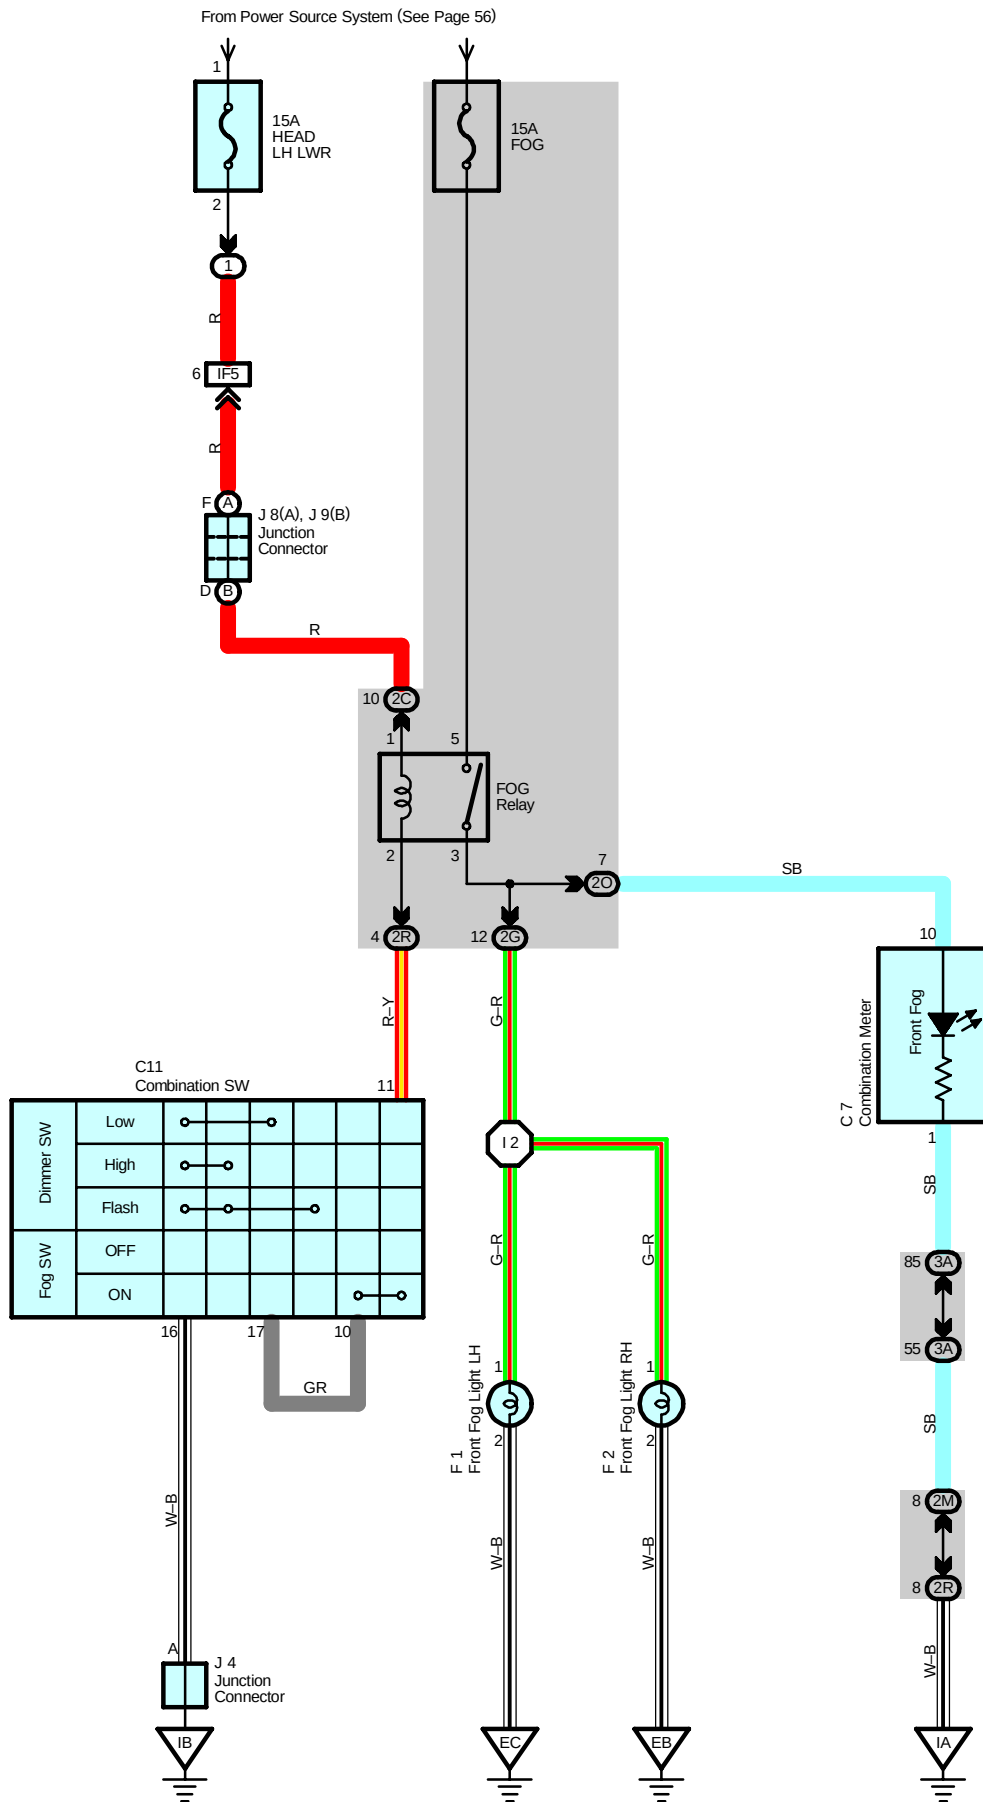

Service Hints

FOG Relay

5-3 : Closed with the light control SW at HEAD position, dimmer SW at LOW position and fog SW on

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C7	38	F2	36	J9	B 39
C11	38	J4	39		
F1	36	J8	A 39		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2C	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2O		
2R		
3A	34 (w/ VSC) 35 (w/o VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF5	46	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)

: Ground Points

Code	See Page	Ground Points Location
EB	44	Right Fender
EC	44	Left Fender
IA	46	Instrument Panel Reinforcement LH
IB	46	Instrument Panel Brace LH

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	48	Engine Room Main Wire			