



Headlight Beam Level Control

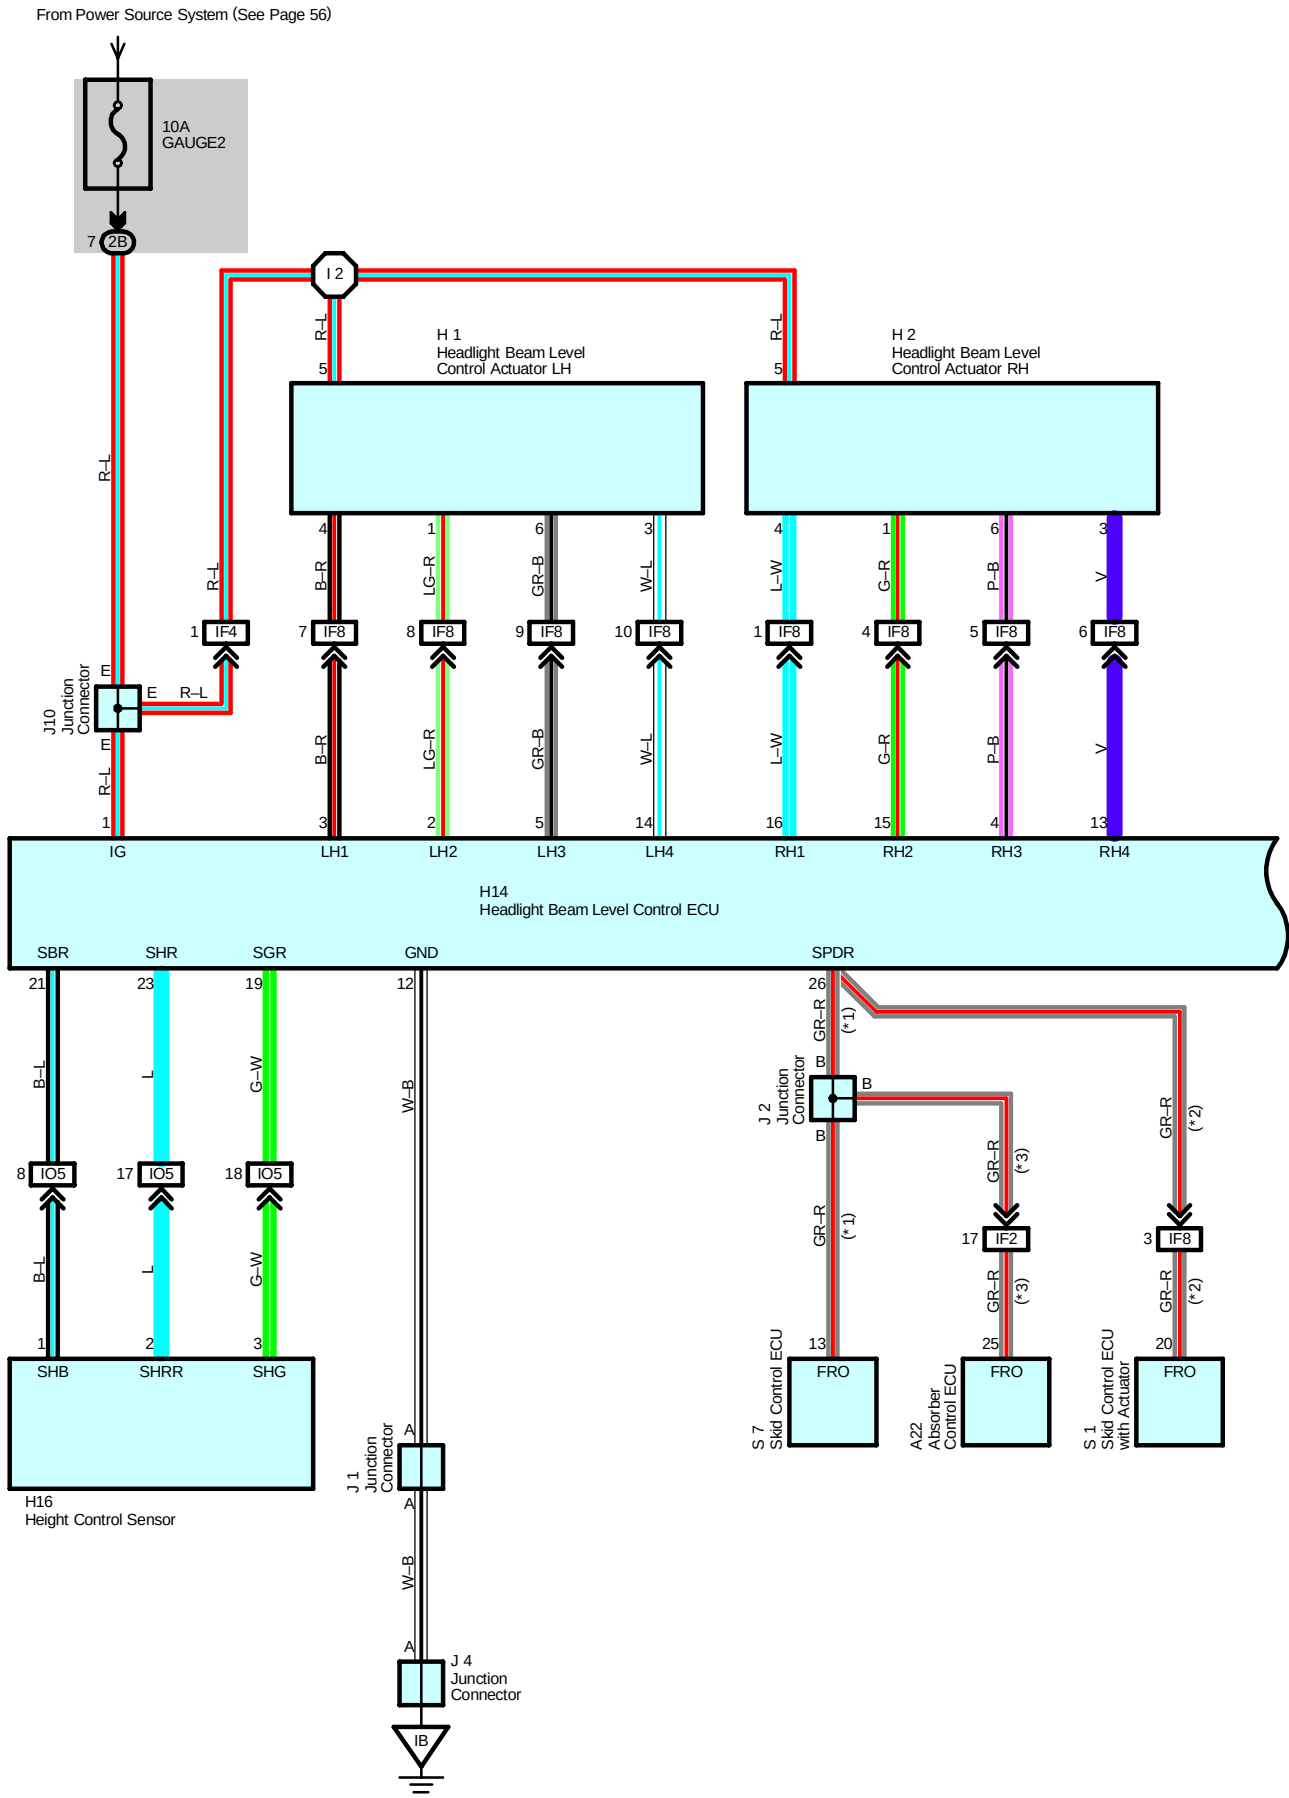

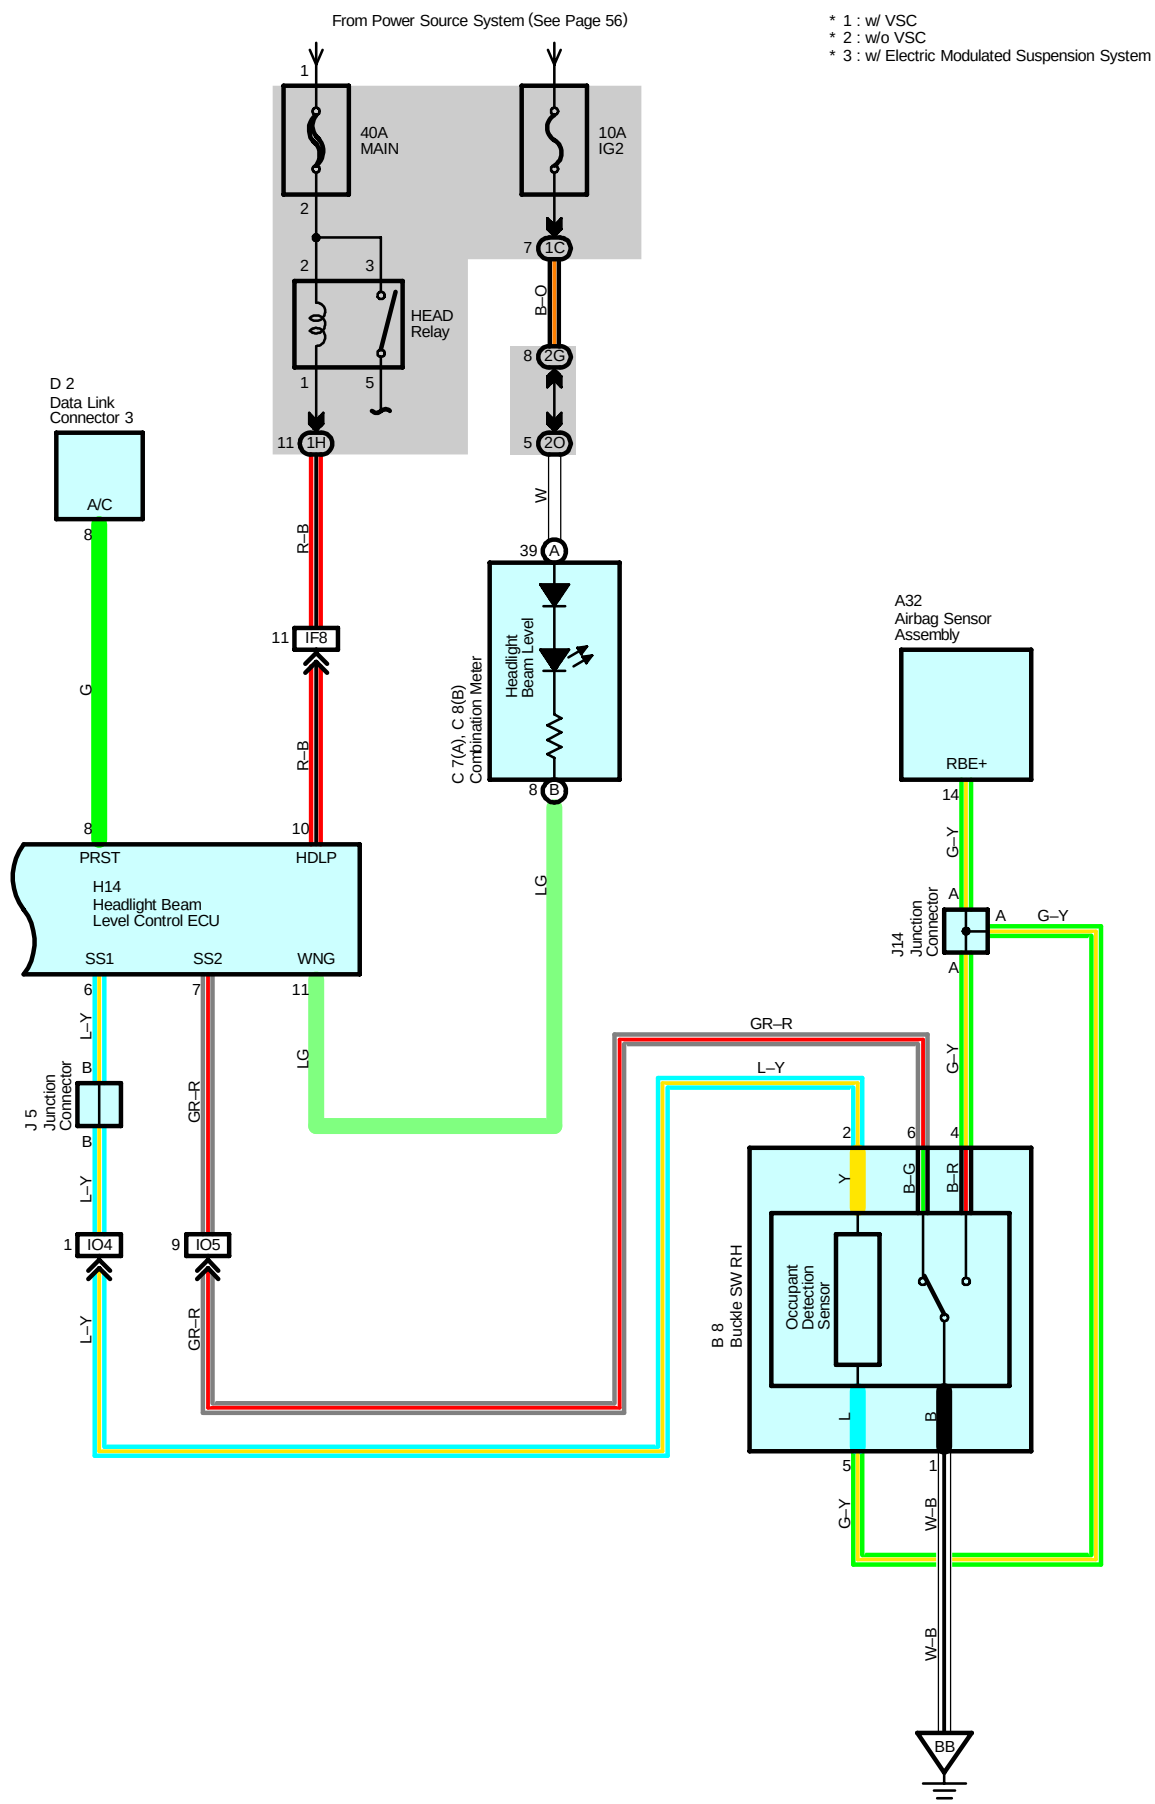

Headlight Beam Level Control

Service Hints

H14 Headlight Beam Level Control ECU

10–Ground : Always approx. 12 volts

1–Ground : Approx. 12 volts with ignition SW at ON or ST position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A22	38	H2	36	J5	39
B8	42	H14	39	J10	39
C7	A 38	H16	40	S1	37
C8	B 38	J1	39	S7	39
D2	38	J2	39		
H1	36	J4	39		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1H		
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2O	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF2	46	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF4		
IF8		
IO4	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IO5		

: Ground Points

Code	See Page	Ground Points Location
IB	46	Instrument Panel Brace LH
BB	50	Under the Front Passenger's Seat

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	48	Engine Room Main Wire			