


Seat Belt Warning

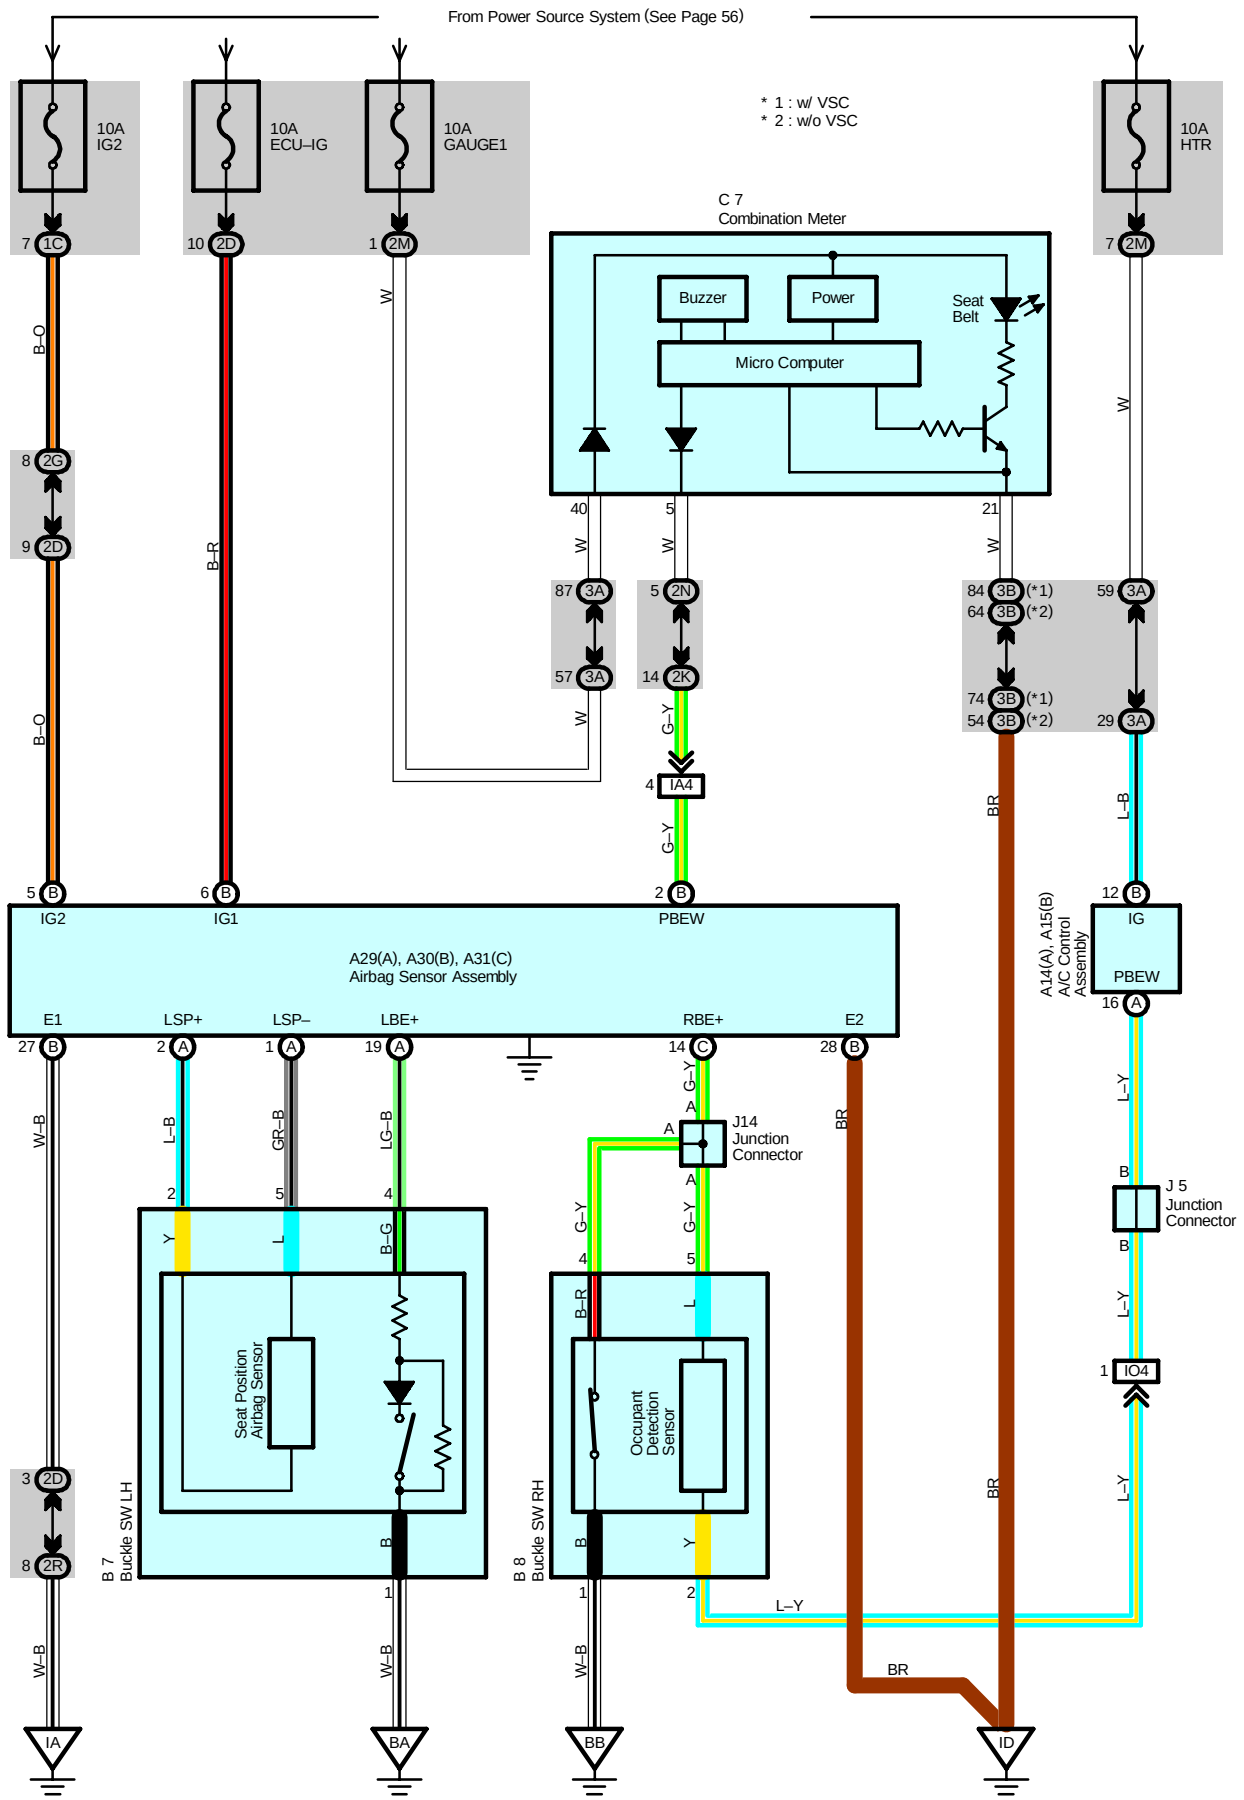

System Outline

When the driver has not fastened the seat belt while the ignition SW is ON, the driver seat belt warning light blinks, and a warning buzzer comes on.

Also, in the front passenger seat, a sensor recognizes passenger, and when the passenger has not fastened the seat belt, the front passenger seat belt warning light blinks.

Service Hints

B7 Buckle SW LH

4-1 : Closed with driver's seat belt in use

B8 Buckle SW RH

2-1 : Closed with front passenger's seat belt in use

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A14	A	38	A31	C	38	J5	39	
A15	B	38	B7		42	J14	40	
A29	A	38	B8		42			
A30	B	38	C7		38			

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2K	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2N		
2R		
3A	34 (w/ VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (w/o VSC)	
3B	34 (w/ VSC)	
	35 (w/o VSC)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IO4	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IA	46	Instrument Panel Reinforcement LH
ID	46	Instrument Panel Brace RH
BA	50	Under the Driver's Seat
BB	50	Under the Front Passenger's Seat