


Automatic Glare-Resistant EC Mirror and Compass

From Power Source System (See Page 56)

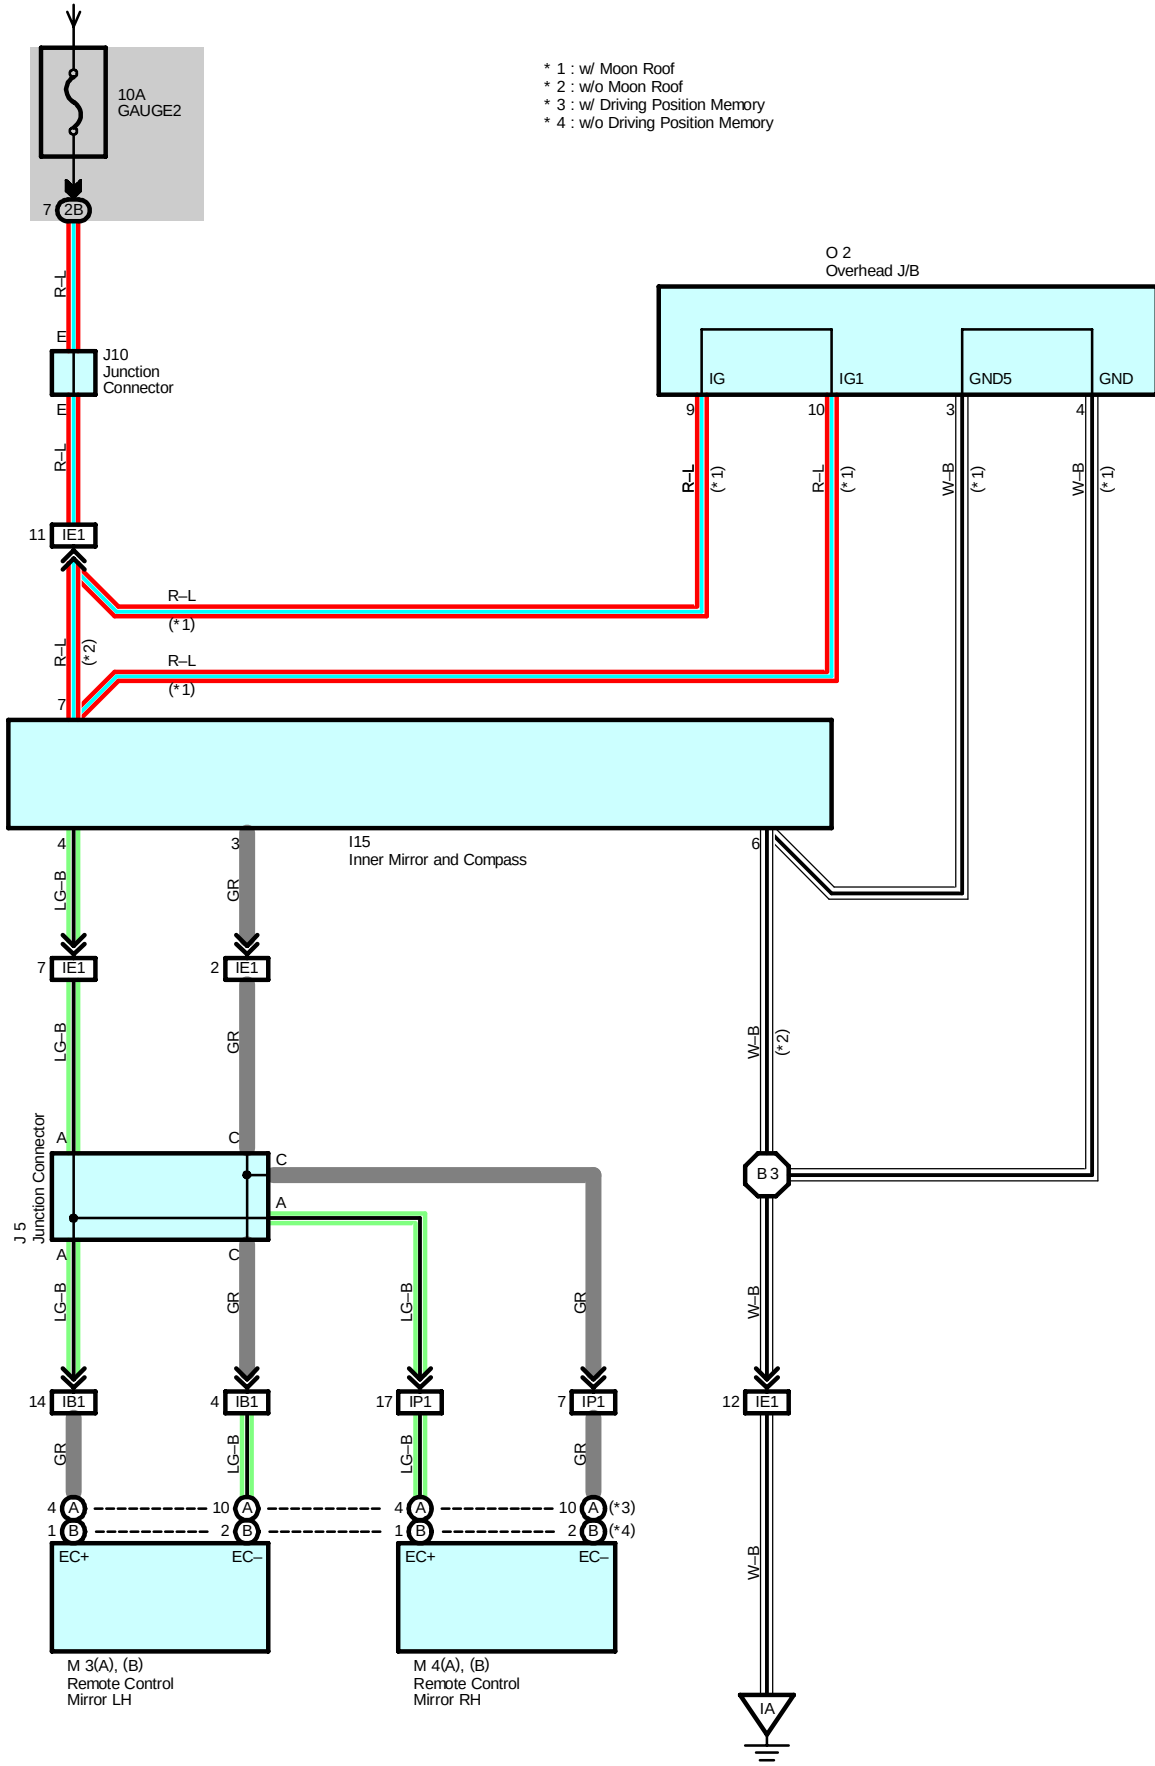

Service Hints

I15 Inner Mirror and Compass

7–Ground : Approx. 12 volts with ignition SW at ON or ST position

6–Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
I15	40	M3	A	41	
J5	39		B	41	
J10	39	M4	A	41	

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE1	46	Instrument Panel Wire and Roof Wire (Lower Part of Front Pillar LH)
IP1	48	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IA	46	Instrument Panel Reinforcement LH

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B3	50	Roof Wire			